

TECHNICAL MANUAL
AVIATION UNIT MAINTENANCE (AVUM)
AND AVIATION INTERMEDIATE
MAINTENANCE (AVIM) MANUAL
FOR
GENERAL AIRCRAFT MAINTENANCE
(GENERAL MAINTENANCE AND PRACTICES)
VOLUME 1

***This manual together with TM 1-1500-204-23-2 through TM 1-1500-204-23-10, dated 31 July 1992, supersedes TM 55-1500-204-25/1, dated 6 April 1970, including all changes.**

| |
|---|
| <u>DISTRIBUTION STATEMENT A:</u> Approved for public release; distribution is unlimited. |
|---|

HEADQUARTERS, DEPARTMENT OF THE ARMY
31 JULY 1992

| |
|--|
| |
|--|

WARNING

An operating or maintenance procedure, practice, condition, statement, etc., which if not strictly observed, could result in injury to or death of personnel.

CAUTION

An operating or maintenance procedure, practice, condition, statement, etc., which, if not strictly observed, could result in damage to, or destruction of, equipment or loss of mission effectiveness or long term health hazards to personnel.

NOTE

An essential operating or maintenance procedure, condition, or statement, which must be highlighted.

WARNING

PRECAUTIONARY DATA

Personnel performing operations, procedures, and practices which are included or implied in this work requirement shall observe the following warnings. Disregard of these warnings and precautionary information can cause serious injury, death, or destruction of material.

WARNING

ELECTRICAL TESTS

Electrical power up to 500 volts is used in testing the equipment. Exercise extreme caution during these tests. Ensure the equipment is grounded and operated in accordance with the operator's manual. Never operate electrical equipment during rain or while standing in water or wet areas. Use rubber mats to stand on.

WARNING

ELECTRICAL EQUIPMENT

All switches and electrical equipment shall be of the enclosed explosion-proof type. All metal apparatus shall be grounded to avoid the danger of igniting test fluid fumes or creating electrical shock.

WARNING

USING SOLVENTS/PAINTS

Standard precautions such as fire prevention and adequate ventilation shall be exercised when using solvents or applying primer and coating.

Wear gloves or gauntlets when handling solvents as solvents may cause skin disorders.

Cements and solvents used to repair liferafts are flammable and shall be treated as such. Never smoke or permit any type of open flame near when using cements or solvents.

Dichloromethane (methylene chloride) vapor is heavier than air, adequate ventilation shall be provided for working personnel. Dichloromethane (methylene chloride) is toxic when vapors are inhaled over an extended period of time.

WARNING

HANDLING PLASTICS

Wear gloves to protect hands while handling hot plastic. Boiling water shall not be used for heating acrylate base plastics.

Provide adequate ventilation when working with Furane Plastics, Epocast H-991-A, Furane hardener 941, or equivalents as these materials are toxic.

WARNING

LUBRICATING OIL

Lubricating oil, MIL-L-7808 or MIL-L-23699, contains an additive which is poisonous and absorbed readily through the skin. Do not allow oil to remain on skin. Wash with soap and water.

WARNING

FUEL

When servicing aircraft or support equipment, clean up spilled fuel with cotton mops or cotton rags. Wash off any fuel on hands, body, or clothing.

WARNING

HANDLING ACID

Wear protective clothing when mixing acid with water. Always pour acid into water, never water into acid.

WARNING

HANDLING PYROTECHNIC FLARES

Handle pyrotechnic flares with the same care as high explosives.

WARNING

MAGNESIUM ALLOY FIRE

Do not use water or any standard liquid or foam-type fire extinguishers on a magnesium alloy fire, as they may cause an explosion. Use dry sand or talcum powder, Federal Specification U-T-30.

WARNING

AIRCRAFT ENGINE VALVES

Severe personal injury may result when sodium-filled valves are mutilated. The metallic sodium used in these valves, when brought into contact with the skin (contacts moisture), gives off highly flammable hydrogen gas.

WARNING

REMOVING CORROSION

Take precautions, such as wetting the area or exhausting debris, to prevent possible dust explosions when removing corrosion from steel alloys. Use goggles or face shield when removing paint or corrosion with a wire brush or by the grinding method.

WARNING

TIRES AND WHEELS

If it is necessary to approach a wheel with a hot brake, do so either from directly in front or directly behind the aircraft.

Use extreme caution when prying out foreign material imbedded in tire tread.

Do not use air bottles or booster pumps not designed for tire inflation.

Ensure the valve core is removed before removing wheel bolts or screws.

Tires shall be inflated outside a restraining device only to a pressure sufficient to force the tire bead onto the rim ledge and create an airtight seal with the tire and bead. Use no more than 15 pounds pressure outside the restraining device. If seal is not formed, check tire rim and bead and repeat procedure. Use soap type liquid on rim for ease of movement.

WARNING

OXYGEN SYSTEM

Do not allow petroleum base products to come in contact with oxygen system components, as an explosion or fire may result.

Do not use masking tape to seal openings in oxygen regulators. Masking tape constitutes a safety hazard when use on either serviceable or repairable oxygen equipment.

DELETED

WARNING

GROUND SUPPORT EQUIPMENT

Always operate all equipment in accordance with the operator's manual.

Do not attempt to lift any load when the hydraulic axle jack is tilted.

To prevent accidental falls, appropriate maintenance platforms/safety stands illustrated in appropriate workstand manuals or any other approved locally procured/manufactured safety stands/restraint equipment will be used when working (above 10 feet) on aircraft in a non-tactical environment.

Install safety lock when an adjustable-height maintenance platform is in use.

Ensure the air hose used with compressed air is safe for the pressure being handled.

Release air pressure in air compressor tank before performing maintenance on air compressors.

Disconnect power before changing belts on electrically-driven compressors.

Disconnect electrical power before opening or disassembling any part of electrical equipment.

WARNING

RADIOGRAPHIC EQUIPMENT

Exercise extreme caution when performing radiographic inspections to prevent personnel from coming in contact with radiation. Radiation from X-ray units and radioisotope sources is extremely destructive to living tissue.

WARNING

FIRE EXTINGUISHERS

Halon type fire extinguishers, Monobromotrifluoromethane (CF₃BR) and Bromochloromethane (CB) are odorless gasses. When used in confined areas, available oxygen for breathing may be depleted. Use supplied breathing air when using these gasses in enclosed spaces.

WARNING

HYDRAULIC FLUID

To avoid contamination, do not use previously opened cans of hydraulic fluid. A new, sealed can of fluid must be opened and used. When opening can, clean top and use a clean, sharp, unplated instrument to prevent contamination.

Acrylic monomer and polymer base adhesive, MIL-A-8576, contains a volatile liquid which may prove toxic when vapors are inhaled over extended periods. Use only with adequate ventilation.

Observe fire precautions when using aliphatic naphtha, Federal Specification TT-N-95.

WARNING

COMPRESSED AIR

Compressed air shall not be used for cleaning purposes except if reduced to less than 30 psi and then only with effective chip-guarding and personal protective equipment.

WARNING

NOISE HAZARD

Noise levels reached during ground runup of Army aircraft are of a level that may cause permanent hearing loss. Maintenance personnel shall wear adequate hearing protection when working on aircraft with engines in operation.

WARNING

TURBINE ENGINE OIL

To avoid contamination, do not use previously opened cans of engine oil, new sealed can of fluid must be opened and used. When opening can, clean top and use a clean, sharp un-plated instrument to prevent contamination.

WARNING

MERCURY

A very small amount of mercury may produce hazardous vapors. Refer to TM 385-4, Safety Precautions for Maintenance of Electrical/Electronic Equipment, for safety precautions to use when handling mercury and for methods that are used to clean up mercury spillage.

WARNING

CARTRIDGES

Electrically activated fire extinguisher cartridges, external stores release cartridges, external load cable cutter cartridges and cargo hook thruster cartridges shall be protectively wrapped in aluminum foil or electrically shunted whenever removed from the aircraft installation to preclude "stray" electrical voltage activation and resulting personal injury.

WARNING

PROPER USE OF PLATED TOOLS

Use only chrome plated steel or unplated steel tools for disassembly or reassembly procedures described in this manual. Use of cadmium or zinc plated tools is not permitted since these platings are prone to chipping and flaking. Should these chips or flakes become embedded in aircraft parts, galvanic corrosion will result. Should these chips or flakes enter fuel or oil wetted components, they may eventually clog the filter or produce intergranular attack of nickel or titanium base alloys at elevated temperature. All tools regardless of type plating should be serviceable and free of chipping.

WARNING

SPECIAL INSTRUCTIONS

All equipment must be operated in accordance with the manufacturer's operating instructions. If unavailable, instructions for the use and care will be developed. Standard Operating Procedures (SOPs) will be prepared and used for all shop operations (refer to AR 385-95). The supporting Safety Office will use their expertise to provide assistance.

Guidance for industrial hazards can be found in the Code of Federal Regulations, Code of Federal Regulations 29 CFR 1910.

WARNING

DEGREASING SOLVENTS

Degreasing Solvent, MIL-PRF-680, is combustible and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

WARNING

ALIPHATIC NAPHTHA

Aliphatic Naphtha, TT-N-95, is extremely flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

WARNING

CLEANING SOLVENT

Cleaning Solvent, HFE-71DE, is toxic to eyes, skin, and respiratory tract, and decomposes into other hazardous products when exposed to extreme heat. Wear chemical protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas. If ventilation is not adequate, use approved respirator as determined by local safety/industrial hygiene personnel. Keep away from open flames, welding, or other sources of extreme heat.

WARNING

CLEANING COMPOUND

Cleaning Compound, MIL-PRF-87937, Type II, can irritate eyes and skin. Wear protective gloves and goggles. Avoid repeated or prolonged contact.

TM 1-1500-204-23-1

WARNING

CLEANING COMPOUND

Cleaning Compound, MIL-PRF-85570, Type II, can irritate eyes, skin, and respiratory tract. Wear protective gloves and goggles. Avoid repeated or prolonged contact. Use in well ventilated areas.

WARNING

ISOPROPYL ALCOHOL

Isopropyl Alcohol, TT-I735, is flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

CHANGE

NO. 5

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC., 31 May 2006

TECHNICAL MANUAL

AVIATION UNIT MAINTENANCE (AVUM) AND AVIATION INTERMEDIATE MAINTENANCE (AVIM) MANUAL FOR GENERAL AIRCRAFT MAINTENANCE (GENERAL MAINTENANCE AND PRATICES) VOLUME 1

OZONE DEPLETING

This document has been reviewed for the presence of Class I Ozone Depleting Chemicals by the AMCOM G-4 (Logistics) Environmental Division. As of the base through C03, dated 13 January 2003, all references to Class I Ozone Depleting Chemicals have been removed from this document by substitution with chemicals that do not cause atmospheric ozone depletion EXCEPT Bromotrifluoromethane (CF3BR); Fire Extinguisher Agent (Halon 1301).

HAZARDUS MATERIAL INFORMATION

This document has been reviewed for the presence of SOLVENTS containing hazardous materials as defined by the EPCRA 302 and 313 lists by the AMCOM G-4 (Logistics) Environmental Division. As of the base through C03, dated 13 January 2003, all references to Solvents containing hazardous materials have been removed from this document by substitution with non-hazardous or less hazardous materials where possible.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 1-1500-204-23-1, DATED 31 July 1992, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove Pages

a through d
A and B
i through iv
2-3 through 2-6
6-1 through 6-6
7-19 through 7-24
7-29 and 7-30
7-37 and 7-38
8-17 through 8-20
9-7 through 9-10
9-29 through 9-32
9-43 and 9-44

Insert Pages

a through f
A and B
i through iv
2-3 through 2-6
6-1 through 6-6
7-19 through 7-24
7-29 and 7-30
7-37 and 7-38
8-17 through 8-20
9-7 through 9-10
9-29 through 9-32
9-43 and 9-44

TM 1-1500-204-23-1

9-49 through 9-58
13-1 and 13-2
Index 79 and Index 80
Index 89 and Index 90

9-49 through 9-58
13-1 and 13-2
Index 79 and Index 80
Index 89 and Index 90

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

Official:



JOYCE E. MORROW
*Administrative Assistant to the
Secretary of the Army*
0612301

PETER J. SCHOOMAKER
*General, United States Army
Chief of Staff*

DISTRIBUTION: To be distributed in accordance with Initial Distribution Number (IDN) 313302, requirements for TM 1-1500-204-23-1.

TM 1-1500-204-23-1

CHANGE

NO. 4

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC., 10 June 2005

TECHNICAL MANUAL

AVIATION UNIT MAINTENANCE (AVUM) AND AVIATION INTERMEDIATE MAINTENANCE (AVIM) MANUAL FOR GENERAL AIRCRAFT MAINTENANCE (GENERAL MAINTENANCE AND PRATICES) VOLUME 1

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 1-1500-204-23-1, dated 31 July 1992, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove Pages

A /(B blank)
3-5 and 3-6
3-9 and 3-10
3-15 and 3-16
4-1 and 4-2
11-15 and 11-16
Index 63 and Index 64

Insert Pages

A and B
3-5 and 3-6
3-9 and 3-10
3-15 and 3-16
4-1 and 4-2
11-15 and 11-16
Index 63 and Index 64

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

Official:

PETER J. SCHOOMAKER
General, United States Army
Chief of Staff



SANDRA R. RILEY
*Administrative Assistant to the
Secretary of the Army*

0512203

DISTRIBUTION: To be distributed in accordance with Initial Distribution Number (IDN) 313302, requirements for TM 1-1500-204-23-1.

CHANGE

NO. 3

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 13 January 2003

TECHNICAL MANUAL
AVIATION UNIT MAINTENANCE (AVUM)
AND AVIATION INTERMEDIATE
MAINTENANCE (AVIM) MANUAL
FOR
GENERAL AIRCRAFT MAINTENANCE
(GENERAL MAINTENANCE AND PRACTICES)
VOLUME 1

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 1-1500-204-23-1, 31 July 1992, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

| Remove pages | Insert pages |
|-------------------|-------------------|
| A/(B blank) | A and B |
| i and ii | i and ii |
| 2-9 and 2-10 | 2-9 and 2-10 |
| 8-1 and 8-2 | 8-1 and 8-2 |
| 11-1 and 11-2 | 11-1 and 11-2 |
| 11-17 and 11-18 | 11-17 and 11-18 |
| 13-3/(13-4 blank) | 13-3/(13-4 blank) |


TM 1-1500-204-23-1
C3

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

Official:

 ERIC K. SHINSEKI
General, United States Army
Chief of Staff



JOEL B. HUDSON
Administrative Assistant to the
Secretary of the Army
0233706

DISTRIBUTION:

To be distributed in accordance with initial distribution number (IDN) 313302, requirements for
TM 1-1500-204-23-1.

CHANGE

NO. 2

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C. 1 MARCH, 2000

Technical Manual

AVIATION UNIT MAINTENANCE (AVUM)
AND AVIATION INTERMEDIATE
MAINTENANCE (AVIM) MANUAL
FOR
GENERAL AIRCRAFT MAINTENANCE
(SHEET METAL SHOP PRACTICES)
VOLUME 1

DISTRIBUTION STATEMENT A: Approved for public release;
distribution is unlimited.

TM 1-1500-204-23-1, dated 31 July 1992, is changed as follows:

1. Remove and insert pages as indicated below. New or changed
A vertical bar in the margin indicates text material. A
miniature pointing hand indicates an illustration change.

Remove pages

i and ii
v and vi
3-9 and 3-10
3-19/(3-20/blank)
6-1 and 6-2
9-43 and 9-44
11-1 and 11-2
11-5 through 11-10
11-13 through 11-18
11-33 through 11-38
13-1 and 13-2
A-1 and A-2
Index 9 and Index 10

Insert pages


A and B
i and ii
v and vi
3-9 and 3-10
3-19/(3-20/blank)
6-1 and 6-2
9-43 and 9-44
11-1 and 11-2
11-5 through 11-10
11-13 through 11-18
11-33 through 11-38
13-1 and 13-2
A-1 and A-2
Index 9 and Index 10

2. Retain this sheet in front of manual for reference purposes.

TM 1-1500-204-31-1
C 2

By Order of the Secretary of the Army:

 Official:



JOEL B. HUDSON
Administrative Assistant to the
Secretary of the Army

0001902

ERIC K. SHINSEKI
General, United States Army
Chief of Staff

DISTRIBUTION: To be distributed in accordance with Initial Distribution
Number (IDN) 313302, requirements for TM 1-1600-204-23-1.

CHANGE

NO. 1

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 29 OCTOBER 1993

AVIATION UNIT MAINTENANCE (AVUM)
AND AVIATION INTERMEDIATE MAINTENANCE (AVIM) MANUAL

FOR

GENERAL AIRCRAFT MAINTENANCE
(General Maintenance and Practices)

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 1-1500-204-23-1, 31 July 1992, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

c and d
i and ii
3-5 and 3-6
3-9 through 3-12
11-13 through 11-16
11-25 through 11-28
12-1 and 12-2
A-1 and A-2

Insert pages

 
c and d
i and ii
3-5 and 3-6
3-9 through 3-12
11-13 through 11-16
11-25 through 11-28
12-1 and 12-2
A-1 and A-2

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

GORDON R. SULLIVAN
General, United States Army
Chief of Staff

Official:



MILTON H. HAMILTON
Administrative Assistant to the
Secretary of the Army
05627

Distribution:

To be distributed in accordance with DA Form 12-31-E, block no. 3302, requirements for TM 1-1500-204-23-1.

LIST OF EFFECTIVE PAGES

Insert latest changed pages. Dispose of superseded pages in accordance with regulations.

NOTE: On a changed page, the portion of the text affected by the latest change is indicated by a vertical line, or other change symbol, in the outer margin of the page. Changes to illustrations are indicated by miniature pointing hands. Changes to wiring diagrams are indicated by shaded areas.

Dates of issue for original and changed pages are:

| | | | |
|----------------|-----------------|---------------|-----------------|
| Original | 31 July 1992 | Change 3..... | 13 January 2003 |
| Change 1..... | 29 October 1993 | Change 4..... | 10 June 2005 |
| Change 2..... | 1 March 2000 | Change 5..... | 31 May 2006 |

TOTAL NUMBER OF PAGES IN THIS PUBLICATION IS 831, CONSISTING OF THE FOLLOWING:

| Page No. | *Change No. | Page No. | *Change No. |
|------------------------|-------------|-------------------------|-------------|
| Cover..... | 0 | 7-23..... | 5 |
| a through f..... | 5 | 7-24 through 7-29..... | 0 |
| A and B..... | 5 | 7-30..... | 5 |
| i through iv..... | 5 | 7-31 through 7-36..... | 0 |
| v..... | 2 | 7-37..... | 5 |
| vi..... | 0 | 7-38 through 7-47..... | 0 |
| 1-1..... | 0 | 7-48 blank..... | 0 |
| 1-2 blank..... | 0 | 8-1..... | 3 |
| 2-1 through 2-3..... | 0 | 8-2 through 8-16..... | 0 |
| 2-4 and 2-5..... | 5 | 8-17..... | 5 |
| 2-6 through 2-9..... | 0 | 8-18..... | 0 |
| 2-10..... | 3 | 8-19..... | 5 |
| 2-11..... | 0 | 8-20 and 8-21..... | 0 |
| 2-12 blank..... | 0 | 8-22 blank..... | 0 |
| 3-1 through 3-4..... | 0 | 9-1 through 9-7..... | 0 |
| 3-5 and 3-6..... | 4 | 9-8..... | 5 |
| 3-7 and 3-8..... | 0 | 9-9..... | 0 |
| 3-9 and 3-10..... | 4 | 9-10..... | 5 |
| 3-11..... | 0 | 9-11 through 9-28..... | 0 |
| 3-12..... | 1 | 9-29 through 9-32..... | 5 |
| 3-13 through 3-15..... | 0 | 9-33 through 9-42..... | 0 |
| 3-16..... | 4 | 9-43..... | 5 |
| 3-17 and 3-18..... | 0 | 9-44..... | 2 |
| 3-19..... | 2 | 9-45 through 9-49..... | 0 |
| 3-20 blank..... | 0 | 9-50 through 9-53..... | 5 |
| 4-1 and 4-2..... | 4 | 9-54..... | 0 |
| 5-1..... | 0 | 9-55 through 9-57..... | 5 |
| 5-2 blank..... | 0 | 9-58 through 9-65..... | 0 |
| 6-1 through 6-3..... | 5 | 9-66 blank..... | 0 |
| 6-4 and 6-5..... | 0 | 10-1 through 10-12..... | 0 |
| 6-6..... | 5 | 11-1..... | 2 |
| 7-1 through 7-18..... | 0 | 11-2..... | 3 |
| 7-19 through 7-21..... | 5 | 11-3 and 11-4..... | 0 |
| 7-22..... | 0 | | |

*Zero in this column indicated an original page.

Change 5 A

TM 1-1500-204-23-1

LIST OF EFFECTIVE PAGES (CON'T)

| Page No. | *Change No. | Page No. | *Change No. |
|--------------------------|----------------|---------------------------------|----------------|
| 11-5 through 11-7..... | 2 | 13-3..... | 3 |
| 11-8..... | 0 | 13-4 blank..... | 0 |
| 11-9 and 11-10..... | 2 | A-1 and A-2..... | 2 |
| 11-11 through 11-13..... | 0 | Glossary 1..... | 0 |
| 11-14..... | 2 | Glossary 2 blank..... | 0 |
| 11-15..... | 4 | Index 1 through Index 8..... | 0 |
| 11-16..... | 1 | Index 9..... | 2 |
| 11-17..... | 2 | Index 10 through Index 49..... | 0 |
| 11-18..... | 3 | Index 50 blank..... | 0 |
| 11-19 through 11-24..... | 0 | Index 51 through Index 57..... | 0 |
| 11-25..... | 1 | Index 58 blank..... | 0 |
| 11-26..... | 0 | Index 59 through Index 62..... | 0 |
| 11-27..... | 1 | Index 63 and Index 64..... | 4 |
| 11-28 through 11-32..... | 0 | Index 65 through Index 67..... | 0 |
| 11-33..... | 2 | Index 68 blank..... | 0 |
| 11-34..... | 0 | Index 69 through Index 78..... | 0 |
| 11-35 and 11-36..... | 2 | Index 79..... | 5 |
| 11-37..... | 0 | Index 80 through Index 88..... | 0 |
| 11-38..... | 2 | Index 89..... | 5 |
| 11-39 and 11-40..... | 0 | Index 90 through Index 129..... | 0 |
| 12-1 and 12-2..... | 1 | Index 130 blank..... | 0 |
| 13-1 and 13-2..... | 5 | Index 131 - Index 170..... | 0 |

*Zero in this column indicated an original page.

B Change 5

TECHNICAL MANUAL

TM 1-1500-204-23-1

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 31 July 1992

TECHNICAL MANUAL

**AVIATION UNIT MAINTENANCE (AVUM)
AND AVIATION INTERMEDIATE
MAINTENANCE (AVIM) MANUAL**

For

GENERAL AIRCRAFT MAINTENANCE

(GENERAL MAINTENANCE AND PRACTICES)

VOLUME 1

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can improve this manual. If you find mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) located in the back of this manual, directly to: Commander, U.S. Army Aviation and Missile Command, ATTN: AMSAM-MMC-MA-NP, Redstone Arsenal, AL 35898-5000. A reply will be furnished to you. You may also provide DA Form 2028 information to AMCOM via e-mail, fax, or the World Wide Web. Our fax number is DSN 788-6546 or Commercial (256) 842-6546. Our e-mail address is: 2028@redstone.army.mil. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028. For the World Wide Web use: <https://amcom2028.redstone.army.mil>.

OZONE DEPLETING

This document has been reviewed for the presence of Class I Ozone Depleting Chemicals by the AMCOM G-4 (Logistics) Environmental Division. As of the base through C03, dated 13 January 2003, all references to Class I Ozone Depleting Chemicals have been removed from this document by substitution with chemicals that do not cause atmospheric ozone depletion EXCEPT Bromotrifluoromethane (CF3BR); Fire Extinguisher Agent (Halon 1301).

HAZARDUS MATERIAL INFORMATION

This document has been reviewed for the presence of SOLVENTS containing hazardous materials as defined by the EPCRA 302 and 313 lists by the AMCOM G-4 (Logistics) Environmental Division. As of the base through C03, dated 13 January 2003, all references to Solvents containing hazardous materials have been removed from this document by substitution with non-hazardous or less hazardous materials where possible.

Distribution Statement A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

| | Page |
|---|-------------|
| CHAPTER 1 INTRODUCTION | 1-1 |
| CHAPTER 2 HANGAR AND SHOP OPEERATIONS | 2-1 |
| CHAPTER 3 FLIGHTLINE OPERATIONS..... | 3-1 |
| CHAPTER 4 AIRCRAFT STORAGE AND SHIPMENT | 4-1 |

| | Page |
|--|-------------|
| CHAPTER 5 MARKING OF AERONAUTICAL ITEMS | 5-1 |
| CHAPTER 6 APPLICATION AND REMOVAL OF DECALS | 6-1 |
| CHAPTER 7 GENERAL RECIPROCATING ENGINE MAINTENANCE | 7-1 |
| CHAPTER 8 GENERAL TURBINE ENGINE MAINTENANCE | 8-1 |
| CHAPTER 9 GENERAL AIRFRAME MAINTENANCE | 9-1 |
| CHAPTER 10 ARCTIC, DESERT, AND TROPIC MAINTENANCE | 10-1 |
| CHAPTER 11 AVIATION LIFE SUPPORT EQUIPMENT MAINTENANCE | 11-1 |
| CHAPTER 12 PYROTECHNICS | 12-1 |
| CHAPTER 13 AIRCRAFT CLEANING..... | 13-1 |
| APPENDIX A REFERENCES | A-1 |
| GLOSSARY | Glossary-1 |
| INDEX | Index-1 |

Volume 2

| | |
|---|------------|
| CHAPTER 1 INTRODUCTION | 1-1 |
| CHAPTER 2 PNEUDRAULICS GENERAL | 2-1 |
| CHAPTER 3 HYDRAULIC SHOP OPERATIONS | 3-1 |
| CHAPTER 4 HYDRAULIC MAINTENANCE PRACTICES | 4-1 |
| APPENDIX A REFERENCES | A-1 |
| GLOSSARY | Glossary-1 |
| INDEX | Index-1 |

Volume 3

| | |
|---|------------|
| CHAPTER 1 INTRODUCTION | 1-1 |
| CHAPTER 2 FUEL SYSTEMS | 2-1 |
| CHAPTER 3 OIL SYSTEMS | 3-1 |
| CHAPTER 4 HYDRAULIC MAINTENANCE PRACTICES | 4-1 |
| APPENDIX A REFERENCES | A-1 |
| GLOSSARY | Glossary-1 |
| INDEX | Index-1 |

| | Page |
|--|-------------|
| Volume 4 | |
| CHAPTER 1 INTRODUCTION | 1-1 |
| CHAPTER 2 ELECTRIC SHOP OPERATIONS | 2-1 |
| CHAPTER 3 ELECTRICAL MAINTENANCE PRACTICES | 3-1 |
| CHAPTER 4 INSTRUMENT SHOP PRACTICES | 4-1 |
| APPENDIX A REFERENCES | A-1 |
| GLOSSARY | Glossary-1 |
| INDEX | Index-1 |

| | |
|---|------------|
| Volume 5 | |
| CHAPTER 1 INTRODUCTION | 1-1 |
| CHAPTER 2 PROPELLER MAINTENACE PRACTICES AND PROCEDURES | 2-1 |
| CHAPTER 3 ROTOR MAINTENANCE PRACTICES AND PROCEDURES | 3-1 |
| CHAPTER 4 POWERTRAIN MAINTENANCE PRACTICES AND PROCEDURES | 4-1 |
| APPENDIX A REFERENCES | A-1 |
| GLOSSARY | Glossary-1 |
| INDEX | Index-1 |

| | |
|--|------------|
| Volume 6 | |
| CHAPTER 1 INTRODUCTION | 1-1 |
| CHAPTER 2 HARDWARE | 2-1 |
| CHAPTER 3 RUBBER MATERIALS | 3-1 |
| CHAPTER 4 METALS | 4-1 |
| CHAPTER 5 PHENOLIC AND PLASTIC MATERIALS | 5-1 |
| CHAPTER 6 ADHESIVES, SEALANTS, AND CEMENTS | 6-1 |
| CHAPTER 7 CONSUMABLE MATERIALS | 7-1 |
| APPENDIX A REFERENCES | A-1 |
| GLOSSARY | Glossary-1 |
| INDEX | Index-1 |

| | Page |
|---|-------------|
| Volume 7 | |
| CHAPTER 1 INTRODUCTION | 1-1 |
| CHAPTER 2 GENERAL | 2-1 |
| CHAPTER 3 PENETRANT INSPECTIONS | 3-1 |
| CHAPTER 4 MAGNETIC PARTICLE INSPECTIONS | 4-1 |
| CHAPTER 5 RADIOGRAPHY | 5-1 |
| CHAPTER 6 ULTRASONIC INSPECTIONS | 6-1 |
| CHAPTER 7 ELECTROMAGNETIC INSPECTIONS | 7-1 |
| APPENDIX A REFERENCES | A-1 |
| GLOSSARY | Glossary-1 |
| INDEX | Index-1 |

| | |
|--|------------|
| Volume 8 | |
| CHAPTER 1 INTRODUCTION | 1-1 |
| CHAPTER 2 MACHINE SHOP PRACTICES | 2-1 |
| CHAPTER 3 WELDING SHOP PRACTICES | 3-1 |
| APPENDIX A REFERENCES | A-1 |
| GLOSSARY | Glossary-1 |
| INDEX | Index-1 |

| | |
|---------------------------------|-----|
| Volume 9 | |
| CHAPTER 1 INTRODUCTION | 1-1 |
| CHAPTER 2 TOOL PROCEDURES | 2-1 |

| | <u>Page</u> |
|---|--------------------|
| CHAPTER 3 MEASURING TOOLS | 3-1 |
| CHAPTER 4 GENERAL MAINTENANCE TOOLS | 4-1 |
| CHAPTER 5 PNEUMATIC TOOLS | 5-1 |
| CHAPTER 6 ELECTRIC POWER TOOLS | 6-1 |
| CHAPTER 7 SPECIAL AIRCRAFT TOOLS | 7-1 |
| CHAPTER 8 TORQUE TOOLS AND TORQUING PRINCIPLES AND PROCEDURES | 8-1 |
| CHAPTER 9 GROUND SUPPORT EQUIPMENT | 9-1 |
| APPENDIX A REFERENCES.. | A-1 |
| GLOSSARY | Glossary 1 |
| INDEX | Index 1 |

Volume 10

| | |
|---|-----|
| CHAPTER 1 INTRODUCTION | 1-1 |
| CHAPTER 2 SHEET METAL SHOP OPERATIONS | 2-1 |
| CHAPTER 3 SHOP EQUIPMENT | 3-1 |
| CHAPTER 4 AIRCRAFT STRUCTURES | 4-1 |
| CHAPTER 5 STRUCTURAL METALS | 5-1 |
| CHAPTER 6 FORMING | 6-1 |

TM 1-1500-204-23-1

| | <u>Page</u> |
|--|--------------------|
| CHAPTER 7 RIVETS AND RIVETING TECHNIQUES | 7-1 |
| CHAPTER 8 AIRFRAME SHEET METAL REPAIR | 8-1 |
| CHAPTER 9 SANDWICH CONSTRUCTION REPAIR | 9-1 |
| CHAPTER 10 AIRCRAFT PLASTICS | 10-1 |
| CHAPTER 11 REBALANCING MOVABLE SURFACES | 11-1 |
| CHAPTER 12 SPOT WELDS | 12-1 |
| APPENDIX A REFERENCES | A-1 |
| APPENDIX B BLIND RIVET CONVERSION | B-1 |
| GLOSSARY | Glossary 1 |
| INDEX | Index 1 |

CHAPTER 1

INTRODUCTION

1-1. Purpose. This volume provides general information pertaining to general maintenance and practices. Specific aircraft application, usage, and substitution is found in the individual aircraft maintenance manual. This volume is of maximum benefit to the mechanic who desires general information about general maintenance and practices. This volume furnishes the mechanic a source of information about how to perform various maintenance practices used on all aircraft. This volume is not a requisitioning authority, and applicable repair parts and special tools list should be consulted to obtain the unit of issue and National Stock Number of the items required for maintenance. However, this manual may be used as authority to obtain necessary assistance and safety related material

1-2. Scope. General information to guide aircraft maintenance personnel is covered in this volume, however, no attempt has been made to include special parts or equipment which are applicable only to individual or special aircraft. Chapters 1, 2, and 3 cover the introduction, hangar and shop operations and flightline operations. Chapters 4, 5, and 6 explain aircraft storage and shipment, marking of aeronautical items, and application and removal of decals. General maintenance practices for reciprocating engines, turbine engines, and airframes are described in Chapters 7, 8, and 9. Arctic, desert, and tropic maintenance procedures are covered in Chapter 10. Life support maintenance procedures are covered in Chapter 11. Finally, Chapters 12 and 13 explain pyrotechnics and aircraft cleaning

1-3. Consumable Materials. Refer to TM 1-1500204-23-6 for consumable materials in this volume.

CHAPTER 2

HANGAR AND SHOP OPERATIONS

2-1. General. The maintenance instructions and procedures contained in this chapter are general and applicable to hangar and shop operations. Maintenance instructions that are specific to a particular aircraft are contained in the applicable maintenance manuals and will be used in conjunction with general information contained in this chapter.

2-2. Permanent Shop Installations. The following paragraphs describe permanent shop installations, operations, and equipment.

a. Typical Layout. Permanent shop layout varies depending on shop purpose and the facility being used. Care should be taken to provide proper spacing between equipment so as not to prevent emergency access.

b. Shop Size. The size of each permanent shop shall be adequate to allow shop personnel to accomplish all normal shop operations.

c. Shop Equipment Required. Permanent shops shall be equipped with all required equipment as specified by Army command.

d. Shop Equipment Arrangement. Shop equipment is arranged to best meet the needs of the particular shop operation. All equipment must be arranged with utmost care to prevent danger to personnel.

e. Overhead Chain Hoist. Overhead chain hoists shall be inspected daily for the following.

- Excessive wear or stretch
- Bent or twisted links
- Defective welds
- Nicks and gouges

f. Compressed Air and Water Outlets. Permanent shops are equipped with compressed air and water outlets. Care should be taken to allow clear access to each outlet.

g. Electrical Utilities. Electrical power is distributed throughout the permanent shop. Care should be taken to allow clear access to each outlet.

h. Noise Levels. Noise levels from machinery in permanent shops are high. Personnel working in these shops shall wear adequate hearing protection.

i. Dust and Dirt Control. Use the following procedures for dust and dirt control in permanent shops.

(1) Sweep the floors daily with an ordinary push broom.

NOTE

Carefully clean areas where dust producing operations have taken place

(2) Clean shop equipment in accordance with the applicable maintenance manuals.

(3) Clean walls and tables periodically with a cloth dampened with a mild detergent.

j. Spray Painting. All painting shall be accomplished in the paint shop in accordance with proper procedures as set forth by the facility supervisor.

k. Adhesive Operations. Adhesives join objects over a broad area, instead of localizing stresses at one or more points, as with spot welding or metal fastening. Adhesives simplify construction by eliminating bracing, stiffeners, local reinforcements, or framing. Adhesive use is a reliable, efficient assembly method.

l. Balancing Equipment. The equipment used for balancing measurements consists of a set of knife edges, weights, weighing scale, and a steel tape measure.

m. Environmental Control. The permanent shop environment is controlled by environmental control units installed throughout the shop.

n. Lighting Requirements. Adequate lighting shall be provided for all shop operations. Light fixtures should

TM 1-1500-204-23-1

be inspected regularly for damage and worn components.

o. Storage of Shop Stocks. Repair Parts. and Consumable Materials. Storage of all shop items shall be in accordance with the applicable maintenance manuals. Utmost care shall be taken to ensure the safe storage of all items.

p. Storage of Compressed Gases. The following precautions will be taken when storing compressed gas cylinders.

- Cylinders must be protected against excessive rise or fall of temperature.

NOTE

Cylinders will be stored inside wherever possible, and, if not, they may be stored in the open but must be protected from extreme weather conditions and also from the ground to prevent rusting. Cylinders stored in the open must be protected from accumulation of ice and snow in the summer, cylinders stored in this manner will be protected or screened against direct rays of the sun. Ventilation will be provided to keep temperatures below 125°F (52.6°C) and carry off leakage of inflammable gases.

- Cylinders must never be stored near highly flammable substances such as oil, gasoline, waste, etc. A minimum distance of 50 feet will be maintained between cylinders and flammable items.
- Care will be taken to protect cylinders from any object which might cut or damage their surfaces. Cylinders will not be stored at a place where heavy moving objects may strike or fall on them.
- Cylinders will not be stored in an area which is continually damp. Neither should they be stored near live electric wires or rails of electrical equipment.
- Valve protection caps will always be installed if they become frozen, they should be thawed out in a warm room. Do not use a steam hose to thaw them out as fusible

safety plugs may melt and allow discharge of the cylinder.

- Keep empty cylinders separated from full cylinders.
- Do not store cylinders near salt or corrosive chemicals or fumes of any kind as the cylinders will become rusty and the valve caps will stick.
- Keep valves closed on all cylinders after usage.
- Do not store cylinders near radiators or other sources of heat.
- Cylinders of one kind of gas should not be stored near cylinders of other kinds of gas. A fire-resistant partition should separate flammable and nonflammable gases unless the cylinders are otherwise widely separated. Oxygen, in particular, will be separated from flammable gases or supplies.
- Storage rooms must be well ventilated to prevent possible accumulation of explosive or harmful concentration of gas.

q. Storage of High-Value Items. High value items shall be stored in areas that can be secured to prevent theft. Care shall be taken to store high-value items in such a manner as to prevent inadvertent damage.

r. Open Storage for Repaired Equipment and Consumable Material. Avoid storing repaired equipment and consumable materials in open storage areas where they can be easily damaged.

2-3. Temporary Shop Installations. The following paragraphs describe temporary shop installations, operations and equipment.

a. Typical Shop Layout. A typical shop layout is shown in figure 2-1 Layout of equipment vanes depending on the temporary shop purpose.

b. Shop Size The exterior dimensions for a deployed temporary shop are as follows

- Width 22 ft 3 in (6.78 meters)
- Height 7 ft 11 in. (2.41 meters)
- Length..... 13 ft 4 in (4.06 meters)

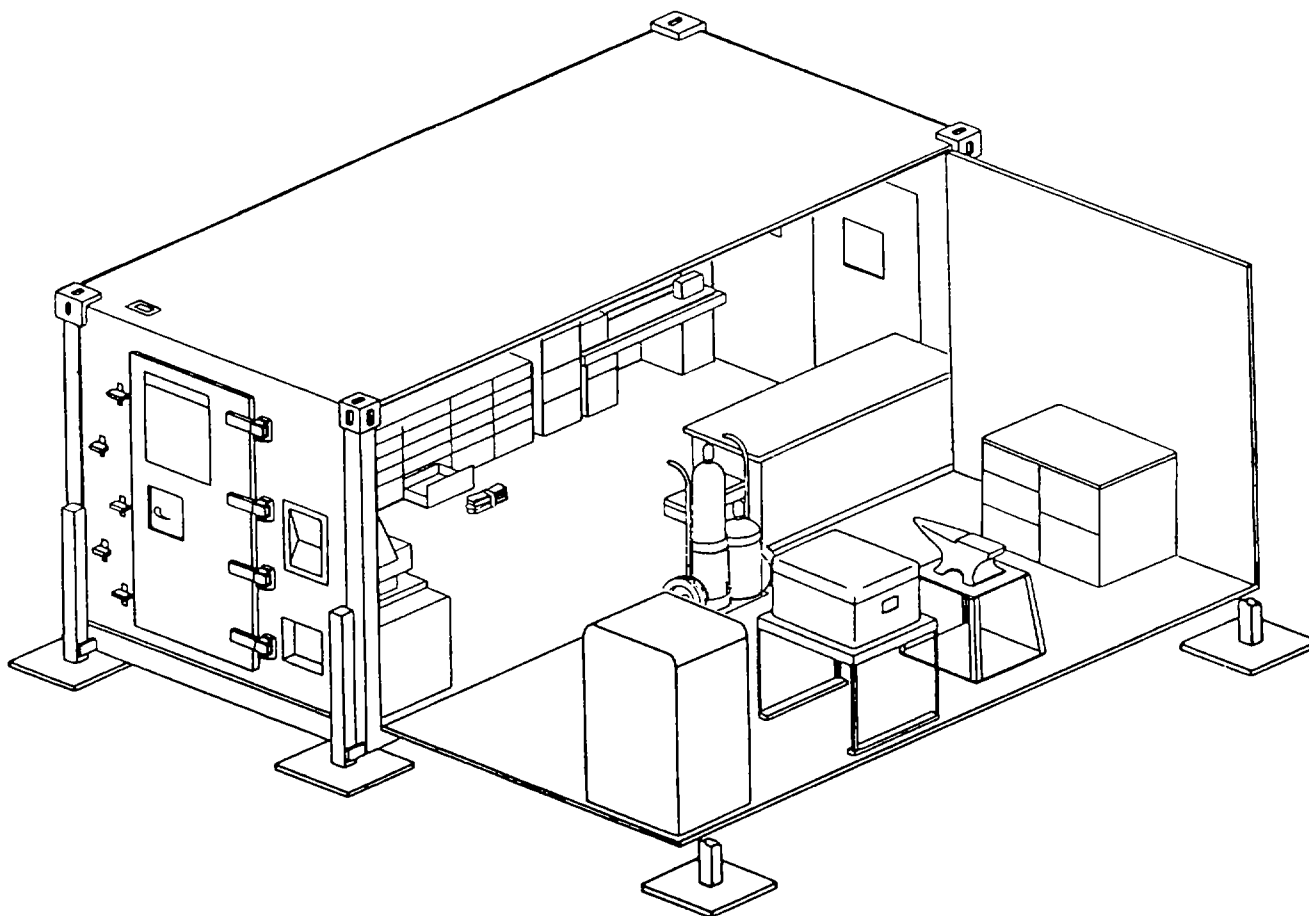


Figure 2-1. Temporary Shop Layout

c. Equipment Mounted in Mobile Shelters. Equipment shall be mounted in accordance with the specific shop requirements.

d. Shop Equipment Arrangement. Shop equipment is arranged to best meet the needs of the particular shop operation. All equipment must be arranged with utmost care to prevent danger to personnel.

e. Chain Hoists. Chain hoists for temporary shops shall be inspected daily for the following.

- Excessive wear or stretch
- Bent or twisted links
- Defective welds
- Nicks and gouges

f. Compressed Air Panels. The compressed air panel connector installed through the wall of the S-280 shops may be replaced by removing the two bolts securing it to the mounting plate. Apply sealant to the replacement connector and reinstall mounting bolts.

g. Electrical Utilities. Electrical power is transmitted from 60 Hz mobile electric generators through the power distribution panels to the shops by heavy-duty power cables.

h. Noise Levels. Noise levels in temporary shops are high. Personnel working in these shops shall wear adequate hearing protection.

i. Dust and Dirt Control. Use the following procedures for dust and dirt control.

(1) Sweep the floor each morning with an ordinary push broom.

TM 1-1500-204-23-1

(2) Once a week, clean the interior walls with a cloth dampened with a mild detergent solution and wipe dry.

(3) Once a week, clean the exterior of the shelter, using the same detergent as in step (2). Apply with a soft bristle brush or sponge, scrubbing off all dirt and grime. Rinse with clean water. Dry with a soft cloth.

j. Spray Painting. Spray painting can be used to repaint any spots in need of refinishing. The following procedures explain spray painting of temporary shops:

(1) Remove all loose or flaked paint.

(2) Smooth with No. 0 sandpaper, feather edging all sanded spots to ensure a smooth surface for the new paint.

(3) Apply paint with a 2-inch spray pattern.

NOTE

Thin paint if necessary with an acceptable thinner conforming to TT-T-291.

(4) Allow 4 to 8 hours to dry.

k. Adhesive Operations. Adhesives join objects over a broad area, instead of localizing stresses at one or more points, as with spot welding or metal fastening. Adhesives simplify construction by eliminating bracing, stiffeners, local reinforcements, or framing. Adhesive use is a reliable, efficient assembly method.

l. Balancing Equipment. The equipment used for balancing measurements consists of a set of knife edges, weights, a small accurate weighing scale, and a steel tape measure.

m. Temperature and Humidity Control. Temperature and humidity is controlled in temporary shop structures by environmental control units attached to the structure.

n. Flammable Materials. All flammables shall be stored in accordance with existing command policies.

o. Lighting. Light fixtures should be inspected for broken lamp contacts or other damage. The lamp and protector may be replaced by removing the screws holding the retaining straps to the light fixture.

p. Repair Parts Van. The repair parts van shall be fully stocked with repair parts for the specific shop. The van shall be located as to provide easy access by maintenance personnel.

q. Protected Storage Areas. Each command shall provide protected storage areas for flammable or hazardous materials. Care should be taken to provide security and proper handling of items in these areas.

r. Open Storage Areas. Open storage areas will be arranged by each shop facility as needed. Supplies shall be organized to provide easy access, removal, and use.

2-4. MAINTENANCE OF SHOP EQUIPMENT. The maintenance of machinery and shop equipment shall be divided into operator maintenance, major repair, and painting.

a. Operator Maintenance. Operator maintenance consists of cleaning, lubrication, and minor adjustment of belts, guards, gibs, etc. It also includes periodic visual inspection to preclude possible damage, failure, or breakdown due to loose or excessively worn parts, defective wiring connections, insulation, safety appliances, etc.

b. Major Repair. Major repair consists of all repair work not performed by operators. Major repair within the scope of facilities shall be accomplished locally. Repairs not within the scope of local facilities shall be accomplished through a work order to direct support or a commercial contractor.

c. Painting. Painting consists of any refinishing of equipment, from touchup to complete repainting of the item.

NOTE

All color shades shall be in accordance with Federal Specification FED-STD-595.

(1) **Equipment repainting.** When complete repainting is necessary, the original painted surface shall be refinished with synthetic gloss enamel, Federal Specification TT-E-489. The color shall be green, color shade 14260.

(2) **Work areas and critical parts.** Work areas and critical parts will be highlighted by painting with Federal Specification TT-E-489. The color shade shall be 13655 yellow enamel. To ensure maximum color pattern uniformity on like items of equipment, painting and highlighting shall be accomplished in accordance with the general pattern shown in figure 2-2. Equipment other than the type illustrated, shall be painted in accordance with these general instructions. The painted finish on this equipment may be touched up. The commanding officer or his designated representative shall determine the extent of the touchup allowed without complete repainting.

(3) **Natural wood pieces.** Wood pieces or equipment finished in colors other than those listed in paragraph c may be touched up with colors to match existing finish, provided touchup does not involve refinishing a total area equal to more than 10 percent of painted surface area. When more than 10 percent of painted surface area must be touched up, item shall be repainted with colors as specified.

NOTE

Instrument repair benches or other special purpose benches, parts, and equipment having natural wood finish may be refinished in natural wood or white enamel, Federal Specification TT-E-489, color shade 17875. Working surfaces of bench tops covered with metal or composition need not be repaired.

(4) Start buttons. Start buttons shall be painted with Federal Specification TT-E-489, green synthetic gloss enamel, color shade 14260.

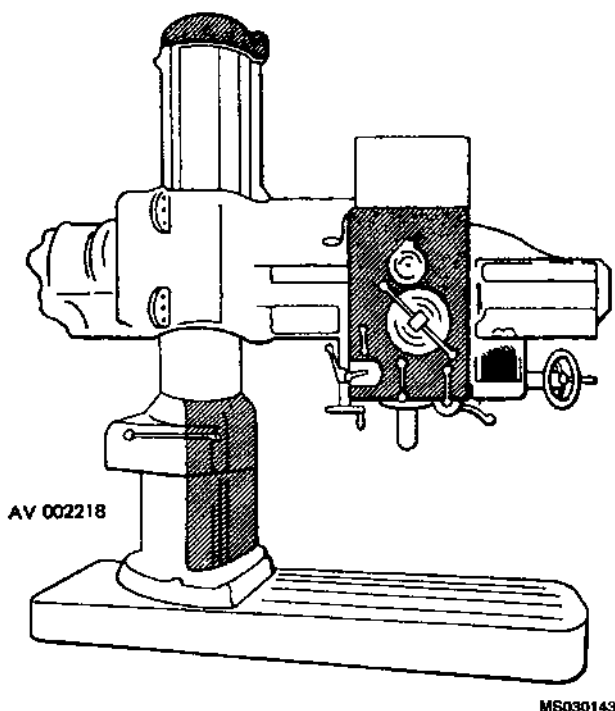


Figure 2-2. Painting of Shop Equipment to Highlight Operator Position

(5) Stop buttons. Stop buttons for electrical switches used for emergency stopping of machinery shall be painted with red synthetic gloss enamel, Federal Specification TT-E-489, color shade 11105.

(6) Hazardous areas. On some equipment, extremely hazardous conditions may exist, such as open flywheels, gears, or other moving parts which cannot be guarded or which might be impractical to guard. These parts may be painted with Federal Specification TT-E-489, orange synthetic gloss enamel, color shade 12197. Overuse of orange color will defeat the intended purpose, therefore, the local safety engineer shall deter-

mine the use of this color and furnish instructions. Painting of machined parts, such as face plates, chucks, spin-dels, etc, is not authorized.

(7) Preparation for painting. Prepare surfaces to be repainted using the following procedures:

(a) Surface should be clean, dry, and free from dust, grease, oil, rust, and dirt. Glossy surfaces should be sanded to dull the gloss to ensure adhesion. Remove all rust and scale by scraping or wire brushing.

WARNING

Under no circumstances shall flammable material be used near an open flame. Otherwise injury or death may result to personnel.

(b) Remove oil and grease deposits from machinery to be repainted with kerosene, ASTM D3699.

WARNING

Degreasing Solvent, MIL-PRF-680, is combustible and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames or other sources of ignition.

Aliphatic Naphtha is extremely flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

(c) Wipe surface with a clean cloth moistened with a grease-free solvent, such as Degreasing Solvent, MIL-PRF-680, or Aliphatic Naphtha, TT-N-95. Repeat this procedure until machinery surfaces are completely clean.

(d) Bare spots resulting from scraping or chipping should be sanded to a feather edge and spot primed with lacquer proof primer, Federal Specification TT-P-664. Allow priming coats to dry thoroughly and apply two coats of enamel, Federal Specification TT-E-489, in prescribed colors.

TM 1-1500-204-23-1

Allow first coat to dry thoroughly before applying second coat.

NOTE

Machines shall not be operated during painting operation.

d. Equipment Maintenance Form. The equipment maintenance form is explained in the following paragraph.

DD Form 314. This form, properly initiated, shall be attached to each piece of equipment. The preventive maintenance requirements shall be accomplished and noted by operator by placing his initials in the appropriate block.

2-5. Hangar and Shop Safety. All supervisory personnel in Army hangars and shops are responsible for a continuing and effective shop safety program. To implement and maintain this program, shop supervisors will utilize bulletin boards, signs, and any other effective method. Shop personnel will cooperate in the shop safety program by making helpful recommendations, and continually exercising care and caution in the operation of all shop equipment. The following paragraphs describe electrical, machine tool, and fire safety precautions.

a. Electrical Safety. The following electrical safety precautions shall be observed in Army hangars and shops.

- Ensure that all unauthorized personnel are clear of area before opening valves or energizing electrical circuits for starting machinery.
- Electrical tools must be connected to a low resistance ground.
- Electrical cables and air hoses to portable units will be laid out so there is no danger of tripping.
- Whenever possible, aircraft batteries will be disconnected when undergoing maintenance performed in the hangar.
- Substantial low resistance conductors shall be used to ground all stationary and portable machines, equipment, or other devices in which static charges may be generated, or

which require electrical circuits of a hazardous nature.

- All switches and electrical equipment shall be of the enclosed explosion-proof type.
- All metal apparatus shall be grounded to avoid the danger of igniting test fluid fumes or creating electrical shock.

b. Machine Tool Safety. Machine Tool safety precautions are explained in the following paragraphs.

(1) Face shields and safety glasses. Personnel operating machinery shall wear eye protection as prescribed. A protective face shield or safety glasses shall be worn when operating a grinder regardless of whether grinder is equipped with attached shields.

(2) Drilling, grinding, or sawing precautions. The following safety precautions shall be observed when drilling, grinding, or sawing.

- Clamp work securely so that work will not move.
- Stop machine prior to attempting to adjust work that has become jammed.
- Cutting tools must be kept sharp.
- Allow chuck to come to a stop on its own accord. Do not use hand pressure to stop a spinning chuck.
- Do not set tools while power is on. Examine tools and chucks for cracks and defects prior to use.
- Stand to one side of grinding wheel when it is first started to avoid injury in case wheel fractures.
- Wear suitable gloves in addition to goggles when buffing.

c. Fire Safety. Unsafe equipment and fire hazards are the main factors to be observed while planning safety procedures for hangars and shops. Unsafe equipment shall be reported immediately. A constant vigilance must be maintained to seek out fire hazards. Fire hazards are constantly present in the shop where sparks, friction, or careless handling can cause

an explosion that may destroy equipment or buildings, and injure or kill personnel. Refer to AR 385-10, Army Safety Program and The Occupation Safety and Health Act of 1971.

(1) *Classifications of fires.* Fires are classified as follows.

- Class A fire (wood, paper, trash, etc). Use water or soda-acid fire extinguisher.
- Class B fire (oil, paint, fuel, grease, etc). Use bromotrifluoromethane or carbon dioxide fire extinguisher.
- Class C fire (electrical equipment). Use bromotrifluoromethane or carbon dioxide fire extinguisher.
- Class D fire (combustible metals) magnesium, titanium, zirconium, sodium, lithium, and potassium. Use dry powder type fire extinguisher.

(2) *Types of fire extinguishers.* Types of fire extinguishers are listed below.

- Soda-acid (class A fires)
- Bromotrifluoromethane (class B and C fires)
- Carbon dioxide (class B and C fires)
- Dry powder (class D fires)

(3) *Use of fire extinguishers.* Operate fire extinguisher as follows:

(a) Pull ring pin.

(b) Point horn close to fire.

(c) Depress trigger for discharge, and keep base of flames covered.

WARNING

Do not remove cylinder head until extinguisher has been fully discharged. Injury to personnel may otherwise result.

(d) Replace with new cylinder immediately.

(4) *Inspection requirements for fire extinguishers.* Inspect fire extinguishers in accordance with the manufacturer inspection procedures.

(5) *Identifying fire extinguishers.* Since fire extinguishers can be exchanged readily among aircraft, a means is required to identify and assure control of inspection cycle. To accomplish this, all portable, hand-operated fire extinguishers intended for use in Army aircraft will be tagged as follows:

- All serviceable fire extinguishers installed in aircraft will have a DD Form 1574 (Serviceable Tag Materiel) attached. The DD Form 1574 will show next inspection due, as stated in DA PAM 738-751.
- Fire extinguishers are considered unserviceable if the gross weight stamped on data ring, as shown in figure 2-3, is not legible or the data ring is missing.
- Fire extinguishers determined unserviceable or requiring a scheduled inspection will be replaced with a serviceable fire extinguisher, tagged with a DD Form 1574.
- Fire extinguishers received through supply channels that are in original manufacturer's packaging and show no evidence of damage shall be considered serviceable and will be tagged accordingly, prior to installation in aircraft.

(6) *Location of fire extinguishers.* Fire extinguishers shall be located throughout the shop in readily accessible areas.

(7) *Marking of fire lanes.* Fire lanes shall be marked and kept clear for emergency personnel should fire occur.

TM 1-1500-204-23-1

FOR MAINTENANCE

REPLACE WITH NEW CYLINDER IMMEDIATELY AFTER USING.
 WEIGH EXTINGUISHER CYLINDER EVERY 6 MONTHS AND REPLACE IF
 GROSS WEIGHT HAS DECREASED BY 4 OZ OR MORE LUBRICATE
 CYLINDER NECK THREADS WITH ONE DROP OF OE30 BEFORE
 REASSEMBLY

FSN 4210-708-0031

FABRICATE THE GENERAL FIRE EXTINGUISHER CORP

CONTRACT NO DSA-700-69-C B 303

GROSS WEIGHT

EXTINGUISHER WITH CHARGE (CYLINDER HEAD
 AND HORN ASSEMBLY COMPLETE) 6 LB OZ

WEIGHT OF CYLINDER WITH SEAL ASSEMBLY EMPTY 3 LB 0 OZ

WEIGHT OF CHARGE 2 LB 12 OZ

DATE OF FABRICATION 1969

FIRE EXTINGUISHER DELIVERED COMPLETE
 WITH CYLINDER HEAD AND HORN ASSEMBLY

FOR MAINTENANCE

- 1 REPLACE WITH NEW CYLINDER IMMEDIATELY AFTER USING
- 2 UNLESS OTHERWISE INSTRUCTED RETURN USED CYLINDER TO SUPPLY
- 3 WEIGH EXTINGUISHER CYLINDER EVERY 6 MONTHS AND REPLACE IF
 GROSS WEIGHT HAS DECREASED BY 4 OZ OR MORE LUBRICATE
 CYLINDER NECK THREADS WITH ONE DROP OF OE30 BEFORE
 REASSEMBLY

FSN 4210-555-8837

FABRICATOR - THE FIRE GUARD CORP

CONTRACT NO 88-AF-45093-07

GROSS WEIGHT

CYLINDER ASSEMBLY CHARGED LB OZ

WEIGHT OF CHARGE 2-3/4 LB

DATE OF FABRICATION JULY 1969

FIRE EXTINGUISHER CYLINDER DELIVERED
 LESS CYLINDER HEAD AND HORN, REQUIRES
 ASSEMBLY BEFORE WEIGHING FOR GROSS
 WEIGHT

Figure 2-3. Fire Extinguisher Nameplates

(8) *Fire fighting equipment requirements.* Fire fighting equipment requirements are listed as follows:

- Personnel shall be trained in the use, knowledge, and location of shop fire fighting equipment.
- Each shop shall be equipped with fire extinguishers suited for type fire most likely to occur.
- Oily waste, rags, and similar combustible trash shall be discarded in self-closing metal containers which shall be emptied daily.
- Flammable supplies shall not be stored in the shop.
- Use correct fire extinguisher for class of fire.

2-6. Parking of Aircraft and Equipment In Hangars.

The following paragraphs explain the parking of aircraft and equipment in hangars.

a. Safety Lanes. Safety Lanes should be clearly marked and kept clear of parked aircraft and equipment. The width of fire lanes between parked aircraft should be slightly greater than the wing span of parked aircraft in order to facilitate removal of any one aircraft from parking area and also to permit ease of movement for mobile fire fighting equipment within the area.

b. Parking of Aircraft in Hangars. Aircraft parked in hangars shall be spaced a sufficient distance apart to provide adequate clearance for maintenance, servicing, and fire lanes. Observe the following parking precautions:

NOTE

Aircraft shall be secured in accordance with the existing mooring instructions contained in the applicable aircraft maintenance manuals.

- The direction in which the aircraft are to be parked shall be determined by ease of maintenance and servicing.
- Parking arrangement shall vary to utilize local space facilities to the maximum. Double row lateral parking, with first and second rows of aircraft placed tail to tail, shall be accomplished where possible.

- Aircraft shall be static-grounded from basic structure of aircraft to a low resistance ground.
- After parking aircraft, chock securely and release parking brake.

c. Parking of Aircraft with Fuel Tanks Less Than Full. Aircraft shall have all fuel cells fully serviced prior to being parked or stored in a hangar. All fuel cells should be full in order to minimize the presence of flammable vapors within the fuel cell (for safety purposes) and additionally to minimize water condensation and subsequent microbiological growth which results in contamination of the fuel.

NOTE

This procedure should be adhered to at all times, except when impending mission requirements shall necessitate a reduced fuel load or when an aircraft shall require maintenance to the fuel system.

d. Usage of Drip Pans. Drip pans shall be placed under aircraft engines to collect oil. Drip pans shall be emptied daily.

e. Location of Static Ground Points. Static ground points are located throughout the hangar for static grounding of aircraft. The grounding point is marked by a yellow circle 18 inches in diameter, with a 2 inch black border surrounding it. The words STATIC GROUND CONNECTION and a numeric or alphanumeric identification of the grounding rod shall be stenciled in black on the yellow circle.

f. Testing of Static Ground Points. The electrical resistance of each grounding system should be as low as possible but not greater than 10,000 ohms. A log must be kept for permanent or semi-permanent airfields to show the identification of each rod, the date tested, and the reading in ohms. If the measured resistance of a rod is greater than 10,000 ohms, the rod should immediately be marked DEFECTIVE DO NOT USE and it should be removed or replaced as soon as possible. A log is not required at temporary refueling points. Each ground rod must be inspected when it is installed. Ground wires are inspected monthly. The grounding system must be inspected and tested

TM 1-1500-204-23-1

annually or when there is a possibility of mechanical damage. If any damage is found, it must be repaired immediately.

g. Static Grounding of Aircraft. All aircraft parked in a hangar must be grounded (earthed) at all times.

h. Static Grounding of Ground Support Equipment. Ground support equipment in a hangar must be grounded at all times when in contact with the aircraft being worked on.

i. Emergency Evacuation of Aircraft from Hangar. A plan for the emergency evacuation of aircraft from a hangar must be established and implemented by the maintenance officer using the expertise of the aviation safety officer and other applicable elements. Care must be taken to ensure the safe evacuation of as many aircraft as possible in an emergency.

2-7. Jacking and Hoisting. General instructions for jacking and hoisting are explained in the following paragraphs. For specific instructions on a particular aircraft, refer to the applicable maintenance manual.

a. Jacking. Use the following procedures for in and out of hangar jacking:

(1) Do not stand, sit, or lie inside or on aircraft during raising or lowering operations.

(2) Ensure that all stress panels are installed on aircraft.

(3) Disengage aircraft brakes and remove chocks.

(4) Place all jacks on a level surface so that an imaginary line drawn through any 2 feet of jack will be parallel to fuselage or load to be jacked. Jack only at specified jack points.

(5) Position auxiliary supports as necessary to adequately prevent accidental injury to personnel or damage to aircraft.

NOTE

Place tail stands under all aircraft equipped with tricycle landing gear. Secure a ground-supported weight to tail of conventional gear aircraft. When tail wheel is to remain in contact with ground, lock it after aircraft reaches desired height. Leave tail wheel free to roll fore and aft during jacking and lowering operations.

(6) Operate all jacks simultaneously, both up and down, to prevent binding of aircraft struts. Binding may be corrected by tapping strut with a rawhide mallet or kicking tire.

(7) Ensure that there is sufficient clearance above aircraft to complete desired operation.

WARNING

Aircraft on jacks shall be so labeled, and access restricted to prevent injury to personnel.

CAUTION

Unauthorized persons will not be in, on or under aircraft supported by jacks. Areas shall be restricted by proper warning signs and barriers to preclude entry into the area.

NOTE

The use of auxiliary supports is recommended, but not required, as standard jacks are designed to withstand all vertical loads. When several people are to be working on the aircraft, auxiliary supports are highly recommended.

(8) Do not jack aircraft when wind velocity is greater than maximum amount specified in applicable maintenance manual. When applicable maintenance manual does not list a maximum wind velocity, a velocity of 15 miles per hour will be considered maximum.

(9) Head aircraft into prevailing wind when wind velocity does not exceed velocity given in step (8).

(10) After jacks are extended, make no attempt to lock hydraulic ram in place by use of a clamp. Jacks with threaded collar locks or locking pins will not permit load to lower, but may require additional lift to disengage collar lock or remove pin.

(11) Prior to lowering aircraft, make a careful inspection to ensure that retractable gear (when applicable) are in down-and-locked position, ground locking devices are installed, and that there are no maintenance stands, support equipment, or other objects under aircraft.

(12) After aircraft no longer rests on jacks, remove jacks from under aircraft as quickly as possible.

b. Hoisting. Use the following procedures for in and out of hangar hoisting:

CAUTION

Hoist aircraft out-of-hangar only when wind is calm. Otherwise damage to aircraft may result.

(1) Remove all excess items such as baggage, etc, from aircraft. Do not allow personnel in or on aircraft during hoisting operations.

(2) Apply ballast as required by applicable maintenance manual.

(3) Attach hoist sling at hoist location specified in applicable maintenance manual.

(4) Ensure that there is sufficient clearance above aircraft to complete desired operation.

(5) Fasten ropes to mooring points of aircraft and use ropes to steady and guide aircraft during hoisting operation.

(6) Hoist aircraft cautiously and smoothly, avoiding sudden starts, stops, and drops.

(7) Ensure that retractable gear down-lock pins are installed prior to lowering aircraft.

(8) Ensure that all maintenance and support equipment which could injure personnel or damage aircraft is removed from under aircraft.

CHAPTER 3

FLIGHTLINE OPERATIONS

3-1. General. General flightline operations used on all aircraft are described in the following paragraphs.

3-2. Flightline Safety. To avoid injury to personnel or damage to aircraft, the procedures and general safety rules will be followed when servicing, operating, mooring, maintaining, or moving aircraft on the ground.

a. Hearing Protection. Noise levels reached during ground runup of Army aircraft are of a level that may cause permanent hearing loss. Maintenance personnel shall wear adequate hearing protection when working on aircraft with engines in operation.

b. Foreign Object Damage. To prevent Foreign Object Damage (FOD), the following precautions shall be observed during maintenance of turbine engines.

- Regularly police parking areas, runways, taxiways, and runup and exhaust areas to ensure against the presence of foreign objects which could enter the engine. Special attention shall be given to cleaning of cracks and expansion seams in hard surfaced areas where engines will be operated. Tests have indicated that these are the main source of foreign objects which are ingested.
- Periodically instruct personnel concerned with aircraft maintenance of foreign object hazards to ensure that maximum preventive measures are taken.
- Ensure that air inlet and tailpipe dust excluders are installed at all times when engines are not being operated, except when it is known the engine will again be operated immediately following shutdown.
- Prior to each engine start, thoroughly inspect and clean inlet ducting. Remove all loose nuts, bolts, tools, or other objects which would cause engine damage and possible subsequent failure.
- After work has been accomplished, inspect to ensure that all accessories and attaching parts are secure and that work areas are cleared of foreign objects prior to engine operation.
- Provide properly marked receptacles in all work areas into which trash, ferrous and nonferrous scrap, safety wire, etc, may be placed.
- Adhere to applicable gas turbine-powered aircraft taxiing and parking procedures as outlined in applicable technical bulletins. This minimizes damage due to material being thrown by the exhaust blast into the intake of other aircraft.
- Ensure that gas turbine-powered aircraft takeoff and landing procedures are such as to avoid the intake of foreign objects blasted from runways and runway shoulders by preceding aircraft.
- Use inlet duct runup screens during all ground operations, including taxiing to and from takeoff position.
- Inlet duct runup screens are not required on aircraft using centrifugal flow engines.
- When necessary to properly evaluate engine performance or when icing conditions exist, inlet duct runup screens should be removed. Runup with screens removed shall be made in a designated, thoroughly cleaned area.

CAUTION

Inlet duct runup screens shall not be installed and removed with engines operating above idle rpm. Loose items of clothing shall not be worn. Objects which might be drawn into the intake ducts shall not be carried when installing or removing screens. Damage to equipment may otherwise result.

TM 1-1500-204-23-1

- Inlet duct runup screens may be left off during taxiing to and from takeoff position when requirements or existing conditions make the use of screens impractical. Since specific conditions warranting removal of screens as specified above cannot be predetermined, specific conditions may be determined by each command as necessary to conduct their operations. Approval of screen removal should include any additional precautions necessary to assure safe operation of engines.
- Use only nonmetallic-head hammers when required to install parts on engine.

c. Safety Around Aircraft. The following safety precautions shall be employed to ensure safety around helicopters on the flightline.

- Stand clear of plane-of-rotation of engine cooling fan during operation.
- Stand clear of tail rotor plane-of-rotation during operation.
- Main rotor blades tend to droop at decreased speeds, approach with caution, especially blades with a low plane-of-rotation.

WARNING

Personnel shall exercise extreme caution when hand-pulling a propeller to keep their bodies as clear of the plane-of-propeller-rotation as conditions permit. Ground crew-members should be conscious of the fact that an accidental start may occur at any time, and should therefore be alert to jump clear in such an event. A suitable length of canvas strap or similar material, without metal fittings, may be placed around propeller blades to facilitate hand-pulling. Be especially certain that the ignition switch is in the OFF position before turning propeller by hand. Death or injury may otherwise result.

d. Parking and Mooring. The following instructions are general in nature, and are applicable to Army aircraft. For specific instructions on parking and mooring particular aircraft, refer to the applicable maintenance manual. The following are general precautions for all aircraft.

- Do not park or moor aircraft closer than wing or rotor span, except by authority of the commanding officer or his designated representative.

NOTE

When aircraft are to be parked in rows, position aircraft in adjacent rows to most effectively reduce propeller wash during engine operation.

- When possible, park aircraft in such a location that transparent enclosures are not in direct rays of sun.
- Install gear locking devices (when applicable).
- Attach mooring ropes to aircraft and ground fittings at an angle of approximately 45 degrees. Attach mooring ropes and install mooring devices as specified in applicable maintenance manual.

NOTE

Allow sufficient slack in the mooring rope to prevent stress on ground fittings, rope, mooring devices, or aircraft structure due to tire or strut inflation/deflation, or wet rope shrinkage.

- Place fully charged, 50 pound carbon dioxide type fire extinguishers in readily accessible areas where aircraft are parked.
- When aircraft are to be moored for storage, they shall not be parked less than 750 feet from center of nearest taxiway. Provide adequate clearance for maintenance, servicing, fire lanes and taxiways.
- All aircraft parked inside enclosures will be grounded at all times.

- Place chocks fore and aft of main landing gear wheels. Do not use parking brakes as substitutes for chocks. Use steel chocks for snow or ice operating only. Use sandbags on steel matting. Use wooden chocks for all other operations. Set brakes only after they have cooled.

NOTE

Do not set brakes of aircraft in a hangar or outside during subzero temperature

- Service aircraft systems as required by applicable maintenance manual. Exercise care during servicing to prevent moisture from entering systems being serviced.
- Avoid parking aircraft in wet or slushy areas saturated with fuel or oil.
- Install pitot tube covers and wheel covers.
- Move controls to neutral position and lock by either internal or external means.
- When parking helicopters overnight for storage, or during adverse weather, set ground handling wheels (when applicable) in retracted position.
- Rotate or fold main rotor blades (when applicable) in accordance with instructions contained in applicable maintenance manual.

e. Preparation of Aircraft for Storms. The following general precautions are to be observed when storms are anticipated:

- Install all protective covers and shields to protect aircraft from accumulation of snow, frost, or ice.

NOTE

If wings are wet or a freezing rain is expected, cover aircraft with a coat of anticicing and deicing-defrosting fluid, MIL-A-8243, before installing fabric covers.

- Refer to the applicable aircraft maintenance manual for the use of spoilers if severe wind is expected.
- Ensure aircraft is chocked and tied down in accordance with applicable maintenance manual storm procedures.
- In case of emergency, tie down aircraft using trees or arctic-type (dead-man) mooring anchor.

f. Flightline Equipment. All flightline equipment should be inspected and functionally checked to ensure safety prior to use.

(1) General inspection. The following paragraphs describe inspection requirements for flightline equipment.

(a) Cleanliness. Inspect equipment internally and externally for cleanliness. Equipment will be dry and free of mud or other debris.

(b) Serviceability. Perform serviceability inspection of all new equipment.

(c) Lubrication. Lubrication will conform to the applicable maintenance manual.

(d) Oil seals. Inspect oil seals for leakage. Oil seals that are wet and show only a slight drip, after operation or standing, are considered as seeping and are acceptable. Seals that show definite leakage will be replaced.

(e) Performance. Ensure that ground support equipment is in such condition that its performance will approximately equal new equipment and meet all general safety requirements.

(2) Functional check. The following procedures explain functional checks for flightline equipment.

(a) Check all levers, switches, valves, shutters, etc, to ensure proper operation.

(b) Check all meters and gauges for proper operation and adjustment.

TM 1-1500-204-23-1

(c) Check powered ground support equipment for operation at peak, rated output, and capacity for which it was designed.

(d) Check nonpowered ground support equipment for performance capabilities within the purpose for which it was designed.

(e) Check equipment for unusual noises during operation. An unusual noise is any sound that indicates malfunction or improper operation of a component.

g. Reflectorizing of Equipment. All non-tactical ground support equipment (which is normally painted yellow) will be outlined with reflective tape to ensure high visibility during low light level operations.

(1) Outlining. Equipment shall be marked in a manner to outline the entire piece of equipment, so that during periods of low visibility the entire outline of the equipment will be obvious. Outline using the following procedures:

(a) Outline the equipment with 4-inch wide silver-white tape conforming to Federal Specification L-S-300, NSN 9390-00-949-8047.

(b) Compound surfaces (corners, large bolts, rivets, etc.) may be left unmarked.

NOTE

If area to be striped can not accommodate 4-inch wide tape, use the widest width possible.

(2) Application of reflectorizing sheeting. The following procedures shall be used to apply reflectorizing sheeting, Federal Specification L-S-300:

(a) Clean surfaces of all loose scale and dirt by brushing or applying cleaning compound, Federal Specification P-C-437. Remove deposits of cleaning compound by washing with clear water. Dry surfaces with high-pressure compressed air.

(b) Measure reflectorizing sheeting and cut to desired lengths.

(c) Start removal of protective paper liner from adhesive by holding the tape reflective side in and flick one corner sharply in toward reflective face. When corner is loosened lay the reflective side of tape down

on smooth surface and jerk the paper liner off to half the length of strip. Fold loosened paper liner.

(d) Position tape on equipment and adhere one edge with finger. Hold unapplied portion slightly away from surface to prevent premature adhesion. Wipe tape to surface with firm pressure, using a plastic squeegee. Remove remaining liner and apply remainder of tape. Any air bubbles should be pricked with pinpoint and air worked out with squeegee.

NOTE

Apply only when equipment surface temperature is above 60°F (16°C). Activate adhesive lightly with a solvent activator as recommended by the reflective tape manufacturer.

(e) Apply clear edge sealer, as recommended by reflective tape manufacturer, to edges of tape to prolong life of marking.

(f) Repair to damaged reflective areas can be made without stripping of original material. Abrade any rough edges, clean damaged area thoroughly and apply a new piece of reflective tape over damaged area.

NOTE

The reflective tape cannot be subjected to paint oven baking process.

(3) Use of flags. All support equipment which cannot be taped (i.e., tactical vehicles, tractors, sweepers, occasional use vehicles, etc) will display a white-orange checkered flag conforming to MIL-F40047, NSN 8345-00-027-3704. The flag will be flown while on the flight line or any area in which aircraft may be present. The flag shall be mounted to facilitate easy removal when departing airfield area or when entering into a tactical condition.

3-3. Ground Handling. Aircraft shall not be moved where, or in such a manner that, injury to personnel or damage to the aircraft or property could result. Ensure tow tug drivers are trained to tow all types of aircraft prior to towing and exercise supervision when necessary. For specific instructions on a particular aircraft, refer to the applicable maintenance manual. Aircraft shall not be moved where, or in such a manner that injury to personnel or damage to the aircraft or property could result. The following paragraphs contain general procedures for ground movements, towing, pushing, and standard visual signals.

a. **General Procedures.** The following procedures are for all ground movements:

(1) Disconnect and move clear all ground support, ground servicing, and maintenance equipment not essential to movement of the aircraft.

(2) Assign an authorized ground crewmember to operate aircraft brakes, as required, from the time chocks are removed until they are reinstalled.

(3) Assign a ground crewmember to stand near tip of each wing to act as a guide during ground movements.

(4) Stand clear of aircraft immediately prior to and during movement.

(5) Assign a qualified ground crewmember to direct departure from, or approach to, a parking position. Only approved standard signals will be used. Use a flashlight or luminescent wand to signal instructions at night.

(6) Do not stand, sit, or lie on any external portion of an aircraft while it is in motion. Do not jump from or board a moving aircraft.

(7) When moving aircraft, avoid sudden stops and starts.

(8) No person, vehicle, or aircraft shall approach close to an oncoming taxiing aircraft, pass closer than 200 feet to the rear of an operating turbine-powered aircraft, or pass closer than 100 feet to the rear of other operating aircraft.

(9) Do not taxi or tow aircraft, or start or runup engines within 50 feet of any fuel, oil, or water-alcohol servicing operation, or within 50 feet of any spill until the spill has been removed and the area rendered safe.

b. **Towing.** Tow aircraft in accordance with the applicable maintenance manual. The following procedures are for general towing of all aircraft.

(1) Prior to towing aircraft, ensure that towing attachments, lines, and bars are of adequate capacity, serviceable, and secured firmly to designated tow fittings of aircraft and tow vehicle.

(2) Do not exceed the walking speed of the slowest team member, with a maximum speed of 5 mph. Tow with extreme care over ice, snow, rough, rocky or muddy ground and in congested areas.

(3) Use caution when towing aircraft in extremely low temperatures to prevent damage to hydraulic seals which would result in strut leakage.

c. **Pushing.** Push aircraft by hand in accordance with the applicable maintenance manual. The following procedures are for general hand moving of all aircraft:

WARNING

Keep clear of skids, aircraft wheels, and/or ground handling wheels.

(1) Position ground handling wheels (when applicable) in down-and-locked position.

(2) Apply physical pressure for pushing, lifting, and turning only at authorized pressure points as designated in applicable maintenance manual.

(3) Push by hand at proper pressure points.

(4) Senior person will brief duties and dangers of ground handling aircraft.

d. **Standard Visual Signals.** Visual signals for movement of Army aircraft are contained in FM 1-105 or FM 21-60.

3-4. Static Grounding of Aircraft. Standard grounding of aircraft is explained in the following paragraphs.

a. **Grounding Requirements.** Positive requirements for grounding or bonding of aircraft are as follows:

NOTE

Grounding of aircraft shall be in accordance with the same requirements as FM 10-67-1, Concepts and Equipment of Petroleum Operations.

- All aircraft parked outside will be grounded and bonded, in accordance with FM 1-500, to the aerospace ground equipment while servicing (i.e., fueling or defueling, arming ammunition or explosives, oxygen, hydraulic fluids, or any flammable liquids). Grounding is not necessary for aircraft parked outside unless one of the above is being accomplished.

- Grounding of aircraft is required when external power is applied to the aircraft.

TM 1-1500-204-23-1

- All aircraft parked in a hangar must be grounded at all times.
- To prevent accidental falls, appropriate maintenance platforms/safety stands or any other approved locally procured/manufactured safety stands/restraint equipment will be used when working (above 10 feet) on aircraft in a non-tactical environment.

b. Earth Grounds. An earth ground (electrode) is a conductive pipe or rod made of galvanized iron, galvanized steel, or copperweld steel. The rod regularly used for grounding is Rod, Ground: MX-148G Line Item Number (LIN) S08698, National/NATO Stock Number (NSN) 5975-00-224-5260. This ground rod is $\frac{3}{4}$ inch in diameter and 6 feet long, and it is made of galvanized steel. It has one pointed end to be driven into the earth and a bolt and nut at the other end for connecting a grounding cable.

(1) Use of earth grounds. The rod is driven into the earth far enough to reach below the permanent ground-moisture level. On the apron or ramp of a fixed airfield, the top of the rod should be level with the surrounding surface; at other types of facilities, the top of the rod should be either low enough or high enough so that people will not trip over it. If the top of the rod is level with the surrounding surface, an area around the top of the rod must be dishd out so ground cable clips can be attached to the rod.

(2) Marking of earth grounds. A yellow circle 18 inches in diameter, with a 2-inch black border surrounding it, should encircle each rod that is installed in a hard surface. These circles should be painted on. The words STATIC GROUND CONNECTION and a numeric or alphanumeric identification of the rod should be stenciled in black on the yellow circle. The number and spacing of fixed rods should be determined by the requirements of the local situation. Markings of this type are not required for temporary ground rods.

c. Earth Ground Testing. The electrical resistance of each grounding system should be as low as possible but not greater than 10,000 ohms. A log must be kept for airfields to show the identification of each rod, the date tested, and the reading in ohms. If the measured resistance of a rod is greater than 10,000 ohms, the rod should immediately be marked DEFECTIVE-DO NOT USE and it should be removed or replaced as soon as possible. A log is not required at temporary refueling points.

(1) Frequency of testing. Each ground rod must be inspected when it is installed. Ground wires

are inspected monthly. The grounding system must be inspected and tested every five years or when there is a possibility of mechanical damage. If any damage is found, it must be repaired immediately.

(2) Method of testing. Ground rods are tested with a multimeter (Multimeter: TS-352B/U, LIN M81372, NSN 6625-00-553-0142). Refer to FM 10-67-1 for specific procedures when testing ground rods.

d. Fabrication of Ground Cable. Fabricate static grounding cable assembly, as shown in figure 3-1, using the following procedures:

(1) Cut wire rope (figure 3-1, 1) to length needed.

(2) If coated wire rope (1) is used; remove $\frac{3}{4}$ inch of coating from each end.

(3) Loosen set screws (4) in clip (5).

(4) Insert wire rope (1) into handle of clip (5) and tighten set screws (4).

(5) Insert unattached end of wire rope (1) through cap (2). Rope will extend past end of cap.

(6) Screw cap (2) into plug (3).

(7) If desired, clips (5) may be attached to both ends of wire rope (1) with a plug (3) attached to handle of one of the clips as follows:

(a) Cut short length of wire rope to attach plug to clip.


(b) Assemble items for alternate configuration as in (2) through (6) above. See detail A for view of alternate cable assembly.

NOTE

Never fasten electrical clip to a painted surface.

(8) Insert plug into receptacle on aircraft. Attach clip to grounding stake.

(9) Attach warning streamers, NAS 1756-12 or MS 51700-12, to coated wire rope.

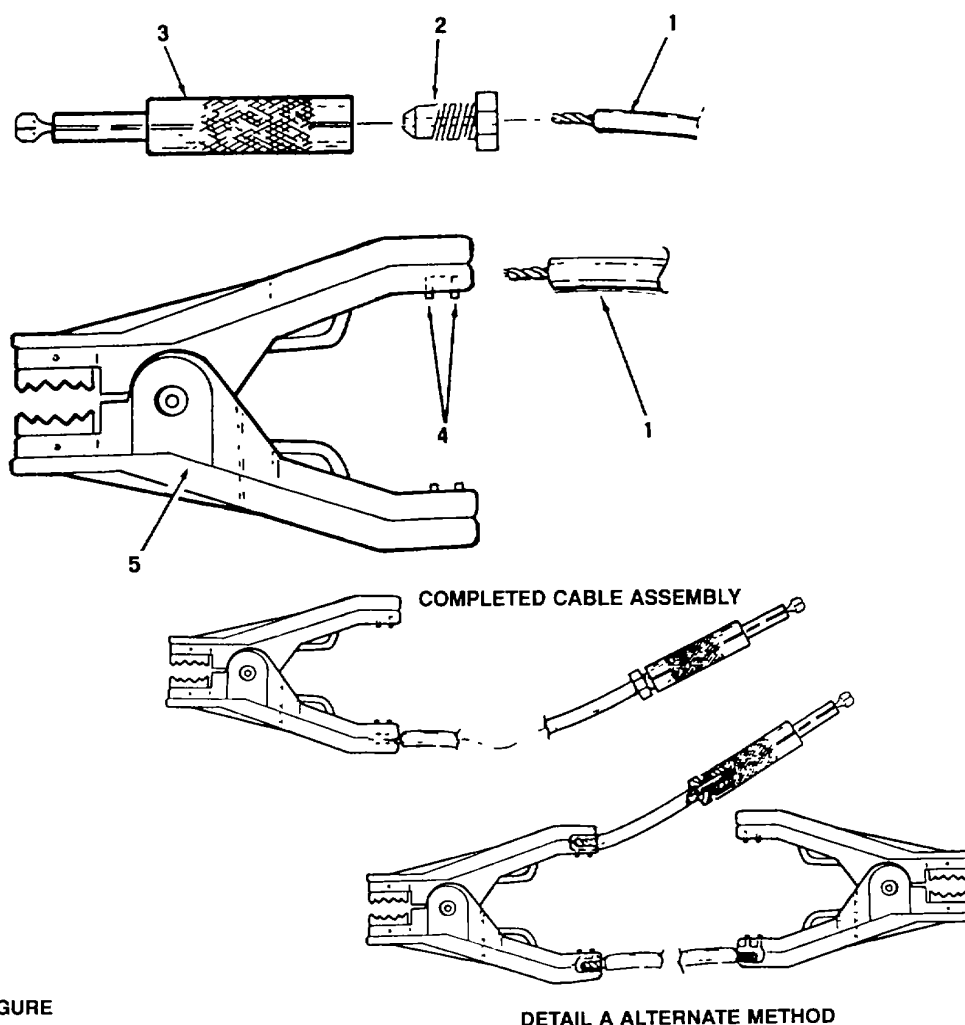

KEY TO FIGURE

1. 4010-00-286-2681 ROPE, WIRE (COATED)
- (ALT.) 4010-00-222-4474 ROPE, WIRE (NON-COATED)
- 5935-00-572-5174 PLUG-TIP,
CONSISTING OF:
2. CAP
3. PLUG
4. SET SCREW
5. 5999-00-134-5844 CLIP ELECTRICAL

DETAIL A ALTERNATE METHOD

Figure 3-1. Fabrication of Static Grounding Cable Assembly

TM 1-1500-204-23-1

(10) Attach yellow reflective tape, 9390-00-040-6102, to non-coated wire rope.

(a) Wrap tape around handles of clip and around the wire at three-foot intervals.

(b) Do not apply tape to those parts of plug and clip that complete electrical circuit.

(11) Test ground cable for resistance to ground.


e. Ground Receptacle Criteria. Aircraft grounding receptacles, as shown in figure 3-2, shall conform to the following criteria:

- For internal and external tanks, the receptacle shall be installed at not more than 42 inches (1066.80 mm) and not less than 12 inches (304.80 mm) from the filler opening.

- Receptacle can be grounded by mounting or bonding to aircraft structure.
- Receptacle shall be used with grounding plug conforming to MIL-C-83413/10.
- Dissimilar metals as defined by MIL-STD-889 shall not be used in intimate contact with each other.
- Place a fully charged fire extinguisher (50 lb CO₂ or 22 lb. Halon 1211) in readily accessible area where aircraft are parked.

REMOVE PAINT OR OTHER PROTECTIVE COATING FROM INNER SURFACE OF SKIN REFINISH AFTER INSTALLATION IN ACCORDANCE WITH MIL-B-5087. (MASK RECEPTACLE PRIOR TO REFINISHING)

DECALCOMANIAS OR PAINTED GROUND SYMBOL PER MIL-C-83413/9 AND TM 55-1500-345-23

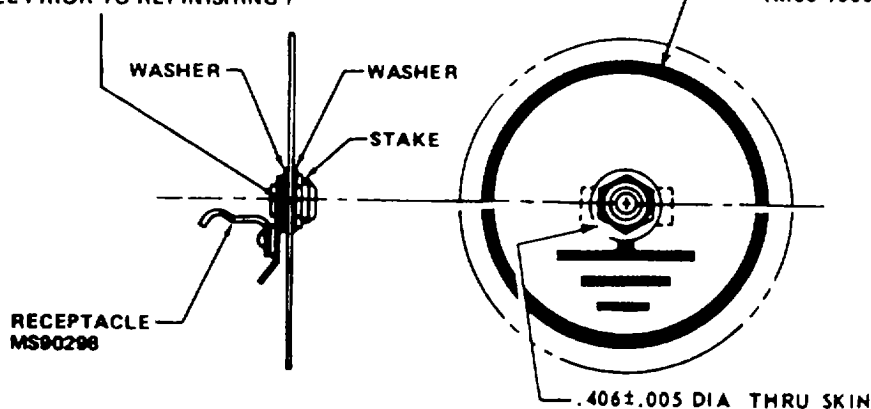

NOTES:

- DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED
- METRIC EQUIVALENTS (TO THE NEAREST .01 MM) ARE GIVEN FOR GENERAL INFORMATION ONLY AND ARE BASED UPON 1 INCH = 25.4 MM

Figure 3-2. Aircraft Grounding Receptacle Installation

NOTE

Precautions should be taken to ensure that these parking area extinguishers are periodically inspected and adequately marked to ensure high visibility (for ease of location in the event of an emergency and to prevent accidents during aircraft movement). Due to the smaller size of the Halon 1211 portable-type extinguishers, these bottles should be secured in a permanent location to facilitate recognition and prevent damage to the extinguisher.

f. **Ground Receptacle Testing.** Test ground receptacle using the following procedures:

(1) Using an ohmmeter, check resistance from the receptacle to a point on the aircraft skin adjacent to the receptacle. Contact point used must be free of paint and corrosion and cleaned for good electrical contact. An ordinary ohmmeter set on R x 1 scale, will read a direct short or not more than 1 ohm.

(2) If resistance reading exceeds requirement of paragraph (1), receptacle must be removed and aircraft skin around it must be cleaned of paint and corrosion and treated per TM 55-1500-345-23. Reinstall the receptacle in accordance with MIL-C-83413/MIL-C-8349. Nut must be tight.

(3) Recheck ohmmeter reading as in step (1). If it does not meet requirement, repeat procedures

(4) Retouch paint as required per TM 55-1500-345-23.

g. **Aircraft Fuel Port Testing.** Test aircraft fuel port ground using the following procedures.

(1) Use multimeter, TS352B/U, to check the resistance of aircraft fuel port to the skin adjacent to the fuel port. The contact on the fuel port and aircraft skin should be free of paint and corrosion for a good electrical contact.

(2) Set the multimeter on the RX1 scale. If the measured resistance is greater than 1 ohm, the aircraft fuel port must be removed. The aircraft skin around the fuel port must be cleaned of paint, corrosion and then treated in accordance with TM 55-1500-345-23. Reinstall fuel port in accordance with the applicable TM 55-1500-345-23 aircraft maintenance manual.

(3) Recheck OHM reading as stated in paragraph 3-4g(1). If it does not meet requirement, repeat procedure.

(4) When a satisfactory measured resistance has been reached, touch-up paint as required per TM 55-1500-345-23.

3-5. Aircraft Refueling. Servicing aircraft with fuel and defueling aircraft requires the utmost precaution due to the highly flammable characteristics of fuel. Personnel performing fueling and defueling operations must be thoroughly familiar with FM 10-67-1, Concepts and Equipment of Petroleum Operations. Personnel must also be completely familiar with the aircraft being serviced.

NOTE

Aircraft shall have all fuel cells fully serviced prior to being parked or stored in a hangar. All fuel cells should be full in order to minimize the presence of flammable vapors within fuel cell (for safety purposes) and additionally to minimize water condensation and subsequent microbiological growth which results in contamination of the fuel.

This procedure should be adhered to at all times; except when impending mission requirements shall necessitate a reduced fuel load or when an aircraft shall require maintenance to the fuel system.

a. **Open-Port Refueling.** Open-port refueling is refueling by inserting an automotive-type nozzle into a fill port of larger diameter. Most of the Army fueling nozzles are designed for open-port refueling and must be used until enough FARE systems are deployed to make open-port aircraft refueling an obsolete practice. Because the port is larger than the nozzle, fuel vapors can escape through the fill port during open-port refueling operations. Airborne dust and dirt, as well as rain, snow, and ice can get into the fill port during refueling, thus lowering the quality of the fuel in the tanks and endangering the aircraft. Spills from overflowing tanks are possible in open-port refueling. Spills can also be caused by the sudden pressure surge that comes when pumping from another nozzle in the system is completed, throwing the whole pressure of the pump to the operating nozzle. Because of these dangers, hot refueling by the open-port method is restricted to combat or vital training or testing use. Refer to FM 10-67-1.

b. **Open-Port Hot Refueling.** In combat operations, the open-port method of hot refueling may be used for helicopters when, in the judgment of the aviation commander, the requirements of the tactical mission and the benefits of reducing ground time outweigh the inherent risks of this method of refueling. In noncombat situations, helicopters may be refueled by this method only when there are compelling reasons to do so. For example, aviation commanders may decide that hot refueling must be done for purposes of training, or for field testing or combat testing for development. When the FARE system is used for hot refueling in a training situation, a firewall should be built around 500-gallon drums whenever it is possible. Refer to FM 10-67-1.

NOTE

Nozzles of the open-port type must be held open by hand throughout use. If any automatic device has been added to the nozzle to hold it open, the device must be removed; if notches have been made to hold open, they must be filed off. No exceptions to this rule are allowed in aircraft refueling.

c. **Rapid Hot Refueling.** Aircraft may be rapid (hot) refueled (with engines running), electrical power on, radios on, weapons system on with safety covers/guards/switches in safe position, and with any computer systems operating that would require reprogramming if shut down. See the applicable aircraft operator's manuals (-10 and -CL) for detailed instructions. If rapid (hot) refueling is required (prescribed in FM 10-67-1), ground the aircraft properly. It is also recommended that the aircraft be in a revetment type shelter or separated from fuel storage by a fire wall.

WARNING

Only emergency radio transmissions should be made during rapid (hot) refueling. Radio switches may electrically arc when being keyed.

d. **Fuel Truck Operations.** Fuel truck operations are covered in the following paragraphs.

(1) **Fuel truck types.** The M49A2C tank truck with a 1,200 gallon stainless steel tank, the M559 tank truck with a 2,500 gallon stainless steel tank, and the M857 semitrailer with a 5,000 gallon tank are used to fuel Army aircraft.

(2) **General operation.** After the aircraft parks and its engine or engines are shut down, the rotor

blades are secured, and armaments are set on SAFE, the sequence of the refueling operation can start. The following procedures are for all aircraft:

(a) Check the interior of the aircraft. No one should be aboard during refueling unless the pilot or copilot are on board to monitor the quantity of fuel to be loaded. When the D-1 nozzle is used, the only way of knowing when to stop flow is for the pilot or copilot to watch the fuel gauges in the aircraft.

(b) Drive the tank vehicle into position in front of the aircraft. Use the sort of approach route shown in figure 3-3. Do not drive the refueler directly at the aircraft because brake failure could cause a serious accident.

(c) Keep a distance of at least 10 feet between the refueler and the aircraft. There must be at least 10 feet between the refueler and rotor blades of a helicopter. Keep a distance of at least 20 feet between the exhaust pipe of the pump engine (or truck engine) and the aircraft fill port and tank vent as shown in figure 3-4.


(d) Park the refueler so that it has a clear and open path to drive away from the aircraft in an emergency. Do not detach a tank semitrailer from its tractor when refueling an aircraft; the tractor must be ready to pull the trailer away from the aircraft if the need arises.

NOTE

If the refueler can be driven into position without backing, do so. If it must be backed toward the aircraft, bring the truck to a full stop when it is 20 to 25 feet away from the aircraft or its rotor blades. Have another person act as a ground guide. Follow signals to guide the final backing approach until signaled to stop at the proper distance from the aircraft and its fill port and vent, as shown in figure 3-5.

(e) Stop the refueler engine (unless it powers the pump) and set the brake. Chock the tires of the refueler and of the aircraft if appropriate.

(f) Check the fuel in the tank to make sure it is the right type for the aircraft. Check the sight glass of the filter/separator to make sure all water has been drained out.

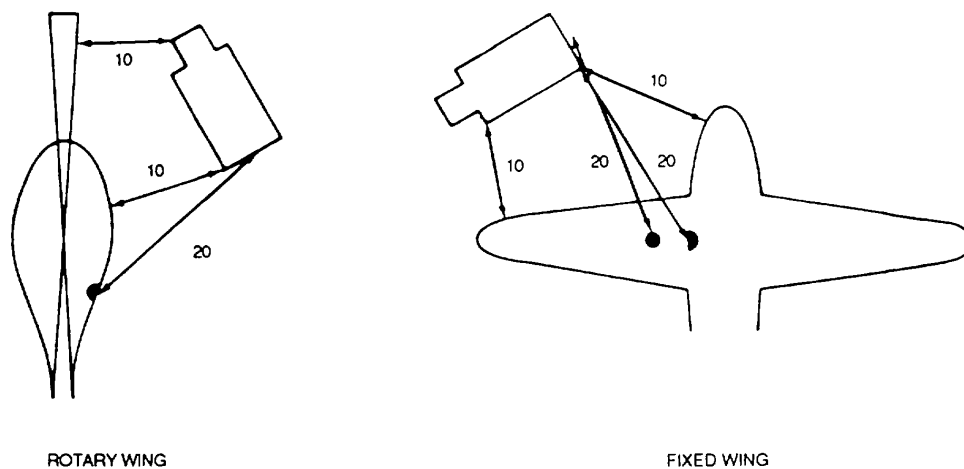

NOTE
 ALL VALUES ARE SHOWN IN FEET

Figure 3-3. Fuel Truck Approach Route

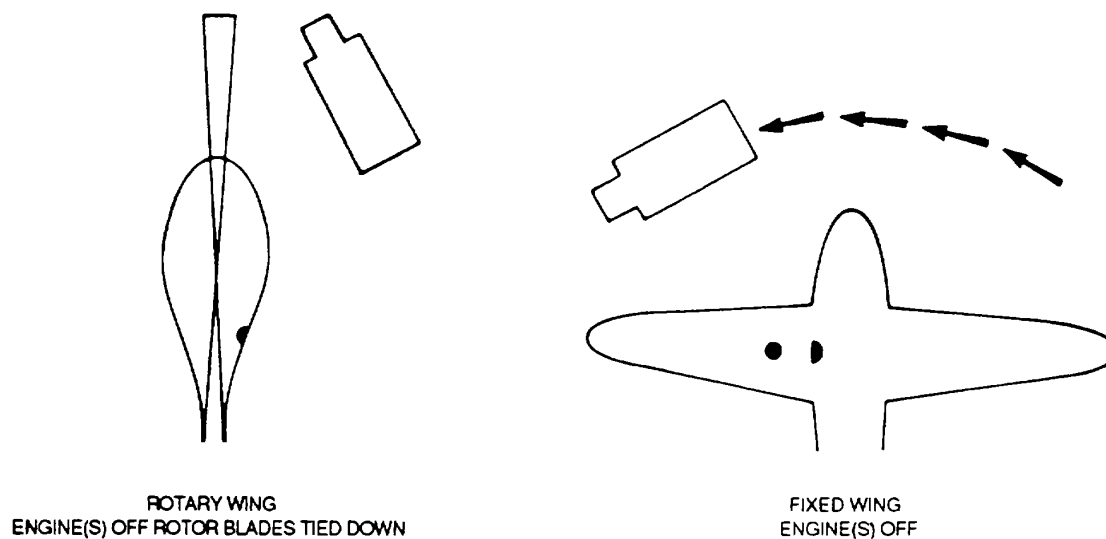


Figure 3-4. Fuel Truck Required Spacing

TM 1-1500-204-23-1

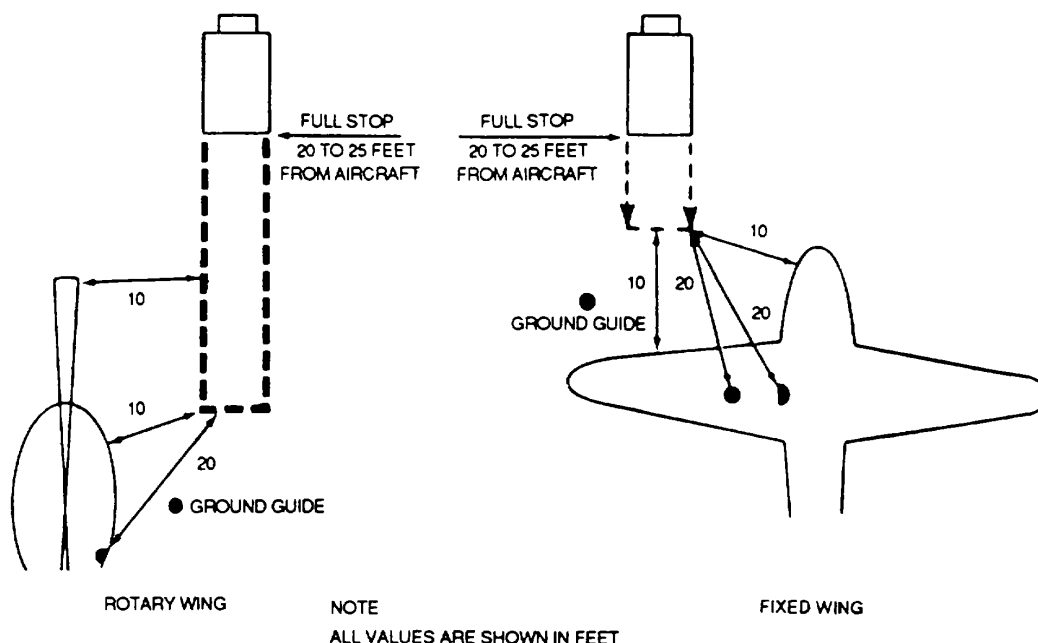


Figure 3-5. Fuel Truck Backing Approach

(g) Place the truck fire extinguisher by the pump. Place a fire extinguisher provided at the refueling point by the aircraft fill port.

NOTE

Have members of the ground crew or the air crew man these two fire extinguishers. If there are no people available to man the fire extinguishers, place the extinguishers near the pump and nozzle operators, but position them so that they will not be in the operators way and where they are not likely to be engulfed if a fire should start at either the pump or the nozzle.

(h) Unreel the ground cable and attach its ground-rod clip to the nearest ground rod. If refueling where no ground rod is installed, drive the refueler ground rod into the earth to the required depth and attach the clip to the rod.

(i) Ground the aircraft by attaching one end of a ground cable to the ground rod (either the rod that grounds the refueler or a separate ground rod) and the other end to a bare metal part of the aircraft.

NOTE

Use the axle of the landing gear or some other unpainted metal part, but do not clip the ground cable to the propeller or the radio antenna. Attaching this clip grounds the aircraft and bonds the refueler to the aircraft. If the refueler does not have a Y-cable that will ground both the refueler and the aircraft to one ground rod, a separate ground cable is required to ground the aircraft. A wire, such as building wire (type TW, number 14 AWG or larger, solid copper) or any other solid copper wire, size number 14 or larger, may be used.

(j) Bond the nozzle to the aircraft before taking the dust cap off the nozzle and the cap off the fill port. If the aircraft has a receiver for the bond plug, use the plug, if not, clip the alligator clip to a bare metal part of the aircraft.

(k) Open the aircraft fill port and remove the nozzle dust cap.

NOTE

When using an open-port nozzle or the CCR nozzle adapter, put the nozzle well down into the port. Do not open the nozzle until it is inside the fill port. When using the CCR nozzle, mate the nozzle into the fill port. If they will not latch together, look for dirt in the fill port or on the nozzle. Wipe the fill port out and clean the nozzle, then mate the two together.

(l) Refuel using procedures outlined in FM 10-68.

(m) Replace the cap on the fill port and then replace the nozzle dust cap before disconnecting the nozzle bond.

(n) Remove the nozzle bond plug or undo the alligator clip Reel up the hose and nozzle Do not drag the nozzle across the ground.

(o) Undo the clip that grounds the aircraft Replace the fire extinguisher used at the nozzle.

(p) Release the clip on the ground rod and reel up the grounding cable. Do not drag the cable clips across the ground. If the refueling operation is over and the refueler ground rod was used, pull the rod up and stow it in the refueler. Replace the fire extinguisher in the refueler.

(3) *Safety requirements.* The following safety requirements must be followed when refueling Army aircraft.

- Do not allow any open flame, open-flame device, or lighted smoking materials within 50 feet of an aircraft refueling operation.

NOTE

Personnel who refuel aircraft may not carry lighters or matches on their persons and must not allow anyone else to carry a lighter or matches within 50 feet of an aircraft that is being refueled. Use of exposed-flame heaters, welding or cutting torches, and flare pots is forbidden within 50 feet of refueling operations.

- Do not allow electrically powered tools to be used in the refueling area.
- Do not allow any metalworking tools to be used within 50 feet of an aircraft being refueled.
- Do not use flashlights within 50 feet of the refueling operation unless the lights are of the approved explosion-proof type.
- Do not allow flashbulbs or electronic flash devices to be used within 10 feet of refueling equipment or the fill port or fuel tank vents of aircraft.
- Do not remove any piece of clothing while within 50 feet of a refueling operation or in an area where a flammable vapor-air mixture may exist.

NOTE

If fuel gets on clothing, leave the refueling area as soon as refueling is completed. Wet the clothes with water before taking them off if there is not enough water at the site to wet the clothes thoroughly, ground yourself to a piece of grounded equipment by taking hold of it with both hands before taking off the fuel-soaked clothes. A skin irritation from fuel is not fatal, the fire that may follow a static discharge from clothes may be.

- Do not enter a flammable atmosphere right after removing a garment. Wait at least 10 minutes before carrying the garment into such an atmosphere.

NOTE

Before opening an aircraft fuel port or doing anything else that would let fuel vapors escape into the air, bond yourself to the container by taking hold of it. If it is an aircraft or piece of metal equipment, take hold of a bare metal part with both hands for a few seconds. Although this bonding will not completely discharge the static electricity, it will equalize the charge with the charge on the piece of equipment.

- Do not refuel an aircraft until its engines are shut down, except as provided in hot refueling.
- Do not allow any work to be done on an aircraft's batteries while the aircraft is being refueled.

NOTE

The batteries should not be raised or lowered, and battery chargers should not be connected, used, or disconnected during refueling.

- Stop refueling operations when there are lightning discharges in the immediate area.
- Do not fuel an aircraft or store aviation fuel within 100 feet of the antenna of an airfield surface-detection radar.
- Do not fuel an aircraft or store aviation fuel within 300 feet of the antenna of an airfield approach and traffic control radar.
- Airborne surveillance units must be shut down before the aircraft approaches within 300 feet of a refueling or fuel storage area.
- A weather-mapping radar unit mounted in an aircraft must be shut down before and during refueling of the aircraft.
- Radio transmission from the aircraft being refueled is not allowed because of the danger of arcing.

NOTE

Restrict vehicle access to the refueling area, allow only those vehicles actually involved in servicing aircraft to come within 50 feet of the refueling operation. Vehicles used in and around refueling areas must be maintained to a high standard of performance to prevent the fire hazards of backfires and sparks. The electrical circuits of vehicles used in refueling operations must be maintained in top condition to prevent short circuits around defects.

(4) Fuel contamination. Care shall be taken when refueling to prevent fuel contamination. Sediment, water, microbiological growth, and mixed fuels can cause fuel contamination and danger for aircraft operations.

(5) Protective clothing. To date, no regular Army uniform (suitable for everyday field wear) has been developed for personnel who handle aviation fuels. Therefore, wear the standard combat uniform. Air crewmembers should wear the nylon fire-retardant uniform but should know that it loses its protective properties if it is saturated with a petroleum product. Because combat uniforms and flight suits are not impervious to petroleum, use great care in refueling operations to avoid spilling fuel on your clothing.

3-6. Oil Servicing. Oil servicing precautionary measures are required due to the flammable nature of oil. General precautions for oil servicing are the same as for fuel servicing. Additional safety precautions for oil servicing and draining are contained in the following procedures:

WARNING

To avoid contamination in oil supply for gas turbine and reciprocating engines, do not use previously opened cans of engine oil. A new sealed can of oil must be opened and used. When opening can, clean top and use a clean, sharp, unplated instrument to prevent contamination.

- a. Install drip pans where practicable.

NOTE

Never use flammable solvents to remove oil spillage.

- b. Exercise caution to prevent overfilling or spilling.

NOTE

When oil has been spilled, immediate action shall be taken to remove spillage from aircraft and adjacent area. Clean rags may be used to remove oil spillage from the aircraft. Sand, dirt, sawdust, or commercial products may be used to remove oil spillage from adjacent ground.

3-7. Oxygen Servicing. Oxygen servicing requires the utmost precautionary measures due to the highly explosive and flammable capabilities of oxygen. Prior to servicing an aircraft oxygen system, personnel shall familiarize themselves with the system, precautions, and instructions for handling gaseous oxygen, operation of servicing equipment, and potential hazards involved.



Only qualified personnel shall be authorized to operate equipment for servicing of an aircraft oxygen system. Damage to system may otherwise result.

a. **Safety Precautions.** Aircraft shall not be serviced with oxygen when any of the following conditions prevail:

- Aircraft electrical switches are on.
- Ground powered equipment is operating within 50 feet of the servicing area.
- Aircraft is being serviced with fuel, oil, or anti-icing fluids.
- Any combustible items, such as fluid, etc., are evident around oxygen servicing equipment.

b. **Servicing.** General servicing procedures for oxygen systems are explained in the following paragraphs.



Oxygen equipment shall be kept clean at all times. No organic matter or flammable substance of any nature shall be allowed to contact oxygen. Ensure that all components of the systems are free of moisture, oil and grease at all times. Oxygen is a nonflammable gas; however, it supports combustion and lowers the flash ignition point of all combustible materials. Oxygen shall be handled as a flammable gas.

When an aircraft is being serviced with oxygen within 50 feet of an area where smoking is permitted, NO SMOKING signs shall be placed at a 50-foot radius around the servicing area. A spark in the servicing area could cause an explosion and damage to equipment.

(1) To prevent overfilling of tanks, personnel shall observe aircraft oxygen system gauges at all times during servicing operation.

(2) Personnel shall be stationed at the oxygen servicing unit at all times during servicing operation to shut off unit valves immediately upon receiving a command from personnel watching aircraft system gauge.

(3) Service aircraft from cylinders clearly labeled DRY or AVIATOR'S BREATHING OXYGEN. Other oxygen may have moisture which could cause flow stoppage at temperatures below freezing.

(4) Always use a pressure-reducing device when servicing low-pressure oxygen system from high-pressure bottles.

(5) Fill oxygen system slowly to prevent explosion resulting from heat generated by filling too fast.

(6) An aircraft oxygen system not equipped with shutoff devices at cylinders shall be completely discharged of all pressure prior to removing components. All electrical power shall be turned off during oxygen discharge operations.

(7) Refer to the applicable aircraft maintenance manual for additional information and maintenance procedures.

3-8. Hydraulic Fluid Servicing. Hydraulic fluid servicing precautions are explained in the following paragraphs.

WARNING

To avoid contamination, do not use previously opened cans of hydraulic fluid. Cans of hydraulic fluid cannot be resealed. Immediately transfer unused hydraulic fluid to an approved airtight, pressure venting, stainless steel storage reservoir, an approved hydraulic servicing unit or a hydraulic test stand containing the same hydraulic fluid. When opening can, clean top and use a clean sharp, unplated instrument to prevent contamination. Can openers attached to the aircraft must be cleaned before using.

- a. Do not overfill reservoir or spill fluid in surrounding areas. When fluid is spilled, absorb with clean rags.
- b. When filling reservoirs, extreme care shall be taken to ensure that no dirt or foreign matter enters the system.
- c. Refer to applicable aircraft maintenance manual for additional servicing and maintenance instructions. Use only specified hydraulic fluid.

3-9. Pneumatic System Servicing. Safety precautions for servicing pneumatic reservoirs are contained in the following paragraphs.

- a. Never use pressure oxygen to inflate gear shock struts, pressure accumulators, etc.
- b. Use only clearly labeled compressed air cylinders or compressed air hoses of known origin.
- c. Ensure that locking mechanism on aircraft valve stem is engaged prior to installing hose to valve stem. Always engage locking mechanism after servicing.
- d. Fill system slowly to reduce heat generated by filling too rapidly.
- e. Exercise care not to overcharge the system.
- f. Completely discharge pressure prior to removing a component from the system.

3-10. Engine Operation. For operation and specific instructions on a particular fixed or rotary wing Army aircraft, refer to the applicable maintenance manual. Safety procedures and general operating procedures

for reciprocating and turbine engines are contained in the following paragraphs.

a. Safety Procedures. Safety procedures prior to starting, during starting, during engine operation, and after operating engines are covered in the following paragraphs.

(1) Safety procedures prior to starting.

The following safety procedures should be accomplished prior to starting:

- (a) Head aircraft so that exhaust blast is directed to least inhabited areas.
- (b) Place approved chocks fore and aft of main landing gear wheels.
- (c) Clear aircraft and surrounding areas of covers, tools, rags, work stands etc., and remove mooring ropes.
- (d) Secure access doors by closing or removing prior to ground testing turbine-powered aircraft engines.
- (e) Do not allow personnel on any external portion of an aircraft during engine start or operation.
- (f) Station ground crew member, equipped with a carbon dioxide or equivalent fire extinguisher to one side and forward of engine being started. This crew member will observe for fire and fire hazards, such as fuel from overflow lines, fuel/oil leakage, chock slippage, and other irregular conditions.



If aircraft utility fire extinguisher is utilized for an engine start, another fire extinguisher, rated capacity of 10-B or more, will be located within 50 feet of all fixed or rotary wing Army aircraft. Fire fighting capability must be maintained.

NOTE

If ground crewmember does not have radio communication, he must stand in view of aircraft operator.

- (g) When appropriate, station a responsible ground crewmember off to one side, away from danger areas, and aft of operating turbine powered aircraft, to warn approaching traffic. Use a danger flag when necessary.

(2) Safety procedures during starting. The following safety procedures should be accomplished during starting:

(a) Employ hand signals for directing activity when engine operating noise will not permit voice communication.

(b) Avoid excessive fuel pressure when starting turbine engines.

(c) When fire occurs during engine start, or while operating, the operator shall take necessary action, as outlined in applicable maintenance manual, to extinguish flame. Should this action fail, the fire guards shall take immediate action with approved fire extinguishing agent provided. Should fire get beyond control of operator and fire guard, all available approved means of extinguishing an aircraft or engine fire shall be used.

(d) During start, and while engines are operating, personnel shall stand well clear of propellers and of areas affected by turbine air intake flow and exhaust blast.

(e) All personnel will remain clear of engines necessitating close inspections or adjustment, as directed by the specific equipment manual, until operating engine speed (rpm) has been obtained.

(f) Do not use a quick, excessive throttle start on rotary aircraft. This kind of start could swing the tail rapidly, with the possibility of injury to personnel or damage to equipment from the tail rotor. Keep personnel and equipment clear of aircraft at a distance at least equal to its length.

(3) Safety procedures during engine operation. The following safety procedures should be accomplished during engine operation.

(a) Do not operate engines in hangars.

(b) Do not operate aircraft engine where propeller or turbine blast would cause injury to personnel or damage to aircraft and property.

(c) Nonrated personnel cannot run up rotary wing aircraft under any conditions.

(4) Safety procedures after operating engines. The following safety procedures should be accomplished after engine operation:

(a) Place ignition switch in OFF position. It is imperative that the ignition switch of an aircraft engine be in OFF position when engine is not operating. Master battery switch shall be turned off when no longer required.

(b) Turn off all tank selector and emergency fuel system valves.

(c) When practicable, make adjustment to engine and rotors with engine stopped.

b. Turbine Engines. Turbine engine starting, ground checks, and shutdown are covered in the following paragraphs.

(1) Starting Start engines using the following general procedures.

(a) Remove ice or frost from engine cowlings and inlet section prior to starting.

(b) Connect an authorized auxiliary power unit.

(c) When specified minimum starting rpm cannot be obtained with available auxiliary power unit, preheat accessory section and oil reservoir to reduce starting loads. Aircraft battery may be used as a boost to obtain required rpm.

NOTE

In normal temperatures, starting attempts below recommended starting rpm increases the possibility of engine damage due to hot starts.

(d) Accomplish engine starts according to procedures outlined in the applicable maintenance manual, using specified jet fuel or required alternate.

(e) When there is no oil pressure after sufficient runup time, or if oil pressure drops below operating range after a few minutes of ground operation, shut down engine and determine cause.

NOTE

- Starting oil pressure may exceed standard oil pressure gauge limits. This condition is not considered dangerous unless the pressure remains high. Takeoff should be delayed until oil pressure drops with range, as specified in applicable maintenance manual.
- A hot start occurs when the engine starts, but the exhaust gas temperature exceeds specified limits. This is usually caused by an excessively rich fuel air mixture entering the combustion chamber. The fuel to the engine should be shut off immediately.
- False or hung starts occur when the engine starts normally but the rpm remains at some low value rather than increasing to the normal starting rpm. This is often the result of insufficient power to the starter, or the starter cutting off before the engine starts self-accelerating. In this case, the engine should be shut down.

(2) *Ground checks.* To ensure proper operation, perform the following procedures before taxiing or takeoff.

(a) Inspect all aircraft systems and surfaces, with emphasis on systems and surfaces directly affected by low temperatures.

(b) Inspect controls and trim tabs for freedom of movement.

CAUTION

Do not apply heat directly or too rapidly against windshield and windows as there is danger of cracking, crazing, and discoloration.

(c) Inspect cabin heat, defrosting, and anti-icing systems.

(d) Inspect hydraulically-operated equipment. Cycle system several times if sluggish operation is evident.

(3) *Shutdown.* Shut down turbine engines in accordance with the applicable maintenance manual.

3-11. Runup and Taxiing. Nonrated personnel who start, run, warmup test, taxi or otherwise operate aircraft on the ground will be fully qualified, demonstrate satisfactory ability, and be authorized to perform such duties, in accordance with AR 95-1. Nonrated personnel cannot run up rotary wing aircraft under any condition. General safety procedures, taxiing, and postflight and parking are covered in the following paragraphs.

a. Safety Procedures. General safety procedures for runup and taxiing are provided in the following steps.

(1) Chock aircraft securely before attempting an engine runup.

(2) Check runup area carefully to prevent propeller or jet blast from throwing ice and snow on other aircraft.

NOTE

Some instruments will give erroneous readings due to cold. These readings can be compensated for or corrective action may be taken. For specific instruments and their characteristics, consult applicable maintenance manual.

(3) Position ground crew to ensure adequate guidance when aircraft is maneuvered close to other aircraft, buildings, or obstructions, or in gusty or high winds.

(4) Check that brakes are not frozen, and that aircraft will roll before attempting to taxi from parking space.

(5) Free tires that have become frozen to surface by application of heat or over-inflation. Do not allow heat to exceed 160°F (71°C).

NOTE

Immediate freeing action cannot be expected from tires that have been over-inflated. A time period of one-half to one hour may be necessary for tires to become free.

(6) Avoid snow and slush blown by preceding aircraft by increasing distance between aircraft when taxiing.

(7) Reduce taxi speeds to ensure safe stopping.

(8) Exercise care when pulling out or turning from parking line to ensure that other aircraft will not be damaged or covered by snow and ice from propeller blast.

(9) Avoid taxiing into deep snow or snow drifts, as steering could become difficult, brakes could freeze, and damage to propellers could result.

(10) Unless aircraft is equipped with an auxiliary power unit, use only essential electrical equipment to preserve battery life while taxiing at low engine speeds.

b. Taxiing. The following are general procedures for taxiing:

(1) Only personnel authorized to taxi as specified in AR 95-1 may taxi Army aircraft.

(2) Do not taxi aircraft on any taxiway which runs within 100 feet of active runways unless necessitated by terrain or directed to do so by proper authority.

(3) Upon approved signal from flight compartment, approach and remove wheel chocks. Exercise caution and consideration for operating propellers, turbine inlet, and exhaust areas.

(4) Use only sufficient engine power to gain rolling momentum when taxiing aircraft from a row of parked aircraft. When it is necessary to turn aircraft, gain required momentum in straight movement to permit making turn with reduced power.

(5) Under normal operations, wing guides will not be mandatory. However, when an aircraft is maneuvered in proximity of other aircraft, buildings, or obstructions, or in gusty or high wind conditions, there shall be wing guides to ensure adequate guidance.

c. Postflight and Parking. The following procedures are listed to prevent abortive flights following the last flight of the day, and to protect parked aircraft:

(1) Drain oil tank sump and main oil drain before condensation freezes.

(2) Inspect oil and fuel drains and crankcase breathers for ice or frost. Remove any existing frost or ice.

(3) Inspect battery for charge at least once a week. If layovers are to be over 4 hours and temperature is below -20°F (-29°C), remove battery and store in a warm place.

(4) Drain oil system when there is no provision available for preheating oil and a long layover period is anticipated.

(5) When temperature rises above freezing during a long layover, drain fuel and oil tank sumps of water before temperature drops.

3-12. Test Flights and Maintenance Operational Checks.

Maintenance test flights are categorized as general test flights and limited test flights. Specific and mandatory requirements for accomplishment of aircraft test flights and maintenance operational checks are found in Section III, TM 55-1500-328-23.

a. Test Flight Safety. Maintenance test flights will be accomplished with assistance as necessary from the most proficient flight crew available; i.e., copilot, technical inspectors, and observers. Aviators who are not graduates of The Aircraft Maintenance Test Flight course may be designated as Maintenance Test Pilots upon successful completion of an evaluation administered in accordance with FM 1-544. Minimum crew possible will be aboard aircraft during test flight.

b. Maintenance Operational Checks. Maintenance operational checks (MOCs) are accomplished on the ground through engine runup, aircraft taxiing or use of auxiliary power or testing equipment, in such a manner as to simulate conditions under which the system is to operate. The purpose of an MOC is to assure that aircraft systems or components which have been disturbed during an inspection or maintenance action have been repaired, reassembled or adjusted satisfactorily.

c. Carbon Monoxide Detection. Determine the carbon monoxide concentration in aircraft after every major overhaul. Follow the procedures and limits in the instructions packed with the carbon monoxide detector.

CHAPTER 4

AIRCRAFT STORAGE AND SHIPMENT

4-1. General. The following paragraphs provide information on the preparation of Army aircraft for shipment and storage.

4-2. Categories of Storage. The length of time that the aircraft will be inactive will determine which of the following categories of storage will be used.

a. Flyable Storage. Flyable storage is the prescribed procedure to maintain a stored aircraft in operable condition. Next to daily use, this category of storage keeps the aircraft in the best possible condition. All scheduled preventative maintenance will be performed on aircraft in flyable storage, and periodic operation of the aircraft and all systems is required. There is no time limit on flyable storage.

b. Short Term Storage. Short term storage is used to store an aircraft for a period not to exceed 45 days. Aircraft in short term storage require extensive preservation but very little periodic attention.

c. Intermediate Storage. Intermediate storage is used to store aircraft for a period of 46 to 180 days. Aircraft in intermediate storage require very extensive preservation but minimal periodic attention.

d. Long Term Storage. Procedures for long term storage are not available for the storage of Army aircraft. If storage beyond 180 days is required, the aircraft will be depreserved, returned to flyable status, operated, and represerved in accordance with this chapter.

e. Preservation of Aircraft Undergoing Maintenance. Aircraft undergoing AVUM/AVIM maintenance in a hangared environment shall not be considered to be in storage. Tasks applicable to short term storage shall be performed as necessary to prevent deterioration of the aircraft. Selection of the required tasks is at the discretion of the maintenance officer based on local conditions. Aircraft undergoing maintenance in an outside environment and aircraft stored in an outside environment awaiting parts shall be preserved for the appropriate storage category as described above.

4-3. Responsibility. The Commanding Officer shall be responsible for initiating action to place aircraft in storage in accordance with this chapter. The type of storage used shall be selected based on the length of time the aircraft will be inactive.

4-4. Preparation of Aircraft for Storage. When the decision is made to place aircraft in flyable, short term, or intermediate storage, the aircraft will be prepared in accordance with the applicable Aviation Unit

Maintenance (AVUM) technical manuals. Authorization to take deviation from published procedures will be obtained, in writing, from Commander, U.S. Army Aviation & Missile Command, ATTN: AMSAM-MMC-MM-DP, Packaging & Stock Readiness Branch, Redstone Arsenal, AL 35898

4-5. Inspection of Stored Aircraft. All aircraft placed in storage shall be carefully inspected at regular intervals of 60 days or less, depending on local conditions. Stored aircraft shall be corrosion-treated if this precaution is found necessary when conducting inspection for corrosion. Particular attention shall be given to those areas where moisture deposits will not evaporate rapidly. Normally, corrosion will not be as prevalent on painted surfaces as on unpainted surfaces. The commanding officer of the storage facilities shall be responsible for establishing a program of periodic inspections of stored aircraft in addition to the prescribed inspections listed below:

a. Ensure proper preservation and ventilation of aircraft and take immediate action to correct all unsatisfactory conditions.

b. Ensure drainage holes on underside of fuselage, wing, center section, and control surfaces remain unobstructed.

c. When canvas covers are used for protection, they shall have drainage holes installed at locations where water would tend to accumulate.

d. During hot weather, spot checks shall be made among each type and model of stored aircraft to determine maximum interior temperatures encountered. This shall be accomplished by hanging a standard thermometer in the interior of aircraft, and recording readings during the hottest parts of day. When temperature exceeds 160°F (71°C), action shall be taken to ventilate aircraft.

e. To aid ventilation on aircraft employing astrodomes, astrodome may be removed and replaced with a covered flue.

f. Forced ventilation may be employed when other methods of ventilation are not adequate to prevent sweating in interior of aircraft and resulting accumulation of condensation and mildew.

g. Exterior locks, ground wires, chocks, mooring ropes, rods, and eyes shall be inspected every 30 days and immediately after aircraft has been subjected to high velocity winds (exceeding 40 mph). Pulled rods or

TM 1-1500-204-23-1

deteriorated locks, ground wires, chocks, mooring ropes, and rods shall be replaced.

NOTE

Under some conditions, corrosion may attack the metal through the paint. In such cases, the affected areas will be indicated by blisters or a scaly appearance of the paint.

4-6. Maintenance of Stored Aircraft. Precautions shall be taken to ensure that adequate maintenance will be accomplished to maintain the aircraft in the proper state of preservation in accordance with applicable aircraft maintenance manual. For aircraft in flyable storage, calendar and dual criteria inspections will be completed as they become due.

4-7. Entries in Aircraft Forms. When an aircraft is placed in storage, process DA Form 2408 series forms in accordance with DA PAM 738-751. Include an entry indicating the type of storage, the date placed in storage, and the date represervation is due.

4-8. Removal of Aircraft from Storage. When an aircraft is removed from storage, the inspection and maintenance performed will be dependent on the type of storage the aircraft has been in.

a. Depreservation. Depreserve aircraft in accordance with applicable AVUM technical manuals.

b. Inspection. Perform preventative maintenance daily inspection and all calendar and dual criteria inspections that are due.

c. Maintenance. Correct aircraft deficiencies as required.

d. Operational Check. Perform Maintenance Operational Check (MOC) and/or Maintenance Test Flight (MTF) as required in accordance with TM 1-1500-328-23.

4-9. Shipment of Aircraft. Step by step procedures for the preparation, loading, tiedown, and unloading of Army aircraft for shipment by vessel, truck, and cargo aircraft are provided in the Preparation for Shipment Manual applicable to the aircraft. Authority to take deviation from the procedures in the applicable Preparation for Shipment Manual must be obtained, in writing, from Commander, U.S. Army Aviation & Missile Command, ATTN: AMSAM-MMC-MM-DP, Packaging & Stock Readiness Branch, Redstone Arsenal, AL 35898

4-10. Preservation and Packaging of Aircraft Components. General information on the preservation and packaging of Army materiel is provided by TM 746-10, Marking, Packaging and Shipment of Supplies and Equipment: General Packaging Instructions for Field Units. Detailed information is provided by TM 38-230-1 and TM 38-230-2, Preservation of Materiel Preservation, Volumes I and II, respectively.

a. Special Reusable Containers. Preservation and packaging instructions for major aircraft components that have special reusable containers are contained in the applicable Aviation Unit Maintenance (AVUM) Technical Manual.

b. Packaging Procedures. Aircraft components will normally be shipped in the same packaging the replacement component was received in. When this is not possible and assistance is required in determining the preservation and packaging of a specific component, contact Commander, U.S. Army Aviation & Missile Command, ATTN: AMSAM-MMC-MM-DP, Packaging & Stock Readiness Branch, Redstone Arsenal, AL 35898.

CHAPTER 5

MARKING OF AERONAUTICAL ITEMS

5-1. General. The marking system specified in the following paragraphs provides the means for accurately identifying and indicating the condition of aeronautical items.

5-2. Marking Requirements. A single materiel condition tag shall be used to identify each aeronautical component, assembly, kit, or set which is assigned a Federal Stock Number and is stocked, stored, and issued as a single line item of supply. However, individual parts of components, assemblies, kits, or sets which are identified and listed as single line items of supply shall be individually tagged when physically separated from the component, assembly, kit, or set.

5-3. Materiel Marking. The following are the only materiel condition tags and labels authorized for use on Army aeronautical items. These tags and labels are in addition to applicable maintenance forms, records, or tags required by DA PAM 738-751.

- Serviceable Tag-Materiel (DD Form 1574) and Serviceable Label Materiel (DD Form 1584-1).

- Unserviceable (Repairable) Tag-Materiel (DD Form 1577-2) and Unserviceable (Repairable) Label-Materiel (DD Form 1577-3).
- Unserviceable (Condemned) Tag-Materiel (DD Form 1577) and Unserviceable (Condemned) Label-Materiel (DD Form 1577-1).
- Suspended Tag-Materiel (DD Form 1575) and Suspended Label-Materiel (DD Form 1575-1).
- Test/Modification Tag-Materiel (DD Form 1576) and Test/Modification Label Materiel (DD Form 1576-1).

5-4. Method of Accomplishing Entries. When initiating materiel condition tags or labels, entries will be made in the appropriate blocks as prescribed by DA PAM 738-751.

CHAPTER 6

APPLICATION AND REMOVAL OF DECALS

6-1. General. Decals are suitable for exterior and interior surface application as governed by MIL-D-8634 and MIL-D-8635 respectively. Prior to application of decals, the following instructions shall apply to assure proper adhesion:

WARNING

Aliphatic Naphtha, TT-N-95, is extremely flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well-ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

a. Clean all surfaces thoroughly with a clean cloth dampened with aliphatic naphtha, Federal Specification TT-N-95, to remove grease, oil, wax, or other foreign matter.

b. Wipe area with a clean, dry cloth to remove dampness and residue, then seal porous surfaces and sand rough surfaces.

c. Remove excess paper and film from decals which have trim lines.

6-2. Decal Types. Decals approved for use on Army aircraft are of three types: paper (lacquer), vinyl film and metal. Application and removal of decals are explained in the following paragraphs.

a. Paper Decals. Application and removal procedures are explained in the following paragraphs.

(1) Application. Apply paper decals in accordance with the following procedures:

(a) Immerse paper decals in clean water for one to three minutes.

NOTE

Allowing decals to soak longer than three minutes will cause the backing to separate from the

decal while immersed; allowing decals to soak less than one minute will result in the backing not separating from decal.

(b) Place one edge of decal on prepared receiving surface and press lightly, then slide paper backing from beneath decal.

NOTE

Apply pressure lightly to permit easy removal of backing; reimmerse decals from which backing is not easily removed.

(c) Perform minor alignment with fingers, then remove water by gently blotting decal and adjacent area with a soft, absorbent cloth. Remove air or water bubbles trapped under decal by wiping carefully toward nearest edge of decal with cloth. Allow decal to dry.

(d) Paint area surrounding decal and outer perimeter of decal with a coat of in a ¼- to ½-inch wide stripe to prevent peeling.

(2) Removal. Remove paper decals by rubbing decal with a cloth dampened with Aliphatic Naphtha, TT-N-95.

b. Vinyl Film Decals. Application and removal procedures are explained in the following paragraphs.

(1) Application. Apply vinyl film decals in accordance with the following procedures:

(a) Separate paper backing from plastic film.

NOTE

Remove paper backing adhering to the adhesive by rubbing the area gently with a clean cloth saturated with water; remove small piece of remaining paper with masking tape.

(b) Place vinyl film, adhesive side up, on a clean porous surface such as wood or blotter paper.

(c) Apply cyclohexanone, or equivalent, in firm, even strokes, to adhesive side of decal.

NOTE

Reactivate adhesives which have dried with cyclohexanone, or equivalent, prior to installation. Adhesive may be reactivated as many as three times without damage to adhesive capability. Adhesives which are reactivated will be allowed to air-dry thoroughly before application.

(d) Position decal in proper location, while adhesive is still tacky, with only one edge contacting prepared surface.

(e) Work roller across decal with overlapping strokes until all air bubbles are removed.

WARNING

Degreasing Solvent, MIL-PRF-680, is combustible and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well-ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames or other sources of ignition.

Aliphatic Naphtha, TT-N-95, is extremely flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well-ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

(2) **Removal.** Remove vinyl film decals by placing, a cloth saturated with cyclohexanone, or Aliphatic Naphtha, TT-N-95, on decal and scraping film with a micarta scraper. Remove remaining adhesive by wiping with a cloth dampened with degreasing solvent, MIL-PRF-680.

c. Metal Decals. Metal decals come in three types: cellophane-backing adhesive type, paper-backing adhesive type, and no adhesive type. Application and removal procedures for each type are explained in the following paragraphs.

(1) **Cellophane-backing adhesive type.** Application and removal of cellophane-backing adhesives are explained in the following paragraphs.

(a) **Application.** Apply metal decals with cellophane-backing adhesive in accordance with the following procedures:

1 Immerse decal in clean, warm water for one to three minutes.

2 Remove from water and dry carefully with a clean cloth.

3 Remove cellophane backing, but do not touch adhesive,

NOTE

Apply a few drops of Aliphatic Naphtha, Federal Specification TT-N-95, to the adhesive when room temperature is below 72°F (22°C).

4 Position one edge of decal onto prepared receiving surface. On large foil sheet, place center onto receiving surface and work outward from center to edges.

5 Remove all air pockets by rolling firmly with a rubber roller, and press all edges tightly against receiving surface to ensure good adhesion.

(b) **Removal.** Remove metal decals by moistening edge of foil with aliphatic naphtha, Federal Specification TT-N-95, and peeling decal from adhering surface.

(2) **Paper-backing adhesive type.** Application and removal of paper-backing adhesive are explained in the following paragraphs.

(a) **Application.** Apply metal decals with paper backing adhesive in accordance with the following procedures:

1 Remove paper backing from decal.

2 Apply very light coat of cyclohexanone, or equivalent, to adhesive.

3 Position decal in proper location while adhesive is still tacky with only one edge contacting prepared surface.

4 Work roller across decal with overlapping strokes until all air bubbles are removed.

(b) **Removal.** Remove metal decals by moistening edge of foil with Aliphatic Naphtha, Federal Specification TT-N-95, and peeling decal from adhering surface.

(3) No adhesive type. Application and removal of no adhesive are explained in the following paragraphs.

(a) Application. Apply decals with no adhesive in accordance with the following procedures:

1 Apply one coat of cement, Federal Specification MMM-A-1617, to decal and prepared receiving surface.

2 Allow cement to dry until both surfaces are tacky.

3 Apply decal and roll down to remove air pockets.

WARNING

Aliphatic Naphtha, TT-N-95, is extremely flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well-ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

4 Remove excess adhesive with a cloth dampened with aliphatic naphtha, Federal Specification TT-N-95.

(b) Removal. Remove metal decals by moistening edge of foil with aliphatic naphtha, Federal Specification TT-N-95, and peeling decal from adhering surface.

6-3. APPLICATION AND INSTALLATION OF IDENTIFICATION TAPES. The Army uses two types of identification systems to code the plumbing lines and electrical conduits of aircraft. The two systems used are the printed-symbolized tape system (the preferred method), and the solid color band, (the alternate method). Identification tapes will be applied to plumbing lines and electrical conduits of all Army aircraft.

a. Printed-Symbolized System. This latest and preferred system utilizes printed colored tape (one inch wide) with geometrical symbols. The main function of the line is printed on the tape. Printing will be in accordance with MIL-STD-1247. Colors will be in accordance with ANA Bulletin 166 and FED-STD-595 (refer to table 6-1).

(1) Colored tapes. Colored tapes as shown in figure 6-1 shall be used to identify aircraft system lines.

(2) Line content. Identification of system line content or subsidiary functions may be indicated by additional words or abbreviations printed on a second

tape adjacent to first tape or, alternatively, interposed between words descriptive of main function.

(3) Systems not referenced. A white tape with black lettering will be used for coding lines of systems such as the vacuum system not referenced in figure 6-1.

Table 6-1. Colors and Codes

| Color | Specification | Code No. |
|----------------------|----------------------|----------|
| Light blue | ANA Bulletin 166 | 501 |
| Light green | ANA Bulletin 166 | 503 |
| Light yellow | ANA Bulletin 166 | 505 |
| International orange | ANA Bulletin 166 | 508 |
| Insignia red | ANA Bulletin 166 | 509 |
| Maroon | ANA Bulletin 166 | 510 |
| Insignia white | ANA Bulletin 166 | 511 |
| Aircraft gray | ANA Bulletin 166 | 512 |
| Gloss black | ANA Bulletin 166 | 515 |
| Brown | Federal Standard 595 | 10049 |

(4) Type of tape. Aircraft tubing identification marker tape (non-corrosive, heat, cold and solvent resistant), MIL-T-9906 conforming to MS87033, shall be used.

b. Solid Color Band System. This alternate system consists of the use of one, two, or three bands of ½-inch wide solid colored tape wrapped on various lines for identification. This system is shown in figure 6-2.


(1) Tape colors. Colors for tapes used in this system shall conform to color codes in ANA Bulletin 166 and FED-STD-595 (refer to table 6-1).

(2) Tape spacing. When more than one color of tape is required, tapes shall be placed approximately 1/16 inch apart. When one color is used but more than one tape is required, tapes shall be placed approximately 1/8 inch apart.

(3) Type of tape. Type II pressure-sensitive tape, A-A-113, shall be used for this system.

c. Application of Identification Tapes. The application and use of both identification systems are the same, and the following paragraphs are applicable to both systems.

TM 1-1500-204-23-1

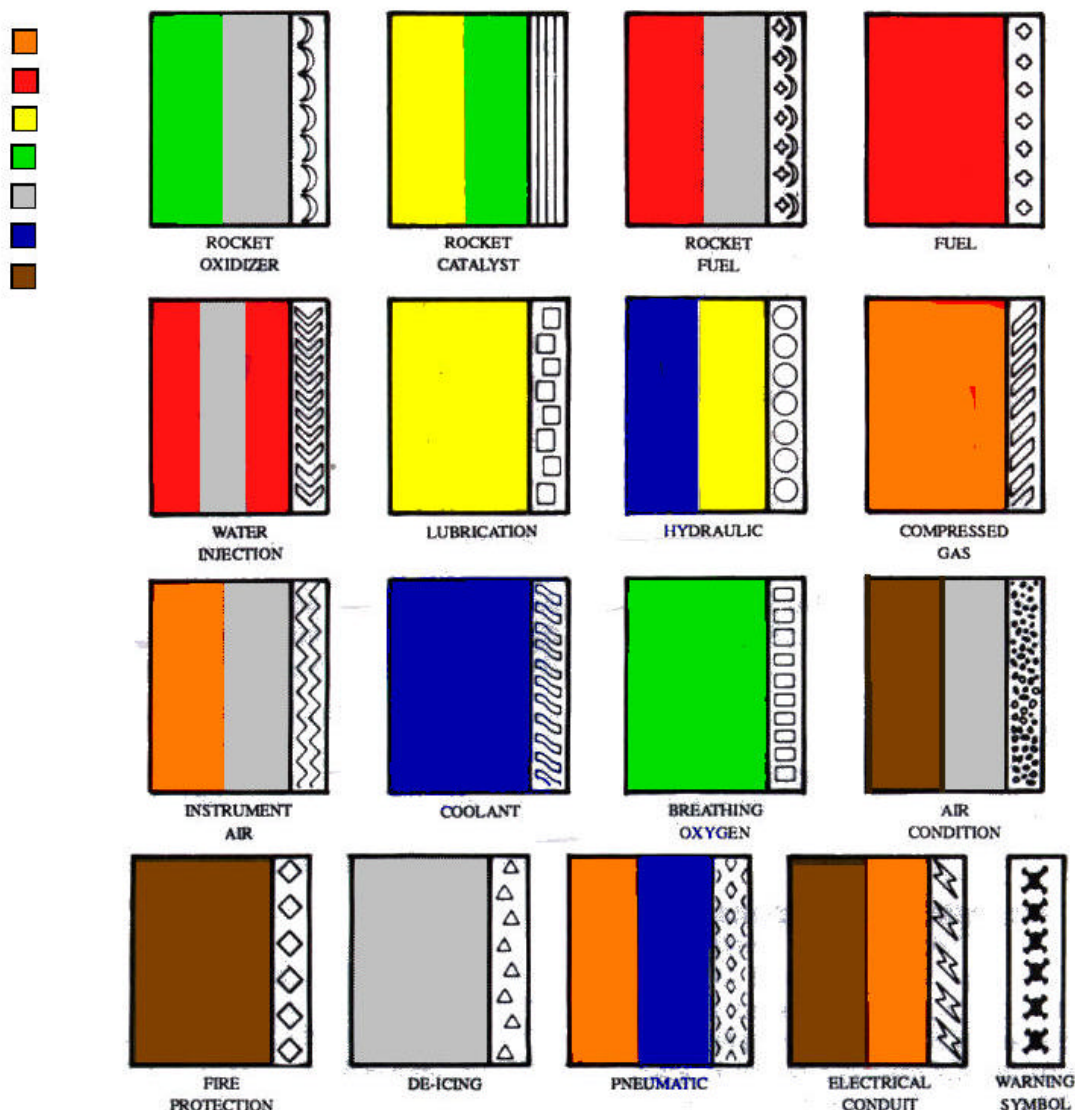

THE ABOVE COLOR CODES REPRESENT DESIGNATION FOR SYSTEMS ONLY FOR CODING LINES WHICH DO NOT FALL INTO ONE OF THESE SYSTEMS, THE CONTENTS SHALL BE DESIGNATED BY BLACK LETTERING ON A WHITE TAPE.

SUBSIDIARY FUNCTIONS OR IDENTIFICATION OF LINE CONTENT MAY BE INDICATED BY THE USE OF ADDITIONAL WORDS OR ABBREVIATIONS WHICH SHALL BE CARRIED ON A SECOND TAPE ADJACENT TO THE FIRST OR ALTERNATIVELY INTERPOSED BETWEEN THE WORDS DESCRIPTIVE OF THE MAIN FUNCTION.

WARNING SYMBOL TAPES. 3/8 INCH WIDE. SHALL BE APPLIED TO THOSE LINES WITH CONTENTS CONSIDERED TO BE DANGEROUS TO MAINTENANCE PERSONNEL WARNING TAPES ARE TO BE PLACED ADJACENT TO SYSTEM IDENTIFICATION TAPES ONE BAND SHALL BE LOCATED ON EACH TUBE SEGMENT, 24 INCHES OR SHORTER.

ONE BAND SHALL BE LOCATED AT EACH END OF EACH TUBE SEGMENT LONGER THAN 24 INCHES ADDITIONAL BANDS SHALL BE APPLIED WHEN THE TUBE SEGMENT PASSES THROUGH MORE THAN ONE COMPARTMENT OR BULKHEAD AT LEAST ONE BAND SHALL BE VISIBLE IN EACH COMPARTMENT OR ON EACH SIDE OF THE BULKHEAD.


PRESSURE TRANSMITTER LINES SHALL BE IDENTIFIED BY THE SAME COLORS AS THE LINES FROM WHICH THE PRESSURE IS BEING TRANSMITTED.

FILLER LINES, VENT LINES, AND DRAIN LINES OF A SYSTEM SHALL BE IDENTIFIED BY THE SAME COLORS AS THE RELATED SYSTEM.

TAPES SHALL NOT BE USED ON FLUID LINES IN THE ENGINE COMPARTMENT WHERE THERE IS A POSSIBILITY OF THE TAPE BEING DRAWN INTO THE ENGINE INTAKE FOR SUCH LOCATIONS, SUITABLE PAINTS, CONFORMING TO THIS COLOR CODE AND WHICH HAVE NO DELETERIOUS EFFECT ON THE MATERIAL USED FOR THE LINES, SHALL BE USED FOR IDENTIFICATION PURPOSES IN THESE CASES, THE GEOMETRICAL SYMBOLS MAY BE OMITTED

AV 001903

Figure 6-1. Color-Coded Tapes

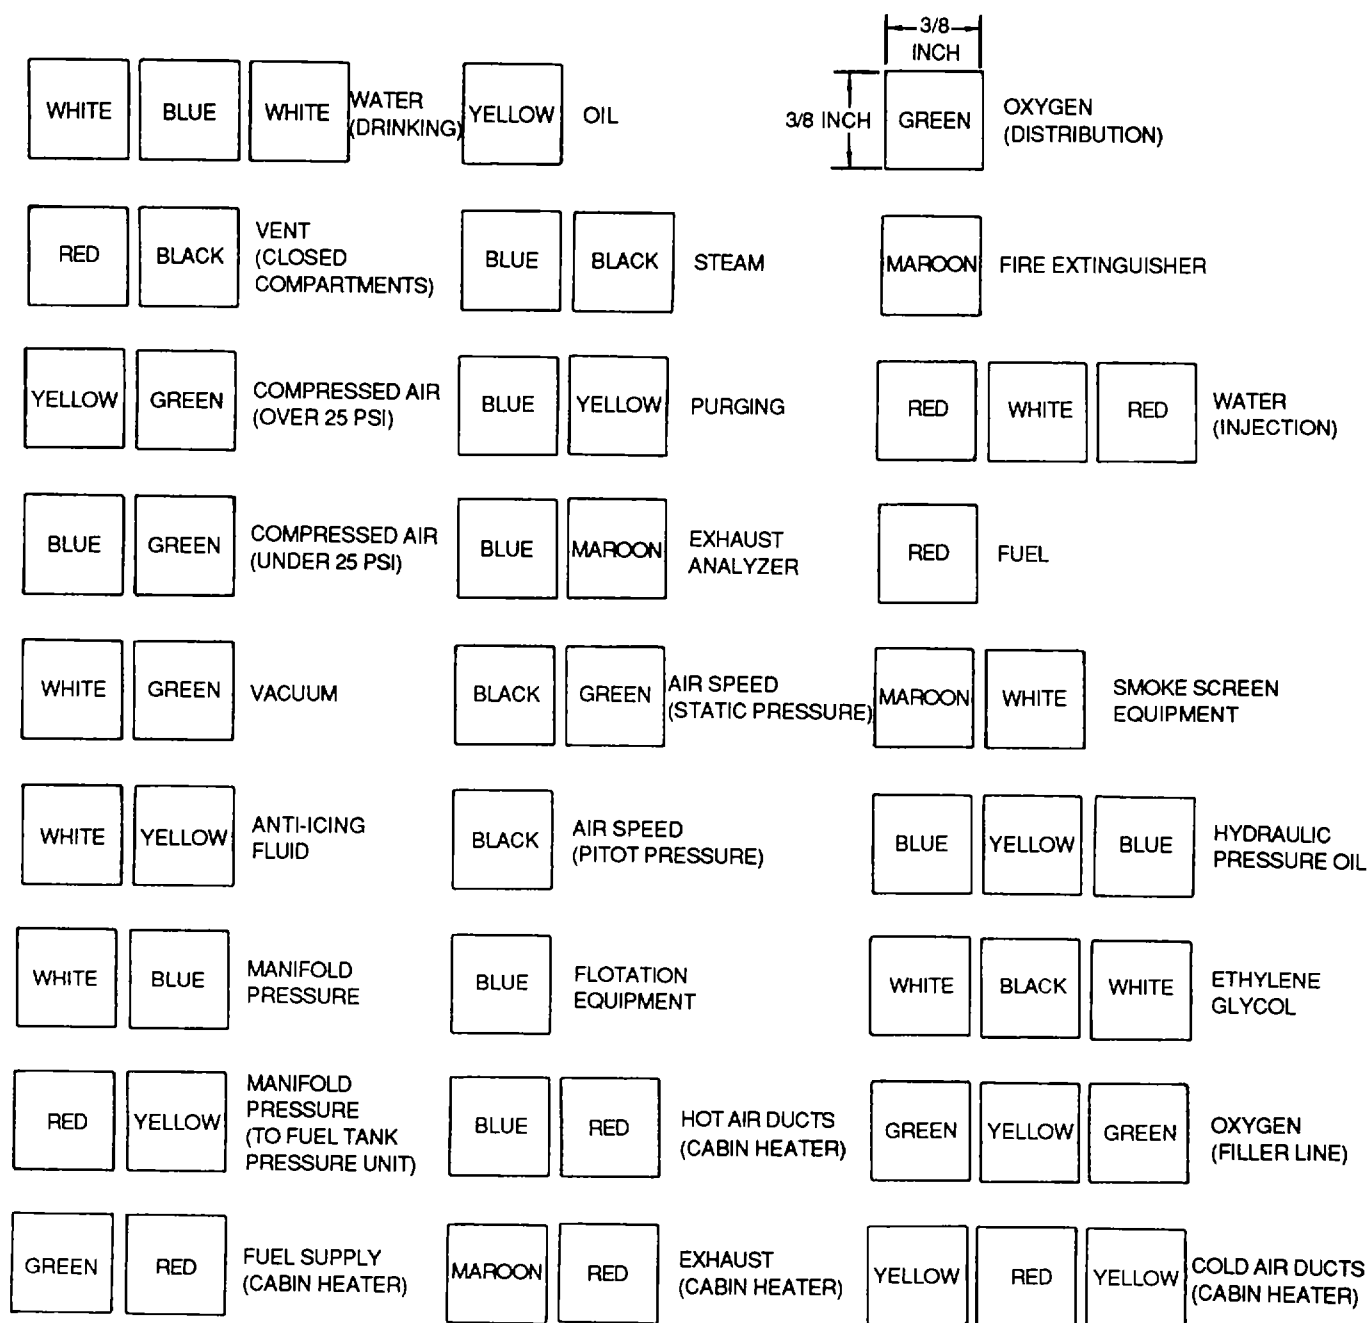

PIPE LINE SYSTEMS COLOR CODE

Figure 6-2. Solid Color Band System

TM 1-1500-204-23-1

(1) Secondary lines. Filler, vent, and drain lines will be identified by colors of the plumbing system for which they function.

(2) Location of bands. One band will be located on each tube segment of 24 inches or less when both ends of the segment are within the same compartment. One band shall be located at each end of tube segments longer than 24 inches. When the tube segment passes through more than one compartment or bulkhead, additional bands will be applied to the tube so that a minimum of one band is visible in each compartment or on each side of the bulkhead.

(3) Tapes in engine compartment. Tapes shall not be used on fluid lines in the engine compartment where there is a possibility of the tape being drawn into the engine intake. When tape cannot be employed, suitable paints conforming to the color codes in table 6-1, and having no injurious effect on the metal used for the lines, shall be used for identification purposes. When paints are used, the geometrical symbols may be omitted.

(4) Warning symbol. Warning symbol tapes, as shown in figure , shall be applied adjacent to the identification tape on those lines containing fluids considered to be dangerous to maintenance personnel. Warning tapes shall be used when applicable on both identifying systems. Warning tape shall be 3/8 inch wide.

d. Installation of Identification Tapes. Installation of identification tape consists of the following procedures:

WARNING

Aliphatic Naphtha, TT-N-95, is extremely flammable and toxic to eyes, skin, and res-

piratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

CAUTION

The low flash point of solvents make them a fire hazard, therefore, employ utmost care when using them. Damage may otherwise result.

(1) Clean areas to be banded with Aliphatic Naphtha, Federal Specification TT-N-95.

(2) Coat exterior surfaces of metal tubing when necessary, with epoxy primer, MIL-PRF-23377, prior to application of tape.

(3) Install tape not having clear acetate covering by tightly wrapping 1 ¼ turns of tape around the part being banded and press firmly to ensure adhesion. Apply one coat of clear lacquer, Federal Specification TT-L-32, over band and extend ¼ inch beyond tape edges.

(4) Install tape having clear acetate covering by tightly wrapping 1 ¼ turns of tape around the part being marked and press firmly to ensure adhesion.

CHAPTER 7

GENERAL RECIPROCATING ENGINE MAINTENANCE

7-1. General The maintenance instructions and procedures contained in this chapter are general and applicable to reciprocating engines used on Army aircraft. Maintenance instructions that are specific and peculiar to particular engines are contained in the applicable maintenance manuals and will be used in conjunction with general information contained in this chapter.

7-2. Engine Types and Designations. Reciprocating engine types and designations are explained in the following paragraphs.

a. Types. Types of aircraft reciprocating engines used by the Department of the Army are the radial type and the opposed type. Radial-type engines have the crankcase in the form of a circle, as shown in figure 7-1. The cylinders extend out from the housing in the same manner as the spokes of a wheel. Cylinders are arranged evenly in the same circular plane and all pistons are connected to a 360-degree crankshaft. Opposed-type engines have cylinder banks arranged in two rows directly opposite each other with a crankshaft in the center as shown in figure 7-2. Pistons are connected to the single crankshaft. This type engine may be mounted with cylinders vertical or horizontal.

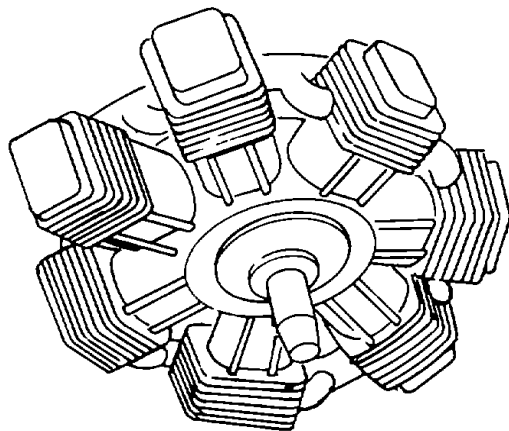


Figure 7-1. Radial-Type Engine

b. Designation Examples. An example of radial engine designation is R-1820-103. The R denotes a radial arrangement of the cylinders, 1820 denotes a total of 1820 cubic inches displacement, and 103 denotes a particular modification or characteristic of the engine. For opposed engine designations, such as IGSO-480-A1A6, the I denotes injected, G denotes geared output drive, S denotes supercharged, the O denotes opposed arrangement of the cylinders, 480 denotes a total of 480 cubic inches displacement, and the A1A6 denotes a particular modification or characteristic of the engine.

7-3. Reciprocating Engine Theory. A reciprocating (internal-combustion) engine is a device for converting heat energy into mechanical energy. Gasoline is vaporized and mixed with air, forced or drawn into a cylinder, compressed by a piston, and then ignited by an electric spark. The conversion of the resultant heat energy into mechanical energy and then into work is accomplished in the cylinder. The operating cycle of an internal combustion reciprocating engine, as shown in figure 7-3, includes the series of events required to induct, compress, ignite, burn, and expand the fuel-air charge in the cylinder, and to scavenge or exhaust the byproducts of the combustion process. When the compressed mixture is ignited, the resultant gases of combustion expand very rapidly and force the piston to move away from the cylinder head. This downward motion of the piston, acting on the crankshaft through the connecting rod, is converted to a circular or rotary motion by the crankshaft.

7-4. Major Engine Components. Major engine component types and maintenance are described in the following paragraphs.

a. Crankcases. The crankcase encloses the various mechanisms surrounding the crankshaft. The crankcase provides a tight enclosure for the lubricating oil and supports various external and internal mechanisms it contains the bearings in which the crankshaft revolves and provides support for attachment of cylinder assemblies. Finally, it provides mountings for attachment to the aircraft, and by reason of its strength and rigidity, it prevents misalignment of the crankshaft and its bearings. The following paragraphs describe crankcase types and general maintenance.

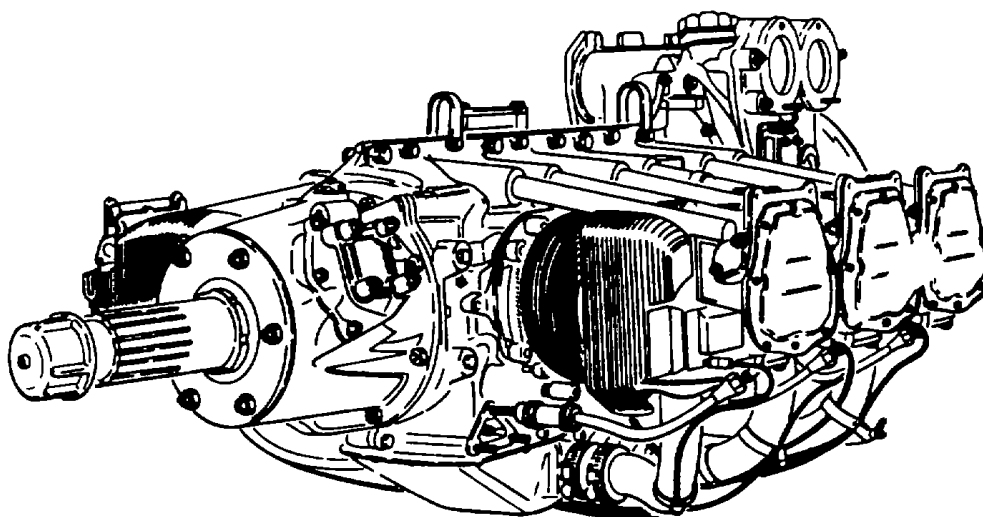


Figure 7-2. Opposed-Type Engine

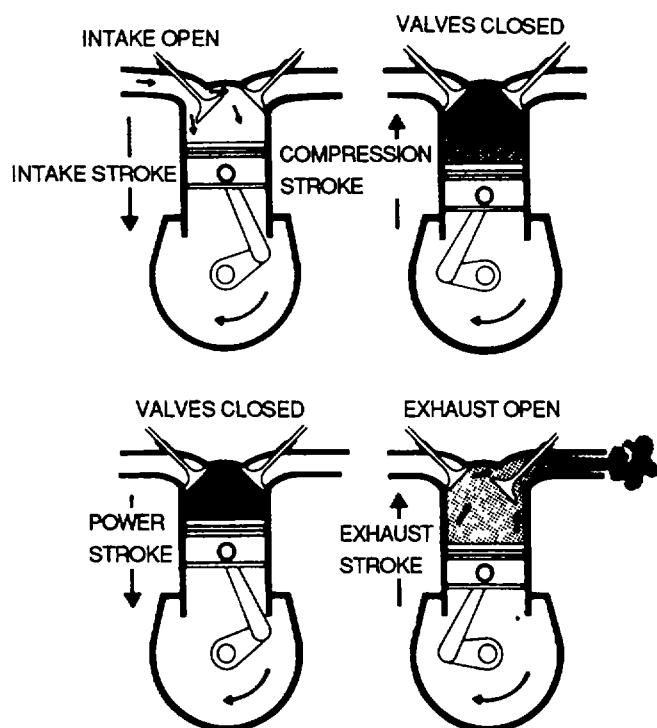


Figure 7-3. Reciprocating Engine Operating Cycle (Four-Stroke)

(1) *Types.* Opposed-type and radial-type engine crankcases are described in the following paragraphs.

(a) *Opposed-type crankcases.* The crankcases used on engines opposed vary in form but in general they are approximately cylindrical. One or more sides are surfaced to serve as a base to which the cylinders are attached by means of capscrews, bolts, or studs. The crankshaft is carried in a position parallel to the longitudinal axis of the crankcase and is generally supported by a main bearing between each throw. See figure 7-4.

(b) *Radial-type crankcases.* Radial-type engine crankcases, as shown in figure 7-5, vary in size and number of sections. Four common sections are described by the following paragraphs.

1 *Nose section.* The nose section is usually made of an aluminum alloy and is fastened to the power section by studs and nuts or caps and screws. Most nose sections support the propeller thrust bearing, propeller governor drive shaft, and the propeller reduction gear assembly. Various other engine accessories are sometimes attached.

2 *Power section.* The power or main section may be of one-piece or two-piece construction and usually consists of one, two, or possibly three pieces of high-strength heat-treated aluminum-alloy or steel forging, bolted together if there is more than one piece. The cam-operating mechanism is usually housed and supported by the power section. At the center of each

main crankcase web section are crankshaft bearing supports. Cylinder mounting pads are located radially around the outside circumference of the power section. The cylinders are fastened to the pads by means of studs and nuts or cap screws. Oil seals are located between the nose section and the power section. Similar seals are installed between the power section and the supercharger section.

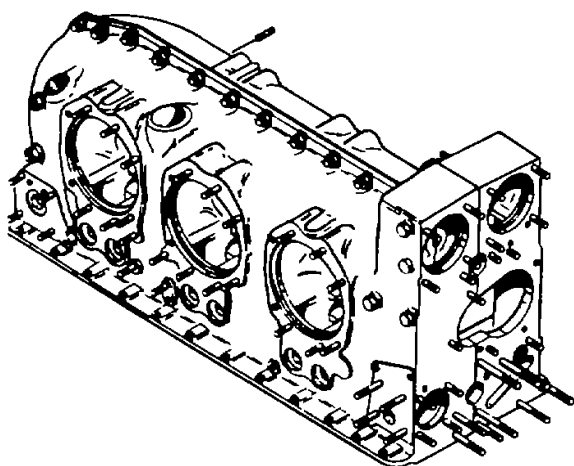


Figure 7-4. Opposed-Type Crankcase

3 *Supercharger section* The supercharger section is normally located immediately behind the main power section and may be of either one-piece or two-piece construction. Its principal function is to house the blower or supercharger impeller and diffuser vanes. There are openings on the outside circumference of the housing for attaching the individual induction pipes, a small opening for the attachment of the manifold pressure line, and internal-passages which lead to the supercharger drain valve.

4 *Accessory section* The accessory section provides mounting pads for the accessory units such as the fuel pumps, vacuum pumps, lubricating-oil pumps, tachometer generators, generators, magnetos, starters, two-speed supercharger control valves,

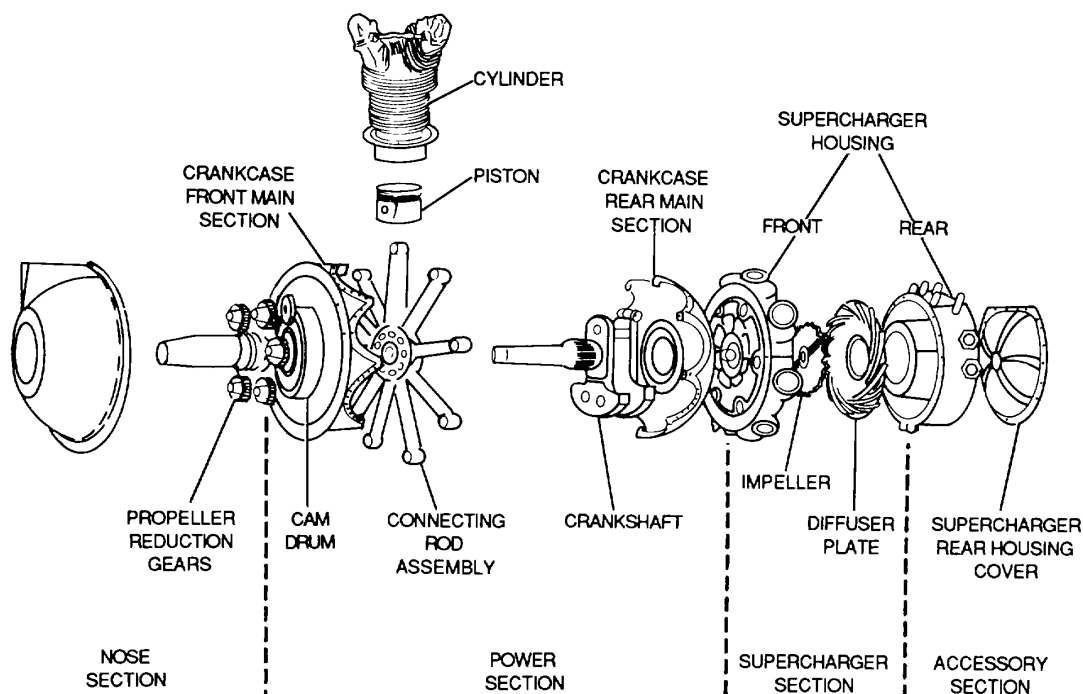


Figure 7-5. Radial-Type Crankcase

TM 1-1500-204-23-1

oil-filtering screens, Cuno filters, and other items of accessory equipment. In some aircraft powerplants, the cover for the supercharger rear housing is made of an aluminum-alloy or a magnesium-alloy casting in the form of a heavily ribbed plate that provides the mounting pads for the accessory units; but in other powerplants, the housings for the accessory units may be mounted directly on the rear of the crankcase. Regardless of the construction and location of the accessory housing, it contains the gears for driving the accessories which are operated by engine power.

(2) *Maintenance.* Crankcase maintenance consists of inspection for cracks, warping, damage to machined surfaces, worn bushings and bearing bores, loose or bent studs, corrosion damage, and other conditions which may lead to failure in service. Refer to the applicable maintenance manual.

NOTE

Two-piece crankcases are manufactured with matched parts; therefore if one half must be discarded, the entire crankcase is replaced

b. *Crankshafts.* The crankshaft transforms the reciprocating motion of the piston and connecting rod into rotary motion for turning the propeller. It is a shaft composed of one or more cranks or throws. The parts are the main journal, crankpin, crank cheek or crank arm, and

the counterweights and dampers. The following paragraphs describe crankshaft types and general maintenance.

(1) *Types.* Opposed-type and radial-type engine crankshafts are described in the following paragraphs.

(a) *Opposed-type crankshaft.* A typical six cylinder opposed-type crankshaft is shown in figure 7-6. This crankshaft is a one-piece, six-throw, 60-degree crankshaft machined from an alloy-steel (SAE 4340) forging. The crankpins and main bearing journals are ground to close limits of size and surface roughness.

(b) *Radial-type crankshaft.* Figure 7-7 shows a single-throw 360-degree crankshaft used on single-row radial engines. It may be of single-piece or two-piece construction with two main bearings (one on each end). This single piece crankshaft must be used with a master rod having the large end split.

(2) *Maintenance.* Crankshaft maintenance is critical to safe engine operation. The dimensions of the journals, the balance, and the alignment of the shaft must be within tolerances when inspected and measured. The crankshaft should be inspected by the magnetic methods to detect flaws and defects. Refer to the applicable maintenance manual for specific maintenance procedures and tests.

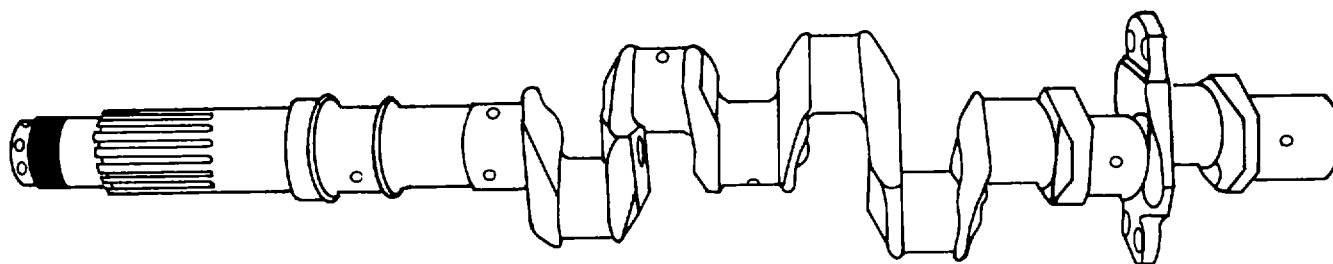


Figure 7-6. Opposed-Type Crankshaft (Six-Cylinder) (Six-Throw)

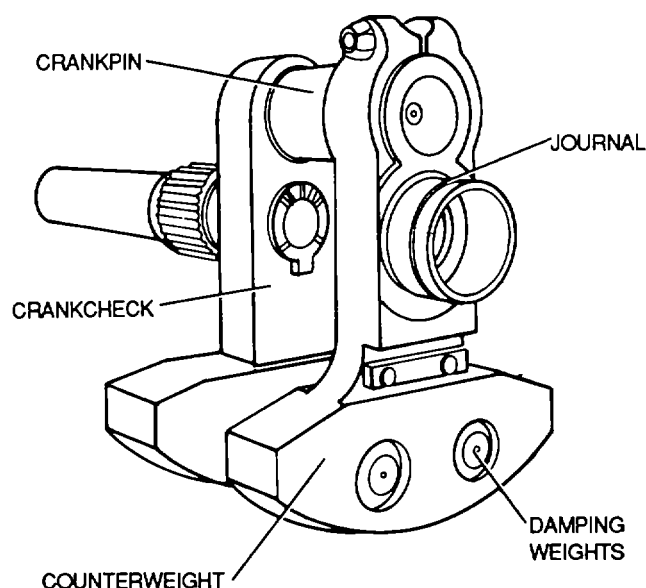


Figure 7-7. Radial-Type Crankshaft (Single-Throw)

c. Bearings. A bearing is any surface which supports, or is supported by, another surface. A good bearing must be composed of a metal that is strong enough to withstand the pressure imposed on it and should permit the other surface to move with a minimum of friction and wear. The parts must be held in position within very close tolerances to provide efficient and quiet operation, and yet allow freedom of motion. To accomplish this, and at the same time reduce friction of moving parts so that power loss is not excessive, lubricated bearings of many types are used.

(1) Types. The three different types of bearings in general use are plain, roller and ball. They are shown in figure 7-8 and described in the following paragraphs.

(a) Plain bearings. Plain bearings are usually made of nonferrous metals, such as silver, bronze, aluminum, and various alloys of copper, tin, or lead. Plain bearings are generally used for the crankshaft, cam ring, camshaft, connecting rods, and the accessory drive shaft bearings.

(b) Ball bearings. A ball bearing assembly consists of grooved inner and outer races, one or more sets of balls, and in bearings designed for disassembly, a bearing retainer. They are used for supercharger impeller shaft bearings and rocker arm bearings in some engines. Special deep-groove ball bearings are used in

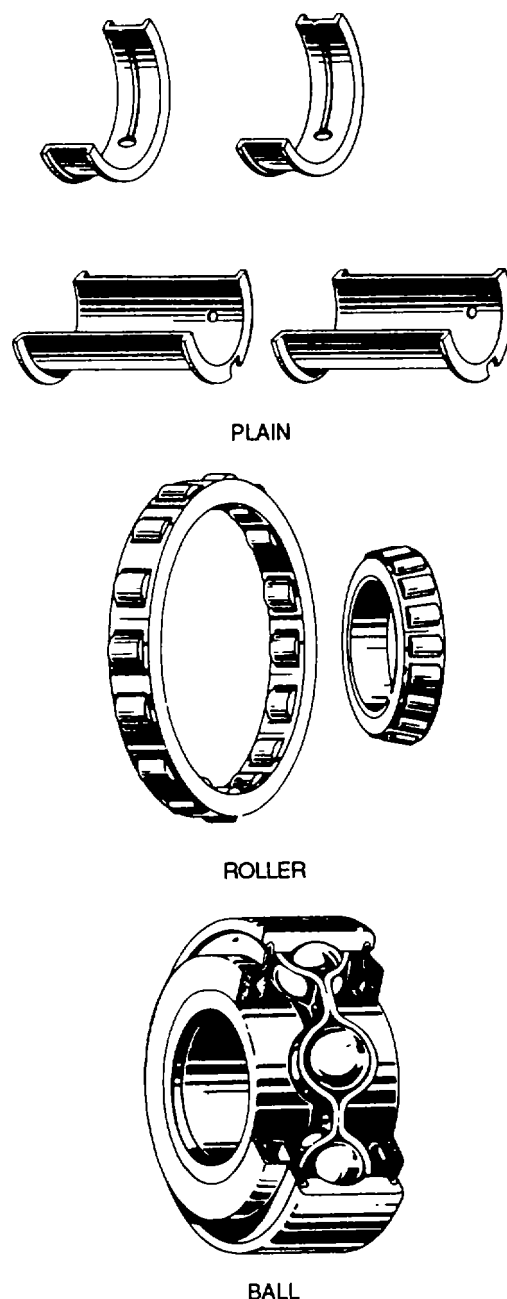


Figure 7-8. Bearing Types

aircraft engines to transmit propeller thrust to the engine nose section

(c) Roller bearings. Roller bearings are made in many types and shapes, but the two types generally used in the aircraft engine are the straight roller and the tapered roller bearings. Tapered roller bearings are always used in pairs. Straight roller

bearings are used where the bearing is subjected to radial loads only. In tapered roller bearings, the inner and outer race bearing surfaces are cone shaped. Such bearings will withstand both radial and thrust loads. Straight roller bearings are used in high-power aircraft engines for the crankshaft main bearings. They are also used in other applications where radial loads are high.

(2) *Maintenance* Clean, inspect, and replace bearings in accordance with the applicable maintenance manual.

d. *Connecting Rods.* The connecting rod is the link which transmits forces between the piston and the crankshaft. Connecting rods must be strong enough to remain rigid under load and yet be light enough to reduce the inertia forces which are produced when the rod and piston stop, change direction, and start again at the end of each stroke.

(1) *Types* There are three types of connecting rod assemblies, as shown in figure 7-9. The plain, fork-and-blade, and master-and-articulated connecting rod assemblies are described in the following paragraphs.

(a) *Plain connecting rods.* Plain connecting rods are used in opposed engines. The end of the rod attached to the crankpin is fitted with a cap and a two-piece bearing. The bearing cap is held on the end of the rod by bolts or studs. To maintain proper fit and balance, connecting rods should always be replaced. In the same cylinder and in the same relative position.

(b) *Fork-and-blade connecting rods* The fork-and-blade rod assembly is used primarily in V-type engines. The forked rod is split at the crankpin end to allow space for the blade rod to fit between the prongs. A single two-piece bearing is used on the crankshaft end of the rod.

(c) *Master-and-articulated connecting rods.* The master-and-articulated rod assembly is only used in radial engines. In a radial engine the piston in one cylinder in each row is connected to the crankshaft by a master rod. All other pistons in the row are connected to the master rod by an articulated rod.

(2) *Maintenance.* The maintenance of connecting rods involves visual inspection for nicks, cracks, bending, corrosion, and other damage, magnetic particle inspection, checking alignment for parallelism and convergence between the bearing end and the piston end;

rebushing, and replacement of the bearings. Refer to the applicable maintenance manual before accomplishing any maintenance procedures.

e. *Pistons, Pins, and Rings.* Pistons, pins, and rings, as shown in figure 7-10, are described and maintained as explained in the following paragraphs.

(1) *Pistons.* The piston of a reciprocating engine is a cylindrical member which moves back and forth within a steel cylinder. The piston acts as a moving wall within the combustion chamber. As a piston moves down the cylinder, it draws in the fuel-air mixture. As it moves upward, it compresses the charge, ignition occurs, and the expanding gases force the piston downward. This force is transmitted to the crankshaft through the connecting rod. On the return upward stroke, the piston forces the exhaust gases from the cylinder.


(2) *Pins.* The piston pin joins the piston to the connecting rod. It is machined in the form of a tube from a nickel steel alloy forging, casehardened and ground. The piston pin is sometimes called a wristpin because of the similarity between the relative motions of the piston and the articulated rod and that of the human arm.

(3) *Rings.* The piston rings prevent leakage of gas pressure from the combustion chamber and reduce to a minimum the seepage of oil into the combustion chamber. The rings fit into the piston grooves but spring out to press against the cylinder walls, when properly lubricated, the rings form an effective gas seal. Rings are always used in sets.

(4) *Maintenance.* Pistons and pins are inspected and checked for cleanliness, wear, scoring, corrosion, cracks, and any apparent damage. New rings are installed each time the engine is overhauled. Refer to the applicable maintenance manual when accomplishing maintenance on pistons, pins, and rings.

f. *Cylinders.* The portion of the engine in which the power is developed is called the cylinder. The cylinder provides a combustion chamber where the burning and expansion of gases take place, and it houses the piston and the connecting rod.

(1) *Description.* The cylinder used in the aircooled engine is the overhead valve type shown in figure 7-11. Each cylinder assembly consists of the cylinder head and the cylinder barrel.

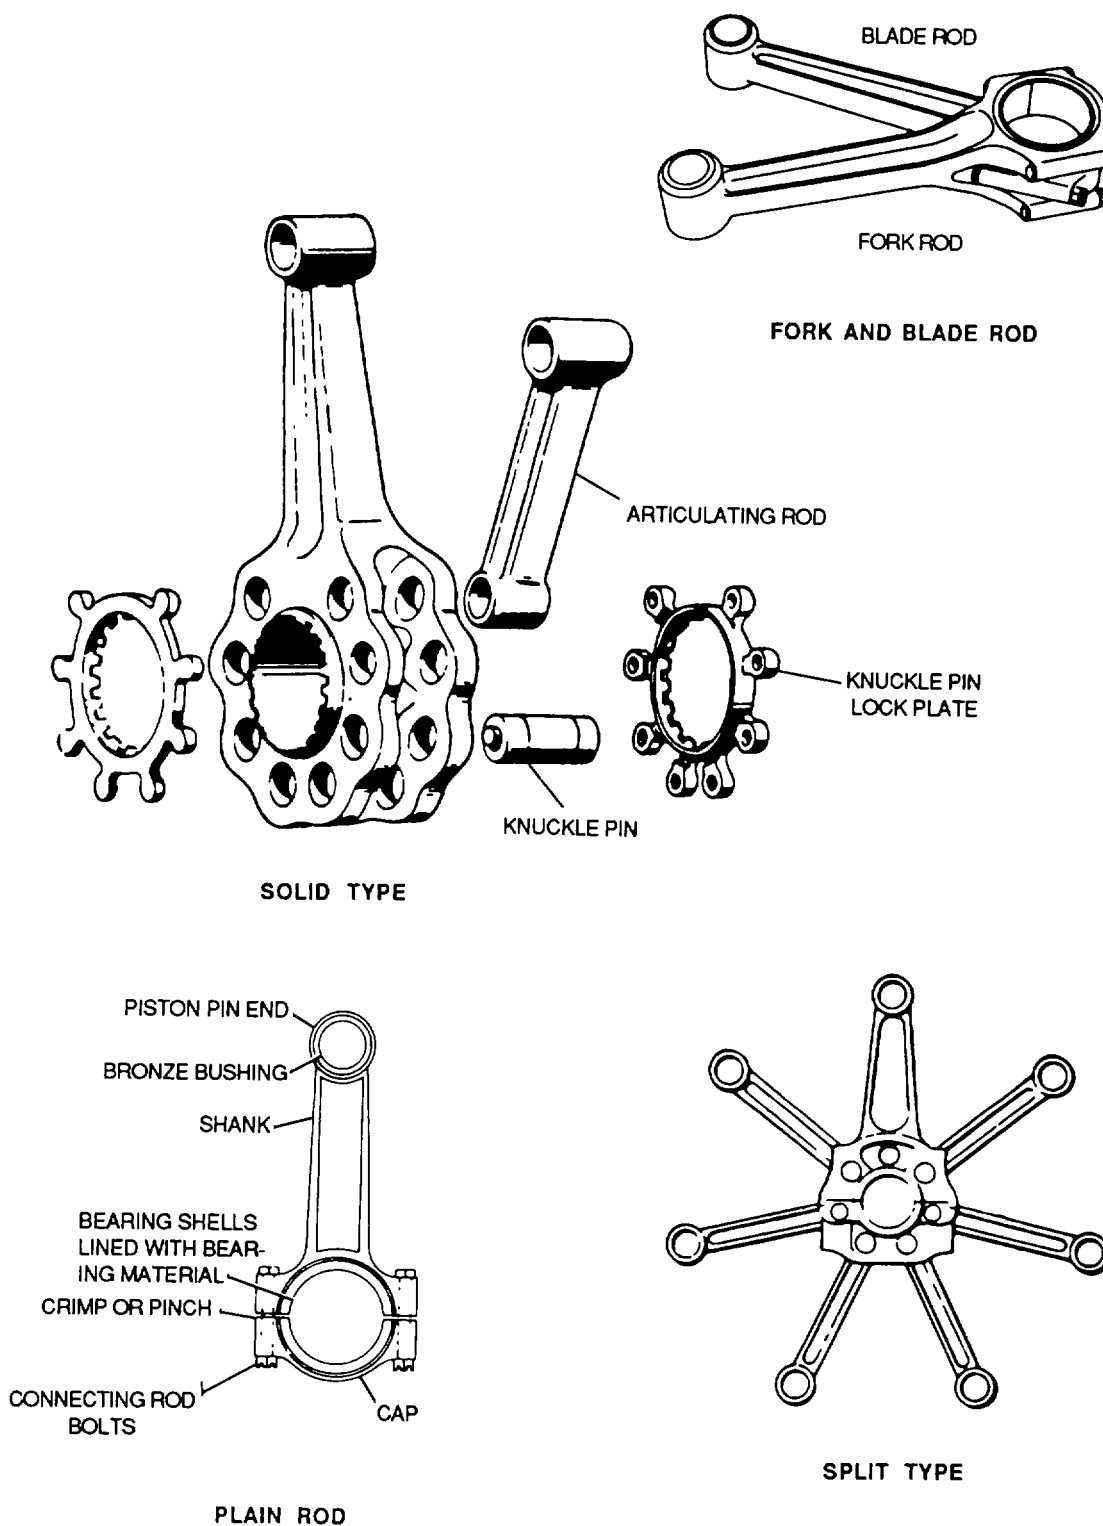

MASTER-AND-ARTICULATED RODS

Figure 7-9. Connecting Rod Assemblies

TM 1-1500-204-23-1

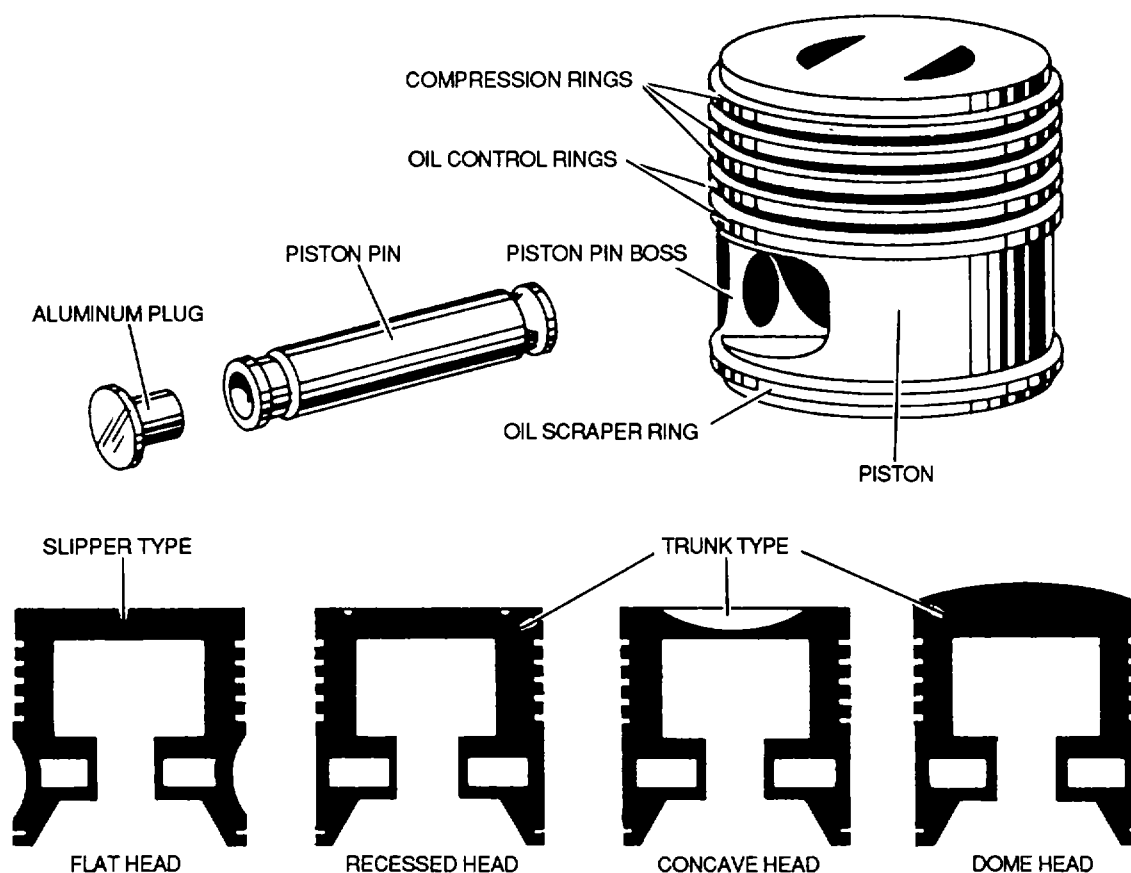


Figure 7-10. Piston, Pin, and Ring Assemblies

(2) *Maintenance.* Cylinder maintenance procedures are explained in the following paragraphs. All openings to a cylinder must be completely closed and sealed during the compression and power strokes in order to maintain proper compression and thus prevent power loss. The requirements for proper sealing are: good piston rings with no leakage between pistons and walls of the combustion chamber, tightly closing. Intake and exhaust valves, and proper valve timing to ensure highest efficiency obtainable when engine is operating at its normal rpm. Compression loss at any of these points results in reduced engine efficiency. Early detection and correction of these faults will prevent cylinder breakdown. Since most engine difficulties can be traced to a small number of cylinders, engine malfunction can be corrected by locating defective cylinders and taking corrective action. Each phase of cylinder operation, such as compression, fuel mixture, or ignition, must function properly to maintain cylinder compression.

NOTE

Dark stains adjacent to the cylinder head and barrel seam must not be misinterpreted. During engine operation, the high temperature thread lubricant used during barrel and head assembly may be extruded at the seam leaving a heavy discoloration. Such a condition is in no way hazardous to engine operation, therefore, verification of cylinder failure must be by means other than stains alone. A cylinder should be removed for head separation only if it displays visible damage and/or fails the normal compression test.

(a) *Identification.* Cylinders will be color coded around the barrel between the attaching flange and the lower barrel cooling fin with a 1/2-inch wide band of enamel, heat-stable, cadmium sulphide paint (see figure 7-12). The cylinder sizes and colors are listed below

Standard Cylinder - Aluminum or Black

Chrome Plated - International Orange

0.010 Inch Oversize - Green

0.015 Inch Oversize - Gray

0.020 Inch Oversize - Yellow

NOTE

Chrome-plated cylinders are further identified as illustrated in the following example 6-44, SAX-3, 20 would designate the third cylinder plated by San Antonio Air Material Area in June 1944, and the cylinder was 0.020 inch oversize when plated.

(b) *Liquid lock.* When an engine is shut down, the warm residual oil clinging to the power section surfaces flows downward toward lower cylinders. Some of this oil seeps past piston rings, accumulating in the combustion chamber. When sufficient liquid is present, the true compression ratio will be raised and extremely high pressure will be produced when the piston moves down on the compression stroke. These pressures can damage the cylinder, piston, or rod. The piston may actually press the liquid, forming what is known as a hydraulic or liquid lock (see figure 7-13). Observe the following precautions:

CAUTION

Do not rotate propeller in reverse direction of normal engine rotation. This will push the liquid into intake pipes and return to cylinders on the next intake stroke.

- When propeller is rotating in the normal direction, the operator must be alert for any sign of piston being forced against high compression, evidenced by a sudden resistance, slowdown, or stoppage which would indicate an excess amount of liquid in the lower cylinder

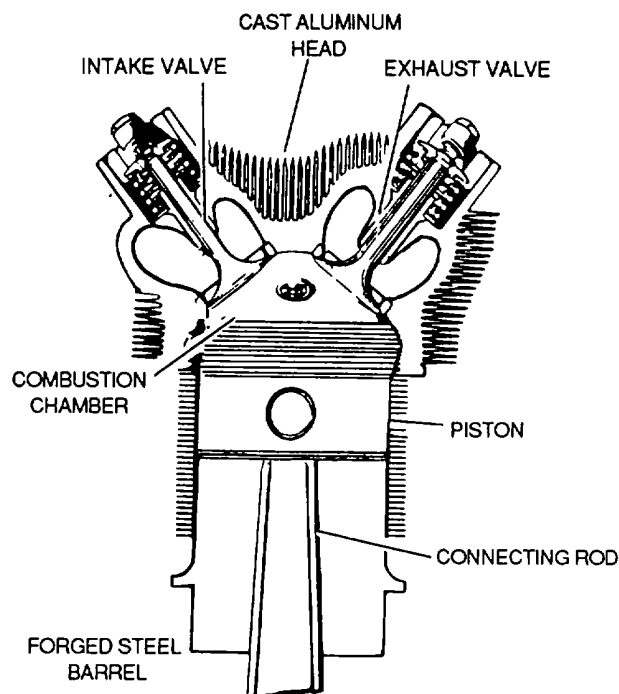


Figure 7-11. Cylinder Assembly

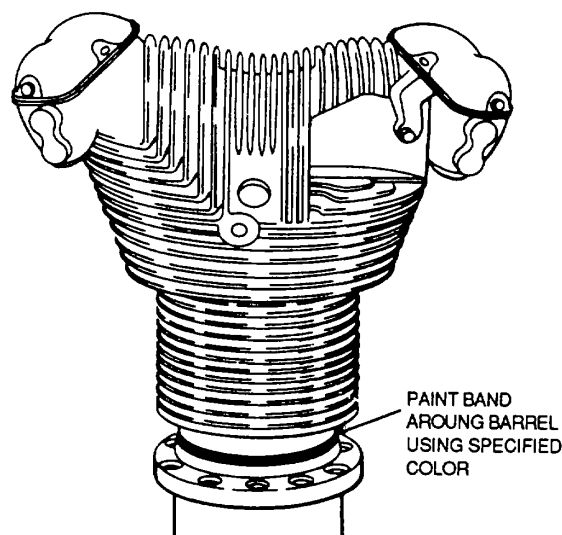


Figure 7-12. Marking of Cylinder

TM 1-1500-204-23-1

- Liquid locks are partial or complete. Hesitation in propeller rotation usually denotes a partial lock. If propeller stops, it usually denotes a complete liquid lock. Forcing engine through a complete liquid lock will cause Immediate engine failure.
- Liquid locks are also caused by oil in intake pipes as a result of preservation, fuel discharged into the intake system while crankshaft is not rotating, or oil flowing from push rod housing into rocker box, then seeping through intake or exhaust valve guides into intake or exhaust ports.
- Due to the mechanical advantage of a long propeller blade and the fact that two or more men per blade are used for propeller pull through, possibility of bending a rod by manual pull-through is more likely than by starter pull through. This is particularly true when a partial liquid lock is present, since the piston with a partial liquid lock will be very near the top of the stroke when force. Is required to rotate the crankshaft against the liquid lock Liquid lock may bend the connecting rod slightly, but not enough to move the lower piston ring out of the cylinder skirt, on the downward stroke, in which case internal failure may occur within the next 50 hours.
- If liquid lock is suspected, remove a spark plug from cylinder involved and allow liquid to drain out. Turn propeller several revolutions to make certain all liquid has drained from cylinder and induction lines, then install clean spark plug.

(c) *Valve blowby.* Valve blowby is Indicated by a hissing or whistling sound when engine is pulled through by propeller, turned with starter, or while idling at low speed. Correct valve blowby by first checking valve clearance and adjust as necessary. If valve clearance is excessive, proceed using the following procedures.

NOTE

If valve is stuck in the valve guide, correct clearance cannot be determined.

1 Stake valve by placing a fiber drift on rocker arm and valve stem, and then drift with a hammer.

2 Determine whether blowby has been eliminated by turning engine by hand or turning it through with starter.

3 When blowby is still present, perform a compression test.

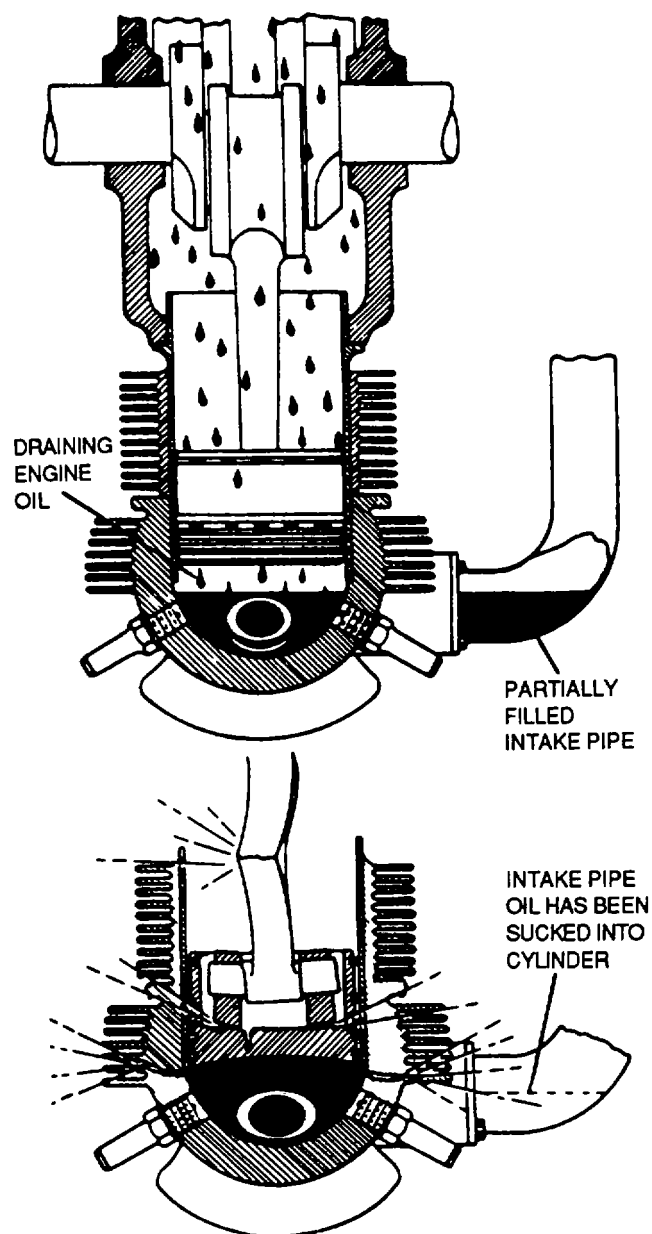


Figure 7-13. Liquid Lock

NOTE

When adjusting clearance and staking valve do not correct blowby and raise compression above minimum value as specified. In the applicable maintenance manual, replace cylinder as described in applicable maintenance manual.

(d) *Compression test.* A cylinder compression test locates defective cylinders. Replacement of these defective cylinders will prevent an unsatisfactory condition from progressing to the point of complete cylinder failure and eventual engine failure. Cylinders with compression below standard shall be replaced, thus preventing the use of engines with a large variation of compression between individual cylinders.

CAUTION

Ensure that Ignition switch is placed in OFF position after engine warmup has been accomplished. Damage may otherwise result

1 When engine is cold, operate it a short time to ensure that cylinder walls and piston rings are properly lubricated.

2 Remove one spark plug from each cylinder and insert compression tester.

3 Either disconnect starter booster coil or ground all disconnected spark plug lead.

4 Place throttle in FULL open position, keep fuel tank selector valve closed.

5 Use battery cart or auxiliary power unit to provide power for energizing engine starter.

6 Using engine starter, crank engine at least four revolutions.

NOTE

The tester contains a restrictive orifice to eliminate acceleration errors, and two compression impulses are required to obtain an accurate compression reading.

7 Analyze compression reading obtained.

8 Determine average cylinder compression values by totaling all cylinder compressions and dividing total obtained by number of cylinders. If any one cylinder is 20 percent below the average, or If any one cylinder is below the minimum compression value for that engine, that cylinder must be replaced.

NOTE

A variance of any one cylinder of 20 percent below the average of all cylinder compression readings of engine being checked warrants additional investigations. Two additional checks should be made prior to any detailed work to verify information obtained in first compression check.

9 The following conditions may possibly affect engine compression.

- Incorrect valve tappet clearances
- Worn, scuffed, or damaged pistons
- Broken piston ring
- Excessive wear of piston rings and cylinder walls
- Burned or warped valves
- Carbon particle between face and seat of valve
- Incorrect valve timing

NOTE

When a compression test on one or more cylinders of any row of cylinders is needed, the compression of all cylinders on the affected row will be tested, compression reading totaled, and minimum compression established in the same manner as when checking compression on all cylinders

TM 1-1500-204-23-1

(e) *Cylinders with below minimum compression.* Engines having cylinders with below minimum required compression will be processed using the following procedures.

1 Remove rocker box covers on cylinders with low compression.

2 Turn crankshaft until piston is on top dead center of compression stroke and check intake and exhaust valves for clearance.

3 When valves are held open due to negative clearance, adjust valves to proper clearance.

4 Check for excessive leakage past piston by squirting engine oil into cylinder, pulling engine through compression stroke, and then checking compression.

5 Continue cylinder In service if compression is up to required minimum.

(f) *Cold cylinder check.* The tendency for any cylinders to be cold or only slightly warm indicates lack of combustion or incomplete combustion within the cylinder. Perform this check using an approved cold cylinder indicator.

1 Head aircraft into wind to minimize irregular cooling of individual cylinders.

2 Open cowl flaps.

NOTE

Do not close cowl flaps under any circumstances, as the resulting heat will affect the readings obtained and overheat the ignition leads.

3 Start engine. After engine is running, place ignition switch to position where excessive rpm drop is obtained. In cases where an excessive rpm drop has occurred on both magnetos, or where excessive manifold pressure is obtained at a given rpm, perform check twice, once on LEFT and once on RIGHT position.

4 Operate engine at roughest speed between 1200 and 1600 rpm or at rpm up to Ignition check speed until a cylinder head temperature reading

of 302 to 338°F (150 to 170°C) is obtained or until temperature stabilizes at a lower reading.

NOTE

- In cases where engine roughness is encountered at more than one speed, or there is an indication that a cylinder ceases to operate at idle speed or higher speeds, it will be desirable to run engine at each of these speeds and perform a cold cylinder check to pick out all dead or intermittently operating cylinders.
- In cases where lower output or engine vibration is encountered at speeds above 1600 rpm, when operating with ignition switch on BOTH, engine should be run at the speed where the difficulty is encountered until cylinder head temperature reaches 302 to 338°F (150 to 170°C), or until temperature has stabilized at a lower value.

5 Stop engine by moving mixture control to IDLE CUT-OFF position. When engine ceases firing, turn off both individual and master Ignition switches.

6 Measure and record relative temperatures of each cylinder, starting with any cylinder and proceeding in numerical order around engine, by pressing tip of Indicator pickup rod of cold cylinder tester against each cylinder.

NOTE

It is essential that a firm contact be made at the same relative location on each cylinder in order to obtain temperature value. This measurement must be performed in the shortest possible time after engine ceases firing.

7 Recheck cylinders that have low values and two cylinders having highest readings to determine amount of cooling during check.

8 Compare temperature readings obtained in order to determine which cylinders are dead or operating intermittently.

9 Examine magneto ground leads to determine that RIGHT switch position fires front plugs and LEFT switch position fires rear plugs. Make this examination prior to changing spark plugs, making ignition harness test on cylinders which are operating, or are operating intermittently. In addition, examine ignition leads.

NOTE

In cases where the cylinder is completely dead on the BOTH position, the difficulty may be due to incorrect valve clearances, impeller oil seal leaks, leaking intake pipes, or lack of compression (blowby).

10 Repeat cold cylinder check for other magneto positions on Ignition switch when necessary. Additional cold cylinder checks will be conducted at different speeds in event any roughness is still encountered during ignition system check

NOTE

Cooling of the engine between checks is not necessary as airflow created by propeller and cooling effect of incoming fuel-air mixture into cylinder will be sufficient to cool any cylinders which are functioning on one check and fail to function on the following check.

(g) *Chalk test.* The chalk test should be used when the cold cylinder tester is not available. Test using the following procedures.

1 Mark each cylinder with a piece of white marking chalk, A-A-320.

2 Run engine as outlined in paragraph (e) above.

3 Examine each mark after engine shutdown. Cylinders having marks unchanged in color are dead or operating intermittently. The marks for a normal operating cylinder will change to a pink color.

(h) *Cylinder repair.* Cylinder repair can be accomplished by using the following procedures as applicable

CAUTION

**Do not damage adjacent fins
Inadequate cylinder cooling may result.**

1 Repair cracked, nicked, or broken cooling fins by profiling damaged area using a file to smoothly round all edges. Corners shall have at least a 1/4-inch radius and removed area nut shall not exceed one percent of the total fin area.

NOTE

Magnetic or dye-penetrant inspect fins that are profiled to outside of dome to ensure that crack does not extend into cylinder dome.

2 Repair broken or loose studs in tapped hole by using helical inserts.

NOTE

When more than two adjacent nuts are known to have been loose during engine operation, or when more than two adjacent studs have failed, cylinder will be replaced and all studs on the cylinder mounting pad replaced.

3 Place cover on a surface plate and, using a feeler gauge, measure clearance between surface plate and rocker box cover mounting surface. Refer to the applicable maintenance manual for allowable limits.

NOTE

Accomplish procedures 4, 5, and 6 when surface does not meet specified limits.

4 Place a small amount of valve grinding compound, A-A-1203, on a lapping plate.

NOTE

In the event no grinding compound is available, a fine abrasive cloth, Federal Specification P-C-451, may be used.

TM 1-1500-204-23-1

5 Position rocker box cover mounting surface down on lapping plate, and use a figure eight motion to keep an even pressure on cover.

6 When warpage cannot be eliminated without exceeding allowable limits given in the applicable maintenance manual, replace rocker box cover.

7 Replace leaking seals with like serviceable items.

8 Replace individual piston rings that are damaged upon installation of a complete cylinder and piston assembly. Refer to illustrated parts breakdown manual of applicable engine for correct size and type ring.

9 Replace cracked or broken rocker arms.

10 Replace bent pushrods.

11 Replace bent or cracked pushrod housing.

(i) *Cylinder replacement.* Cylinders will be replaced for the following reasons as described in the applicable maintenance manual.

- Low compression
- High oil consumption
- Excessive valve guide clearance
- Loose intake pipe flanges
- Loose or defective spark plug inserts (steel or brass)
- External damage, such as cracks
- Spark plug copper runoff

NOTE

Engines that have spark plug copper runoff on more than 25 percent of the cylinders will be removed from service. Carbon deposits must not be confused with copper runoff

g. *Valves.* The fuel-air mixture enters the cylinders through the intake valve ports, and burned gases are expelled through the exhaust valve ports. The head of each valve opens and closes these cylinder ports. The valves used in aircraft engines are the conventional poppet type. The valves are also typed by their shape and are called either mushroom or tulip because of their resemblance to the shape of these plants. Figure 7-14 shows various shapes and types of these valves.

(1) *Description.* The valve head has a ground face which forms a seal against the ground valve seat in the cylinder heads when the valve is closed. The valve stem acts as a pilot for the valve head and rides in the valve guide installed in the cylinder head for this purpose. The valve stem is surface-hardened to resist wear. The neck is the part that forms the junction between the head and the stem. The tip of the valve is hardened to withstand the hammering of the valve rocker arm as it opens the valve. A machined groove on the stem near the tip receives the split-ring stem keys. These stem keys form a locking to hold the valve spring retaining washer in place.

(2) *Maintenance.* Proper valve operation is of vital importance to satisfactory operation of the engine from the standpoint of stability and cylinder wear. Valve clearances establish valve timing when the engine is operating, and since cylinders receive fuel-air mixture from a common supply, the valve clearances should be

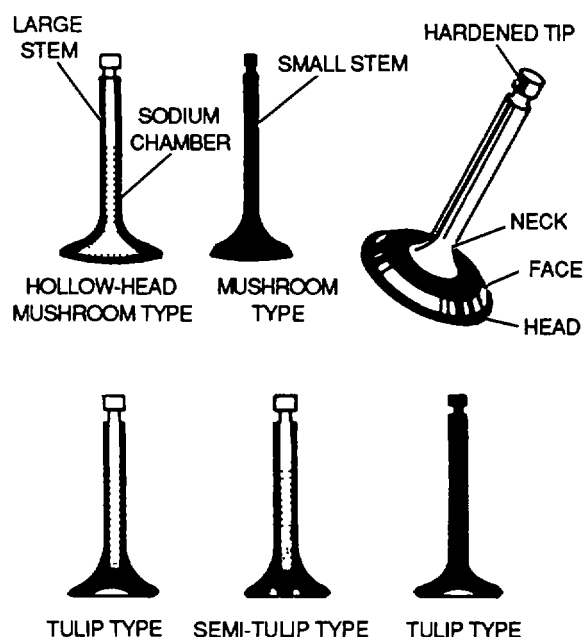


Figure 7-14. Valve Types

uniform. Temperature changes affect air-cooled engines to a greater extent than other engines, and there must be sufficient valve clearance to prevent valve from holding open when extreme cold is encountered, since holding open will make cold weather starting extremely difficult. Inadequate clearance or excessive clearance is conducive to valve failure; therefore, proper settings are essential to engine operation.

(a) *Measuring and adjusting valve clearance* When rough engine operation, backfiring, loss of compression, hard starting, or any malfunction which can be attributed to improper operation or clearance of valves occurs, valve clearance shall be measured and adjusted, using the following procedures

1 Measure and adjust valve clearance in accordance with specific instructions contained in applicable engine maintenance manual.

2 Locate top dead center piston position.

3 Use feeler gauge (shaped so that end of gauge can be slipped in a straight line between valve and rocker arm roller or adjusting screw) specified in tools section of maintenance manual.

NOTE

Do not use excessive force to insert gauge between valve stem and adjustment screw or rocker arm roller.

4 Adjust valve clearances found to be out of adjustment according to specific procedures in engine maintenance manual.

(b) Reclamation and disposition of sodium-filled valves. The reclamation procedure for sodium-filled valves consists primarily of rebuilding the facing of exhaust valves and repairing the stems

WARNING

Do not attempt to mutilate sodium-filled valves. The metallic sodium used in these valves, when contracting moisture, gives off highly flammable hydrogen gas, and when brought into contact with the skin often results in severe personal injury.

1 Sodium-filled valves definitely determined to be nonrepairable as a result of cracked or broken stems shall be processed for disposition in accordance with procedures established by Part 3, Chapter XV, DOD directive 4160 21M. Disposal of these nonrepairable valves shall be affected by one of the following methods.

- Burial, at least 30 inches below ground level, in a select location where future excavation is unlikely.
- By dumping at sea.

2 Values determined to be suitable for reclamation shall be prepared for shipment in accordance with provisions of AR 746-1.

(c) *Establishing crankshaft position using top center indicator and protractor.* The proper crankshaft position must be established prior to checking or setting valves using the following procedures.

1 Determine ratio of top center indicator, as shown in figure 7-15, pointer travel to crankshaft travel.

2 Install Indicator in either spark plug hole of number one cylinder.

3 Adjust arm of indicator so that full scale deflections will be obtained as piston moves through its full stroke.

4 Install protractor and pointer specified in engine maintenance manual on one of engine accessory drive pads.

5 Rotate crankshaft in normal direction of rotation until piston is coming up on compression stroke.



Figure 7-15. Top Center Indicator

TM 1-1500-204-23-1

NOTE

The compression stroke may be detected by a buildup of air pressure when thumb is held over open spark plug hole.

6 Continue rotating crankshaft until piston contacts arm of indicator and moves pointer to any marker on Indicator face.

7 Note mark reached and record protractor reading.

8 Move crankshaft slowly in direction of rotation until Indicator pointer shows that piston has moved to top of stroke and is going down.

9 Stop turning crankshaft when pointer moves to exact same position as in step 6.

10 Read and record protractor reading in degrees.

NOTE

True top dead center is halfway between two protractor readings

11 Back up crankshaft and rotate it forward in direction of rotation until protractor pointer indicates top dead center (in degrees).

12 Loosen pointer and set to zero without moving crankshaft.

NOTE

When reinstalling pointer, allow for gear backlash by moving pointer opposite its direction of rotation.

13 Recheck top dead center position to ensure that a given piston position will result in equal protractor readings before and after zero mark.

(d) *Establishing crankshaft position upon piston position indicator.* The following steps outline another method of establishing the crankshaft position.

CAUTION

Use piston position indicator with 18mm threads for 18mm spark plug threads and 14mm threads for 14mm spark plug threads. Damage to threads may otherwise result.

1 Remove spark plug and install piston position indicator, as shown in figure 7-16, with correct arm and calibrated scale.

2 Rotate crankshaft in direction of rotation until piston is coming up on compression stroke.

3 Separate body from indicator assembly and screw housing into spark plug bushing until it seats firmly. Insert indicator assembly into body, as shown in figure 7-16.

4 Push slide pointer upward in slot until it reaches end of slot and is stopped by pivot arm.

5 Pull crankshaft slowly in direction of rotation until arm moves pointer maximum distance and starts to move back.

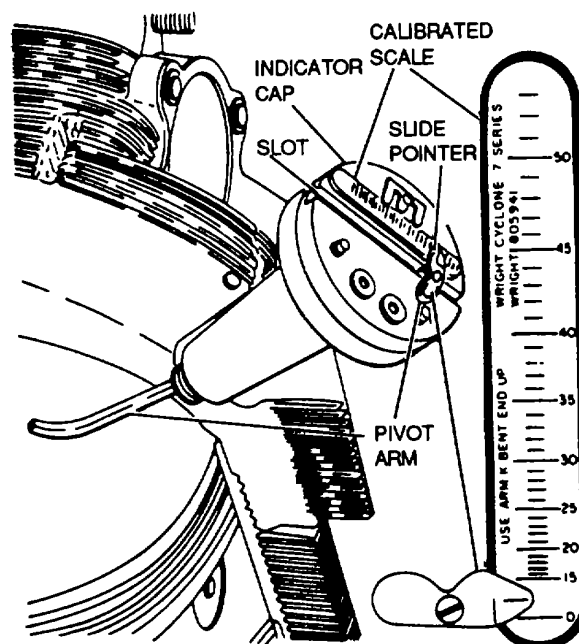


Figure 7-16. Installation of Piston Position Indicators

6 Set calibrated scale until zero mark on scale and scribe on pointer are aligned.

7 Move pointer back to top of slot or until it contacts pivot arm.

8 Turn crankshaft in direction opposite normal rotation until pivot arm returns to top of slot.

9 Recheck zero mark of calibrated scale against reference mark on slide pointer.

10 Move slide pointer to top of slot or until it contacts pivot arm.

11 Rotate crankshaft in direction of rotation. Movement of slide pointer by the pivot arm will indicate crankshaft position in relation to true top dead center on the calibrated scale.

(e) *Alternate methods of locating leaky intake exhaust valves.* Alternate methods of locating leaky intake and exhaust valves are listed in the following paragraphs.

1 *Engine run test.* Prior to stopping engine, run it up to 1000 rpm and move mixture control to IDLE CUT-OFF. The engine will turn over six or more revolutions after combustion ceases. A very slight burning of an exhaust valve will be evidenced by a pronounced slush from the affected cylinder. This sound occurs each second revolution of the engine.

2 *Wheeze test.* Perform wheeze test for locating leaky intake and exhaust valves by pulling piston to top dead center, locate faulty valve by listening for noise in exhaust collector or intake duct which indicates air leaking past respective valve.

3 *Compressed air test.* Admit compressed air into cylinder through spark plug hole. Restrain piston at top of dead center. Locate leaking valve by listening for noise in exhaust collector and intake duct.

(f) *Built-in timing marks.* Some engines have reference timing marks built into the engine, as shown in figure 7-17. Engines without a propeller reduction gear will have the timing mark, a scribe mark or a pin, on the propeller shaft and a corresponding reference mark on the surface of the nose section next to the shaft. Refer to the applicable maintenance manual for location of such marks.

NOTE

When using timing marks to position the crankshaft, sight straight across the stationary pointer or mark on the nose section to the other mark. Any angle incurred in sighting will cause error when positioning the crankshaft.

h. Accessories. Accessory units such as fuel pumps, vacuum pumps, oil pumps, generators, alternators, magnetos, starters, filters, superchargers, and turbochargers are attached to the engine. Refer to the applicable maintenance manual for specific maintenance procedures.

i. Ignition System. The ignition system must deliver a high-tension spark to each cylinder of the engine in firing order at a predetermined number of degrees ahead of true top dead center. Voltage output of the system must be such that the spark will jump the spark plug gap under all operating conditions with no tendency for electrical leaks. Timing and replacement of parts make up most of the ignition system maintenance.

(1) *Magneto system.* The magneto, a special type of engine-driven ac generator, uses a permanent magnetic source. The magneto develops the high voltage which forces a spark to jump across the spark

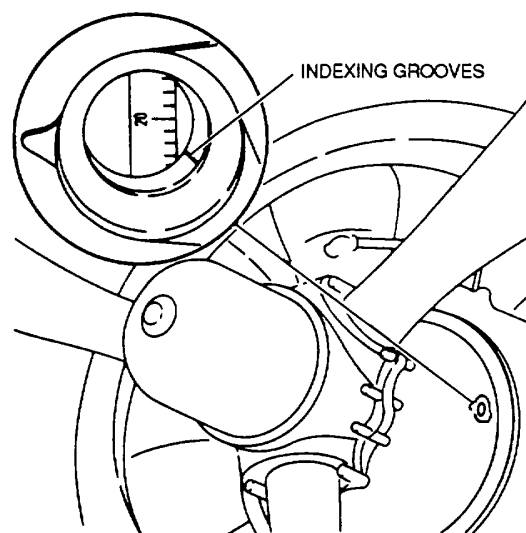


Figure 7-17. Built-In Timing Marks

TM 1-1500-204-23-1

plug gap In each cylinder. Magneto operation is timed to the engine so that a spark occurs only when the piston is on the proper stroke at a specified number of crankshaft degrees before the top-dead-center piston position. Maintenance of magnetos consists primarily of replacing defective magnetos or components as explained in the following procedures:

(a) Prior to installation, perform internal timing check.

1 Check breaker point adjustments, breaker point dwell on master cam lobe, and distributor alignment check.

2 Use reference marks on breaker cam, distributor rotor, and magneto housing incorporated on most assemblies to perform internal timing check.

(b) Time high-tension Ignition system magneto-to-engine, at a definite crankshaft position as follows.

1 Position crankshaft to timing or spark advance position using a piston position indicator

2 Align internal timing marks, and slide magneto into place.

3 Shift magneto to retard position, and turn magneto to advance until breaker points begin to open as indicated by timing light.

4 Install mounting nuts, magneto cover, and leads.

(c) Check timing of high-tension ignition system magneto after a new magneto is Installed or if incorrect timing is suspected, as follows.

1 Determine correct crankshaft position and check internal magneto timing marks.

2 Turn crankshaft one-fourth turn in opposite direction of normal rotation.

3 If magneto has an impulse coupling, rotate crankshaft in normal direction beyond timing cylinder top-dead-center position; when impulse coupling clicks, rotate crankshaft in opposite direction to approximately 5 degrees advance of timing position.

4 Connect timing light and turn ignition switches to ON position.

5 Apply even and equal torque to each of cam retaining screws In direction opposite normal rotation to remove gear train backlash.

6 While holding backlash out, turn crankshaft until points begin to open as indicated by timing light.

7 If necessary, adjust magneto so that timing light indicates points are beginning to open at proper firing position.

(d) Install and time low-tension Ignition system magneto-to-engine, at a definite crankshaft position, using the following procedures.

1 Depress magneto timing plunger and turn magneto shaft until plunger engages fully In notch of magneto shaft.

2 Position magneto In place while holding plunger.

3 If magneto does not line up with centerline of engine, remove magneto, release plunger, and turn magneto drive shaft 90 degrees. Repeat until magneto lines up properly.

4 Hold plunger depressed and turn magneto counterclockwise on its flange as far as necessary to remove gear backlash.

5 Install magneto bolts securely in place.

(e) Check timing of low-tension ignition system magneto after a new magneto is installed or incorrect timing is suspected.

1 Determine correct crankshaft position.

2 Rotate engine one-fourth turn in opposite direction of normal rotation and slide pointer of piston position Indicator to top of scale.


3 Turn engine in direction of rotation until slide pointer is starting to move down.

4 Depress and hold timing plunger on magneto, while continuing rotation of engine, until timing plunger is fully engaged.

5 See that timing indicator shows correct degree of advanced timing.

(2) Ignition harness. The ignition harness, as shown in figure 7-18, contains an insulated wire for each cylinder that the magneto serves in the engine. One end of each wire is connected to the distributor block and the other end is connected to the proper spark plug. The ignition harness serves a dual purpose. It supports the wires and protects them from damage by engine heat, vibration, or weather. It also serves as a conductor for stray magnetic fields that surround the wires as they momentarily carry high-voltage current. By conducting these magnetic lines of force to the ground, the ignition harness cuts down electrical interference with the aircraft radio and other electrically sensitive equipment. When the radio and other electrical equipment are protected in this manner, the ignition harness wiring is said to be a shield. Without this shielding, radio communication would become virtually impossible. The ignition harness check consists of a visual and an electrical check using the following procedures:

(a) Examine all accessible parts of distributors, harnesses, and leads for chafing, broken insulators, corrosion, moisture, damaged or dirty terminals, and security of mounting at the time specified in the applicable maintenance manual.

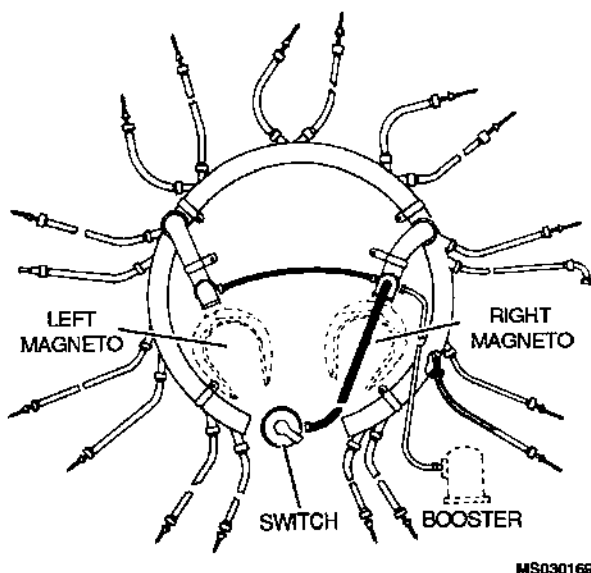

MS030169

Figure 7-18. Ignition Harness

(b) Repair or replace defective parts as necessary. Keep all parts clean and free of foreign matter.

NOTE

The high-tension system manifold is never taken apart in the field, as this will destroy the elastic gel seal.

1 Clean dirt and grease from harness by wiping with a clean, dry cloth.

WARNING

Cleaning Solvent, HFE-71DE, is toxic to eyes, skin, and respiratory tract, and decomposes into other hazardous products when exposed to extreme heat. Wear chemical protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well-ventilated areas. If ventilation is not adequate, use approved respirator as determined by local safety/industrial hygiene personnel. Keep away from open flames, welding, or other sources of extreme heat.

Isopropyl Alcohol, TT-I-735, is flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well-ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

2 Clean terminals with Isopropyl Alcohol, TT-I-735, or HFE-71DE.

NOTE

Replace ignition harness leads when more than three wire strands are broken in one inch of harness length or if insulation is damaged.

(c) Perform a high-voltage breakdown test when an ignition malfunction occurs and after cable replacement in rewirable harness or leads. Use an approved high-voltage tester, and test for serviceability as follows:

1 Remove all leads from spark plugs.

2 Remove spark plug elbow assembly from ignition lead.

3 Examine lead insulation for evidence of chafing, breaks, or holes. Replace parts as required.

TM 1-1500-204-23-1

4 Ground all leads, except one for number 1 cylinder, to engine.

5 Connect ground lead of tester to engine, and connect high-tension lead to number 1 cylinder lead.

6 Test and record any leakage detected.

7 Test remaining leads.

8 When two leads from same distributor show leakage, remove ground from both leads and repeat test. When leakage is stopped by removing ground from other lead, leakage is probably between two leads (in distributor block). When disconnecting ground of other lead does not stop leakage, check for leaks between individual leads and shielding.

WARNING

Cleaning Solvent, HFE-71DE, is toxic to eyes, skin, and respiratory tract, and decomposes into other hazardous products when exposed to extreme heat. Wear chemical protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well-ventilated areas. If ventilation is not adequate, use approved respirator as determined by local safety/industrial hygiene personnel. Keep away from open flames, welding, or other sources of extreme heat.

Isopropyl Alcohol, TT-I-735, is flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well-ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

NOTE

Rotate crankshaft to a position that will eliminate distributor finger leakage.

9 When a recheck indicates that distributor block may be at fault, scrub thoroughly with Isopropyl Alcohol, TT-I-735, or HFE-71DE, dry thoroughly, and apply a thin coat of wax. Mix 1 part wax to 5 parts trichloroethylene, Federal Specification O-T-634, maintained at a temperature of 130 to 140°F (54 to 60°C).

10 Repeat steps through above.

(d) The low-tension system operates at relatively low voltages (150 to 400 volts) and is not seriously affected by moisture. Check system as follows:

1 Check all accessible parts of harness and leads for chafing, broken conduit, corrosion, or misaligned pins in electrical connectors at intervals specified in inspection requirements manual.

CAUTION

Do not attempt to repair harness without the proper special tools. Damage to harness may otherwise result.

2 Tighten all loose connectors and tape over frayed sections of nylon covered harness.

3 Test all low tension wiring and distributor blocks, connection plates, etc., for continuity. Test insulation resistance with a tester capable of delivering 1000 volts dc (maximum) at 1 milliampere, or an ohmmeter (20,000 ohms per volt). The insulation resistance should exceed 1 megohm, unless otherwise specified.

(3) Spark plugs. The function of the spark plug in an ignition system is to conduct a short impulse of high voltage current through the wall of the combustion chamber. Inside the combustion chamber it provides an air gap across which this impulse can produce an electric spark to ignite the fuel-air charge. For spark plug service, maintenance instructions, and list of approved spark plugs, refer to TM 55-2925-200-25.

(4) Ignition switches. All units in an aircraft ignition system are controlled by an ignition switch in the cockpit. The type of switch used varies with the number of engines on the aircraft and the type of magnetos used. All switches, however, turn the system off and on in much the same manner. The ignition switch is different in at least one respect from all other types of switches in that when the ignition switch is in the OFF position, a circuit is completed through the switch to ground. In other electrical switches, the OFF position normally breaks or opens the circuit. The following procedures are for ignition switches general maintenance:

(a) Replace defective switches and broken ground wires.

(b) Tighten all loose switch and cable terminal attaching nuts.

(c) For specific details on any ignition switch, refer to applicable maintenance manual.

(5) Booster system. Starting aids such as an induction vibrator or booster coil must be used to provide enough voltage to the spark plug. The induction vibrator (or starting vibrator), as shown in figure 7-19, consists essentially of an electrically operated vibrator,

a condenser, and a relay. These units are mounted on a base plate and enclosed in a metal case. The booster coil assembly as shown in figure 7-20, consists of two coils wound on a soft iron core, a set of contact points, and a condenser. General maintenance of the booster system is described in the following procedures:

(a) Repair induction vibrators in accordance with the applicable maintenance manual and table 7-1.

(b) Replace defective booster coils and all broken or frayed wiring. Tighten all loose connections.

(c) Replace magneto if impulse coupling is defective.

(d) Test ignition booster system for proper operation as follows:



1 Remove front spark plug from most accessible cylinder.

2 Turn crankshaft until piston is observed to be in top position on compression stroke.

3 Reconnect spark plug and ground plug shell to engine.

4 Place carburetor in IDLE CUT-OFF position.



5 Place main fuel valve in CLOSED position.

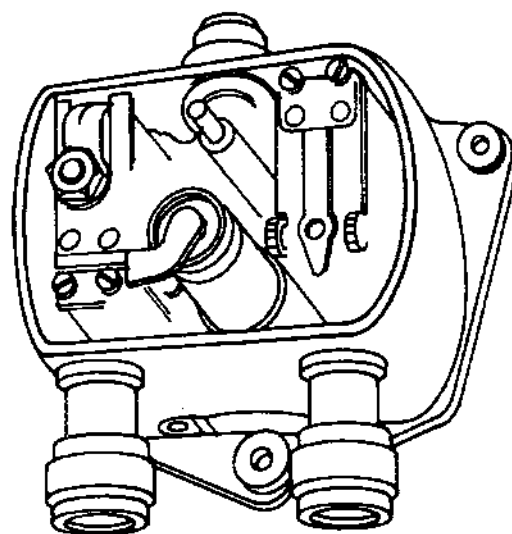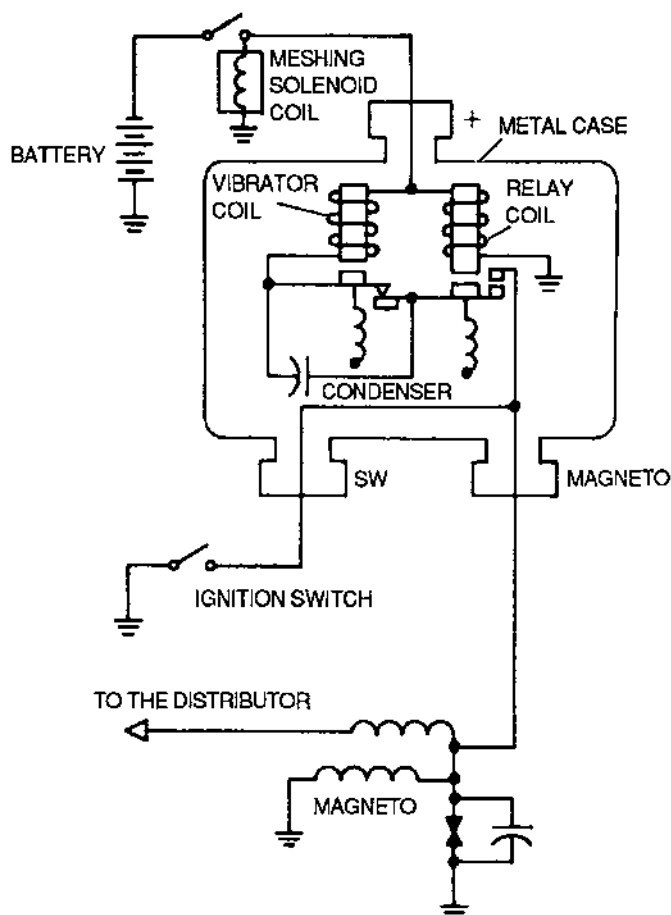

MS030170

Figure 7-19. Induction Vibrator

TM 1-1500-204-23-1

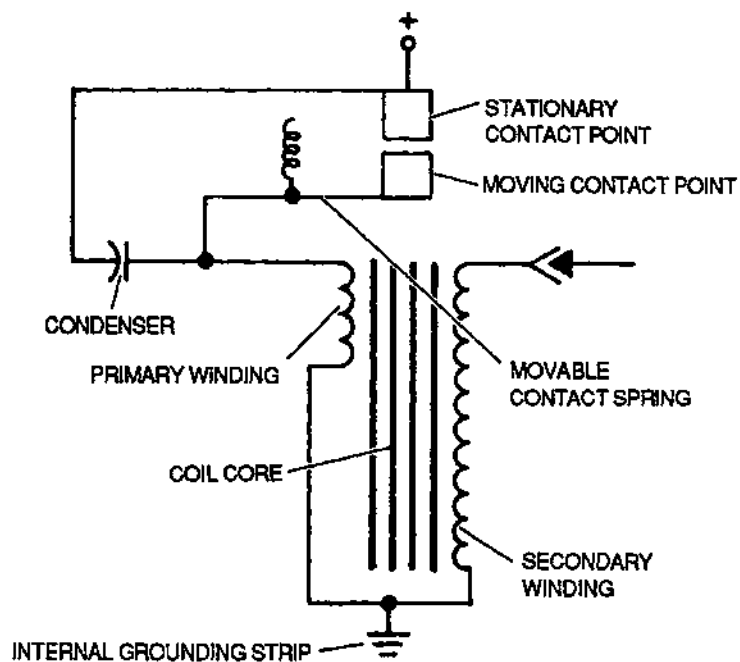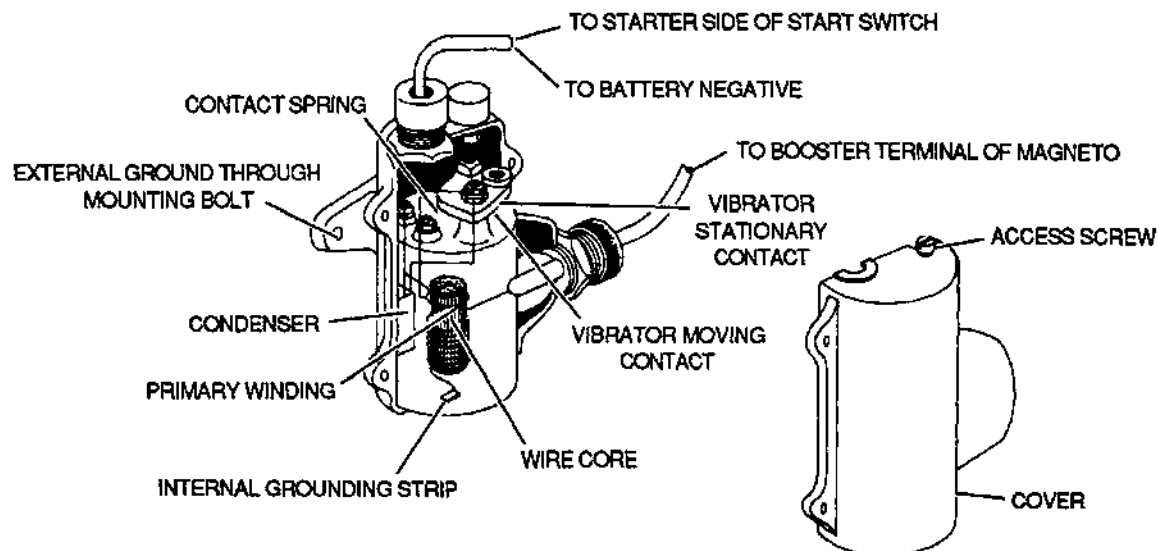

MS030171

Figure 7-20. Booster Coil

Table 7-1. Repairing Induction Vibrators

| Trouble | Probable cause | Remedy |
|------------------------|--|--|
| Unit fails to function | Not grounded | Ensure mounting bolts contact grounding plate. |
| | Loose or disconnected positive cable | Ensure terminal clip is secured to positive cable and positive terminal post. |
| | Loose or disconnected MAG or IGN. SW TERMINALS | Ensure both cables are secured to terminal nuts with springs. Tighten nuts until a firm contact is made with the terminal. |

WARNING

Cleaning Solvent, HFE-71DE, is toxic to eyes, skin, and respiratory tract, and decomposes into other hazardous products when exposed to extreme heat. Wear chemical protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well-ventilated areas. If ventilation is not adequate, use approved respirator as determined by local safety/industrial hygiene personnel. Keep away from open flames, welding, or other sources of extreme heat.

Isopropyl Alcohol, TT-I-735, is flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well-ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

Dirt between points

Draw paper, Federal Specification UU-P-268, dipped in Isopropyl Alcohol, TT-I-735, or HFE-71DE, across points and air dry.

- 6 Turn fuel booster pump to OFF position.
- 7 Turn ignition switch to BOTH position.
- 8 Place master ignition switch in ON position.
- 9 Engage starter, observing all ground safety rules.
- 10 Note continual flow of high voltage across spark plug points.

gine should be made before removal, except in cases of complete internal failure or expiration of operating time limits. (Refer to AR 750-23.)

a. Expiration of Operating Time Limit. Engine removal and replacement shall be accomplished in accordance with TM 55-1500-328-25 when normal Maximum Allowable Operating Times (MAOT) are accumulated in accordance with the applicable aircraft -20 maintenance manual (Chapter 3, Section IV).

b. Sudden Engine Stoppage. Sudden stoppage is defined as the complete stalling of the engine due to a propeller or rotor accident or gear box failure. Such engines shall be replaced.

NOTE

Replace engine when engine is stalled by propeller or rotor striking an immovable object, such as a ramp or building or when engine is operating at any rpm and is stalled suddenly due to some internal cause such as gear box or crankshaft failure.

7-5. ENGINE REMOVAL CRITERIA. The life of an aircraft engine between overhauls is dependent upon many factors, such as quality of original manufacture or last overhaul, the type of operation being accomplished, and the efficiency of preventive maintenance. It is possible to establish a maximum expected life of an engine based on service records and engineering data. At overhaul depots, it has been found that many engines are changed needlessly. A complete investigation of the en-

TM 1-1500-204-23-1

c. Sudden Reduction in Engine RPM. When the propeller or rotor strikes a small object which results in a sudden reduction in engine rpm, the engine shall be thoroughly checked using the following procedures:

(1) Make a thorough external examination of engine crankcase and nose section to determine whether any parts have been damaged. When damage is found which cannot be corrected by line maintenance, remove engine.

(2) Remove magnetic sump plugs, if present, and engine oil screens or filters. Examine for presence of metal particles.

(3) Remove engine sump plugs, drain oil into a clean container, strain through a clean cloth, and examine cloth and strained oil for metal particles.

NOTE

- Metal particles found in the sumps or in oil screens or filters will not be considered the results of an internal failure caused by sudden stoppage, since the screens or filters are located at the oil inlet to the engine. Sudden stoppage, therefore, will not permit circulation of the oil to the extent that metal particles would be deposited on the screens or filters.
 - When heavy metal particles are found in the oil, it indicates a definite engine failure, and engine must be removed. However, when metal particles present are similar to fine filings, continue examination of engine to determine its serviceability.
- (4) Remove propeller and examine crankshaft, or propeller drive shaft on reduction-gear engines, for misalignment.

(5) Clamp a test indicator to nose section of engine and remove front or outside spark plugs from all cylinders on radial engines and top spark plugs on all opposed engines.

(6) Turn crankshaft and observe if crankshaft or propeller shaft runs out at either front or rear propeller cone seat location, as shown in figure 7-21.

NOTE

- When there is runout of more than 0.015 inch full indicator reading of crankshaft or propeller drive shaft at front cone seat location, remove engine. Even though runout of crankshaft or

propeller drive shaft at front cone seat is less than 0.015 inch full indicator reading, examine rear cone seat location.

- When any runout is found at rear cone seat location, which is not in same plane as runout at front cone seat location, remove engine.
 - When crankshaft or propeller drive shaft runout does not exceed these limits, install serviceable propeller and make an additional check by tracking propeller at tip in same plane perpendicular to axis of rotation to assure that blade track tolerance is within limits.
- (7) Start engine and examine for smooth operation and adequate power output. When engine operates properly during this ground check, shut engine off and again examine oil system for metal particles.

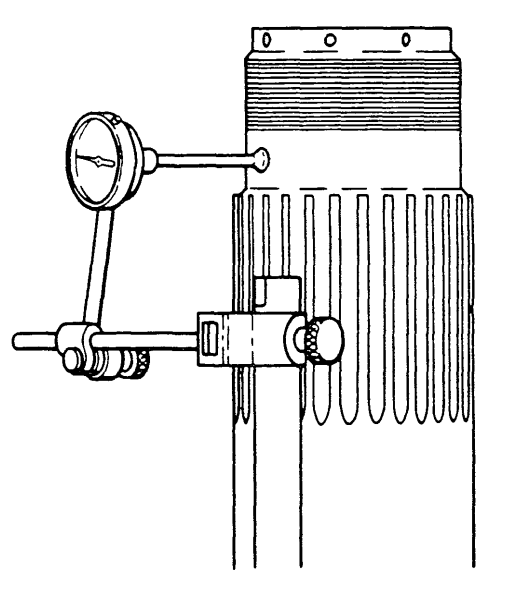


Figure 7-21. Checking Propeller Shaft Runout

(8) When there are no heavy metal particles in engine, give engine a two hour flight test.

NOTE

When engine operated properly during flight test, examine oil system for metal particles. If no metal is found, continue engine in service, but examine oil screens for presence of metal after 10 hours of operation. If no indication of internal failure is found after 20 hours of operations, engine requires no further special examination.

d. *Metal Particles in Oil.* Generally, metal particles on engine oil screens or on magnetic sump plugs indicate partial internal failure of the engine. However, due to the construction of aircraft oil systems, it is possible that metal particles may have collected in sludge in the oil system at the time of previous engine failure, consequently, this must be taken into account when metal particles are found in engine oil screens or on magnetic sump plugs. Frequently, carbon breaks loose from the interior of the engine in large pieces which have the outward appearance of metal. However, carbon can be distinguished from metal by placing the foreign material on a flat metal object and hitting with a hammer. If material is carbon, it will disintegrate when struck with a hammer, whereas metal will either remain intact or change shape, depending upon its malleability.

CAUTION

An oil soaked rag can very easily cause spontaneous combustion unless placed in a tightly closed container, such as a quart or pint can with a press-fit lid.

NOTE

Before removing an engine for suspected internal failure, as Indicated by foreign matter on the oil screens or oil sump plugs, collect all obtainable metal particles for analysis and samples. To save fine metal particles, it may be necessary to strain the oil through a cloth. The cloth and metal particles can be placed in a clean metal container and sent with engine for overhaul.

e. *Identification of Metal Particles.* Metal particles found in an engine may be of five kinds steel, tin, aluminum, silver, and copper (or bronze). A visual inspection as to color and hardness will occasionally be sufficient to determine the kind of metal present. When visual inspection does not positively identify the metal, the kind of metal present may be determined by a few simple tests performed with a permanent magnet, electric soldering iron, or approximately 2 ounces of hydrochloric acid and nitric acid as explained in the following paragraphs.

WARNING

Exercise care in handling acid injury or death to personnel may otherwise result.

NOTE

The information in this paragraph is not intended to be a substitute for, nor release from the requirement for compliance with the Army Oil Analysis Program (AOAP) program directed in accordance with TB 55-6650-300-15.

(1) *Steel particle identification.* Steel particles can be isolated by means of a permanent magnet.

(2) *Tin particle Identification.* Tin particles can be identified by their low melting point. A soldering iron should be cleaned, heated to approximately 260°C (500°F), and thinned with 50-50 solder (50 percent lead to 50 percent tin) Wipe off excess solder. A tin particle dropped on heated Iron will melt and fuse with the solder. Take care to avoid excessive overheating of iron during this test.

(3) *Aluminum particle identification.* Aluminum particles may be identified by their respective reaction with hydrochloric acid. When a particle of aluminum is dropped into hydrochloric acid it will fizz with a rapid emission of bubbles. The particle will gradually disintegrate and form a black residue (aluminum chloride).

(4) *Silver and copper particle identification.* Silver and copper (or bronze) may be identified by their respective reactions in nitric acid. When a silver particle is dropped into nitric acid, it will react rather slowly, producing a whitish fog in the acid. When a particle of copper (or bronze) is dropped into nitric acid it will react rapidly, producing a bright green cloud in the acid. There is no need in this instance to separate copper from bronze.

TM 1-1500-204-23-1

f. Significance of Metal Particles. Generally, when metal particles are found and kind of metal present is determined, serviceability of engine will depend upon quantity and form of metal. Granular metal particles, in any amount greater than a trace, require a very careful inspection of engine, as presence of these particles is usually an indication of an impending failure. Each kind of metal, however, must be judged individually. Paragraphs (1) through (5) are intended as a guide in judging serviceability of engine after kind of metal has been determined.

(1) *Steel particles.* When steel particles are found in splinter or In granular form, the engine must be removed Thin steel flakes, when found In quantities not greater than 20 flakes, may not require engine removal. A small quantity of steel flakes will not cause engine bearing failure. When thin steel flakes accompanied by aluminum flakes are found, these flakes are probably the result of a warped piston ring land or hole burned in a piston. Replacement of a defective piston and cylinder assembly will correct the difficulty. When not accompanied by aluminum flakes, it Is possible that steel flakes are from foreign matter introduced into engine through oil tank.

(a) Test engine in accordance with the applicable maintenance manual If more than five additional flakes are found on oil screen and sump inspection after runup, remove engine. If five or less flakes found, the engine may be released for service in accordance with the applicable maintenance manual.

(b) When not more than 20 thin steel flakes are found and they are accompanied by thin aluminum flakes, proceed as follows

1 Carefully inspect cylinders by visual examination of cylinder bore and by compression check In an effort to locate faulty piston. A bright streak along cylinder barrel or any evidence of scuffing would be an indication of a warped piston ring land. Warped lands are predominant In winter operations and occur most frequently on lower cylinders.

2 When not more than two faulty cylinders are found, replace faulty piston and cylinder assemblies before continuing with procedure. When more than two faulty cylinders are found by inspection, remove engine.

3 After faulty cylinders have been changed or when no faulty cylinders are found, test engine In accordance with the applicable maintenance manual.

4 If more than 2 additional steel flakes or 15 aluminum flakes are found during screen and sump inspection after engine runup, remove engine. If less than these quantities are found, engine may be released for service in accordance with the applicable maintenance manual.

NOTE

Ring fuzz may be on oil sump plug of any normal engine. These very fine hairlike particles are the result of normal seating of piston rings and cylinders and are not cause for any concern regarding serviceability of engine.

(2) *Tin particles.* Tin in any quantity may be disregarded. Since tin is used only in plating engine parts and in thickness not greater than 0.0005 inch, granular tin will not be found.

(3) *Aluminum particles.* When aluminum particles are found, perform the following procedures:

(a) When granular aluminum particles are found, proceed as follows:

NOTE

The presence of aluminum particles in granular form may be an indication of piston failure

1 Inspect cylinders by visual examination of cylinder bores and a compression check in an effort to locate a faulty piston.

2 When not more than two faulty pistons are found, faulty pistons and cylinder assemblies will be changed before continuing with procedure. When more than two faulty pistons are found by inspection, remove engine. After faulty pistons and cylinder assemblies have been changed, or when no faulty pistons are found, continue with procedure.

3 Drain oil system, flush oil tank, and clean oil screens.

4 Test engine in accordance with the applicable maintenance manual.

5 If not more than two additional granular particles are found during screen and sump inspection after runup, engine may be released for service in accordance with the applicable maintenance manual.

(b) When aluminum flakes are found, proceed as follows:

NOTE

Aluminum flakes may not necessarily require engine removal. In winter operations, when warped piston ring lands are frequent, considerable quantities of aluminum from pistons may be discharged into engine oil system. It will be necessary to exercise judgment before continuing with the following procedure, for instance, if oil sump or screen is found choked with a mass of aluminum flakes or particles, regardless of size, it will probably be necessary to remove engine even though faulty piston can be located.

1 Make a careful inspection of cylinders by examination of cylinder bores and a compression check in an effort to locate faulty piston.

2 When not more than two faulty pistons are found, change faulty piston and cylinder assemblies before continuing with procedure. When more than two faulty pistons are found, remove engine. If two or less faulty pistons are found, continue with procedure.

3 Drain oil system, flush oil tank, and clean oil screen.

4 Test engine in accordance with the applicable maintenance manual.

5 If more than five additional aluminum flakes are found during screen and sump inspection after runup, remove engine. If less than this quantity is found, engine may be released for service in accordance with the applicable maintenance manual.

(4) *Silver particles.* Silver particles in granular form indicate a master rod bearing failure in advanced stages. When these particles are found in any quantity, remove engine. Silver is used in plating numerous other parts, and silver flakes, not exceeding 10 in number, do not necessarily indicate a part failure. Since

silver is quite soft, some small flakes will occasionally be released by normal working of these parts. A very small quantity of silver from master rod bearings will make a large number of tiny flakes as it passes through roller bearings or gears within engine. Large quantities of silver flakes indicate an excessive loss of bearing or plating surface and engine must be removed as a precautionary measure.

(5) *Copper or bronze particles.* Copper or bronze particles, in granular form and in quantities greater than a few particles, indicate disintegration of a bushing or valve guide and engine must be removed. Copper or bronze flakes, in quantities not exceeding 10 flakes, do not necessarily indicate part failure. Bronze flakes may be formed in small quantities through normal seating of bushings or valve guides. Larger quantities of copper or bronze flakes, however, may indicate excessive loss of bushing metal and engine must be removed as a precautionary measure.

g. Additional Metal Particles Test. This test is made to subject engine to sufficient operations to cause any additional metal in oil system to collect on oil screen and in main sump and also to reveal any incipient trouble. This additional metal will determine whether engine needs to be removed or allowed to continue in service test using the following procedures.

(1) Drain and flush external oil system

(2) Run engine to bring it to operating temperatures and make a minimum of three power checks (allow engine to cool between checks). Take care not to exceed allowable limits for ground operation.

(3) Again remove oil screens and examine for metal accumulation. Examine main sump plug and screen for metal accumulation. If engine is released for service, it must be watched closely for next 25 hours for any indications of malfunctions or internal failure.

h. Excessive Spark Plug Copper or Silver Runout. If copper runout is noted, replace cylinder from which spark plug was removed as this indicates the cylinder temperature has exceeded 1981°F (1083°C). Silver runout may be caused on a fine wire electrode-type spark plug if plug is subjected to pre-ignition and/or detonation. Excessive temperature may cause the silver spindle of the center electrode to flow toward the firing end of the electrode. Copper or silver runout indicates affected cylinders should be replaced. Engines having runout on more than 25 percent of the cylinders should be removed.

TM 1-1500-204-23-1

i. Low Cylinder Compression. Prior to removing cylinders for low compression, check and adjust valve clearance. Check cylinder compression. Replace cylinder when compression is less than established limits.

j. Parts Failure. When some portion of a steel part, such as a piston ring, valve, valve spring, washer, rocker arm, or rocker arm bearing cannot be located and removed, the engine will be replaced, so other parts within the engine will not be damaged.

k. Basic Mechanical Failure. Remove engine when any internal component such as impeller, boss, casting, propeller shaft, or studs, become cracked, nicked, broken, or damaged to the extent that safe operation cannot be continued. Failures of this type are limited to Internal components of the engine such as impeller, Impeller clutch, crankshaft, supercharger housing, and reduction gear housing, since external failures, such as cylinders or engine accessories, can be corrected by replacing the unserviceable assembly.

l. Engine Overspeed. When engine speeds exceed limits specified in the applicable maintenance manual, the removal or inspection of the engine will be dependent upon the amount of overspeed reported. When engine speeds exceed limits, accomplish the following procedures

(1) When overspeed is above maximum rpm, replace engine.

(2) When overspeed is below maximum rpm, accomplish the following:

(a) Examine engine for cracked, open, or broken cylinder heads and barrels, and bent push rod housing.

NOTE

In the event a cylinder head is cracked or broken and no particles of pistons rings have entered crankcase of engine (determined by inspection of magnetic sump plug or oil screen for metal), remove damaged cylinder and piston and examine articulating and master rods for misalignment. If rods are satisfactory, replace cylinder and piston assembly with a serviceable unit and continue engine in service as specified below.

(b) Examine oil system. When examination of oil screens or filters discloses an abnormal amount of metal particles, remove engine. When no metal particles are found, operate engine as specified.

(c) When examination of engine discloses no visible damage as a result of overspeeding, restrict aircraft to local flights for a period of 10 hours.

m. Excessive Manifold Pressure. Engines incorporating turbosuperchargers or auxiliary stage superchargers are subject to excessive manifold pressure when automatic controls malfunction or fail. A manifold pressure overboost control is usually employed to reduce the possibility of overboost occurring. However, when overboost occurs, combustion temperatures rise, and detonation or pre-ignition may result and cause serious structural damage to the engine. When manifold pressure exceeds value specified in the flight manual, it is considered an overboost condition and the engine will be removed.

n. Excessive Maintenance. If an aircraft engine requires consistent excessive maintenance or is a definite hazard to flight, it should be replaced, provided complete engine conditioning will not correct the difficulty. Excessive and consistent oil fouling of spark plugs could cause excessive maintenance. However, if fouling is limited to certain cylinders, the difficulty may be eliminated by replacing defective cylinders, ignition leads, distributor block, or opening-clogged rocker box drains.

o. Excessive Oil Consumption. Oil is consumed in the engine by being burned in the combustion chamber, lost in the form of mist or vapor from the breather, or leakage where propeller shafts and other shafts protrude from the crankcase. Consumption varies with engine power setting, however, one or more cylinders fouling due to excessive oil consumption may call for cylinder rather than engine change.

(1) Oil consumption. Some of the factors which affect oil consumption are engine speed, temperature, wear condition, and lubricant characteristics such as viscosity-temperature coefficient, volatility, and flash point. Each is explained in the following paragraphs

(a) Engine speed. The most important factor affecting oil consumption normally is engine speed. oil pressure increases with engine speed until the operating range pressure of the engine is reached, then a pressure relief valve maintains a constant pressure. Usually, maximum pressure is reached at relatively low speeds. The effect of engine speed on oil pressure

between pump and main bearing is negligible. However, centrifugal force increases oil pressure at crankpins which increases flow through the bearings and sprays more oil on cylinder walls. The rings do not follow the cylinder as closely at higher speeds, and a greater amount of oil is passed to the combustion chamber instead of being scraped back to the crankcase.

(b) *Engine temperature.* High engine temperature and low oil viscosity tend to increase losses of oil from crankcase seals and breathers. Oil loss increases due to increased blowby, or gas flow, past piston rings at higher engine speeds. Blowby raises crankcase pressure and forces oil or oil vapor out of the crankcase.

(c) *Engine wear.* Engine wear in the form of worn bearings increases clearance and allows increased oil loss. Worn pistons and cylinders provide space for thicker oil films and increase loss due to failure of rings to seal.

(d) *Lubricant characteristics.* An increase in oil viscosity decreases oil consumption only up to the point at which the slower draining of the more viscous oil from the cylinder wall, and tendency of the rings to ride over the oil film causes more oil to pass the piston and flow into the combustion chamber

(2) *Aircraft range as related to oil consumption.* Remove an engine if oil consumption is high enough to limit range of aircraft. Variations in oil system capacity of different aircraft causes maximum oil consumption to vary according to type aircraft and type of mission being performed (see figure 7-22).

7-6. Engine Conditioning. Engine conditioning provides a standard method for detecting engine malfunctioning prior to development of serious trouble and establishes a systematic routine for keeping the engine in condition to provide maximum trouble-free performance. The types of engine conditioning are complete engine conditioning and minor engine conditioning.

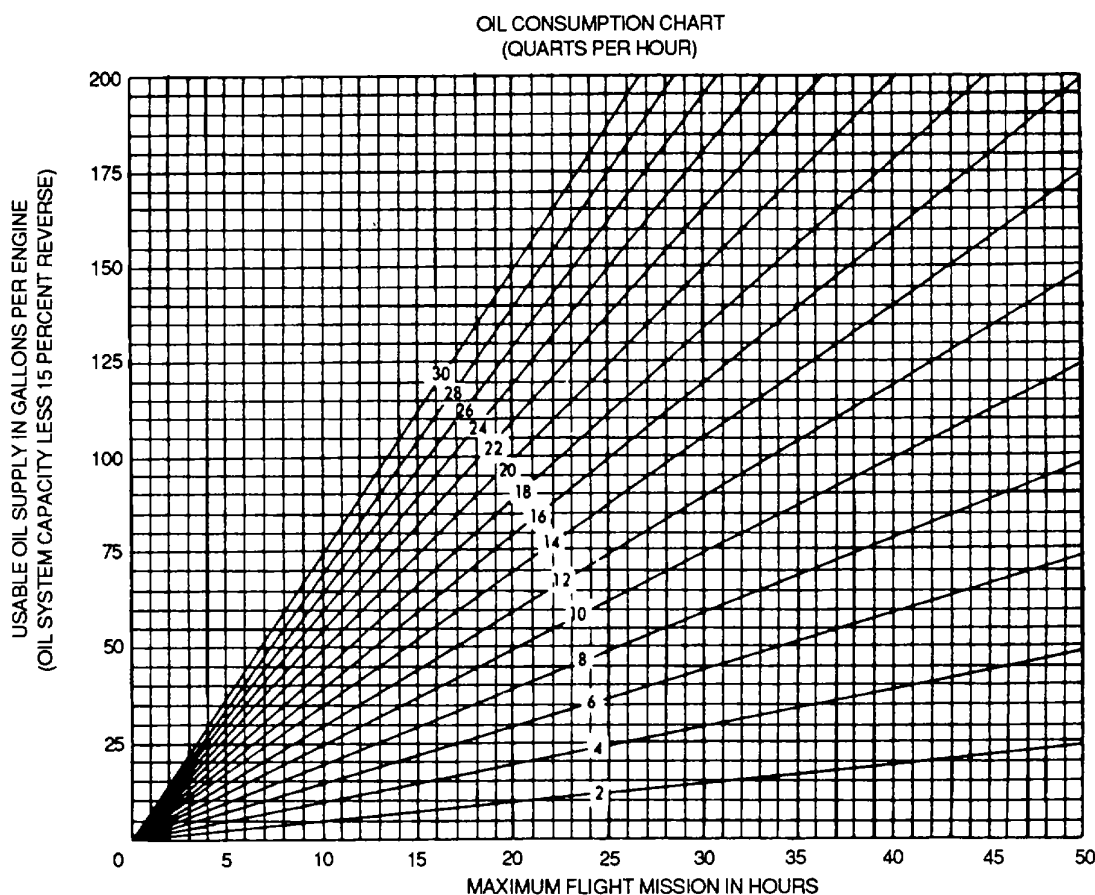


Figure 7-22. Oil Consumption Chart

TM 1-1500-204-23-1

a. Complete Engine Conditioning. Complete engine conditioning is a complete investigation of the condition of an engine and correction of any difficulty detected. Complete engine conditioning will be given engines being overhauled with the exception of idle mixture and speed, fuel, oil, and water pressure adjustments, and final check and adjustment of the engine after the engine is installed on the aircraft. Perform this conditioning using the instructions contained in table 7-2.

b. Minor Engine Conditioning. Minor engine conditioning is the investigation and correction of any malfunction revealed during flight or through the cockpit checks (daily, intermediate, and complete cockpit checks). Perform the following procedures for minor engine conditioning:

(1) Perform a complete cockpit check (steps 6 through 14, table 7-2) when a new engine is installed, when an aircraft is removed from storage, at each major and minor inspection, and when minor conditioning fails to correct a malfunction. The engine cockpit check will be handled in the following manner:

(a) Record all readings on cockpit check sheet as shown in figure 7-23.

(b) File form in aircraft flight log folder for future reference by both maintenance and flight personnel.

NOTE

The daily check will be carried out by the air crew and will only be recorded in the flight log when performance is unsatisfactory. The serviceability of the engine is established by the air crew by comparing its readings against those recorded on the complete cockpit check made by the maintenance crew.

(2) Perform steps 6 through 13, 15, and 17, table 7-2.

(3) Perform intermediate check after last flight of day. The check may be made any time after the last flight of the day and before the next flight by either the air crew or maintenance personnel. Any difficulties encountered during flight are corrected at this time. The intermediate check is outlined in steps 12 through 15 and 17, table 7-2. The readings obtained are recorded in the flight log only when engine performance is unsatisfactory.

7-7. AIR INDUCTION SYSTEM. The air induction system supplies air to the carburetor or master control.

It forms a long curved channel which conducts air and fuel-air mixture to the supercharger section. The channel consists of an air scoop, temperature controlling device, and a thermometer. General maintenance procedures are explained in the following paragraphs.

a. Inspection, Maintenance, Cleaning, and Replacement. Perform the following procedures for general inspection, maintenance, cleaning, and replacement of air induction system components:

(1) Check induction system for foreign matter and articles to prevent such items from damaging impeller or clogging air passages.

(2) Install flexible channel, joining certain types of induction systems together, in such a manner to prevent flexible channel from being sucked down and restricting air flow.

(3) Correct leaks in induction systems soon as possible after detection, as fuel-air mixture will be adversely affected.

(4) Clean air filters at intervals specified in applicable maintenance manual using the following procedures:

WARNING

Degreasing Solvent, MIL-PRF-680, is combustible and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames or other sources of ignition.

(a) Immerse filter in degreasing solvent, MIL-PRF-680, and agitate to remove all imbedded dirt particles.

(b) Drain by placing on a 25-degree angle draining rack and allowing to dry thoroughly.

(c) When completely dry, immerse filter in a mixture of 1 part corrosion-preventive compound, MIL-C-5545, and three parts lubricating oil, MIL-L-6082, Grade 1120, at a temperature of 70°F (21°C) for 2 to 5 minutes.

Table 7-2. Engine Conditioning Table

| Complete conditioning steps | Procedure | When performed | Personnel responsible |
|------------------------------------|---|-----------------------|------------------------------|
| Step 1. Ignition System Timing. | Time all phases of ignition. This includes breaker point-to-magneto timing, magneto-to-engine timing, and, distributor finger-to-engine timing. | Complete Conditioning | Maintenance |
| Step 2. Compression Test | Test cylinder compression. | Complete Conditioning | Maintenance |
| Step 3. Valve Adjustment | Check valves and adjust clearances if necessary. Visually inspect valve mechanism. | Complete Conditioning | Maintenance |
| Step 4. Ignition Harness Check | Check Ignition harness for high voltage leakage. | Complete Conditioning | Maintenance |
| Step 5. Spark Plug Installation | Install new or reconditioned set of spark plugs. | Complete Conditioning | Maintenance |
| Step 6. Check for Hydraulic Lock | Pull propeller through to determine whether combustion chambers are clear. | Complete Conditioning | Maintenance |
| | | Cockpit Check | Air Crew |
| | | Daily Check | Air Crew |
| Step 7. Blowby Check | While performing step 6, listen for an extended hissing sound from exhaust stack or stacks. | Complete Conditioning | Maintenance |
| | | Cockpit Check | Air Crew |
| | | Daily Check | Air Crew |
| Step 8. Engine Start | Start engine. | Complete Conditioning | Maintenance |
| | | Cockpit Check | Air Crew |
| | | Daily Check | Air Crew |

Table 7-2. Engine Conditioning - CONT

| Complete conditioning steps | Procedure | When performed | Personnel responsible |
|------------------------------------|--|-----------------------|------------------------------|
| Step 9. Engine Warmup | Warm up engine at smoothest specified rpm, oil pressure permitting. Continue warmup until normal operating temperatures are obtained as Indicated by green arc on gauges. | Complete Conditioning | Maintenance |
| | | Cockpit Check | Air Crew |
| | | Daily Check | Air Crew |
| Step 10. Power Check | Set engine at specified rpm setting. Allow engine and instruments to stabilize. Manifold pressure readings for different engines of the same type and model installed on the same type aircraft should not vary over 1 inch Hg at a given rpm when checks are performed at the same geographical location. A higher than normal manifold pressure indicates engine is not operating properly. In case of high manifold pressure, take manifold pressure readings at several lower rpm settings to establish rpm manifold pressure pattern for engine. See performance chart for rpm-manifold pressure relationships for current aircraft. | Complete Conditioning | Maintenance |
| | | Cockpit Check | Air Crew |
| | | Daily Check | Air Crew |
| | | | |
| Step 11. Ignition System Check | After completing step 10, perform step 17. | Complete Conditioning | Maintenance |
| | | Cockpit Check | Air Crew |
| | | Daily Check | Air Crew |
| Step 12. Cruising Mixture Check | Set engine speed at rpm specified In performance chart with mixture control in AUTO-RICH position. After engine and instruments have stabilized, move mixture control to AUTO-LEAN and observe rpm change. Return mixture control to AUTO-RICH position. A change of rpm, other than that allowed in performance chart, indicates an excessively rich or lean carburetor or master control or fuel Injection lines leaking. | Complete Conditioning | Maintenance |
| | | Cockpit Check | Air Crew |
| | | Daily Check | Air Crew |

Figure 7-2. Engine Conditioning - CONT

| Complete conditioning steps | Procedure | When performed | Personnel responsible |
|--|---|-----------------------|-------------------------|
| Step 12. Cruising Mixture Check - continued | Check valve for nozzle not holding, pumps not synchronized, vapor vents stuck, low cylinder head temperature, or improper spark plug gap. On carburetor engine, idle adjustment will cause rich or lean mixture. | | |
| Step 13. Idle Speed Check | Close throttle completely. Engine should idle at specified rpm and cylinder head temperature of 150 to 170°C (302 to 338°F) if equipped with individual exhaust stacks or at lower specified rpm if equipped with an exhaust collector ring. | Complete Conditioning | Maintenance |
| | | Cockpit Check | Air Crew |
| | | Daily Check | Air Crew |
| | | Intermediate | Air Crew or Maintenance |
| Step 14. Idle Mixture Check | Check Idle mixture and adjust mixture and speed. | Complete Conditioning | Maintenance |
| | | Cockpit Check | Air Crew |
| | | Intermediate | Air Crew or Maintenance |
| Step 15. Acceleration and Deceleration Check | Perform acceleration and deceleration checks. If turbosupercharger is installed, check with turbosupercharger off. | Complete Conditioning | Maintenance |
| | | Cockpit Check | Air Crew |
| | | Daily Check | Air Crew |
| | | Intermediate | Air Crew or Maintenance |
| Step 16. Engine Backfire Test | Because of the nature of this test, It should be conducted only after prescribed Inspection periods or when trouble is encountered. Conduct test with cylinder head temperatures not less than 180°C (356°F) and not more than maximum allowable for engine involved. | Complete Conditioning | Maintenance |

Table 7-2. Engine Conditioning - CONT

| Complete conditioning steps | Procedure | When performed | Personnel responsible |
|---|--|-----------------------|------------------------------|
| Step 16. Engine Backfire Test - continued | <p>Place turbosupercharger in OFF position. Carburetor air filters should be by passed.</p> <p>Set engine at specified rpm setting. Move carburetor mixture control to AUTO-LEAN. Move ignition switch from BOTH to RIGHT and then to LEFT for a sufficient length of time in each position to permit engine operation to stabilize. When moving ignition switch from BOTH TO RIGHT or LEFT, a high rpm drop will normally occur.</p> <p>If the engine does not backfire from either switch position, it is considered satisfactory in this test. If it backfires, one or more phases of engine operation are not correct.</p> | | |
| Step 17. Ignition Switch Check | Set engine speed at specified rpm | Complete Conditioning | Maintenance |
| | Momentarily move Ignition switch to OFF and determine that engine completely ceases firing. Return switch to BOTH as rapidly as possible to eliminate possibility of backfiring. | Daily Check | Air Crew |
| | Check master switch same way. | Intermediate | Air Crew or Maintenance |
| Step 18. Spark Plug Check | Make cold cylinder check. Replace only defective plugs and repeat steps 6 through 16. | Complete Conditioning | Maintenance |

| ENGINE CONDITIONING COCKPIT CHECK SHEET | | | | | |
|---|---------------------|----------------------|---|-----------------|----------------------|
| DATE | | | TESTED BY | | |
| AIRCRAFT SERIAL NUMBER | | ENGINE SERIAL NUMBER | | POSITION NUMBER | CALIBRATED MP FACTOR |
| 1 PRE-START | | | | | |
| A VAPOR PRESSURE | | | E STATIC MANIFOLD PRESSURE READING | | |
| B OUTSIDE AIR TEMPERATURE | | | F CALIBRATED TORQUE OIL PRESSURE | | |
| C WIND VELOCITY | | | G CHARTED AVAILABLE HORSE POWER | | |
| D DESIRED POWER CHECK RPM | | | H FUEL FEED VALVE CHECK | | |
| 2 ENGINE START AND WARM-UP | | | | | |
| A IN ACCORDANCE WITH EXISTING DIRECTIVES | | | | | |
| 3 POWER CHECK | | | | | |
| A RPM | B MANIFOLD PRESSURE | C TOP | D CAT | E FUEL FLOW | F CHT |
| 4 IGNITION SYSTEM CHECK | | | | | |
| RIGHT MAGNETO | | | LEFT MAGNETO | | |
| A RPM DROP FAST _____ SLOW _____ TOTAL _____ | | | D RPM DROP FAST _____ SLOW _____ TOTAL _____ | | |
| B RPM OR TOP DROP R1 R2 | | | E RPM OR TOP DROP L1 L2 | | |
| C INDIVIDUAL CHECK 1 _____ 2 _____ 3 _____ 4 _____ 5 _____ 6 _____ 7 _____ | | | F INDIVIDUAL CHECK 1 _____ 2 _____ 3 _____ 4 _____ 5 _____ 6 _____ 7 _____ | | |
| 5 ACCELERATION CHECK | | | | | |
| A RICH | | | B NORMAL | | |
| 6 FULL THROTTLE CHECK | | | | | |
| A RPM | B MANIFOLD PRESSURE | C TOP | WET | D FUEL FLOW | WET |
| | | | DRY | | DRY |
| 7 CRUISE MIXTURE CHECK | | | | | |
| A RPM CHANGE INCREASE DECREASE | | | | | |
| 8 IDLE SPEED AND IDLE MIXTURE | | | | | |
| A IDLE SPEED | B MANIFOLD PRESSURE | | C IDLE MIXTURE | | |
| 9 IGNITION SWITCH GROUNDING CHECK | | | | | |
| A IGNITION SWITCH GROUNDED | | | | | |

Figure 7-23. Engine Conditioning Cockpit Check Sheet

(d) Place filter on a 25-degree angle draining rack in a room where temperature is 70°F (21°C) and allow to drain for 2 to 4 hours. Drain accordion-pleated filters for 8 hours.

(e) When necessary, use forced draining after gravity draining has been accomplished by using a 1/16-inch orifice and 100 psi air temperature.

(5) Adjust carburetor air doors so they operate freely through full range of travel or to position selected as specified in applicable maintenance manual.

(6) Replace damaged intake pipes. Detect leaks in Intake pipes by presence of fuel stains at cylinder Impeller end. When leakage is found after 25 hours of operation (since new), loosen intake pipe packing nuts. Replace any defective packing and retighten nuts.

NOTE

Do not tighten packing nuts without loosening and examining the packing first.

b. Turbocharger and Supercharger Maintenance. Visual inspection of all visible parts should be accomplished daily to observe oil leaks, exhaust leaks, cracks in the metal of hot sections, loose or insecure units, and other unacceptable conditions. Refer to the applicable maintenance manual for specific maintenance procedures. Ensure the following items are checked.

- Mounting of all units
- Oil leaks or dripping from any unit
- Security of oil lines
- Security and condition of electric wiring
- Cracks in ducting and other metal parts including the turbine and housing
- Warping of metal ducts
- Operation of the complete system to determine performance to discover undesirable sounds, and to note evidence of vibration; unusual sounds and appreciable vibration require removal and replacement of the turbocharger to correct the faulty condition

NOTE

Exhaust ducts, waste gates, nozzle boxes, and turbines are subjected to extremely high temperatures. For this reason, cracks develop because of the continued expansion and contraction of the metal as temperature changes occur.

7-8. Exhaust System. The exhaust system conducts exhaust gases from the engine to the atmosphere with minimum exhaust back pressure. Short exhaust stacks are incorporated on some engines, while others join a collector ring which expels exhaust gases through a tail pipe. Perform the following general maintenance procedures on exhaust systems:

a. Check ball joints for excessive or insufficient clearances, and retighten or replace ball joints as necessary to obtain free movement.

b. Replace all parts that have hot spots or damage beyond repair.

c. To prevent exhaust port studs from seizing, and to retard corrosion, apply a special lubricant as follows:

(1) When engine or cylinder is removed or installed, apply light coating of 10 percent molybdenum disulphide lubricant, MIL-M-7866, and 90 percent grease, MIL-G-3545, to threads of cylinder exhaust port studs.

(2) To retard corrosion of nuts, apply this mixture to exterior of exhaust port stud nuts.

d. Tighten all nuts, bolts, and clamps in exhaust system in accordance with maintenance manual for engine involved.

7-9. Carburetion and Fuel Injection. Fuel is metered to the engine at a predetermined ratio to airflow by the fuel metering system. Fuel metering systems differ in design, but their function is the same, regardless of type or engine model. Improper maintenance of the fuel metering system will result in rough engine performance, detonation, spark plug fouling, low power output, poor acceleration, and engine or part failure.

a. *Inspection.* Inspect carburetors for mounting flange cracks and evidence of leakage and fuel strainers for foreign matter broken screens, corrosion, and distortion.

b. Depreservation. Carburetors are depreserved to make them operational after they have been preserved for extended storage. Observe the following precautions:

- Depreserve float-type carburetors which do not employ diaphragms by flushing float chamber with the type of fuel used to operate applicable engine, then drain oil and fuel mixture from float chamber. Flush until all trace of preservative oil is removed.
- Depreserve diaphragm-type carburetors by draining oil from fuel chambers and passages and flushing with fuel. Fill carburetor with type of fuel to be used to operate applicable engine. Soak diaphragm for at least 8 hours. This restores fuel diaphragms to normal operating condition.

c. Adjusting Idle Mixture and Idles Speed. If an engine will not respond to idle mixture and speed adjustment, it is an indication that some other phase of engine operation is incorrect. Adjust idle mixture and idle speed using the following procedures:

(1) Make idle mixture adjustments with oil and cylinder head temperatures at normal values.

(2) Back idle speed stop off so that idle speed is controlled during adjusting procedure by manually controlling throttle.

(3) Retard throttle to designated rpm.

(4) Screw idle mixture in or out in small increments as required until proper idle mixture is established.

(5) After each idle mixture adjustment, increase power to field barometric pressure for approximately 1 minute to clean intermittent firing spark plugs caused by excessively rich or lean mixture.

(6) Set idle speed stop to desired rpm.

d. Repair or Replacement. Repair or replace carburetor using the following procedures:

(1) When improper operation of float-type carburetor is suspected, perform a test by manually leaning mixture with mixture control or by enriching mixture by use of primer. Replace complete unit when changes in rpm, other than those within allowable limits, result.

(2) When difficulty is encountered with PD and PR series injection-type carburetors, attributed to sticking or binding of automatic mixture control unit, clean unit as follows:

WARNING

Degreasing Solvent, MIL-PRF-680, is combustible and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames or other sources of ignition.

(a) Remove unit from carburetor, being careful not to remove seal or lockwire or loosen siphon locking nut.

(b) Wash bushing with Degreasing Solvent, Mil-PRF-680.

(c) Dry thoroughly with compressed air.

(d) Polish bushing sleeve with crocus cloth, Federal Specification P-C-458, until it is bright.

(e) Blow out any polishing dust that tends to cling to inside walls.

WARNING

DELETED

(f) Clean needle with dry Degreasing Solvent, MIL-PRF-680, and dry with compressed air.

(g) When needle is corroded, clean with Degreasing Solvent, MIL-PRF-680, dry with compressed air, polish with crocus cloth, Federal Specification P-C-458, and lubricate with grease molybdenum disulfide MIL-G-21164.

(h) Reassemble and install lockwire or seal, if broken.

(3) All components of PS series injection type carburetor are self-contained in one assembly. Any difficulty that cannot be corrected by adjusting idle mixture or speed or unplugging vapor bleed requires replacement of carburetor.

e. Preservation. When carburetors are removed for placement of storage or for rework, they should be preserved using the following procedures:

CAUTION

Exercise care to keep the preservative oil out of the air chambers of the regulator unit, and from contacting the air metering portion of the carburetor, including the main venturi, impact tubes, and automatic mixture control. Damage to carburetor may otherwise result.

(1) Remove drain plugs from bottom of fuel chamber on float-type carburetors and drain out all fuel. With drain plugs reinstalled, fill float chamber with lubricating oil, MIL-L-6081, Grade 1010.

(2) Drain fuel and air chambers and fuel control unit by removing drain plugs on PD and PR series Injection-type carburetors. Replace plugs to air chambers and inject lubricating oil, MIL-L-6081, Grade 1010, (under 10 to 15 psi regulated pressure) until fuel outlet on fuel control unit shows oil seepage. Remove drain plugs and allow excess oil to drain out. Reinstall drain plugs.

(3) Remove drain plugs from main fuel chamber on PS series Injection-type carburetors and force lubricating oil, MIL-L-6081, Grade 1010, into fuel inlet at 8 to 10 psi until oil seeps from fuel discharge nozzle. Remove drain plug on bottom of main regulator assembly and allow all excess oil to drain. Reinstall drain plug.

f. Installation. Install carburetors using the following procedures.

(1) Remove all burrs and gasket particles from carburetor and engine mating surfaces

(2) Cover fuel lines, subject to contamination by foreign matter, with masking tape, Federal Specification PPP-T-42.

(3) Place carburetor on engine, close and secure throttle valves in closed position with lockwire.

(4) Connect all lines.

(5) Tighten mounting bolts in accordance with limits specified in maintenance manual.

(6) Tighten and lockwire all other nuts and bolts.

(7) Check throttle and mixture control lever for freedom of movement; connect linkage.

(8) Remove lockwire from throttle valves.

(9) Ensure that vapor vent lines are free from obstructions.

7-10. Removal and Installation of Reciprocating Engines. Preparation for removal, preparation for installation, and installation of reciprocating engines are explained in the following paragraphs.

a. Preparation for Removal. The following preparations should be made prior to removing engines:

(1) Provide personnel with maintenance manual, aircraft log book, and, when applicable, DA Form 2410.

(2) Provide proper special tools, hoist, and engine stand for engine as given in maintenance manual. Provide ground support equipment and hand tools.

(3) Provide working area with drip pans, fire extinguishers, and NO SMOKING signs. Provide oily waste cans, Federal Specifications RR-C-114, for storage of all rags used for cleaning engine components and wiping up fuel and oil.

(4) Ensure that aircraft is properly grounded and choked and battery is disconnected. Remove necessary cowling

b. Removal. Remove engine from the aircraft in accordance with basic instructions given herein and in the specific engine maintenance manual.

(1) Preserve engine in accordance with paragraph 7-12.

(2) Disconnect all control rods and cables, magneto conduits, fuel and oil lines, thermometer tubes, tachometer shafts or wires, and like connections.

(3) Remove propeller, or clean propeller control systems, depending on condition or time in service.

(4) Drain fuel from metering system and connecting lines to eliminate fuel spillage during removal.

(5) Remove remote fuel pump adapters, propeller hub attaching parts, starters, ignition analyzer synchronizer, generators, vacuum pumps, air pumps, hydraulic pumps, propeller governors, and engine driven fuel pump.

(6) Forward engine accessories to depot in separate containers.

(7) Install cover plates and plugs in engine and accessory openings. Plug or cap all lines disconnected to accomplish engine removal.

(8) Review TB 55-1500-328-25 for determination of accessories to accompany engine.

(9) Lubricate exhaust port studs and nuts.

c. Preparation for installation. In addition to the preparations outlined in paragraph a, the following examinations must be made prior to installation.

(1) Examine any fuel, oil, or hydraulic lines for serviceability. Particular emphasis should be given to all lines that run through firewall.

(2) Ensure that all disconnected lines, hoses, control rods, cables, and wiring on firewall are in appropriate position required for connection to engine.

d. Installation. Procedures to be followed in installing the engine will vary according to type of engine and aircraft involved and whether or not a power package is used. The general procedure contained herein and in the specific engine maintenance manual will apply.

(1) Swing engine into position with a suitable hoist and install engine mounting bolts. Tighten mounting bolts to specified torque value.

(2) Connect magneto ground wire, install properly prepared carburetor, and connect fuel lines.

(3) Attach main oil line to oil pump inlet, then connect oil scavenge line, oil tank vent line, oil pressure gauge line, and any other required oil lines.

(4) Connect and adjust throttle control and carburetor air heater control.

(5) Install and adjust propeller governor and control.

(6) Install propeller. Tighten retaining nut to specified torque value.

(7) Connect, check, and safety any other lines and controls which are required on the aircraft.

(8) Accomplish depreservation run in accordance with paragraph 7-13.

(9) Lubricate exhaust port studs and nuts.

7-11. Engine Mounting Systems. The engine mounting system consists primarily of an engine mount and vibration dampers. The basic engine mount consists of a welded chrome-molybdenum steel tubing structure rigid enough to carry forces imposed by the engine. Vibration isolators or dampers are used to eliminate the transmission of excessive vibration from the engine to the aircraft structure. Perform the following procedures for general maintenance of engine mounting systems.

a. Visually inspect engine mounting system in accordance with applicable inspection requirements manual.

NOTE

When rubber parts of isolators must be cleaned to establish their physical condition, use soap, A-A-50, and water only.

b. Repair of engine mounting system is limited to the following steps.

(1) Repair distorted, bent, cracked, or chafed areas.

TM 1-1500-204-23-1

Excessive replacement. **NOTE** **damage** **requires**

(2) Tighten loose mountings to obtain torque values specified In maintenance manual.

(3) Repair or replace vibration isolators that show any evidence of radial slippage.

(4) Properly secure all engine mount retaining bolts with safety wire.

(5) Replace vibration isolators when metal or rubber parts indicate sagging or deterioration.

7-12. Preservation of Reciprocating Engines.

Corrosion of aircraft metals and alloys is primarily a light against moisture. There are two main types of surface corrosion, direct chemical attack on metal, and electrochemical action In which the metal being corroded becomes a part of an electrolytic cell In the presence of moisture. Both reactions are effectively retarded In the absence of moisture. Corrosion will not occur in a clean atmosphere when moisture is not permitted to reach the metal surface. Preserve reciprocating engines using the following paragraphs.

a. Preservation of Accident-Involved Engines.

Engines removed from an aircraft that has been involved in an accident In which engine failure or malfunction Is known or suspected to have been a factor should not be treated with corrosion protective. No attempt should be made to operate, motor, or disassemble an accident-involved engine. All accident involved engine must be transported to an overhaul depot or a designated investigation area within 10 days after the accident. The accident-involved engine shall be preserved using the following procedures.

(1) Without disconnecting lines or fittings, make every effort to prevent remaining fuel and oil In engines from leaking out

(2) Plug all ports and cap all fittings and lines. Seal openings with applicable covers.

(3) Install engine in bottom half of metal, reusable shipping and storage container.

(4) Ground engine to container to prevent a possible explosion of dangerous vapors which may be ignited by static electricity or a spark.

(5) Secure all loose metal components to the container with tape, PPP-T-60, to prevent a possible spark during shipment.

b. Preservation of Operable Engines to be removed for Overhaul. Engines to be removed from aircraft for overhaul, that can be operated without further damaging the engine or any of its parts, shall be preserved using the following procedures

CAUTION

While injecting the preservation compound, be sure none of the compound is injected into airstream of the carburetor or master control. Do not inject the compound upstream of the throttle valve. Damage may otherwise result.

(1) Drain oil system and refill with corrosion preventive MIL-C-6529, Type II.

NOTE

Type II corrosion preventive consists of a ready mixed blend of 1 part corrosion preventive, MIL-C-6529, Type 1 and 3 parts new lubricating oil, MIL-L-6082, Grade 1100.

(2) Prior to starting engine for final run, connect discharge nozzle.

NOTE

Discharge nozzles shall conform to designs set forth in figure 7-24 and be modified in length and thread configuration to suit engine type and point of application.

(3) Locate nozzle in a position so that corrosion preventive mixture Is properly distributed to all cylinders. Modify nozzle discharge are to provide sufficient restriction to prevent exhausting corrosion preventive supply prior to cessation of engine rotation.

NOTE

For radial engines, precautions shall be taken to ensure that the quantity of mixture aspired and the location employed provides an even amount of coating for both upper and lower cylinders.

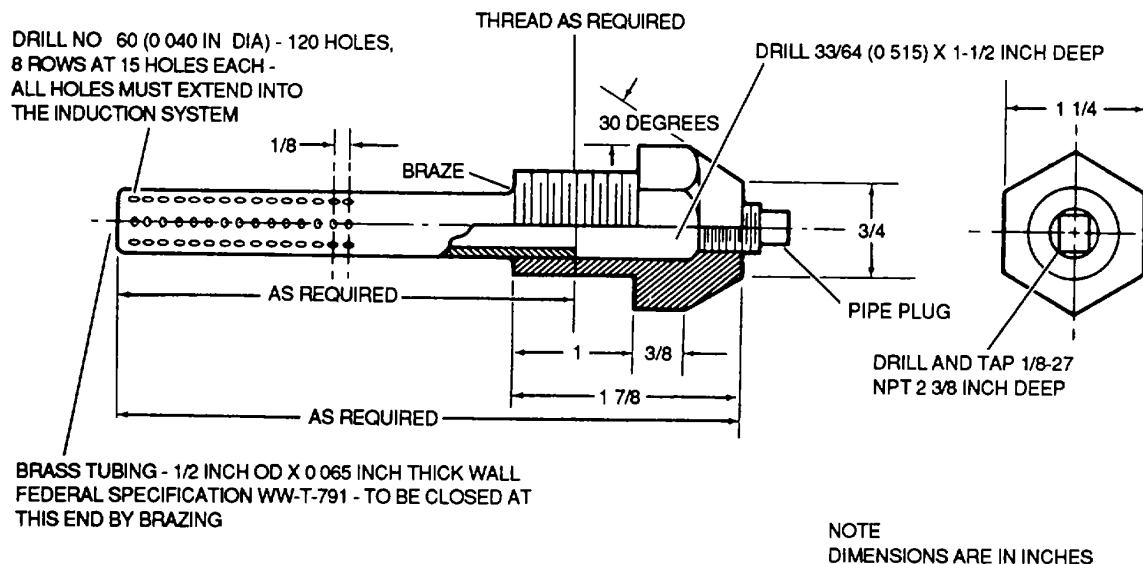


Figure 7-24. Discharge Nozzle for Corrosion Preventive Mixture

(4) Thermostatically control corrosion preventive supply tank to maintain corrosion preventive, MIL-C-6529, Type II at a temperature of 221 to 250°F (105 to 121 C).

(5) Connect an air pressure line providing 60 to 80 psi dry compressed air to the tank. Mixture capacity of the tank will be as follows:

- One quart for engines up to 1340 cubic inch displacement.
- Two quarts for engines up to and including 2000 cubic inch displacement.
- Three quarts for engines up to 3350 cubic inch displacement.

(6) Make final engine run with oil system serviced with corrosion preventive as follows:

CAUTION

At no time will engine be operated in excess of 1500 rpm while the oil system is serviced with corrosion preventive mixture. Damage may otherwise result.

(a) Operate engine on service fuel for a period of 15 minutes.

(b) With engine operating at 1500 rpm, release corrosion preventive mixture through nozzle. As soon as white smoke appears at upper cylinder exhaust stacks for radial engines and at all stacks for opposed engines, move mixture control to IDLE CUT-OFF position and allow engine to stop. Continue aspiration of mixture until engine ceases to fire

(7) Drain preservation mixture from oil system while engine is warm, exercising care to keep corrosion preventive mixture clean for future use.

(8) Clean filter and screen and coat with corrosion preventive mixture and reinstall.

(9) When rocker box covers have been removed for any reason, rocker box interior shall be treated as follows:

(a) Drain oil from each rocker box from which cover IS removed

(b) Spray-coat rocker arms, valve stems, springs, push rods, rocker box covers, and rocker boxes with corrosion preventive, ML-C-16173, Grade 2.

TM 1-1500-204-23-1

(c) Reinstall covers with new gaskets and tighten holddown nuts to values specified in applicable engine maintenance manual.

NOTE

The above rocker box preservation procedures are mandatory for all 0.435 series engines.

(10) Spray interior of each cylinder with corrosion preventive, MIL-C-6529, Type II maintained at a temperature of 221 to 2500F (105 to 121°C). Spray as follows:

(a) Spraying shall be accomplished with piston at bottom dead center. Spray cylinders in sequence of firing order. Continue in this manner until all cylinders are sprayed.

CAUTION

The crankshaft must not rotate after final spraying as preservation coating will be scraped from cylinder walls.

(b) Final-spray cylinders without rotating crankshaft.

(c) Install cylinder dehydrator plugs, MIL-1-6131, Type II, in each spark plug opening.

(11) Spray interior of exhaust ports and seal individual ports with applicable exhaust port plug.

(12) Preserve carburetors in accordance with approved preservation procedures.

(13) Remove thrust bearing cover plate and spray-coat bearing with corrosion preventive, MIL-C-6529, Type II. Reinstall cover.

(14) Coat exposed propeller shaft with corrosion preventive, MIL-C-16173, Grade 2. Wrap propeller shaft with barrier material, and MIL-B-121, Grade A, when applicable plastic cylinder protector is not available.

(15) Seal oil line fittings with plugs conforming to MIL-C-5501.

(16) Remove cover plates from all accessory drives and spray-coat all drives with corrosion-preventive, MIL-C-6529, Type II. Reinstall all cover plates.

(17) Seal breather openings with oil and moisture-resistant covers, dehydrator plugs, or pressure sensitive tape, Federal Specification PPT-60.

(18) Perform dehydration of intake manifold as follows:

(a) Secure carburetor throttle valve in open position with lockwire.

(b) Install one 16-unit bag of desiccant, MIL-D-3464, in intake.

(c) Seal openings with moisture-resistant covers or barrier material, MIL-B-121, Grade A, secured with pressure sensitive tape, Federal Specification PPP-T-60.

CAUTION

Do not turn protective cap during installation or removal as damage may occur to contact spring.

(19) Protect spark plug lead terminals by installing applicable protective cap.

(20) Preserve magnetos by applying oil to cam, spring, and other steel parts. Seal all external openings with pressure sensitive tape, Federal Specification PPP-T-60.

NOTE

Keep oil from breaker points.

(21) Install a crankcase dehydrator plug.

(22) Install engine in a metal shipping container as follows:

(a) Place preserved engine in a serviceable container in accordance with instructions supplied with container.

(b) Close container and tighten closure bolts to proper torque.

CAUTION

Use only dehydrated air with a maximum relative humidity of 30 percent for pressurizing shipping containers in order to keep humidity as low as possible in the air surrounding the engine.

(c) Pressurize container to 5 psi with dehydrated air.

(d) Retighten engine container flange nuts to original torque after 1 hour elapsed time.

(e) After container has been pressurized, use soapy water to check for leaks. If a second pressure check in 24 hours does not indicate a leak, engine is ready for storage or shipment.

(f) Maintain all markings and stencils on shipping container intact without additions or deletions.

c. Preservation of Inoperable Engines. Engines that cannot be operated and are to be removed from aircraft shall be treated as far as practicable as shown in paragraph 7-11 b. Spray all possible interior surfaces, as the engine will be shipped or stored without the protection afforded it by a final operation using a corrosion-preventive compound in the lubrication system. An appropriate entry shall be made on DA Form 2408-16 and DD Form 1577-2, stating inability to accomplish preservation run of the engine. DA Form 2408-5 also will be sent with the engine, if applicable. DA Form 2410 will be completed and mailed in accordance with DA PAM 738-751.

d. Intermediate Storage of Engines Mounted on Aircraft. Intermediate storage shall be completed within 24 hours after ground runup. When it is not definitely known that the aircraft will be operated within 45 days, the engine shall be preserved for intermediate storage and an entry shall be made on the applicable DA Form 2408 series stating this work has been accomplished. The procedure for Intermediate storage is the same as previously outlined in paragraph 7-11b with the following additional procedures.

(1) Drain fuel from engine-driven fuel pump and flush interior with lubricating oil, MIL-L-6081, grade 1010, while rotating engine crank-shaft. Seal fuel lines with suitable plugs.

CAUTION

Use dehydrated air with a relative humidity of 30 percent for all spraying operations. Damage may otherwise result.

(2) Spray exhaust valves with corrosion preventive, MIL-C-6529, Type II Spraying shall be through exhaust port with exhaust valves fully open.

NOTE

Engines with collector rings may be sprayed through spark plug ports with exhaust valves fully open.

(3) Place and secure two 8-unit bags of desiccant, Military Specification MIL-D-3464, in carburetor air intake scoop or carburetor adapter.

(4) Cover open end of scoop with a suitable anchored, barrier paper, MIL-B-131.

(5) Firmly attach a red cloth streamer to bags containing desiccant and bring loose end out in such a manner that not less than 18 inches of cloth streamer will be visible on outside of carburetor air intake scoop. In order to prevent streamer from action as a wick, a 3- to 4-inch length of lockwire shall be left between streamer and desiccant.

(6) Install 16 units of desiccant, MIL-D-3464, in exhaust outlet on engines incorporating an exhaust collector ring. Place a total of four units of desiccant in exhaust openings on engines that do not have an exhaust collector ring.

(7) Firmly attach a red cloth streamer to bags containing desiccant and bring loose end out a minimum of 18 inches. Use a 3- to 4-inch length of lockwire between cloth and desiccant to prevent streamer from acting as a wick.

(8) Seal all openings, joints, drain holes, and outlets with barrier material, MIL-B-1 21, and secure with pressure sensitive tape, Federal Specification PPP-T-60.

TM 1-1500-204-23-1

(9) Use following procedure as alternate method of exhaust sealing.

(a) Remove exhaust stacks at cylinder outlet.

(b) Install cylinder exhaust outlet cover between exhaust stack opening and exhaust stack flange.

NOTE

Engines with Individual exhaust stacks have stacks removed and a cylinder exhaust outlet cover installed between exhaust stack flange and cylinder exhaust outlet.

(c) Fabricate covers locally.

(10) Seal all openings such as distributor vents and engine breathers with moisture proof plugs and covers. Pressure sensitive tape, Federal Specification PPP-T-60, (red) may be used.

(11) Cover all engines installed on aircraft using engine covers furnished with aircraft. Provide lower portion of cover with a drain hole to prevent accumulations of water.

(12) Locally fabricate placard for engines with propellers installed, and conspicuously display placard on propeller blade. Placard shall have following information

**DO NOT TURN PROPELLER
ENGINE PRESERVED IN ACCORDANCE
WITH APPLICABLE MAINTENANCE INSTRUCTIONS**

e. Flyable Storage. Engine installed on aircraft which will not be flown for an Indefinite period of time, but are maintained in a flyable status or undergoing short-term maintenance, shall be treated as follows:

(1) Engine serviced with normal lubricant shall be given a ground runup each third day of Idleness.

NOTE

The runup consists of engine operation at a speed greater than idle for a period of 5 minutes or until highest allowable oil inlet temperature is attained. Every 14 days a 15-minute normal ground preflight shall be accomplished.

(2) Engines undergoing repair or inspection that cannot be operated shall be pulled through by hand or starter at least eight revolutions on the third day of idleness.

NOTE

Aground runup shall be accomplished on the seventh day of idleness. When runup cannot be accomplished on the seventh day, the crankshaft shall be pulled through and cylinders sprayed as outlined in paragraph 7-11b. Storage of aircraft engines in this manner shall not exceed 14 days.

(3) Upon conclusion of a ground runup on engines in flyable storage, make entries on applicable DA Forms 2408-13.

NOTE

Check the applicable aircraft maintenance manual for specific instruction pertaining to Flyable Storage.

7-13. Depreservation of Reciprocating Engines.

The instructions contained in this section shall be followed prior to making the initial start to newly installed engines and engines installed in aircraft being removed from temporary and Indefinite storage, regardless of time in storage.

NOTE

Newly installed engines shall be given a depreservation run as soon as possible, but not later than 4 hours after preoiling has been accomplished. If more than 4 hours has elapsed since preoiling engine, complete preoiling procedure shall again be accomplished.

a. Preoiling. Proper preoiling lubricates internal gears and bearings, expels air from internal oil passages, and averts internal engine failures due to lack of lubrication. Accomplish preoiling either indoors or by applying engine preheat prior to preoiling when operating in temperature below 0°F (-18°C). For preoiling engines on aircraft using the diverter-segregator oil system, it is necessary to follow special instructions contained in applicable aircraft maintenance manual. Preoil using the following procedures:

NOTE

Engines need not be preoiled after oil change or after oil system components have been disconnected for normal maintenance. However, after oil change or after disconnecting oil system components located in the system between oil tank and engine oil pump, it will be necessary to disconnect oil inlet line at the pump and drain a sufficient amount of oil from the line to determine there is no obstruction or air in the system.

(1) Prepare engine for preoiling as follows:

(a) Service oil tank, oil sump, or crankcase with engine oil specified in applicable maintenance manual.

(b) Provide an external power source.

(c) When spark plugs have been installed, remove one spark plug from each cylinder to reduce load on starter.

(d) Place engine controls in following positions, as applicable.

Ignition switchOFF
Throttle OPEN
Mixture control IDLE CUT-OFF
Fuel shutoff valveOFF
Oil shutoff valve OPEN

(e) Provide suitable containers of approximately 5 gallons capacity to catch oil that drains from sumps during preoiling operation.

(f) On engines which utilize crankcase breathers and which are equipped with a hydromatic propeller, remove plug from propeller dome and pour a sufficient amount of preoiling lubricant into dome to bring lubricant level to plug hole. Reinstall and safety the plug in propeller dome.

NOTE

This step is not required for engines having propeller shaft breathers, reversible-type propellers, or engines not equipped with hydromatic propellers.

(2) Preoil engine by one of the following methods:

CAUTION

Devices having heating elements in direct contact with preoiling mixture or oil shall not be used. Damage may otherwise result.

(a) Preoil engine having a dry sump-type oil system using a pressure tank.

(b) Preoil engine having a wet sump by rotating crankshaft with starter and utilizing normal engine oil supply and oil pump to provide pressure.

(3) Provide suitable viscosity by heating and maintaining lubricant used for preoiling at a temperature between 110° to 175°F (38° to 80°C) when using preoiling equipment incorporating provisions for heating. When preoiling with engine oil pump or with equipment not incorporating a heating element, dilute lubricant, at a temperature lower than 30°F (-1°C), with gasoline in accordance with percentage calculated from chart shown in figure 7-25. Mix thoroughly prior to preoiling.

(4) Preoil O-series engines by servicing oil system with grade oil specified for engine, and the turn engine through with starter until oil pressure is indicated on aircraft oil pressure gauge.

(5) Preoil all radial engines as follows:

CAUTION

Do not energize starter over 15 seconds. Allow starter to cool after each energizing. Damage to starter may otherwise result.

(a) Prime oil pump by removing applicable plug and rotating crankshaft with starter until all air is expelled from vent and a steady flow of oil is coming from vent. Reinstall plug.

NOTE

On engines not having a plug, disconnect oil inlet line and allow sufficient oil to drain to assure air in the line is eliminated.

(b) Remove drain plugs from front and rear sumps on installations having sumps in these locations.

TM 1-1500-204-23-1

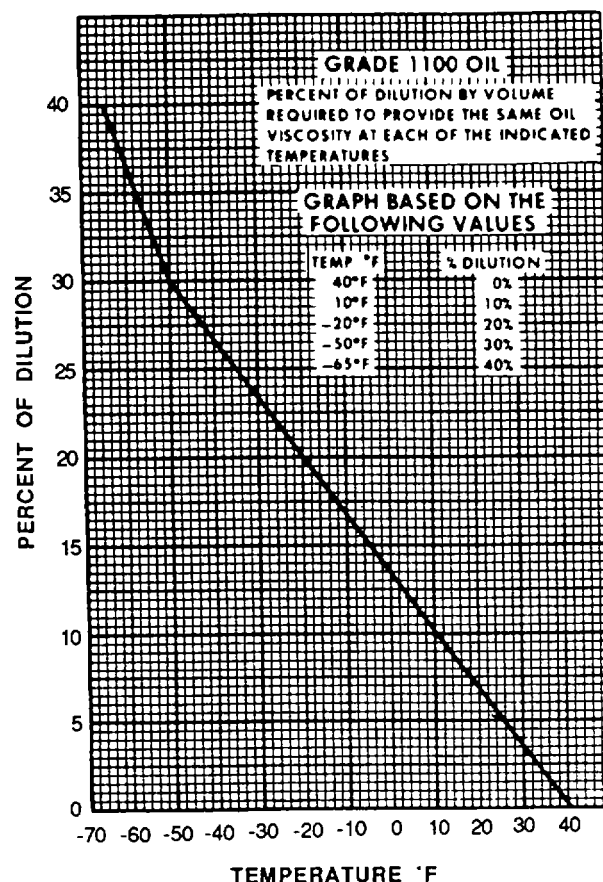


Figure 7-25. Percent Dilution Versus Temperature for Grade 1100 Oil

(c) Connect preoiler to preoiling fitting.

(d) Rotate engine with starter and commence preoiling until oil is flowing freely from sump plug holes and pressure is indicated on oil pressure gauge in aircraft.

(e) Cease operation and replace sump plugs.

(f) Remove rocker box covers from number one cylinder or both top covers on double row engines and continue preoiling until oil is obtained from all rocker arms that have been removed.

(g) Disconnect preoiler and reinstall all parts removed.

NOTE

Newly installed engines will be given an initial start as soon as possible, but not later than 4 hours after preoiling has been accomplished. When any period of time in excess of 4 hours has elapsed since engine was preoiled, complete preoiling procedure shall again be accomplished before attempting initial start of engine.

b Depreservation Run. The depreservation run eliminates the necessity of removing or draining Intake pipes prior to installation of engine in the aircraft. Perform depreservation run using the following procedures:

NOTE

Newly installed engines shall be given a depreservation run as soon as possible, but not later than 4 hours after preoiling has been accomplished if more than 4 hours has elapsed since preoiling engine, complete preoiling procedure shall again be accomplished.

(1) Prior to starting engine, remove one spark plug from each cylinder below the horizontal centerline of engine. Refer to TB 55-2925-200-25 for proper spark plugs to be utilized during depreservation run.

NOTE

On seven-cylinder engines which would necessitate removal of spark plugs from four cylinders, thereby resulting in excessively rough operation, the one cylinder below the horizontal centerline on right side of engine when viewing engine at propeller end may be left operative. This permits operation of four cylinders rather than three, which greatly stabilizes engine operation.

(2) Install approved depreservation valve in each open plug hole.

NOTE

Install length of hose on each depreservation valve to vent large quantities of oil overboard. This eliminates a fire hazard and accumulation of oil around cylinder or baffles.

(3) All spark plug leads, except those removed to permit installation of depreservation valves, will remain connected to spark plugs. Install metal shipping caps to disconnected leads.

NOTE

The metal shipping caps ground out the ignition, thereby eliminating excessive voltage buildup in the magneto and possibility of flash-over at terminal end of ignition lead.

(4) Start engine and run at 800 to 1500 rpm for 30 seconds to 1 minute. Operation may be accomplished on either primer or carburetor, or both, to obtain smoothest possible operation.

NOTE

- Normally, smoothest engine operation is obtained at higher engine speeds and a higher air velocity through intake pipes will result. In cases where extreme cold temperatures exist, engine to be started should be preheated prior to starting and should be allowed to run longer than the 1-minute period, provided excessive vibration is not encountered.
- Corrosion-preventive compound, if present in intake pipes, will have adequate time to be heated and flow from intake pipes through external drain or into combustion chamber and be expelled into exhaust system or through depreservation valve.

(5) Stop engine by closing throttle and discontinuing use of primer or by moving mixture control to IDLE CUT-OFF position.

(6) Install spark plugs, ignition leads, engine cowling, etc., and proceed to start engine using prescribed starting procedures outlined in the applicable flight manual.

NOTE

Spark plugs used for depreservation runs shall be replaced with new or overhauled spark plugs before placing the engine in service.

CHAPTER 8

GENERAL TURBINE ENGINE MAINTENANCE

8-1. General. The maintenance Instructions and procedures contained in this chapter are general and applicable to turbine engines used on Army aircraft Maintenance Instructions that are specific and peculiar to particular engines are contained In the applicable maintenance manuals and will be used in conjunction with general information contained in this chapter.

8-2. Engine Types and Designations. Turbine engine types and designations are explained in the following paragraphs.

a. Types. Types of aircraft turbine engines are the centrifugal-flow and axial-flow turbine engines. Centrifugal-flow engines, as shown In figure 8-1, compress the air by centrifugal force. The air enters the air inlet and is directed to the compressor inducer vanes through circumferential inlets located in front and back of the Impeller. Axial-flow engines, as shown in figure 8-2, compress the air axially. The air enters the air inlet and flows in a relatively straight path In line with the axis of the engine.

b. Designation Examples. On gas turbine engine designations, such as T53-L-1, T denotes gas turbine with drive shaft, numeral 53 is assigned to the engine by the services, L denotes the manufacturer, and 1 denotes major modification.

8-3. Turbine Engine Theory. The gas turbine engine is a type of internal combustion engine that produces power by a continuous and self-sustaining process of compression, combustion, expansion, and exhaust. Air is compressed in the compressor section, mixed with atomized fuel and burned in the combustion chambers. As the fuel burns, the resultant gases expand through turbine wheels to convert heat energy to useful power

8-4. Turbine Engine Precautions. The following precautions shall be observed during maintenance of turbine engines.

a. Regularly police parking areas, runways, taxiways, and runup and exhaust areas to ensure against the presence of foreign objects which could enter the engine. Special attention shall be given to cleaning of cracks and expansion seams in hard

surfaced areas where engines will be operated, as tests have indicated that these are the main source of foreign objects which are ingested.

b Periodically instruct personnel concerned with aircraft maintenance of foreign object hazards to ensure that maximum preventive measures are taken.

c Ensure that air inlet and tailpipe dust excluders are installed at all times when engines are not being operated, except when it is known the engine will again be operated Immediately following shutdown.

d. Prior to each engine start, thoroughly Inspect and clean inlet ducting. Remove all loose nuts, bolts, tools, or other objects which would cause engine damage and possible subsequent failure.

e. After work has been accomplished, inspect to ensure that all accessories and attaching parts are secure and that work areas are cleared of foreign objects prior to engine operation.

f. Provide properly marked receptacles (FOD cans) in all work areas into which trash, ferrous and nonferrous scrap, safety wire, etc. , may be placed.

g. Adhere to applicable gas turbine-powered aircraft taxiing and parking procedures as outlined in applicable technical bulletins. This minimizes damage due to objects being thrown by the exhaust blast Into the intake of other aircraft.

h Ensure that gas turbine-powered aircraft takeoff and landing procedures are such as to avoid the intake of foreign objects blasted from runways and runway shoulders by preceding aircraft.

i. Use inlet duct runup screens during all ground operations, including taxiing to and from takeoff position, with the following exceptions:

- Inlet duct runup screens are not required on aircraft using centrifugal flow engines.

TM 1-1500-204-23-1


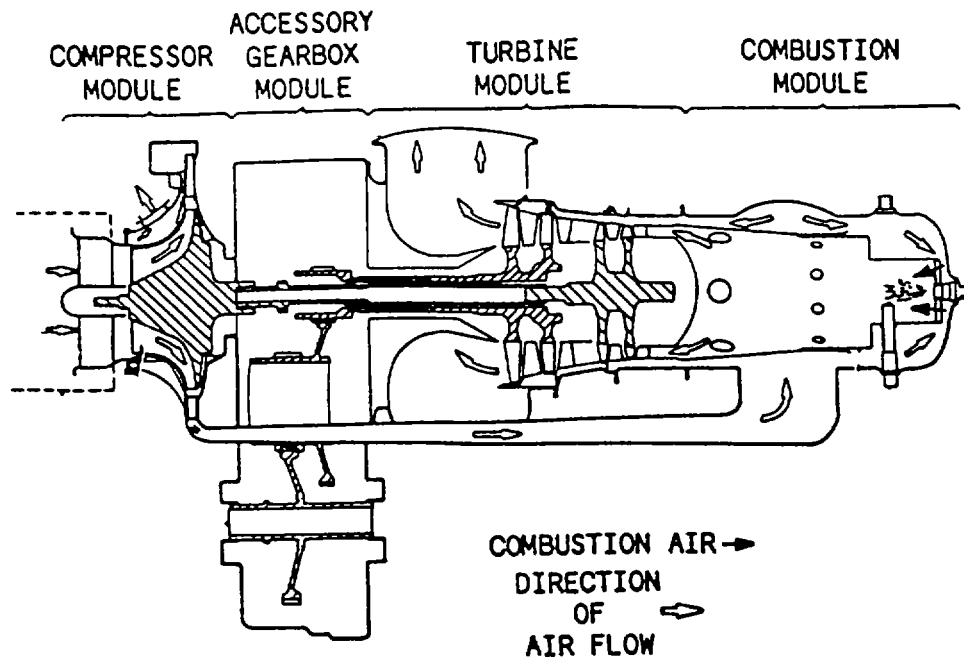


Figure 8-1. Centrifugal-Flow Engine

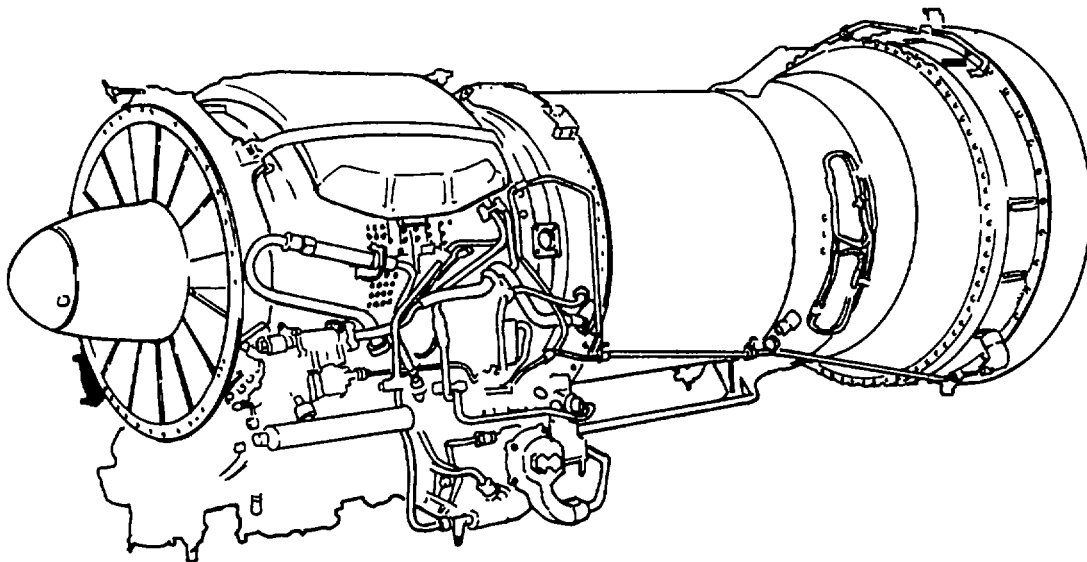

Left Side View of T73-P-700 Engine

Figure 8-2. Axial-Flow Engine

- When necessary to properly evaluate engine performance or when icing conditions exist, inlet duct runup screens should be removed. Runup with screens removed shall be made in a designated, thoroughly cleaned area.

CAUTION

Inlet duct runup screens shall not be installed and removed with engine operating above Idle rpm. Loose items of clothing shall not be worn and objects which might be drawn into the Intake ducts shall not be carried when installing or removing screens. Damage to the engine may otherwise result.

- Inlet duct runup screens may be left off during taxiing to and from takeoff position when requirements or existing conditions make the use of screens impractical. Since specific conditions warranting removal of screens as specified above cannot be predetermined, specific conditions may be determined by each command as necessary to conduct their operation. Approval of screen removal should include any additional precautions necessary to assure safe operation of engine.

j. Use only nonmetallic-head hammers when required to install parts on engine.

k. When possible, use appropriate hoist or lifting yoke on heavy or bulky parts, such as tailpipes.

l. Tighten jack screws, attaching screws, bolts, and nuts in small increments on opposite planes.

WARNING

Lead poisoning is an accumulative disease that can be fatal. Preventive rather than curative measures shall be stressed.

m. A turbine engine that has operated on fuel containing tetraethyl lead may have a yellow powder on those sections that are exposed to combustion gases, for example, tail pipes and combustion chambers. Extreme care shall be used by all personnel handling

such parts to prevent internal contamination of the body through open cuts, sores, or inhaling. Personnel shall adhere to following precautionary measures.

- Change clothes daily.
- When possible, gloves shall be worn. Wash or change gloves daily.
- Hands shall be thoroughly washed before eating, drinking, smoking, or using toilet.
- Scrub body thoroughly each day.

8-5. Turbine Engine Design and Construction. A typical turbine engine consists of an air inlet, compressor section, combustion section, turbine section, exhaust section, accessory section, and the necessary systems for starting, lubrication, fuel supply, and auxiliary purposes, such as anti-icing, cooling, and pressurization. The major components of all turbine engines are basically the same; however, the nomenclature of the component parts of various engines currently in use will vary slightly due to the difference in manufacturer terminology. These differences are reflected in the applicable maintenance manuals.

a. Inlet Ducts. There are two basic types of inlet ducts, the single entrance and the divided entrance duct. Single entrance inlet ducts are used with axial-flow engines, as shown in figure 8-3, to obtain maximum ram pressure through straight flow. Divided entrance inlet ducts, as shown in figure 8-4, provide the opportunity to diffuse the incoming air so it enters the plenum chamber with the low velocity required to utilize a centrifugal-flow engine. Inlet ducts may be classified as:

- Nose Inlets, located in the nose of the fuselage or powerplant pod or nacelle.
- Wing inlets, located along the leading edge of the wing, usually at the root for single-engine installations.
- Annular inlets, encircling, in whole or in part, the fuselage or powerplant pod or nacelle.
- Scoop inlets, which project beyond the immediate surface of the fuselage or nacelle.
- Flush Inlets, which are recessed in the side of the fuselage, powerplant pod, or nacelle.

TM 1-1500-204-23-1

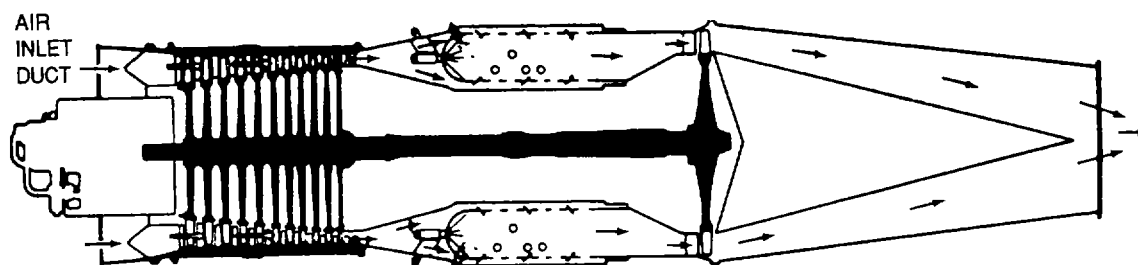


Figure 8-3. Single Entrance Inlet Duct (Axial-Flow Engine)

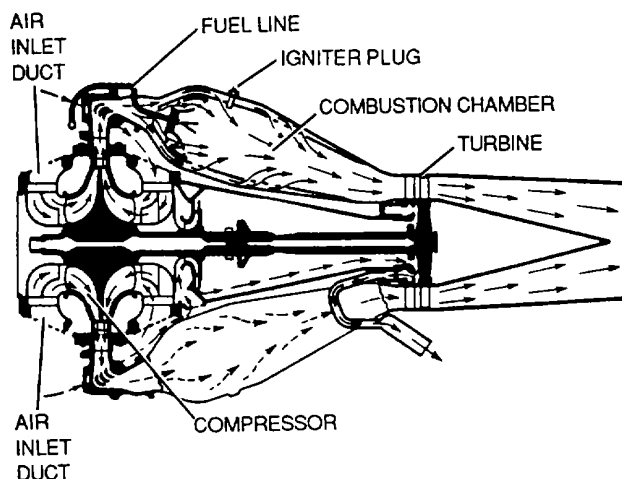


Figure 8-4. Divided Entrance Inlet Duct (Centrifugal-Flow Engine)

air received from the air inlet duct and then discharge it to the burners in the quantity and at the pressure required. A secondary function of the compressor is to supply bleed-air for various purposes in the engine and aircraft.

(1) *Centrifugal-flow compressor.* The centrifugal-flow compressor consists basically of an Impeller (rotor), a diffuser (stator), and a compressor manifold, as shown in figure 8-6. The compressor achieves its purpose by picking up the entering air and accelerating it outwardly by centrifugal action.

(2) *Axial-flow compressor.* In the axial-flow engine, the air is compressed while continuing in its original direction of flow, thus avoiding the energy loss caused by turns. From inlet to exit the air flows along an axial path and is compressed at a ratio of approximately 1.25:1 per stage. The axial-flow compressor has two main elements, a rotor and a stator, as shown in figure 8-7. The rotor has blades fixed on a spindle. These blades impel air rearward in the same manner as a propeller because of their angle and airfoil contour. The rotor, turning at high speed, takes in air at the compressor inlet and impels it through a series of stages. The action of the rotor increases the compression of the air at each stage and accelerates it rearward through several stages. With this increased velocity, energy is transferred from the compressor to the air in the form of velocity energy. The stator blades act as diffusers at each stage, partially converting high velocity to pressure. Each consecutive pair of rotor and stator blades constitutes a pressure stage. The number of rows of blades (stages) is determined by the amount of air and total pressure rise required. The greater the number of stages, the higher the compression ratio.

b. Particle Separators. Particle separators, as shown in figure 8-5, prevent foreign particles from entering the compressor section of turbine engines. Air enters the engine through the swirl frame. Swirl vanes direct the air into a rotating or swirling pattern. Sand, dust, and other foreign objects are separated by centrifugal action. These objects are carried to the outer section of the main frame and into the scroll case. Particles are drawn from the scroll case by the blower and are blown out the aircraft discharge duct. The relatively clean air that remains after particles are separated is carried to the front frame deswirl vanes, which straighten the air flow before it enters the compressor inlet.

c. Compressor Section. The compressor section of a turbine engine has many functions. Its primary function is to supply air in sufficient quantity to satisfy the requirements of the combustion burners. The compressor must increase the pressure of the mass of

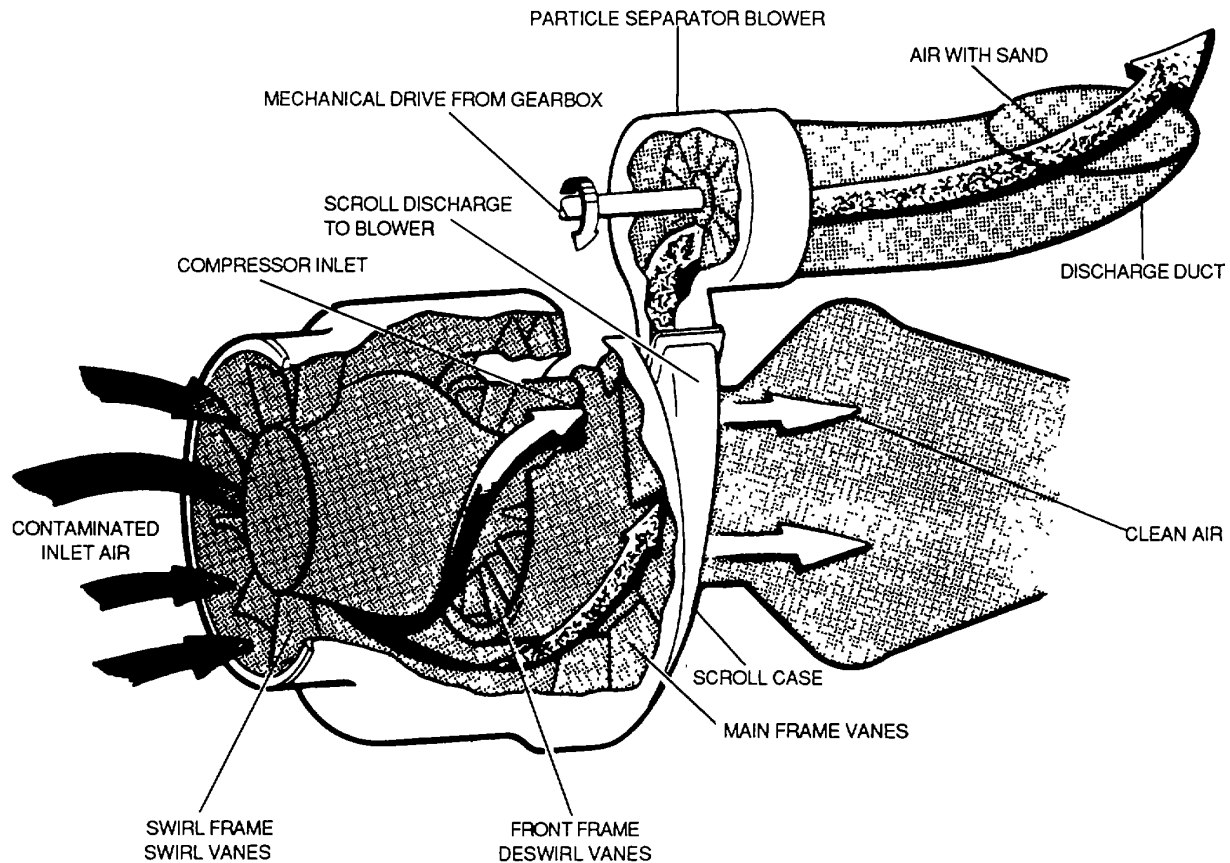


Figure 8-5. Particle Separator

d. Diffuser Section. The diffuser increases the compressor discharge area and reduces the speed of the centrifugal impeller airflow, causing the air pressure to increase. This pressurized air is directed to the combustor through the diffuser case. The diffuser case mounts on the rear flange of the compressor stator; it directs compressor discharge air to the combustion chamber.

e. Combustion Section. The combustion section houses the combustion process, which raises the temperature of the air passing through the engine. This process releases energy contained in the air-fuel mixture. The major part of this energy is required at the turbine to drive the compressor. The remaining energy creates the reaction or propulsion and passes out the rear of the engine in the form of a high-velocity jet. The location of the combustion section is directly between the compressor and the turbine sections. The combustion chamber is always arranged coaxially with the compressor and turbine regardless of type, since the

chambers must be in a through-flow position to function efficiently.

Can-Type. The can-type combustion is typical of the type used on both centrifugal and axial-flow engines. Figure 8-8 illustrates the arrangement for can-type combustion. The engine combustion cans are numbered in a clockwise direction facing the rear of the engine with the No. 1 can at the top. The can-type combustion consists of an outer case or housing, which is perforated stainless steel (highly heat resistant) (See Figure 8-9).

f. Turbine Section. The turbine transforms a portion of the kinetic (velocity) energy of the exhaust gases into mechanical energy to drive the compressor and accessories. This is the sole purpose of the turbine and this function absorbs approximately 60 to 80 percent of the total pressure energy from the exhaust gases. The turbine assembly consists of two basic elements, the stator and the rotor, as does the compressor unit. These two elements are shown in figure 8-10.

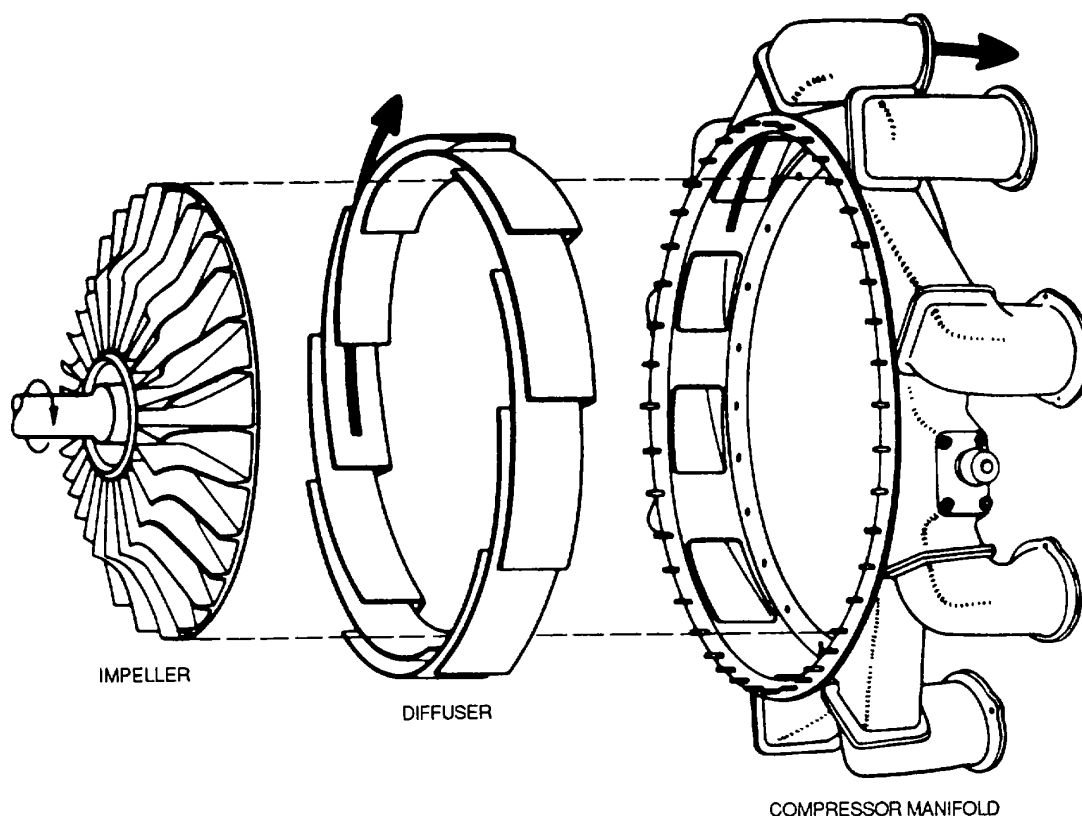


Figure 8-6. Centrifugal-Flow Compressor Components

g. Exhaust Section. The exhaust section of a turbine engine is made up of several components, each of which has its individual functions. Although the components have individual purposes, they also have one common function. They must direct the flow of hot gases rearward in such a manner as to prevent turbulence and at the same time impart a high final or exit velocity to the gases.

h. Accessory Section. The accessory section of a turbine engine has various functions. The primary function is to provide space for the mounting of accessories necessary for operation and control of the engine. Generally, it also includes accessories concerned with the aircraft, such as electric generators and fluid power-pumps. Secondary functions include acting as an oil reservoir and/or oil sump, and housing the accessory drive gears and reduction gears.

i. Governors and Fuel Controls. Governors and fuel controls used on turbine engines are explained in the

following paragraphs.

(1) *Governors.* The speed-sensitive control and speed-set governor are discussed in the following paragraphs.

(a) *Speed-sensitive control.* The speed-sensitive control, as shown in figure 8-11, is mounted on the tachometer pad of the accessories housing. It contains three switches which are actuated at certain speeds by a flyweight system. During a start, one switch turns on the fuel and ignition, parallels fuel pump elements, energizes the starting fuel enrichments system when fuel enrichment switch is on, and closes the drip valve. Another switch shuts off the ignition, deenergizes the drip valve (which is then held closed by fuel pressure), and shifts the fuel pumps from parallel to series operation. Still another switch shifts the temperature datum control from start limiting and limits the temperature datum valve to a certain reduction of engine fuel flow.

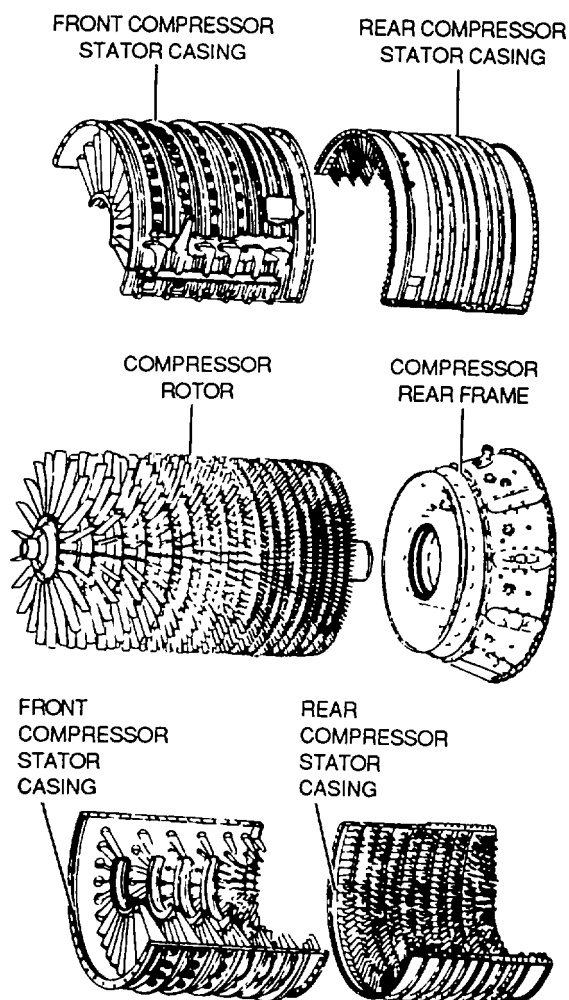


Figure 8-7. Rotor and Stator Components of an Axial-Flow Compressor

(b) *Speed-set governor.* The speed-set governor, as shown in figure 8-12, controls the position of the governor servo. It is a centrifugal, permanent-droop type governor driven by the engine high-speed rotor (N_2) through a gear train. As engine speed increases, the fly-weights tend to move outward, lifting the speed set pilot valve. Conversely, when engine speed decreases, the fly-weights move inward and the pilot valve is lowered. The power lever in the cockpit positions the speed-setting cam in the fuel control unit to manipulate a system of levers and thus control the compression of the speeder spring. The speeder spring exerts force on the speed-set pilot valve. The condition of on-speed indicates the speeder spring force and the flyweight force are equal.

(2) *Fuel controls.* Fuel controls can be divided into two basic groups hydromechanical and electronic. The fuel control senses power lever position, engine rpm, either compressor inlet pressure or temperature, and burner pressure of compressor discharge pressure. These variables affect the amount of thrust that an engine will produce for a given fuel flow.

(a) *Hydromechanical fuel controls.* Hydromechanical fuel controls are extremely complicated and are composed of speed governors, servo systems, sleeve and pilot valves, feedback or follow up devices, and metering systems.

(b) *Electron/c fuel controls* Electronic fuel controls contain the same items as the hydromechanical fuel control as well as amplifiers, thermocouples, relays, electrical servo systems, switches, and solenoids.

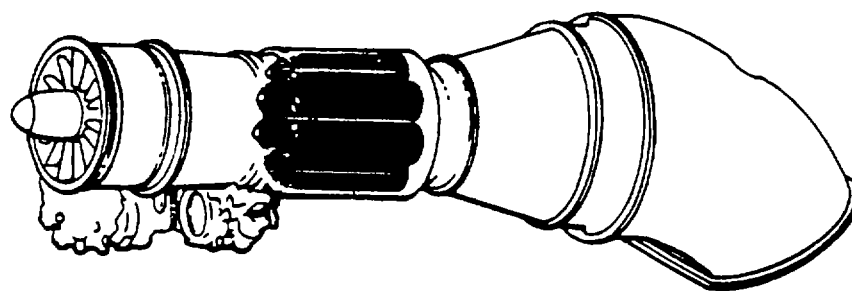


Figure 8-8. Can-Type Combustion Chamber Arrangement

TM 1-1500-204-23-1



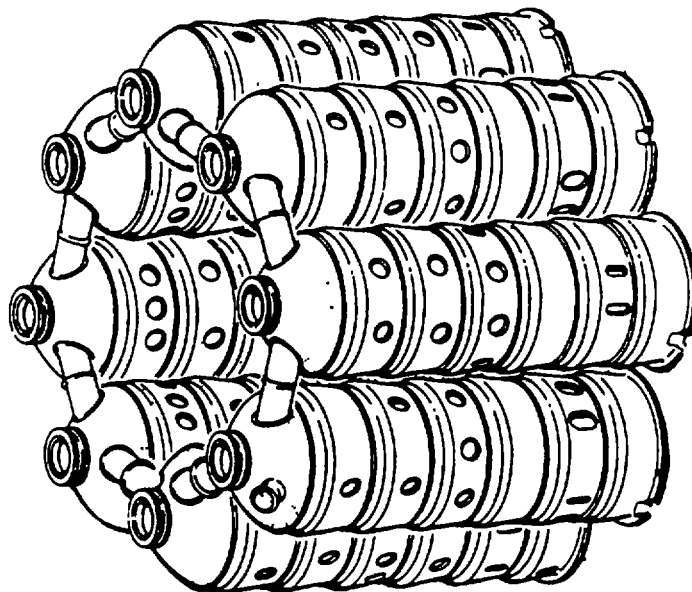


Figure 8-9. Can-Type Combustion Chamber

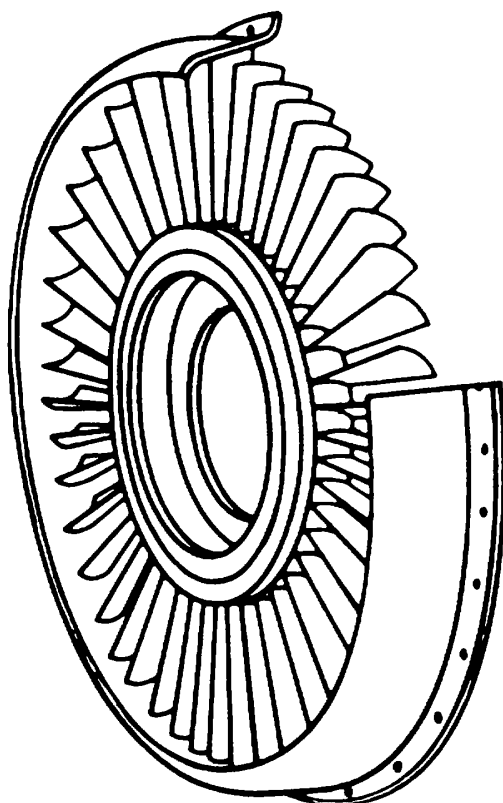

STATOR ELEMENT

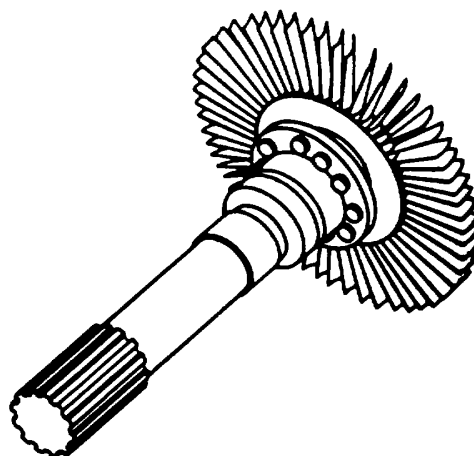

ROTOR ELEMENT

Figure 8-10. Turbine Assembly Elements

j. Ignition Systems. Turbine ignition systems are operated for a brief period during the engine-starting cycle, and, as a rule, more trouble-free than the typical reciprocating engine ignition system. Most turbine engines are equipped with a high-energy, capacitor-type ignition system

(1) System components. A typical ignition system includes two exciter units, two transformers, two intermediate ignition leads, and two high-tension leads. Thus, as a safety factor, the Ignition system is actually a dual system, designed to fire two igniter plugs. Figure 8-13 shows one side of a typical Ignition system.

(2) Igniter plugs. The igniter plug of a turbine engine ignition system differs considerably from the spark plug of a reciprocating engine ignition system. Its electrode must be capable of withstanding a current of much higher energy than the electrode of a conventional spark plug. This high-energy current can quickly cause electrode erosion, but the short periods of operation minimize this aspect of Igniter maintenance. The

electrode gap of the typical igniter plug is designed much larger than that of a spark plug, since the operating pressures are much lower and the spark can arc more easily than is the case for a spark. Finally, electrode fouling, so common to the spark plug, is minimized by the heat of the high-intensity spark. Typical igniter plugs are shown in figure 8-14.

k. Fuel Systems. The fuel system must deliver to the combustion chambers not only in the right quantity, but also in the right condition for satisfactory combustion. The fuel nozzles form part of the fuel system and atomize or vaporize the fuel so that it will ignite and burn efficiently. The fuel system must also supply fuel so that the engine can be easily started on the ground and in the air. This means that the fuel must be injected into the combustion chambers in a combustible condition when the engine is being turned over slowly by the starting system, and that combustion must be sustained while the engine is accelerating to its normal running speed.

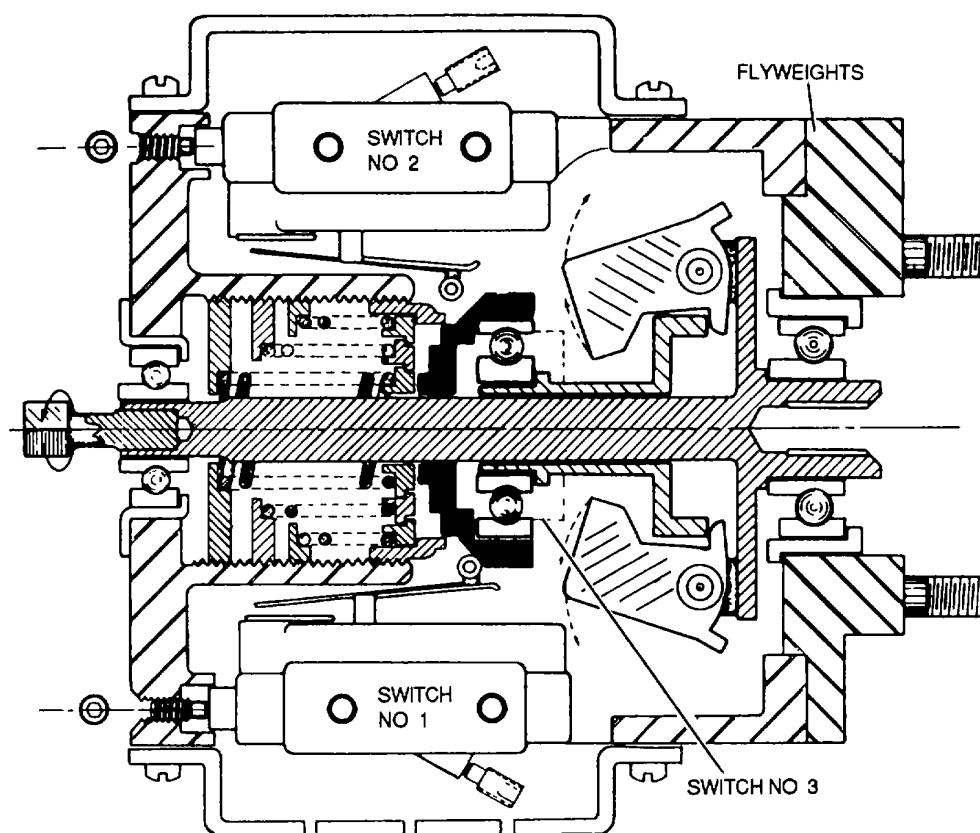


Figure 8-11. Speed-Sensitive Control

TM 1-1500-204-23-1

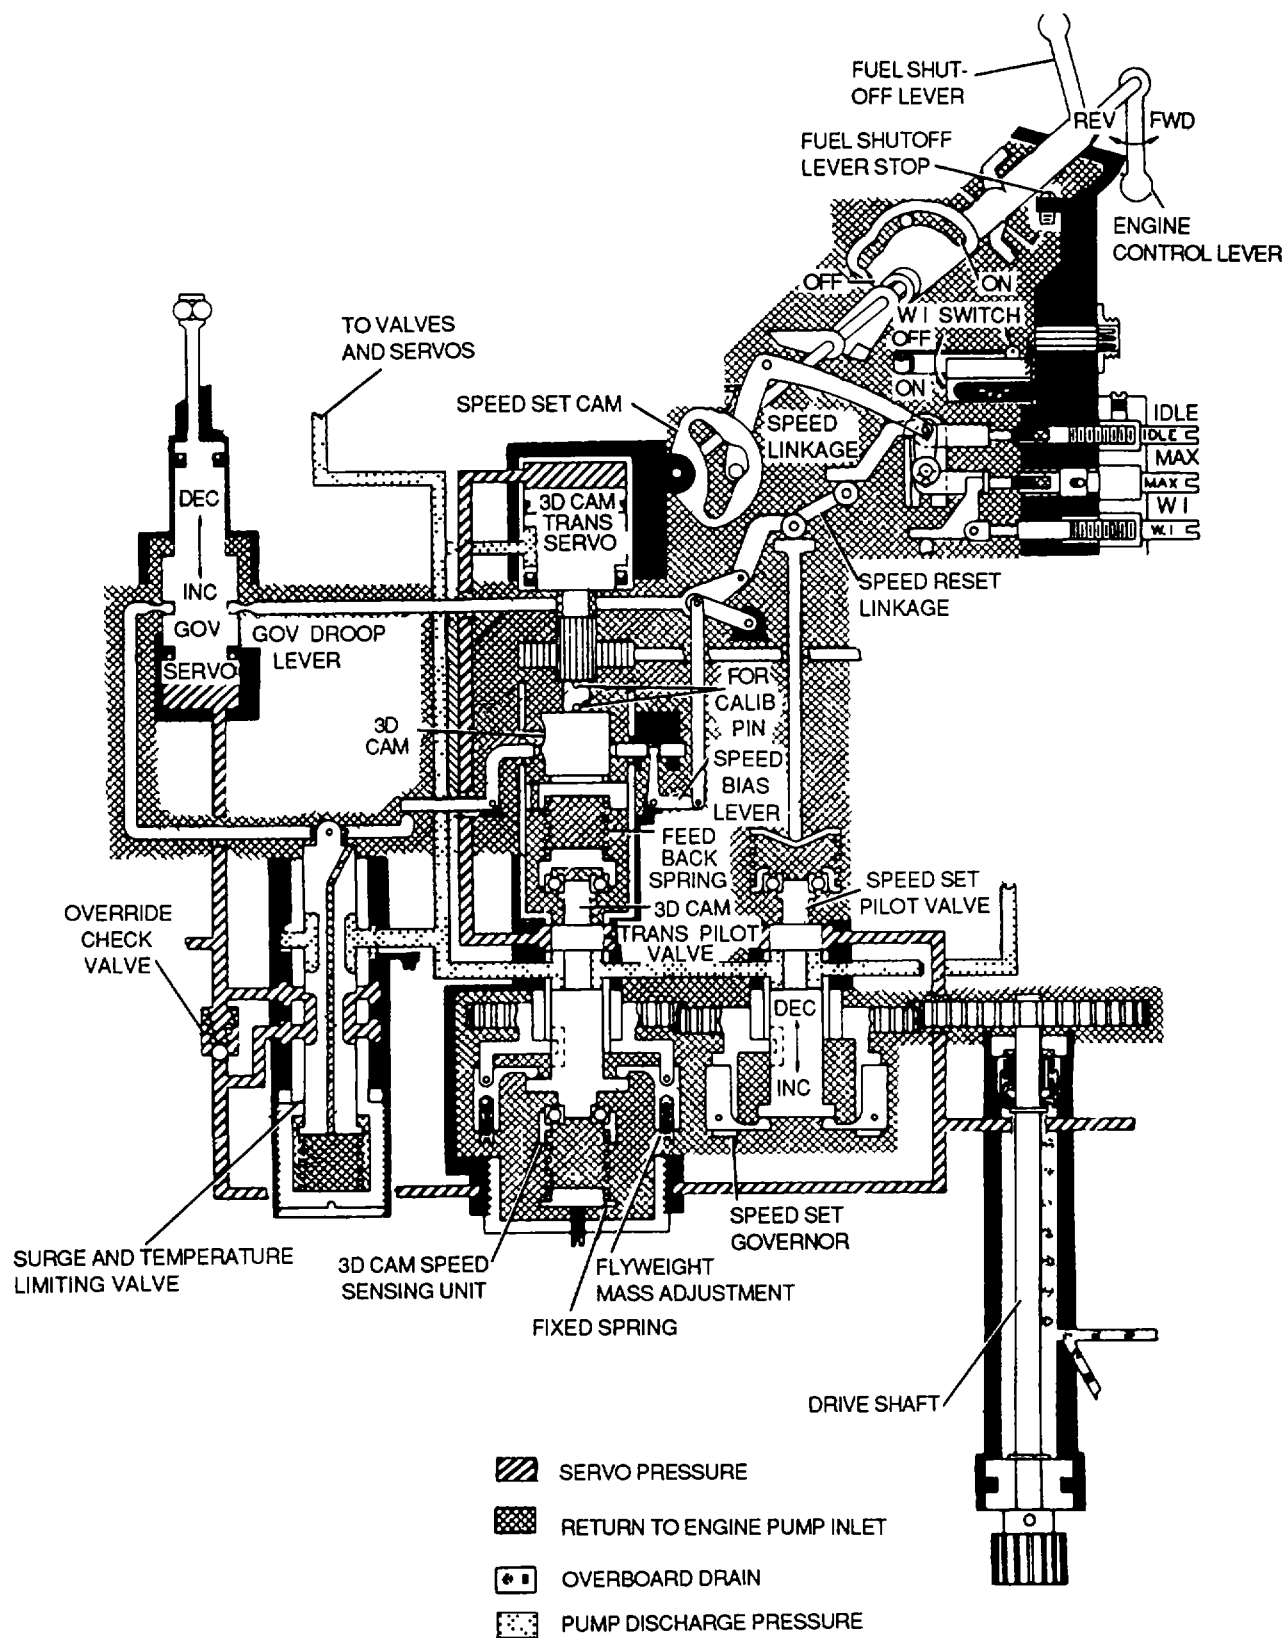


Figure 8-12. Speed-Set Governor

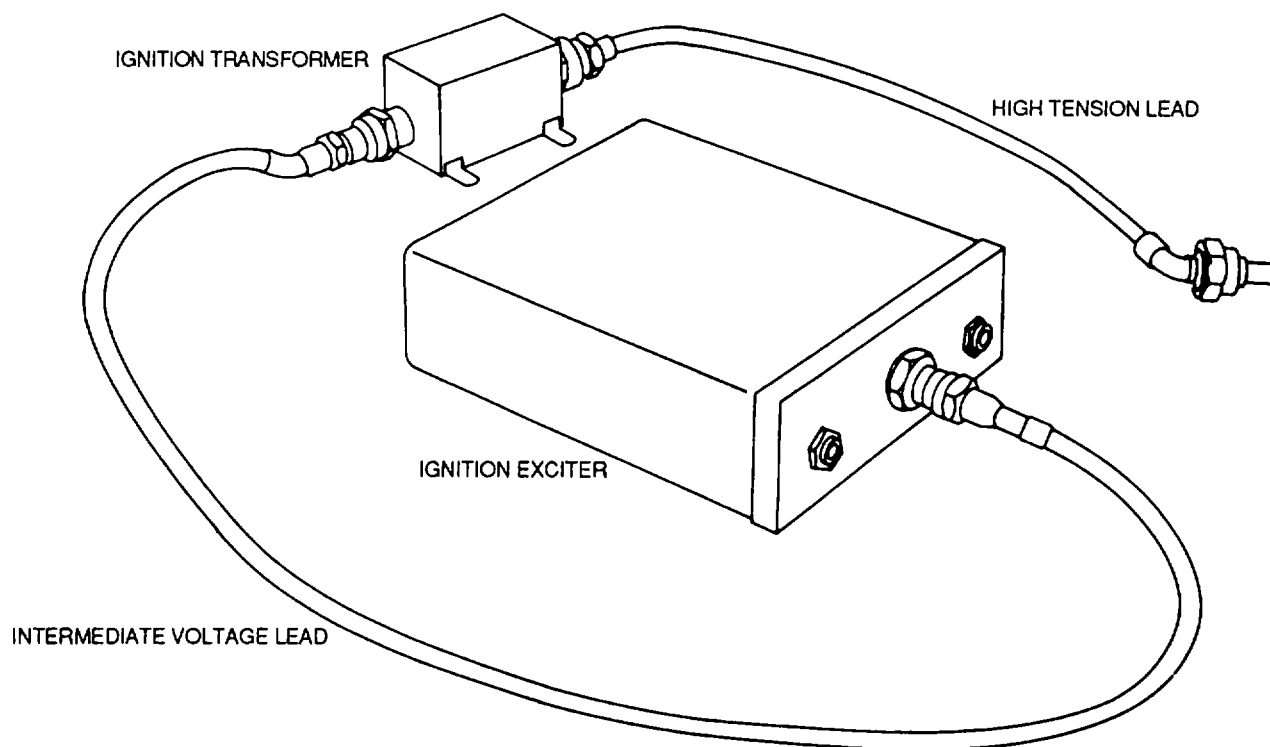


Figure 8-13. One Side of a Typical Ignition System

(1) *Fuel controls.* Regardless of the type, all fuel controls accomplish essentially the same functions, but some sense more engine variables than others. The fuel control senses power lever position, engine rpm, either compressor inlet pressure or temperature, and burner pressure or compressor discharge pressure. These variables affect the amount of thrust that an engine will produce for a given fuel flow.

(2) *Fuel nozzles.* The fuel nozzles inject fuel into the combustion area in a highly atomized, precisely patterned spray so that burning is completed evenly and in the shortest possible time and in the smallest possible space. Fuel nozzle types vary considerably between engines, although for the most part fuel is sprayed into the combustion area under pressure through small orifice in the nozzles. The two types of fuel nozzles generally used are the simplex and the duplex configurations.

(a) *Simplex fuel nozzle.* The simplex fuel nozzle was the first type nozzle used in turbine engines and was replaced in most installations with the duplex nozzle, which gave better atomization at starting and idling speeds. The simplex nozzle, as shown in figure 8-15, is still being used to a limited degree. Each of the simplex nozzles consists of a nozzle tip, an insert, and a strainer made up of fine-mesh screen and a support.

(b) *Duplex fuel nozzle.* The duplex fuel nozzle is the nozzle most widely used in present-day gas turbine engines. The duplex nozzle usually requires a dual manifold and a pressurizing valve or flow divider for dividing primary and main fuel flow into a desirable spray pattern for combustion over a wide range of operating pressures. A nozzle typical of this type is shown in figure 8-16.

(3) *Fuel filters.* A low-pressure filter is installed between the supply tanks and the engine fuel system to protect the engine-driven fuel pump and various control devices. An additional high-pressure fuel filter is installed between the fuel pump and the fuel control to protect the fuel control from contaminants. The three most common types of filters in use are the micron filter, the wafer screen filter, and the plain screen mesh filter. The individual use of each of these filters is dictated by the filtering treatment required at a particular location.

8-6. Turbine Engine Inspection and Maintenance.

Turbine engines shall be inspected and maintained in accordance with the applicable maintenance manual. General procedures for various components and systems are explained in the following paragraphs.

TM 1-1500-204-23-1

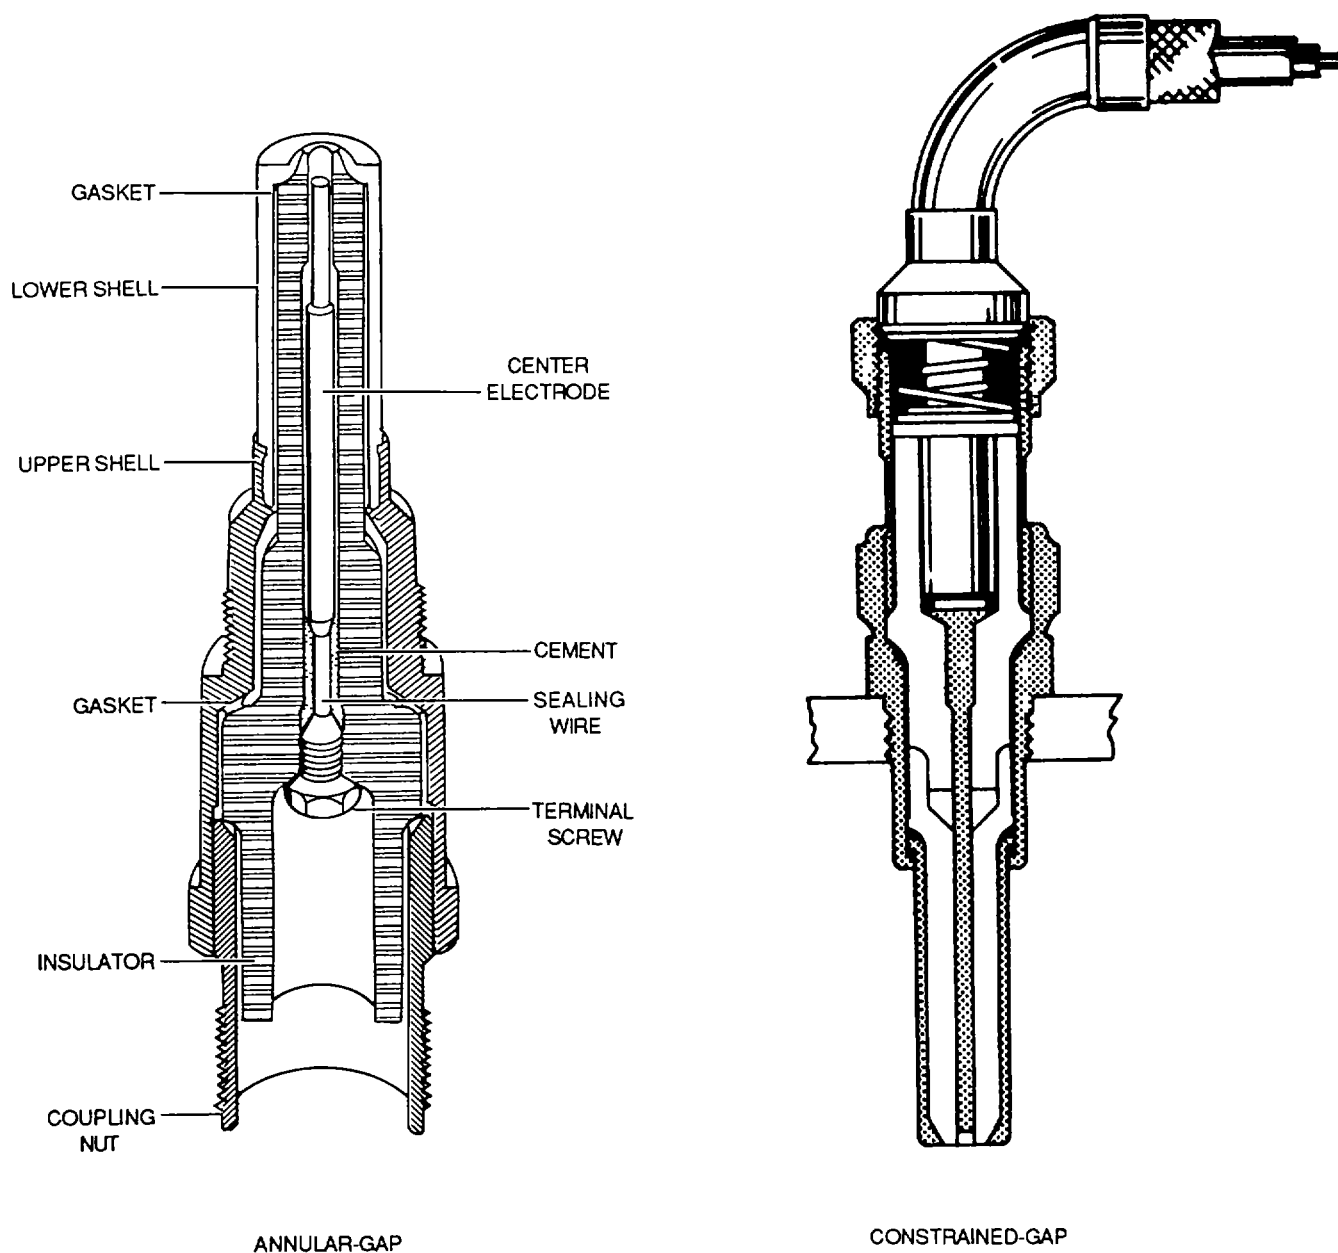


Figure 8-14. Typical Igniter Plugs

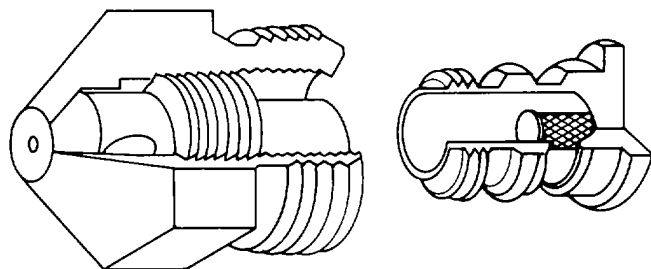


Figure 8-15. Simplex Fuel Nozzle

a. General Procedures. The following procedures shall be adhered to during turbine engine maintenance.

(1) Mark location of all attaching support brackets, clamps, and clips prior to removing lines, tubes, or conduit to facilitate reassembly with a felt tip marker. Use ink conforming to Federal Specification TT-1-544.

(2) Use new O-rings, packing rings, cotter pins, lockpins, gaskets, and washers.

(3) Apply lubricating grease, MIL-G-4343, on all O-rings prior to installation.

(4) Apply thread compound, MIL-A-13881, to all threaded parts attached to the hot section.

(5) When gears are replaced, examine for pattern wear and backlash.

b. Health Indication Test. The Health Indication Test (HIT) is the method by which the aviator in day-to-day flying monitors the aircraft engine condition. This is accomplished by the aviator selecting an N1 speed (%) predicated upon the existing Free Air Temperature (FAT). The Interstage Turbine Temperature (ITT) must then relate to a predicated value (Baseline ITT) within a certain tolerance. ITT variation from baseline values are logged by the aviator in accordance with the applicable maintenance manual. This log, part of the engine records, is available to the maintenance officer as an aid in monitoring performance trends and in troubleshooting. When the difference between a recorded ITT and the baseline ITT is 20°C (68°F) or greater the aviator will make an entry on DA Form 2408-13 to notify the maintenance officer. A difference of 30°C (86°F) or greater is cause for grounding the aircraft.

until troubleshooting determines the cause of the excessive ITT. New ITT baseline values for HIT should be established after performing a baseline engine performance check. A new engine performance check should be made when an engine is changed, when the fuel control unit is adjusted or replaced, or when repairs are made to the engine hot section.

c. Hot Start Inspection. A hot start occurs when exhaust gas temperature exceeds normal starting temperature limit.

NOTE

A hot start may be expected when a greater-than-normal starting fuel flow is observed just as the power lever is moved into the IDLE position.

d. Turbine Engine Analysis Check (TEAC). A normal Turbine Engine Analysis Check (TEAC) is performed for comparison of normal TEAC data with baseline data. This will confirm whether or not performance degradation has occurred and to what degree. In addition, TEAC data can be an aid in determining the cause of the performance loss (Refer to TEAC troubleshooting). A normal TEAC shall be performed whenever installed engine performance degradation is suspected or as part of a general test flight (if applicable).

e. Foreign Object Damage Inspection. Most damage incurred by the engine is the result of ingestion of foreign objects. Although screens are provided in the lower aft cowl section and around the engine compressor inlet case to prevent entry of larger objects, sand and grit will enter and cause compressor damage. The resultant damage will be in the form of nicks or scratches on the compressor blades. Such a nick or scratch can cause fatigue failure hours later, with disastrous effects to the entire engine.

CAUTION

When maintenance is performed on the engine, every effort shall be made to retrieve any object (wire, rivets, nuts, screws, etc.) dropped through the compressor inlet screen or into the cowl, even if engine disassembly is required. Damage to the engine may otherwise result.

TM 1-1500-204-23-1

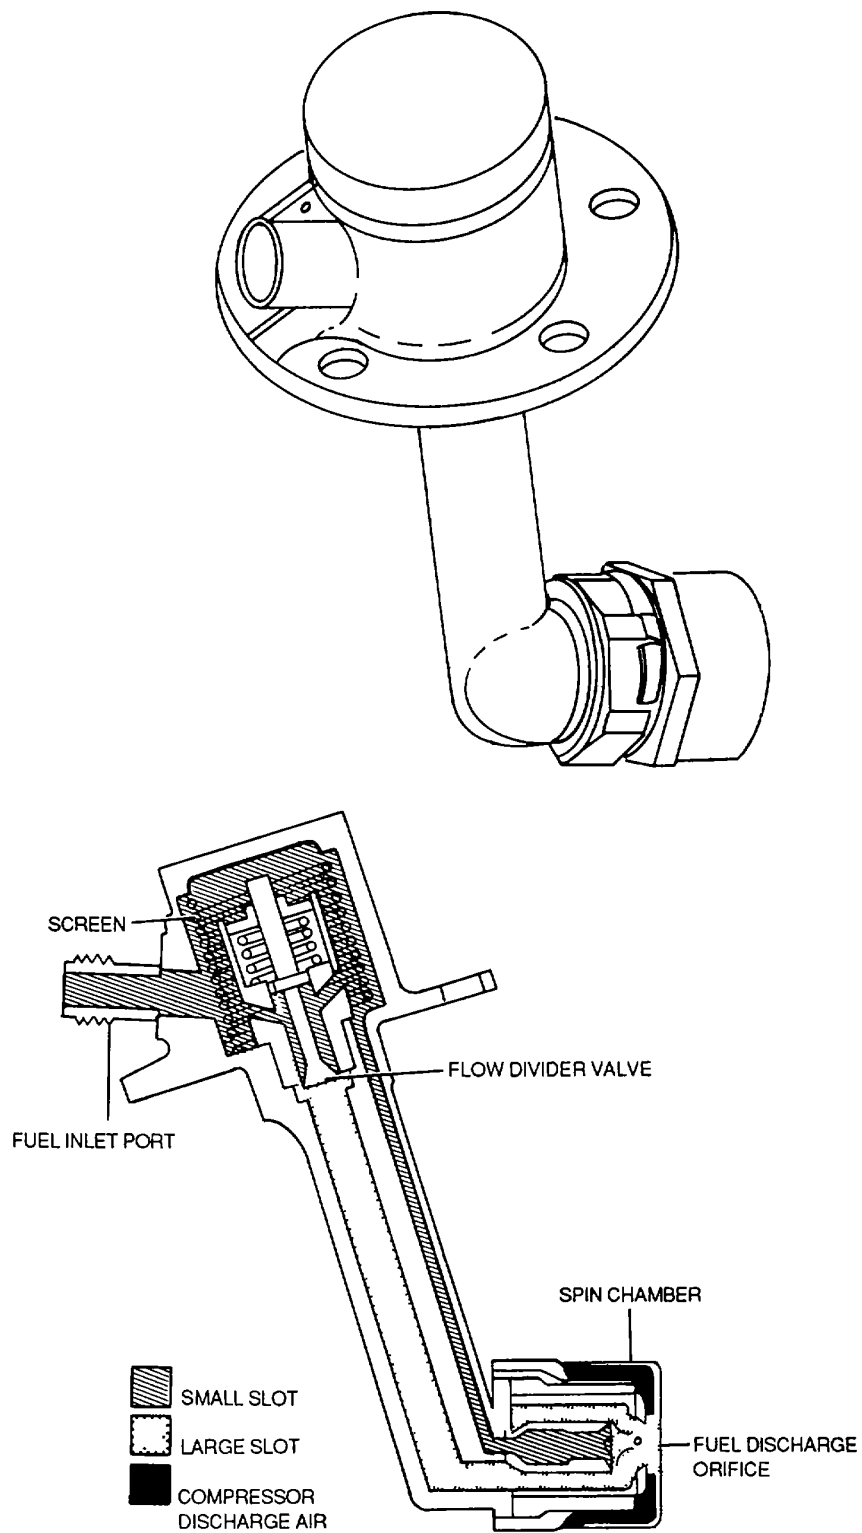


Figure 8-16. Duplex Fuel Nozzle

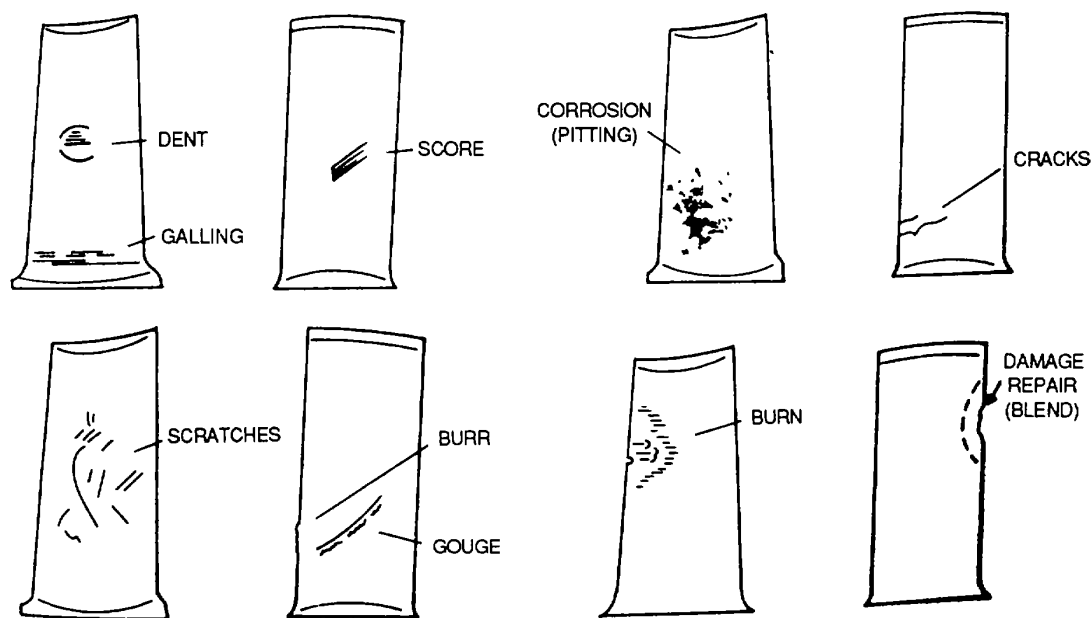


Figure 8-17. Compressor Blade Damage

f. Compressor Cleaning. Compressor cleaning consists of internal washing of the compressor with a cleaning compound which is intended for use on an engine displaying definite evidence of performance deterioration due to an accumulation of foreign material deposits on the compressor blading. Refer to the applicable maintenance manual for specific procedures.

g. Cold Section Maintenance. Maintenance to cold section components consists of repairing and replacing components as outlined in the specific engine maintenance manual.

h. Compressor. Blade Inspection and Repair. Compressor blades should be inspected for cracks, nicks, scores, scratches, buckling, and burns, as shown in figure 8-17. Minor damage can be repaired if the damage can be removed without exceeding the allowable limits established by the manufacturer. Typical compressor limits are shown in figure 8-18. Repair in accordance with the applicable maintenance manual.

i. Hot Section Maintenance. The following are repairs that can be made to the hot section of a turbine engine:

- Weld cracks in combustion chambers that do not exceed repair limitations, using method and procedure which keeps distortion to a minimum.
- Replace any turbine wheel blade found to have be out of repair limits. Check applicable maintenance manual. Turbine blades will only be changed in matched pairs.
- Replace tailpipes when cracked, bent, or distorted.

j. Turbine and Exhaust Maintenance. Maintenance of the turbine and exhaust components consists of repairing and replacing components as outlined in the specific engine maintenance manual.

k. Ignition System Maintenance. Maintenance of the ignition system consists primarily of cleaning, inspection, and replacement of components as explained by the following paragraphs.

(1) Wiring harness. Perform wiring harness maintenance as explained by the following procedures:

TM 1-1500-204-23-1

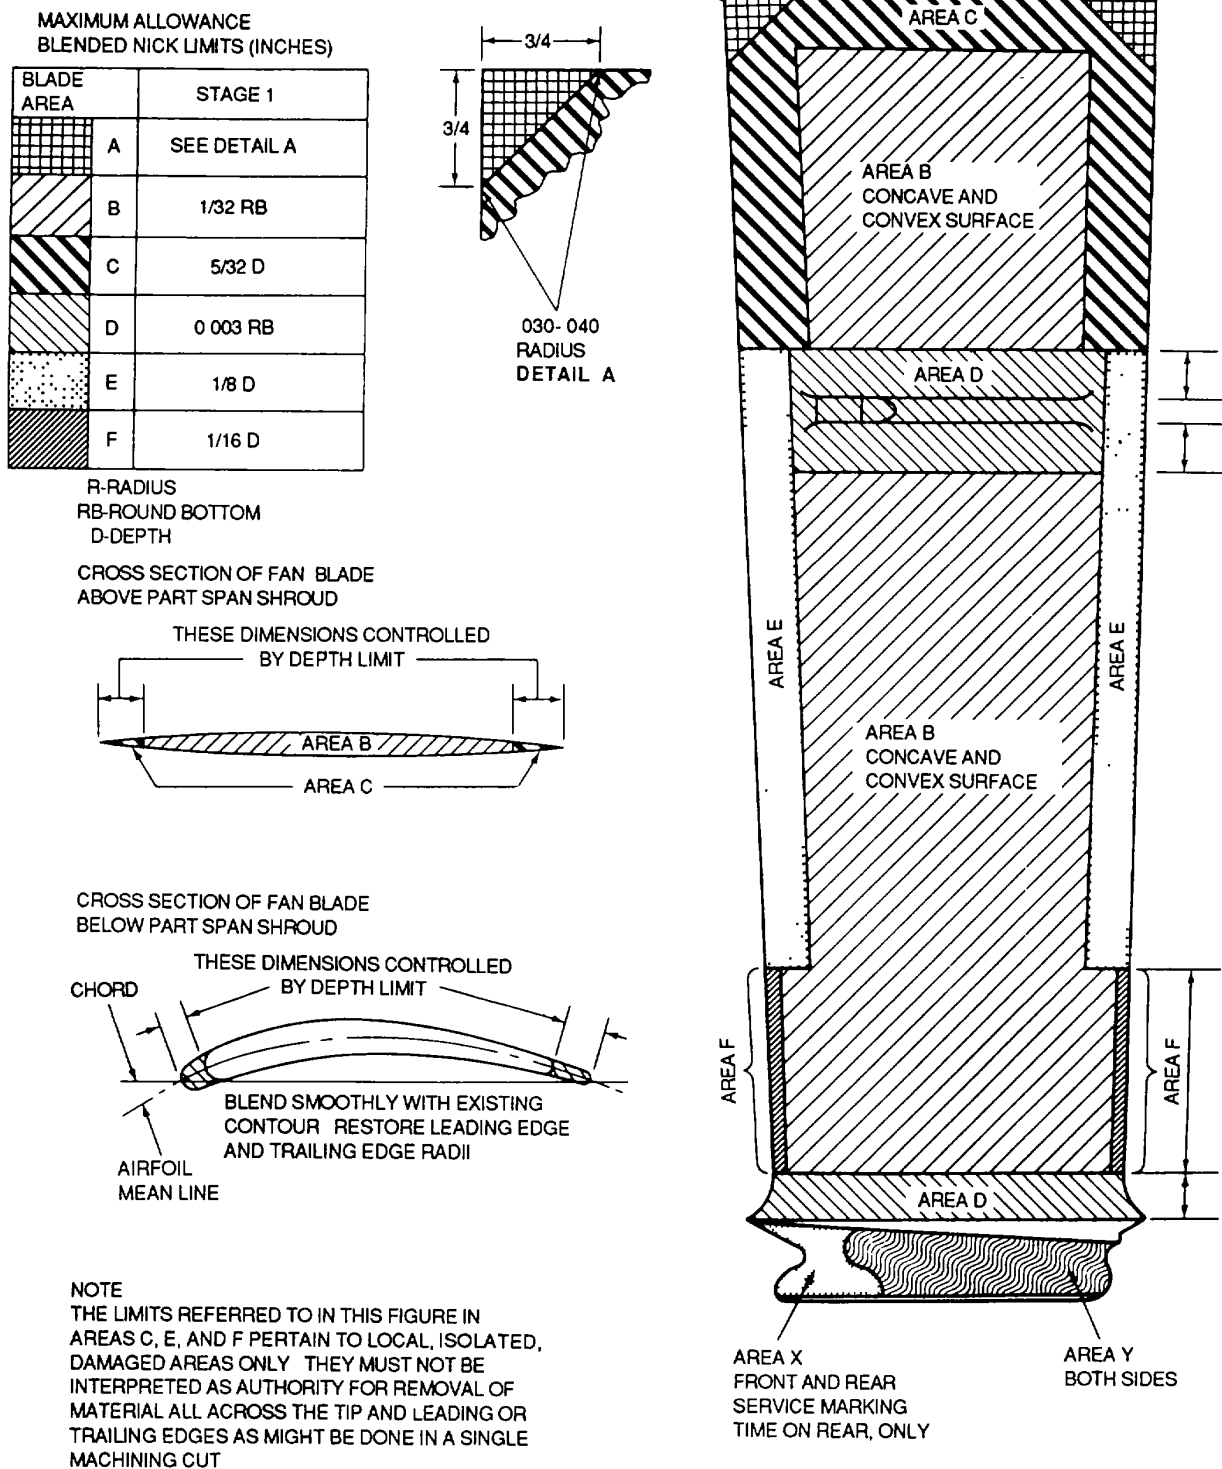


Figure 8-18. Typical Compressor Blade Repair Limits

WARNING

Isopropyl Alcohol, TT-I-735, is flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

Cleaning solvent, HFE-71DE, is toxic to eyes, skin, and respiratory tract, and decomposes into other hazardous products when exposed to extreme heat. Wear chemical protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas. If ventilation is not adequate, use approved respirator as determined by local safety/industrial hygiene personnel. Keep away from open flames, welding, or other sources of extreme heat.

(a) Clean lead assembly with Isopropyl Alcohol, TT-I-735, or HFE-71DE. Replace any lead having fraying shielding, bent or mutilated socket contacts or contact pins, and worn or stripped threads on coupling nuts.

NOTE

Minor chafing or fraying to the extent of not more than three broken strands in one inch of harness length is permissible, providing there is no damage to the underlying insulation.

(b) Clean control harness leads with Isopropyl Alcohol, TT-I-735 or HFE-71DE; dry with air blast. Replace harness when it is found to be open or shorted.

(2) Igniter plugs. Perform igniter plug maintenance as explained by the following procedures:

(a) Keep all igniter unit connections tight and all leads and conduit free from abrasions or other damage. Accomplish the following steps when igniter plugs fail to spark.

1 When two igniter plugs fail to spark, replace one plug and energize system. When plug sparks, replace other plug and retest. Replace igniter unit when plug fails to spark.

2 When one plug fails to spark and a new plug does not remedy defect, replace igniter plug lead. If plug still fails to spark, replace igniter unit.

(b) Igniter plugs not heard firing when engine is started shall be cleaned or replaced as follows:

1 Clean barrel of igniter plugs with a wire brush. Buff threads with a cloth wheel. Do not clean nose end and electrode.

2 Replace plugs with cracked insulation, damaged threads or pin contacts, or when foreign material is found lodged in nose of plug.

3 Replace igniter plugs that fail to produce continuous and regular sparking.

(3) Ignition exciter. Refer to the applicable maintenance manual for ignition exciter maintenance.

l. Turbine Bearing Maintenance. Turbine engine bearings shall be inspected, removed, and replaced in accordance with the applicable maintenance manual.

m. Thermocouple Maintenance. Replace thermocouple leads that indicate a short or an open condition. Clean carbon from thermocouples by dipping in carbon removing compound, MIL-C-19853, and wiping deposit away with a clean cloth.

n. Oil Consumption. Check oil consumption in accordance with the applicable maintenance manual. The following formula can be used to calculate oil consumption in cc per hour:

$$\frac{\text{cc of oil added}}{\text{Recorded operating time in minutes}} \times \frac{60 \text{ min}}{1 \text{ hr}}$$

= Oil consumption time in cc/hr

o. Fuel System. Fuel system maintenance shall be accomplished in accordance with the applicable maintenance manual. General maintenance procedures are described in the following paragraphs.

(1) Fuel control inspection and adjustment. Fuel control inspection and adjustment are explained in the following paragraphs.

(a) Fuel control inspection . Perform the following procedures when inspecting fuel controls:

1 Inspect housing for cracks and leakage.

2 Inspect strainer element for nicks, tears, punctures, and broken wires.

3 Inspect springs and balls for corrosion.

4 Inspect cover for nicks, dents, and scratches.

TM 1-1500-204-23-1

(b) *Fuel control adjustment.* Adjust fuel control in accordance with the applicable maintenance manual. Typical adjustments are made to the following:

- Fuel selector
- Compressor rotor ground idle speed
- Air-bleed band closure
- Compressor rotor maximum speed

- Acceleration schedule

(2) *Fuel nozzle inspection and cleaning.* Inspect and clean fuel nozzles in accordance with the applicable maintenance manual and the following paragraphs.

(a) *Fuel nozzle inspection.* Inspect fuel nozzles in accordance with table 8-1.

Table 8-1. Inspection of Primer Nozzles

| Inspect | Usable limits | Max. repairable limits | Corrective action |
|---|---|---|---|
| 1. Primer nozzle tip for carbon | Any amount not clogging orifice. | Not repairable | Replace nozzle |
| 2. Inlet fitting for missing or damaged threads | Two threads total, missing or damaged, without high metal, if threads can be used without cross-threading | Two threads total, missing or damaged, that can be blended to usable limits | AVUM: Replace nozzle. AVIM: Chase threads. |
| 3. Retaining nut for: | | | |
| a. Cracks | None allowed | Not repairable | Replace retaining nut. |
| b. Missing or damaged threads. | One thread total, missing or damaged, without high metal, If threads can be used without cross-threading | Not repairable | Replace retaining nut. |
| c. Wrench damage on each corner of hex flats. | Any amount, without high metal, if wrench won't slip on nut. | Not repairable | Replace retaining nut. |
| d. Distortion will fit on nut | Any amount if wrench | Not repairable. | Replace retaining nut |
| e. Discoloration | Any amount | Not applicable. | Not applicable. |
| f. Nicks and scratches, except on threads | Any number, 1/64 inch deep, without high metal. | Not repairable | Replace retaining nut. |

(b) Fuel nozzle cleaning. Clean fuel nozzles using the following procedures:

WARNING

Degreasing Solvent, MIL-PRF-680, is combustible and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames or other sources of ignition.

1 Clean using degreasing solvent and a brush.

2 Remove residue with a clean lint-free cloth.

WARNING

When using compressed air for cleaning, use approved protective equipment for eyes and face. Do not use more than 30 psig air pressure. Do not direct air toward yourself or another person. Failure to comply could result in injury to eyes or skin. In case of injury, get medical attention.

3 Blow filtered, compressed air through primer nozzle. Hold nozzle tip in water, and look for stream of air bubbles coming from orifices. The nozzle is clogged if there is no bubbling. Replace nozzle if clogged.

(3) Main fuel filter inspection and cleaning. Inspect and clean main fuel filter in accordance with the applicable maintenance manual and the following paragraphs.

(a) Main fuel filter inspection. Inspect the main fuel filter for cracks, corrosion, pitting, and element contamination.

(b) Main fuel filter cleaning. Clean filter with a cloth dampened in degreasing solvent. Dry using compressed air.

WARNING

DELETED

- When using compressed air for cleaning, use approved protective equipment for eyes and face. Do not use more than 30 psig air pressure. Do not direct airstream toward yourself or another person. Failure to comply could result in injury to eyes or skin.

(4) Fuel control filter inspection and cleaning. Inspect and clean fuel control filter in accordance with the applicable maintenance manual and the following paragraphs.

(a) Fuel control filter inspection. Inspect filter for tears, punctures, broken wires, dents, scratches, and corrosion.

(b) Fuel control filter cleaning. Clean filter using the procedures in paragraph (3)(b).

(5) Governor control inspection and adjustment. Inspect and adjust the governor control in accordance with the applicable maintenance manual.

8-7. REPLACEMENT CRITERIA FOR ENGINES AND COMPONENTS. Replacement criteria for engines and components are explained in the following paragraphs.

a. Engine Replacement Criteria. The following conditions require replacement of the engine:

- When scheduled replacement time is accumulated, as specified in the specific engine maintenance manual.
- When foreign objects enter air intake and damage compressor.
- When overspeeding occurs, inspection or replacement shall be as indicated in the specific engine maintenance manual.

TM 1-1500-204-23-1

- When hot starts or tall pipe temperatures exceed maximum allowable limit for given operating condition, inspection or replacement shall be accomplished in accordance with the applicable maintenance manual.
- When oil system is contaminated with metal particles, proceed as directed in the maintenance manual.

b. Component Replacement Criteria Replace individual turbine engine components as specified in the applicable maintenance manual.

8-8. Marking of Defects on Turbine Engines. Defects in removed parts may be marked by use of a felt-tip marker.

8-9. Turbine Engine Mounts. A typical engine mounting system consists of bipod and tripod assemblies braced by tube assemblies. For specific details of the system, refer to engine section of the applicable maintenance manual. Repair bent, distorted, or chafed areas of mount as specified in the applicable maintenance manual. After repair of any component of engine mount, accomplish a thorough visual and magnetic particle inspection.

8-10. Preservation and Depreservation of Turbine Engines. The preservation and depreservation procedures for each type of turbine engine is specified in the applicable aircraft maintenance manual.

8-11. Removal and Installation of Turbine Engines. Removal and installation of turbine engines is explained in the following paragraphs. Refer to the applicable maintenance manual.

a. Preparation for Removal. Accomplish the following general steps before removal.

- (1) Adequately secure the aircraft either with wheel chocks or with tiedown provisions; attach ground wire or cable to aircraft.
- (2) Open the nacelle doors and support them with the struts. Verify that no external power is connected to the aircraft and that the electric power switch is off.
- (3) Remove the mount access plates from both sides of the nacelle structure.

(4) Remove the engine air-conditioning duct access plate, and disconnect the duct from the engine.

(5) Disconnect the turbine discharge pressure pickup line as shown in figure 8-19.

(6) Disconnect the electrical wiring and the thermocouple leads from the connectors as shown in figure 8-20.

(7) Disconnect the fuel line by removing the bolts from the hose flange as shown in figure 8-21.

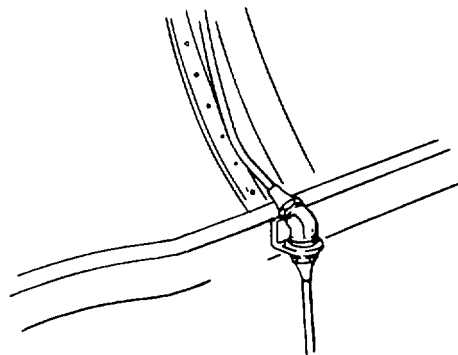


Figure 8-19. Turbine Discharge Pressure Pickup Line

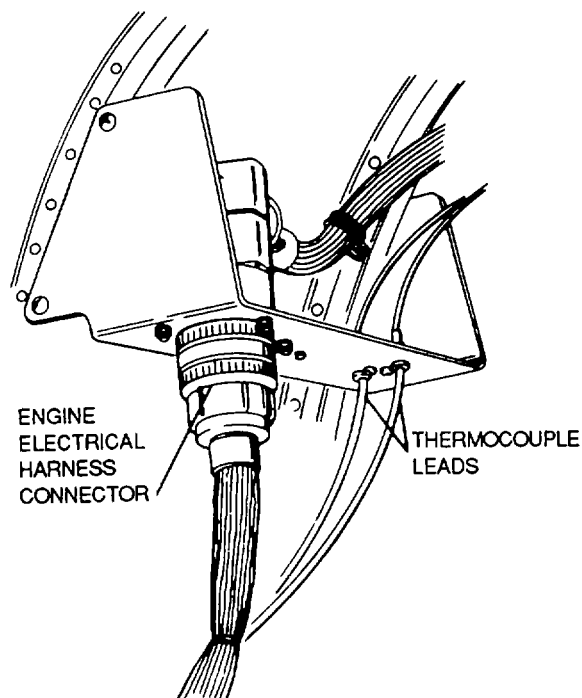


Figure 8-20. Electrical Disconnect

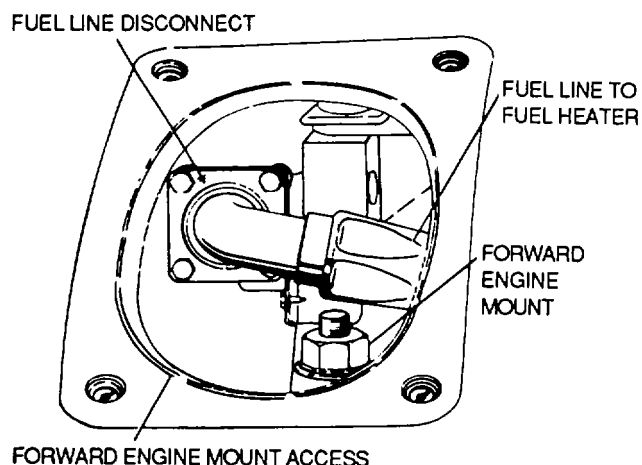


Figure 8-21. Fuel Line Disconnect

(8) Disconnect the power control rod, as shown in figure 8-22, from the power control lever cross-shaft linkage at the threaded end disconnect. Secure the power control rod to the nacelle structure.

b. Removal. The powerplant may be removed from the aircraft by either of the two methods. One method involves lowering the powerplant from the nacelle by using an engine dolly. The other method requires hoists and a special sling to lower the powerplant to a movable engine stand. Refer to the applicable aircraft maintenance manual.

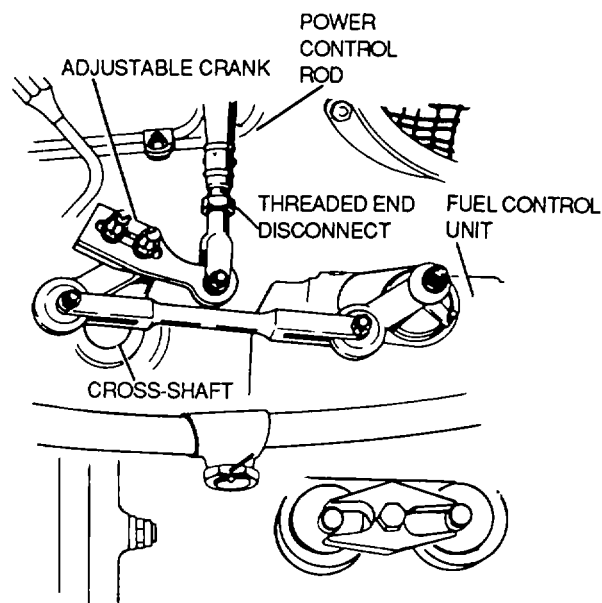


Figure 8-22. Power Lever Disconnect

c. Preparation for Installation. Installation of aircraft powerplants will be installed in accordance with the applicable maintenance manual.

d. Installation. Install engine in accordance with applicable maintenance manual

CHAPTER 9

GENERAL AIRFRAME MAINTENANCE

9-1. General. The maintenance instructions and procedures contained in this chapter are general and applicable to airframe maintenance of Army aircraft. Maintenance instructions that are specific and peculiar to particular airframes are contained in the applicable maintenance manuals and will be used in conjunction with general information contained in this chapter.

9-2. Landing Gear Systems. The landing gear of an aircraft consists of main and auxiliary units, either of which may or may not be retractable. The main landing gear forms the principle support of the aircraft on land or water and may include any combination of wheels, floats, skis, shock-absorbing equipment, brakes, retracting mechanism with controls and warning devices, cowling, fairing, and structural members necessary to attach any of the foregoing to the primary structure. The auxiliary landing gear consists of tail or nose wheel installations, outboard pontoons, skids, etc, with necessary cowling and reinforcement

9-3. Retractable Landing Gear Systems. Retractable landing gear systems are explained in the following paragraphs.

a. Types. The electric and hydraulic landing gear retraction systems are explained in the following paragraphs.

(1) *Electric landing gear retraction system.* The electric landing gear retraction system is an electrically driven jack for raising or lowering the gear, as shown in figure 9-1. When a switch in the cockpit is moved to the UP position, the electric motor operates. Through a system of shafts, gears, adapters, an actuator screw, and a torque tube, a force is transmitted to the drag strut linkages. Thus, the gear retracts and locks. If the switch is moved to the DOWN position, the motor reverses and the gear moves down and locks.

(2) *Hydraulic landing gear retraction system.* Devices used in a typical hydraulically operated landing gear retraction system include actuating cylinders, selector valves, uplocks, downlocks, sequence valves, turbine, and other conventional hydraulic components. These units are interconnected so that they permit properly sequenced retraction and extension of the

landing gear and the landing gear doors. Figure 9-2 shows a typical hydraulic landing gear retraction system.

b. Emergency Extension Systems. The emergency extension system lowers the landing gear if the main power system fails. Some aircraft have an emergency release handle in the cockpit, which is connected through a mechanical linkage to the gear uplocks. When the handle is operated, it releases the uplocks and allows the gear to free-fall, or extend, under their own weight. On other aircraft, release of the uplock is accomplished using compressed air which is directed to uplock release cylinders. Some installations are designed so that either hydraulic fluid or compressed air provides the necessary pressure, while others use a manual system for extending the landing gears under emergency conditions. Hydraulic pressure for emergency operation of the landing gear may be provided by an auxiliary hand pump, an accumulator, or an electrically powered hydraulic pump, depending upon the design of the aircraft.

c. Safety Devices. Accidental retraction of a landing gear may be prevented by such safety devices as mechanical downlocks, safety switches, and ground locks. Mechanical downlocks are built-in parts of a gear-retraction system and are operated automatically by the gear-retraction system. To prevent accidental operation of the downlocks, electrically operated safety switches are installed.

(1) *Safety switch.* A landing gear safety switch, as shown in figure 9-3, in the landing gear safety circuit is usually mounted in a bracket on one of the main gear shock struts. This switch is actuated by a linkage through the landing gear torque links. The torque links spread apart or move together as the shock strut piston extends or retracts in its cylinder. When the strut is compressed (aircraft on the ground), the torque links are close together, causing the adjusting links to open the safety switch. During takeoff, as the weight of the aircraft leaves the struts, the struts and torque links extend, causing the adjusting links to close the safety switch. As shown in figure 9-3, a ground is completed when the safety switch closes. The solenoid then energizes and

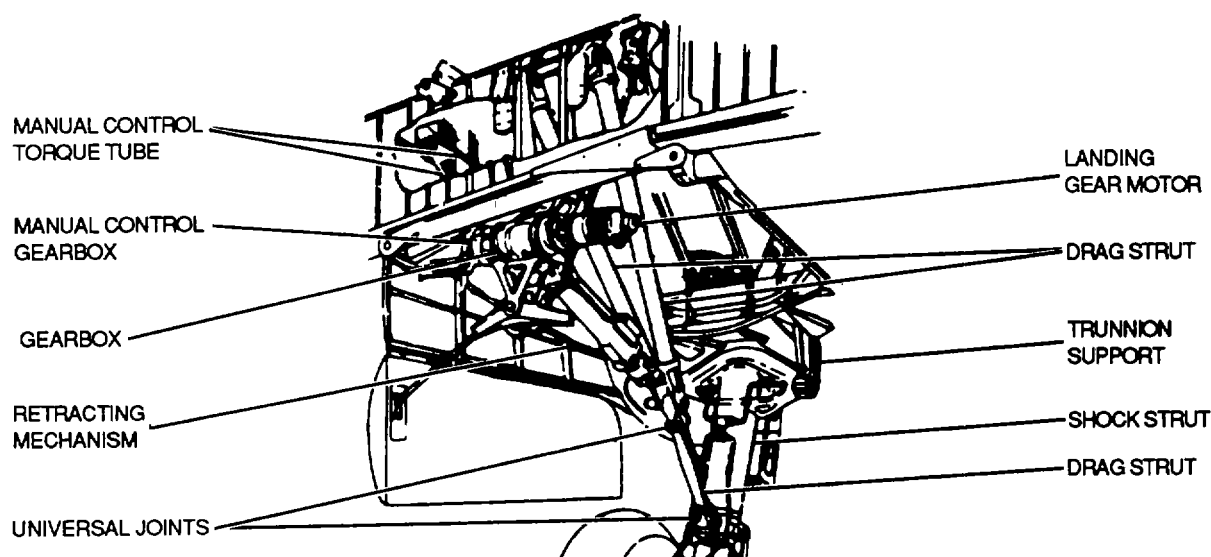


Figure 9-1. Electric Retraction System

unlocks the selector valve so that the gear handle can be positioned to raise the gear

(2) *Ground locks.* Ground locks prevent landing gear collapse when the aircraft is on the ground. One common type is a pin installed in aligned holes drilled in two or more units of the landing gear support structure. Another type is a spring-loaded clip designed to fit around and hold two or more units of the support structure together. All types of ground locks usually have red streamers permanently attached to them to readily indicate whether or not they are installed.

d. *Gear Position Indicators.* To provide a visual indication of landing gear position, indicators are installed in the cockpit or flight compartment. Gear warning devices are incorporated on all retractable gear aircraft and usually consist of a horn or some other aural device and a red warning light.

e. *Nosewheel Centering.* Aircraft are commonly provided nosewheel steering capabilities through a simple system of mechanical linkage hooked to the rudder pedals. Most common applications utilize pushpull rods to connect the pedals to horns located on the pivotal portion of the nosewheel strut.

f. *Retraction Test.* Inspect landing gear for obvious damage, then accomplish retraction test, inspecting for the following items.

- Landing gear for proper retraction and extension
- Switches, lights, and warning horn for proper operation
- Landing gear doors for clearance and freedom from binding
- Landing gear linkage for proper operation, adjustment, and general condition
- Latches and locks for proper operation and adjustment
- Alternate extension or retraction systems for proper operation
- Any unusual sounds such as those caused by rubbing, binding, chafing, or vibration.

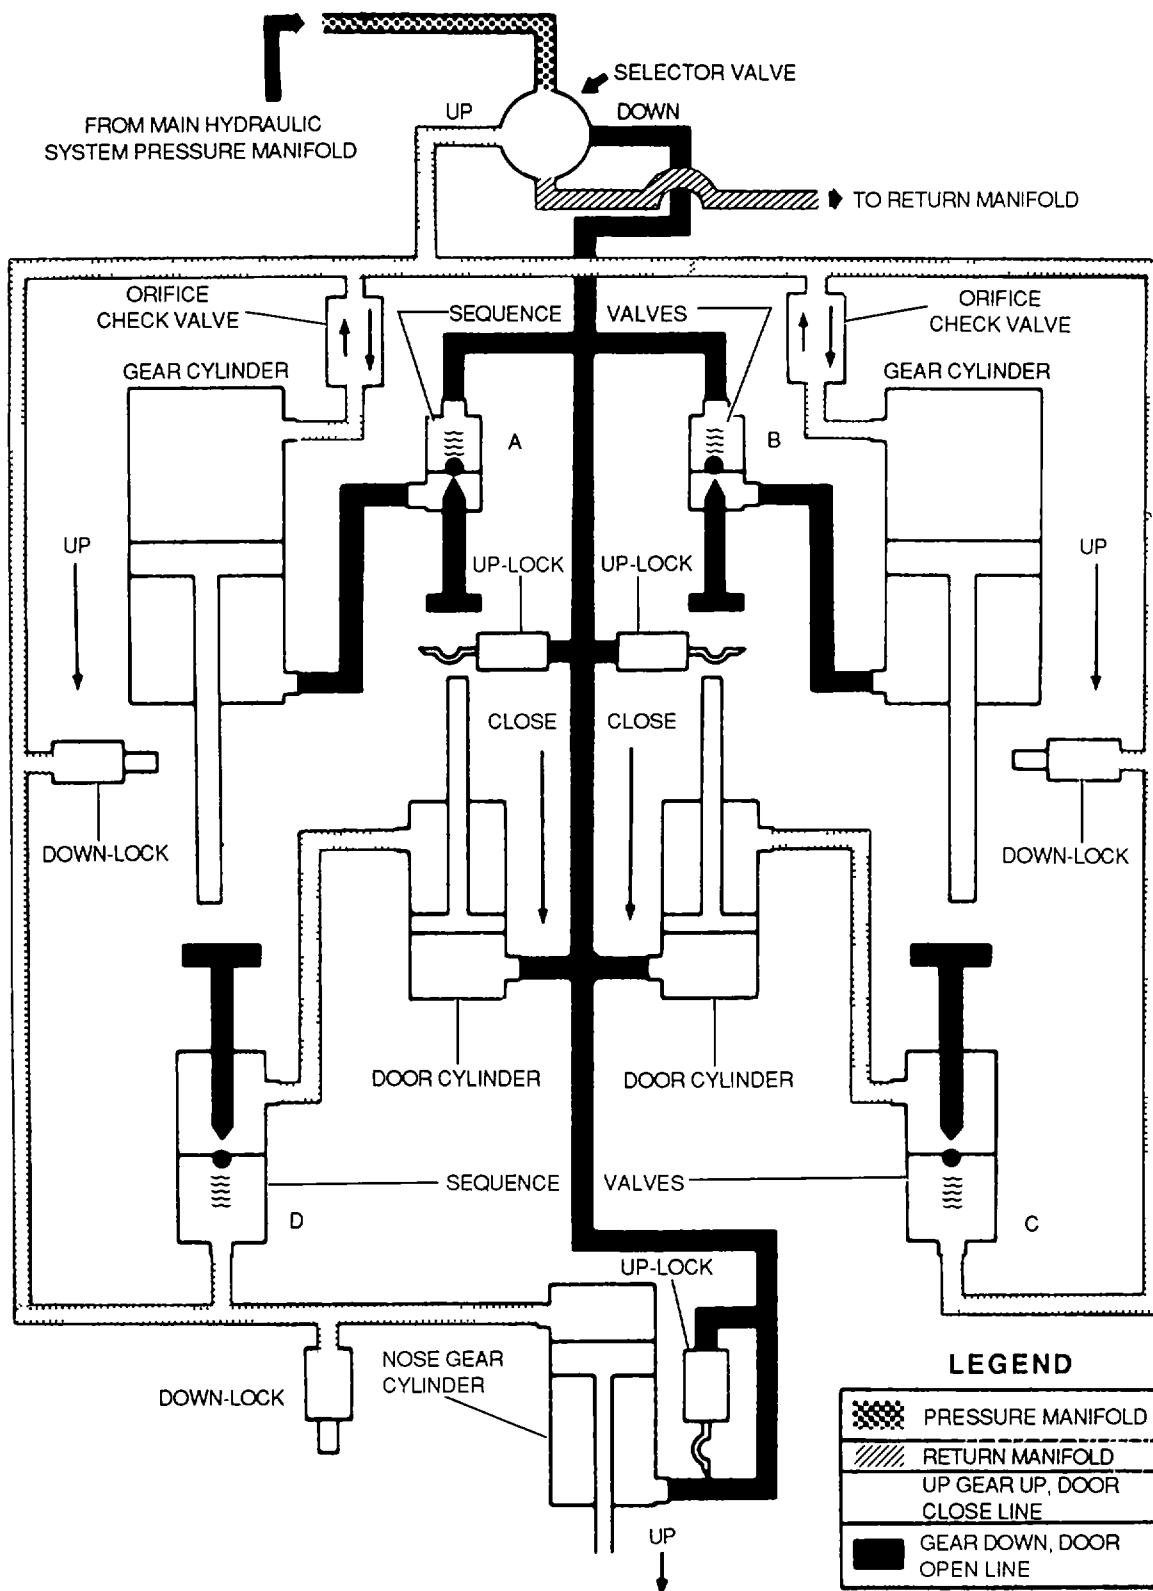


Figure 9-2. Hydraulic Landing Gear Retraction System Schematic

TM 1-1500-204-23-1

9-4. Troubleshooting of Landing Gear Systems.

The troubleshooting procedures for electrical and hydraulic landing gear systems is in the applicable maintenance manuals.

9-5. Shock Struts. Shock struts, as shown in figures 9-4 and 9-5, are self-contained hydraulic units that support an aircraft on the ground and protect the aircraft structure by absorbing and dissipating the tremendous shock loads of landing. Shock struts must be inspected and serviced regularly to function efficiently.

a. Shock Strut Operation. The compression stroke of the shock strut begins as the aircraft wheels touch the ground, the center of mass of the aircraft continues to move downward, compressing the strut and sliding the inner cylinder into the outer cylinder. The metering pin is forced through the orifice and, by its variable shape, controls the rate of fluid flow at all points of the compression stroke. In this manner the greatest possible amount of heat is dissipated through the walls of the shock strut. At the end of the downward stroke, the compressed air is further compressed, limiting the compression stroke of the strut. The extension stroke occurs at the end of the compression stroke as the energy stored in the compressed air causes the aircraft to start moving upward in relation to the ground and wheels. At this instant, the compressed air acts as a spring to return the strut to normal. It is at this point that a snubbing or damping effect is produced by forcing the fluid to return through the restrictions of the snubbing device (See figure 9-6).

b. Shock Strut Servicing. The following procedures are typical of those used in deflating a shock strut, servicing with hydraulic fluid, and reinflating

(1) Position the aircraft so the shock struts are in the normal ground operating position. Make certain that personnel, workstands, and other obstacles are clear of the aircraft. (Some aircraft must be placed on licks to service the shock struts).

(2) Remove the cap from the air valve.

(3) Check the swivel hex nut for tightness with a wrench

WARNING

Always stand to one side of the valve, since high-pressure air can cause serious injury, e.g., loss of eyesight.

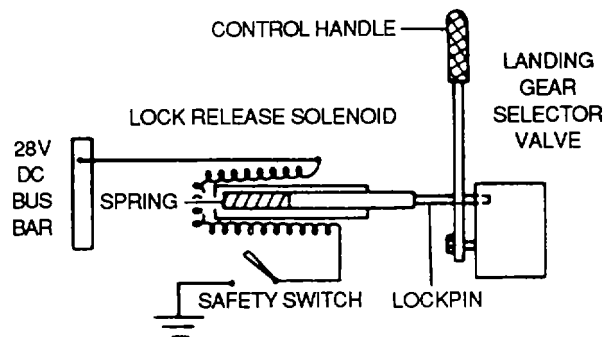


Figure 9-3. Landing Gear Safety Circuit

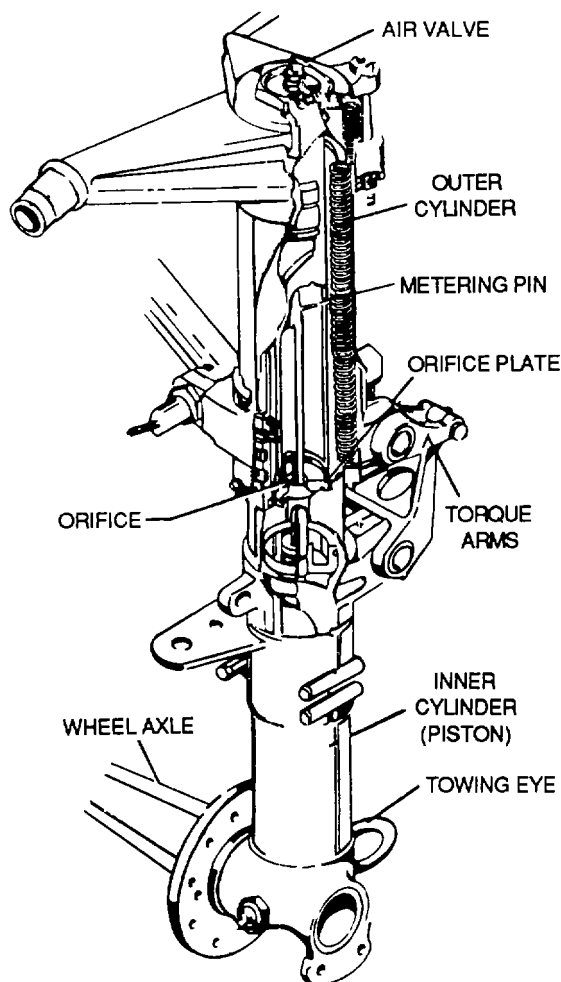


Figure 9-4. Landing Gear Shock Strut of the Metering Pin Type

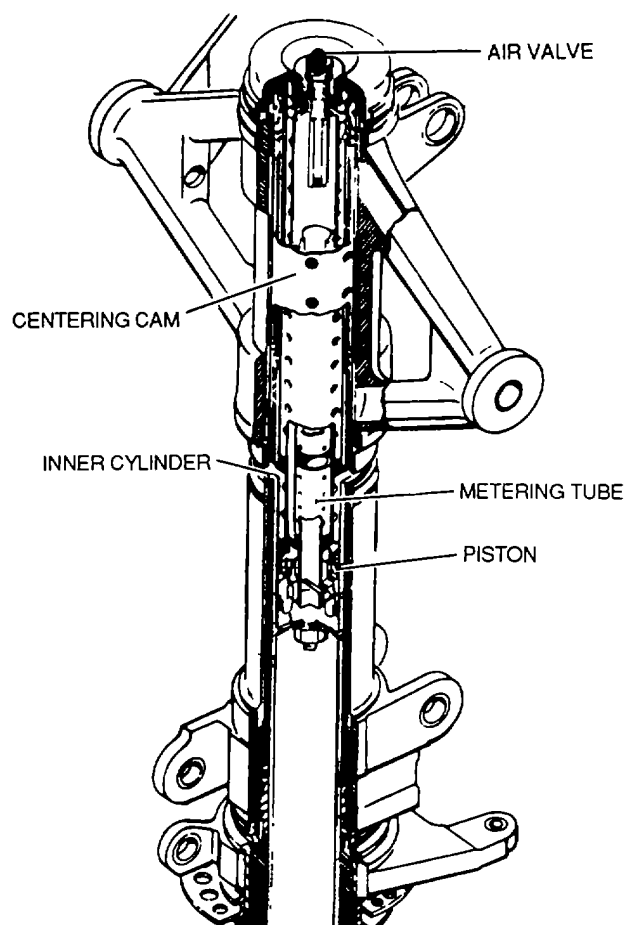


Figure 9-5. Landing Gear Shock Strut of the Metering Tube Type

(4) If the air valve is equipped with a valve core, release any air pressure that may be trapped between the valve core and the valve seat by depressing the valve core.

(5) Remove the valve core.

(6) Release the air pressure in the strut by slowly turning the swivel nut counterclockwise.

(7) Ensure that the shock strut compresses as the air pressure is released. In some cases, it may be necessary to rock the aircraft after deflating to ensure compression of the strut.

(8) When the strut is fully compressed, the air valve assembly may be removed.

(9) Fill the strut to the level of the air valve opening with an approved type of hydraulic fluid.

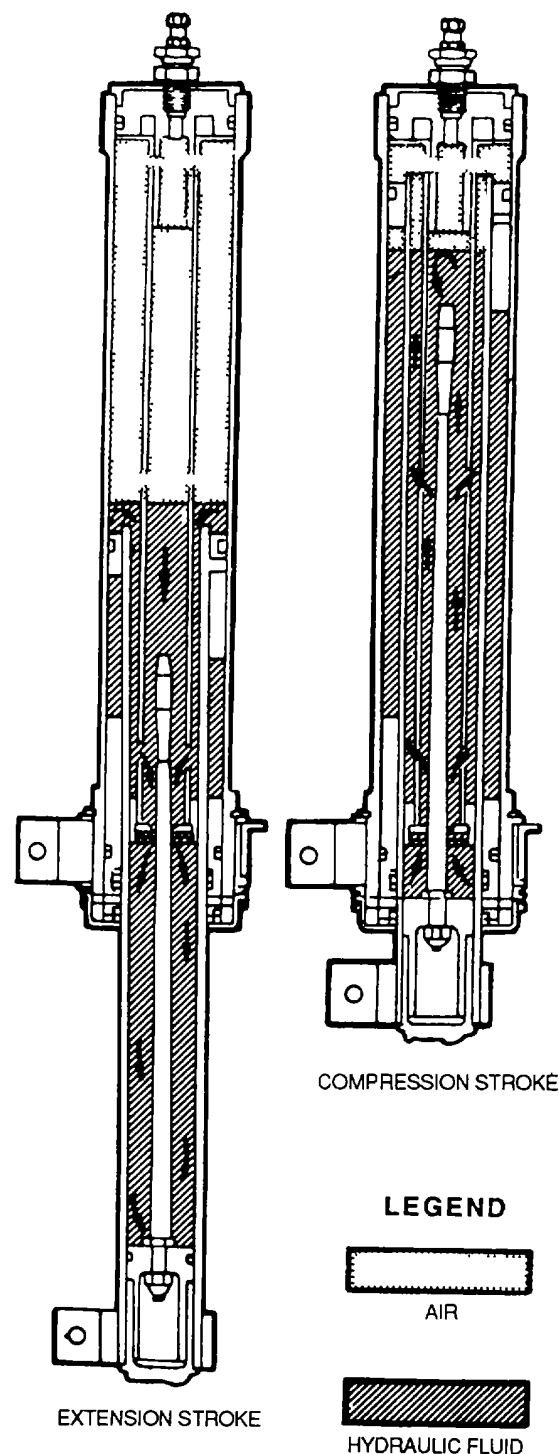


Figure 9-6. Shock Strut Operation

TM 1-1500-204-23-1

(10) Re-install the air valve assembly, using a new O-ring packing. Torque the air valve assembly to the values recommended in the applicable maintenance manual.

(11) Install the air valve core.

(12) Inflate the strut, using a high-pressure source of dry air or nitrogen.

NOTE

Bottled gas should not be used to inflate shock struts. On some shock struts the correct amount of inflation is determined by using a high-pressure air gauge. On others it is determined by measuring the amount of extension (in inches) between two given points on the strut. The proper procedure can usually be found on the instruction plate attached to the shock strut. Shock struts should always be inflated slowly to avoid excessive heating and over inflation.

(13) Tighten the swivel hex nut, using the torque values specified in the applicable maintenance manual.

(14) Remove the high-pressure air line chuck and install the valve cap. Tighten the valve cap finger-tight.

c. Shock Strut Bleeding. If the fluid level of a shock strut has become extremely low, or if for any other reason air is trapped in the strut cylinder, it may be necessary to bleed the strut during the servicing operation. Bleeding is usually performed with the aircraft placed on jacks. In this position the shock struts can be extended and compressed during the filling operation, thus expelling all the entrapped air. The following is a typical bleeding procedure:

(1) Construct a bleed hose containing a fitting suitable for making an airtight connection to the shock strut filler opening. The base should be long enough to reach from the shock strut filler opening to the ground when the aircraft is on jacks.

(2) Jack the aircraft until all shock struts are fully extended.

(3) Release the air pressure in the strut to be bled.

(4) Remove the air valve assembly.

(5) Fill the strut to the level of the filler port with an approved type hydraulic fluid.

(6) Attach the bleed hose to the filler port and insert the free end of the hose into a container of clean hydraulic fluid, making sure that this end of the hose is below the surface of the hydraulic fluid.

(7) Place an exerciser jack or other suitable single-base jack under the shock strut jacking point. Compress and extend the strut fully by raising and lowering the jack until the flow of air bubbles from the strut has completely stopped. Compress the strut slowly and allow it to extend by its own weight.

(8) Remove the exerciser jack, and then lower and remove all other jacks.

(9) Remove the bleed hose from the shock strut.

(10) Install the air valve and inflate the strut.

d. General Maintenance of Shock Struts. All maintenance personnel should study all technical manuals which pertain directly to the shock strut in question, or aircraft maintenance publications which have a portion of the Instructions devoted to the particular shock strut in question. General maintenance for pneumatic, rubber block, and spring steel shock struts is described in the following paragraphs.

(1) Pneumatic type. Use the following procedures for maintenance of pneumatic type shock struts.

(a) Clean the exposed part of the piston tube using the following procedures.

NOTE

Cleaning of piston tubes reduces excessive wear and possible failure of shock strut packing rings.

1 Remove ice, mud, dust, or sand, then wipe using a clean cloth saturated with hydraulic fluid MIL-H-5606.

2 When extreme ice, dust, mud or sand conditions are encountered, wipe piston tubes before and after each flight.

3 When operating aircraft in freezing temperatures, piston tube can be cleaned more easily

Immediately after landing, as ice will form on tube when aircraft is left standing without tube being cleaned of water, mud and slush.

(b) Maintain proper air-oil levels in struts as specified on data plates. Use hydraulic fluid, MIL-H5606.

(c) Replace pistons having nicks, scratches, or dents deep enough to cause leakage. Replace elongated bushings. Replace struts that have cracked fittings.

(d) When overhauling a pneumatic shock strut, all ferrous metal parts will be magnetic particle inspected for cracks and flaws. Inspection will be accomplished in accordance with applicable maintenance manual.

(2) *Rubber block type.* Replacement of compression and rebound rubber blocks, or adjustment of preload tubes shall be as specified in applicable aircraft maintenance manual

(3) *Spring steel type.* Repairs are limited to burnishing minor nicks, burrs, or scratches Replace cracked struts.

9-6. Landing Gear Alignment. The alignment of aircraft landing gear is too critical, and the tolerances too narrow to deal with the subject in a general manner. Reference will be made to applicable aircraft maintenance manual for specific data relating to landing gear alignment.

9-7. Brake Systems. Brake system types and general maintenance are explained in the following paragraphs.

a. *Brake Types.* The three types of brake systems in general use are the independent, power control, and power boost systems. Each is explained in the following paragraphs.

(1) *Independent systems.* In general, the independent brake system is used on small aircraft. This type of brake system is termed independent because it has its own reservoir and is entirely independent of the aircraft main hydraulic system. Independent brake systems are powered by master cylinders similar to those used in the conventional automobile brake system. The system is composed of a reservoir, one or two master cylinders, mechanical linkage which connects each master cylinder with its corresponding brake pedal, connecting fluid lines, and a brake assembly in each main landing gear wheel as shown in figure 9-7.

(2) *Power control systems.* Power brake control valve systems, as shown in figure 9-8, are used on aircraft requiring a large volume of fluid to operate the brakes. As a general rule, this applies to many large aircraft. Because of their weight and size, large wheels and brakes are required. Larger brakes mean greater fluid displacement and higher pressures, and for this reason independent master cylinder systems are not practical on heavy aircraft. In this system a line is tapped off from the main hydraulic system pressure line.

(3) *Power boost systems.* A typical power boost brake system, as shown in figure 9-9, consists of a reservoir, two power boost master cylinders, two shuttle valves, and the brake assembly in each main landing wheel. In this type of system, a line is tapped off the main hydraulic system pressure line, but main hydraulic system pressure does not enter the brakes. Main system pressure is used only to assist the pedals through the use of power boost master cylinders.

b. *Brake Assemblies.* Brake assemblies commonly used on aircraft are the single-disk, dual-disk. The single and dual-disk types are more commonly used on small aircraft.

(1) *Single-disk brakes.* With the single-disk brake, braking is accomplished by applying friction to both sides of a rotating disk which is keyed to the landing gear wheel. There are several variations of the single-disk brake, however, all operate on the same principle and differ mainly in the number of cylinders and the type

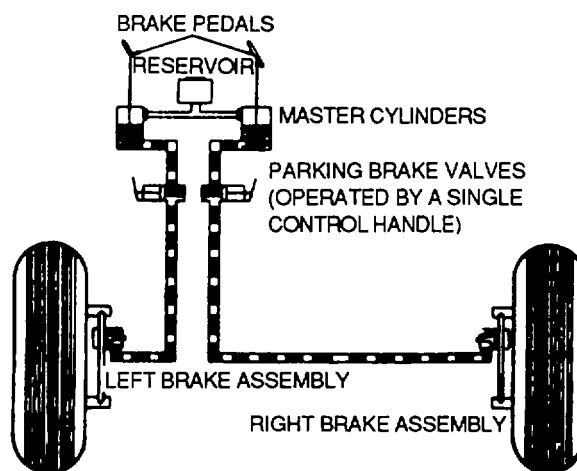


Figure 9-7. Independent Brake System

TM 1-1500-204-23-1

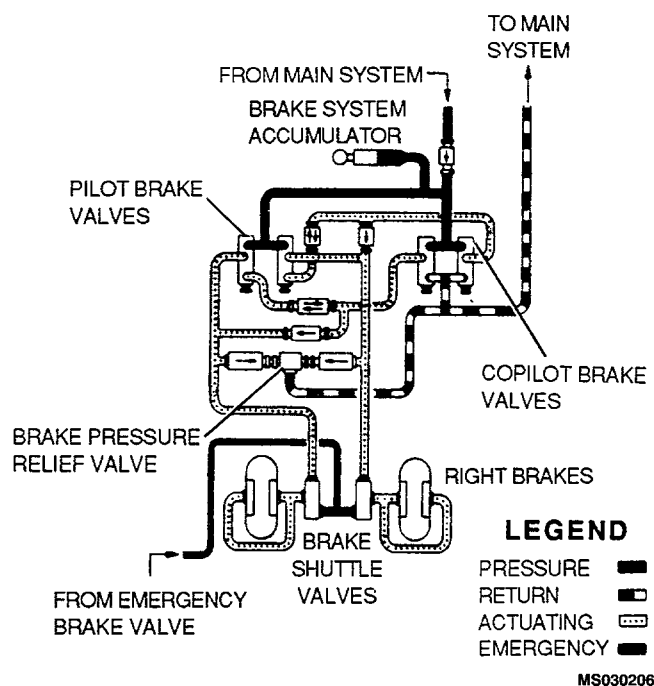


Figure 9-8. Power Control Brake System

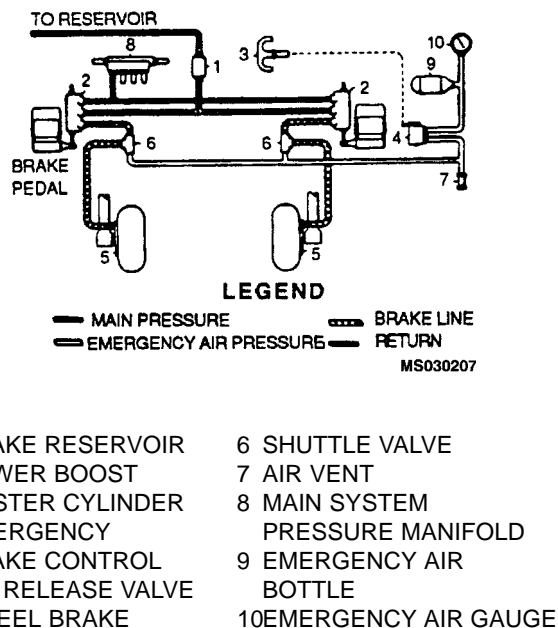


Figure 9-9. Power Boost Brake System

of brake housing. Brake housings may be either the one-piece or divided type. Figure 9-10 shows a single-disk brake installed on an aircraft, with the wheel removed. The brake housing is attached to the landing gear axle flange by mounting bolts.

(2) **Dual-disk brakes.** Dual-disk brakes are used on aircraft when more braking friction is desired. The dual-disk brake is very similar to the single-disk type, except that two rotating disks instead of one are used.

WARNING

Degreasing Solvent, MIL-PRF-680, is combustible and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames or other sources of ignition.

c. **Brake Assembly Cleaning.** Disassemble brake assembly and clean parts with Degreasing Solvent, MIL-PRF-680. Clean using a brush or air spray. Remove all blistered, chipped, or loose paint.

d. **Brake Assembly Inspection.** Inspect brake assemblies using the following general procedures:

(1) Visually inspect brake housing thoroughly for cracks, chipped or worn mounting holes, stripped threads, and corrosion.

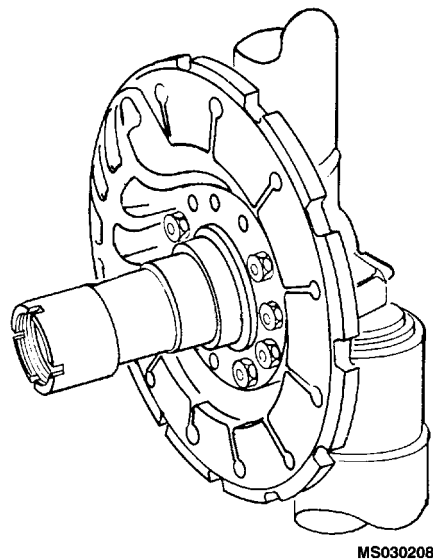


Figure 9-10. Single-Disk Brake

(2) Inspect lining recesses in piston, center carrier, and anvil for indications of wear which could cause loss of lining. Wear of anvil lining recess circumference in excess of 0.005 inch is cause for replacement.

(3) Examine piston cavity for corrosion, excessive wear, or for being out-of-round. When light corrosion extends more than 9/16 inch into piston cavity, or heavy corrosion is evident, replace brake assembly.

NOTE

Corrosion is usually found in carrier housing and in piston cavities. Corrosion in magnesium can be identified by the rough honeycombed appearance of the pit. Pits are usually filled with a yellow or gray powder. Heavy corrosion is defined as pits that exceed 0.025 inch in diameter or grouped with three or more pits of any diameter in an area of ¼ inch square.

e. Corrosion Treatment of Brake Assemblies.

Brake assemblies are manufactured from magnesium, aluminum, and steel. Most assemblies have magnesium housings which are very susceptible to corrosion, especially in piston cavities. Treat the surface using the following procedures:

(1) Remove sharp edges of corrosion pits with crocus cloth, Federal Specification P-C-458, lubricated with hydraulic fluid, MIL-H-5606 .

(2) Rework minor dents, nicks, burrs, or gouges to break all sharp edges of indentations which might result in a concentration of stress. Use a smooth cut hand file to accomplish this, followed by fine abrasive paper, Federal Specification P-P-101, to remove tool marks.

(3) Condemn brake assemblies that have deep scratches, gouges, or cracks exceeding limits established in applicable aircraft maintenance manual.

(4) Accomplish surface treatment as outlined in TM 43-0105.

f. Repair and Replacement of Brake Assembly Components. Repair or replace brake assembly components in accordance with the applicable maintenance manual and the following general procedures:



Care must be used when installing seals and cups to prevent damage to feathered edges.

(1) Replace all seals, cups, and O-rings on an availability basis when assembling brakes to prevent possible leakage and brake failure.

(2) Apply a light coat of insulating and sealing compound, MIL-I-8660, to surface of piston cavity and to O-ring or cup seal.

(3) Replace disks that have cracks extending through disc. Any single crack that extends through thickness of brake disk shall be reason for replacement. Minor surface cracks and heat checks are normal and are not cause for replacement.

(4) When necessary to replace one lining because of wear, all linings shall be replaced. Replace linings when any lining thickness is less than 1/16 inch, or shows indications of being overheated.

g. Brake Assembly Servicing. Service brake assemblies in accordance with the applicable maintenance manual. The following are general procedures for all aircraft.

(1) Check for leaks while system is under operating pressure.

NOTE

Tighten loose fittings with the pressure off.

(2) Check all flexible hoses carefully for swelling, cracking, or soft spots, and replace if evidence of deterioration is noted.

(3) Maintain the proper fluid level at all times to prevent brake failure or the introduction of air into the system.

h. Bleeding Brakes. Air in the system is indicated by a spongy action of the brake pedals. If air is present in the system, remove it by bleeding the system. There are two general methods of bleeding brake system. Bleeding from the top downward (gravity method) and bleeding from the bottom upward (pressure method). Each method is explained in the following paragraphs.

TM 1-1500-204-23-1

(1) Gravity method. A bleeder hose is attached to the bleeder valve, and the free end of the hose is placed in a receptacle containing enough hydraulic fluid to cover the end of the hose, as shown in figure 9-11. The air-laden fluid is then forced from the system by operating the brake. If the brake system is a part of the main hydraulic system, a portable hydraulic test stand may be used to supply the pressure. If the system is an independent master cylinder system, the master cylinder will supply the necessary pressure. In either case, each time the brake pedal is released the bleeder valve must either be closed or the bleeder hose pinched off; otherwise, more air will be drawn back into the system. Bleeding should continue until no more air bubbles come through the bleeder hose into the container.

(2) Pressure method. In the pressure method, the air is expelled through the brake system reservoir or other specially provided location. Some aircraft have a bleeder valve located in the upper brake line. In using this method of bleeding, pressure is applied using a bleed tank, as shown in figure 9-12. A bleed tank is a portable tank containing hydraulic fluid under pressure. The bleeder tank is equipped with an air valve, air gauge, and a connector hose. The connector hose attaches to the bleeder valve on the brake assembly and is provided with a shutoff valve. Perform this method of bleeding strictly in accordance with the specific aircraft maintenance manual.

j. Brake System Safety. Follow all safety precautions given by the applicable maintenance manual. If it is necessary to approach a wheel with a hot brake, do so either from directly in front or directly behind the aircraft.

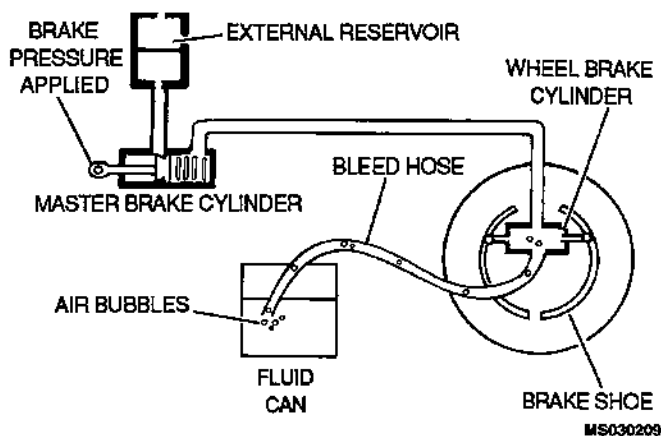


Figure 9-11. Gravity Method of Bleeding Brakes

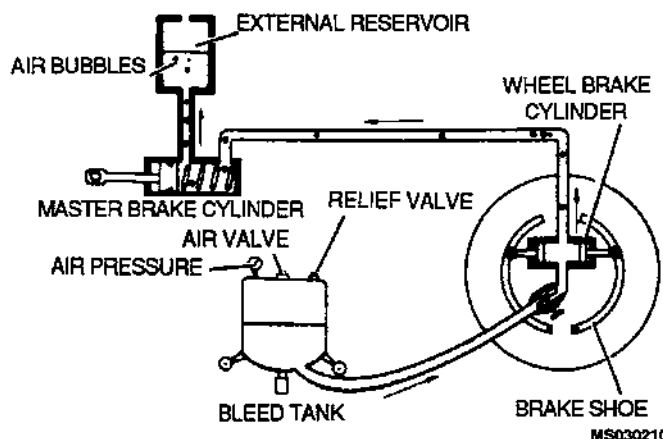


Figure 9-12. Pressure Method of Bleeding Brakes

9-8. Wheel Maintenance. Aircraft wheels are manufactured from magnesium, aluminum, or steel alloy. These materials are susceptible to corrosion, scoring, and gouging. Corrosion contributes to the high replacement rate of wheels. Paint coatings should be maintained in good condition to prevent corrosion. Fatigue cracks and complete wheel failure can result from inadequate corrosion control, as well as scratches and tool marks in critical stress areas. Care should be taken to ensure proper usage of tools. Maintain wheels using the following paragraphs.

a. Wheel Cleaning. The following procedures describe wheel cleaning:

(1) Remove tire, tube, and bearing and disassemble the wheel. See TM 55-2620-200-24 for demounting procedure.

WARNING

Degreasing Solvent, MIL-PRF-680, is combustible and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames or other sources of ignition.

(2) Wash demounted wheel in degreasing solvent, MIL-PRF-680.

NOTE

Bearings should be cleaned and repacked if wheel is removed or was submerged in water.

b. Wheel Inspection. Inspect aircraft wheels for corrosion, cracks, distortion and damage using the following procedures:

(1) Visually Inspect wheel thoroughly for signs of corrosion, which can be identified by formation of pits in the metal and a powdery substance in and around exposed areas. Corrosion in split type wheel usually will be found in the tie bolt area, torque key area, bearing cavity area, and seal (tubeless tire) area. Corrosion in these areas is considered critical.

(2) Visually inspect wheel for indications of cracks, using at least a six-power magnifying glass.

(3) Visually Inspect for distortion and other damage.

c. Repair of Wheels. Repair aircraft wheels in accordance with the applicable maintenance manual and the following procedures

(1) Etching, corrosion, and minor defects are to be removed to relieve all sharp corners or indentation's which might result in concentration of stresses. Use 100-grit emery cloth, followed by final polishing with 240 grit emery cloth so as to maintain repair limitations.

NOTE

Above rework limits are for use on all wheels which do not have repair limitations in the specific aircraft maintenance manual.

(2) Chemical film-treat bare metal surfaces, followed by painting.

d. Replacement Criteria for Wheels. Replacement criteria for wheels with corrosion, cracks, distortion, and other damage is explained in the applicable maintenance manual.

(1) Corrosion. Wheel is unserviceable if it cannot be repaired within limits specified in applicable maintenance manual

(2) Cracks. If any cracks are found, wheel should be condemned. If any questionable indication of a crack is found, wheel should be inspected further by means of fluorescent penetrants. Cracks present in split-type wheel usually are located in the tie bolt area, torque key area, and webbing and spoke area. Refer to TM 55-1500-335-23, Nondestructive Inspection Methods.

(3) Distortion. Check wheel carefully for distortion. Replace any wheel with this condition.

(4) Damage. Replace any wheel having dents, nicks, burrs, or scratches if the damage cannot be repaired within limits specified in applicable maintenance manual.

NOTE

If one wheel half is determined nonrepairable, replace both halves.

9-9. Tires and Tubes. Aircraft tires, tubeless or tube type, provide a cushion of air that helps absorb the shocks and roughness of landings and takeoffs they support the weight of the aircraft while on the ground and provide the necessary traction for braking and stopping aircraft on landing.

a. Cleaning. Clean aircraft tires and tubes in accordance with the applicable maintenance manual.

b. Inspection. Inspection of tires and tubes is explained in the following paragraphs.

(1) Tire Inspection. Inspect tires for leaks or damage at valve, tread damage, sidewall damage, and uneven wear when tire is mounted on wheel. When tire is dismounted probe all damages to determine their extent. Repair damage if necessary. Inspect for bulges, broken cords, and bead damage.

(2) Tube inspection. Inspect tubes for proper size, wrinkles, chafing, and thinning. Examine the tube carefully around the valve stem for leaks, signs of valve pad separation, and bent or damaged valve stems.

c. Balance. Balance in aircraft tires and tubes is very important. From a wear standpoint, when the wheels are in landing position a heavy spot in a wheel assembly will have a tendency to remain at the bottom and thus will always strike the ground or runway first. This results in severe wear at one area of the tire tread and can necessitate early replacement. In addition, unbalanced tires can cause severe vibration which may affect the operation of the aircraft.

d. Valve Cores. Valve cores must be replaced if leaks are present in the valve stem. Always inspect the valve to be sure the threads are not damaged; otherwise, the valve core and valve cap will not fit properly. If threads are damaged, the valve can usually be rethreaded, inside or outside, by use of a valve repair

TM 1-1500-204-23-1

tool, without demounting the tire from the wheel. Make certain that every valve has a valve cap on it, screwed on firmly with the fingers. The cap prevents dirt oil and moisture from getting inside the valve and damaging the core. It also seals in air and serves as protection in case a leak develops in the valve core.

e. Installation. Install tires and tubes in accordance with the applicable maintenance manual.

9-10. Ski Maintenance. Maintenance of skis shall be as specified in the applicable aircraft maintenance manual and the following paragraphs.

a. Ski Inspection. It is advisable to examine ski installations frequently to keep them maintained in airworthy condition. If shock cord is used to keep the ski runner in proper trim, periodically examine to assure that the cord has enough elasticity to keep the runner in its required attitude and the cord is not becoming loose or badly frayed. Replace old or weak shock cords. When other means of restraint are provided, examine for excessive wear and binding, and replace or repair when such conditions are found. Examine the points of cable attachment, both on the ski and the airplane structure, for bent lugs due to excessive loads having been imposed while taxiing over rugged terrain, or by trying to break loose frozen skis. If skis which permit attachment to the wheels and tires are used, maintain proper tire pressure, as under inflated tires may push off the wheels. If appreciable side loads are developed in landing or taxiing.

b. Ski Repair. Aluminum tubular members may have negligible damage of surface scratches and smooth contour dents not over 1/16 inch in depth. All damage, other than negligible, shall necessitate replacement unless otherwise specified in applicable aircraft maintenance manual. Steel tubular members may have negligible damage of surface scratches and small dents not over 0.004 inch in depth. Repairable damage shall consist of straightening slight bends and rewelding existing welds.

9-11. Float Maintenance. In order to maintain floats in an airworthy condition, frequent inspections should be made because of the rapidity with which corrosion takes place on aluminum alloy metal parts, particularly when the aircraft is operated in salt water. Examine metal floats and all metal parts on wooden or fiberglass floats for corrosion and take corrective action in accordance with the applicable aircraft maintenance manual. All maintenance of floats shall be as specified in the applicable aircraft maintenance manual.

9-12. Flight Controls. The flight control surfaces are hinged or movable airfoils designed to change the attitude of the aircraft during flight. Maintenance of flight controls shall be accomplished by replacing worn, damaged, or defective components, adjusting rigging components, and accomplishing preventive maintenance to the system.

a. Types. Ailerons, elevators, the rudder, flaps, and trim tabs are the common types of flight controls. Each is explained in the following paragraphs.

(1) Ailerons. The motion of the aircraft about the longitudinal axis is called rolling or banking. The ailerons, as shown in figure 9-13, are used to control this movement. The ailerons form a part of the wing and are located in the trailing edge of the wing toward the tips. Ailerons are the movable surfaces of an otherwise fixed-surface wing. The aileron is in neutral position when it is streamlined with the trailing edge of the wing.

(2) Elevators. When the nose of an aircraft is raised or lowered, it is rotated about its lateral axis. Elevators are the movable control surfaces that cause this rotation, as shown in figure 9-14. They are normally hinged to the trailing edge of the horizontal stabilizer. The elevator can be moved either up or down. If the elevator is rotated up, it decreases the lift force on the tail causing the tail to lower and the nose to rise. If the elevator is rotated downward, it increases the lift force on the tail, causing it to rise and the nose to lower. Lowering the aircraft's nose increases forward speed, and raising the nose decreases forward speed.

(3) Rudder. Turning the nose of the aircraft causes the aircraft to rotate about its vertical axis. Rotation of the aircraft about the vertical axis is called yawing. This motion is controlled by using the rudder as shown in figure 9-15.

(4) Flaps. Flaps are high-lift devices attached to the trailing edge of the wing. The flap is controlled from the cockpit, and when not in use fits smoothly into the lower surface of each wing. The use of flaps increases the camber of a wing and therefore the lift of the wing, making it possible for the speed of the aircraft to be decreased without stalling. This also permits a steeper gliding angle to be obtained such as in the landing approach. Flaps are primarily used during takeoff and landing. Figure 9-16 shows various types of flaps used on aircraft.

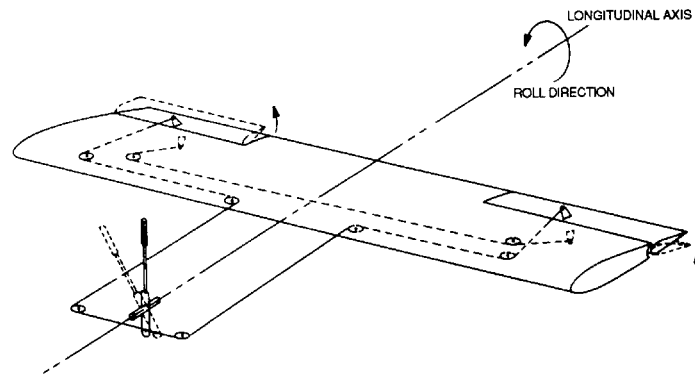


Figure 9-13. Aileron Action

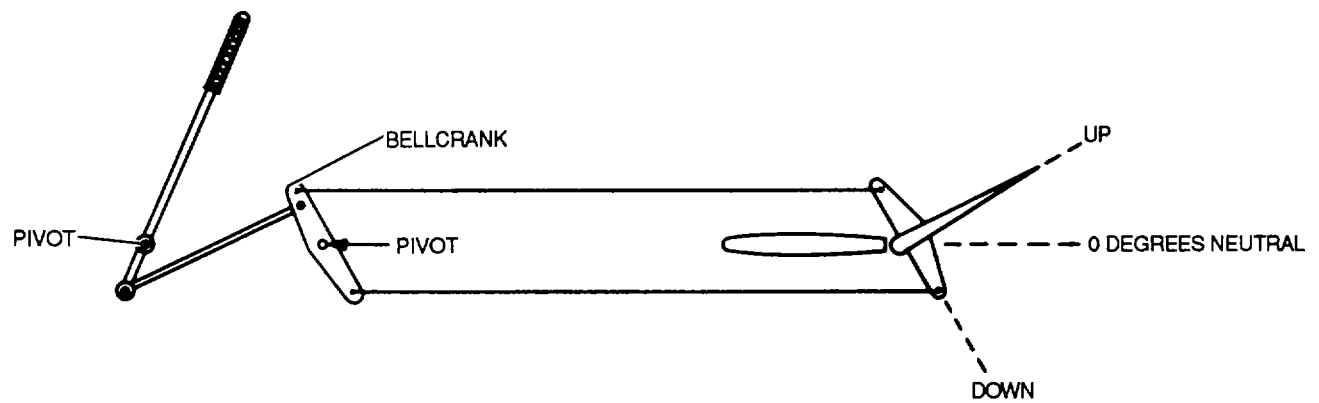


Figure 9-14. Elevator Action

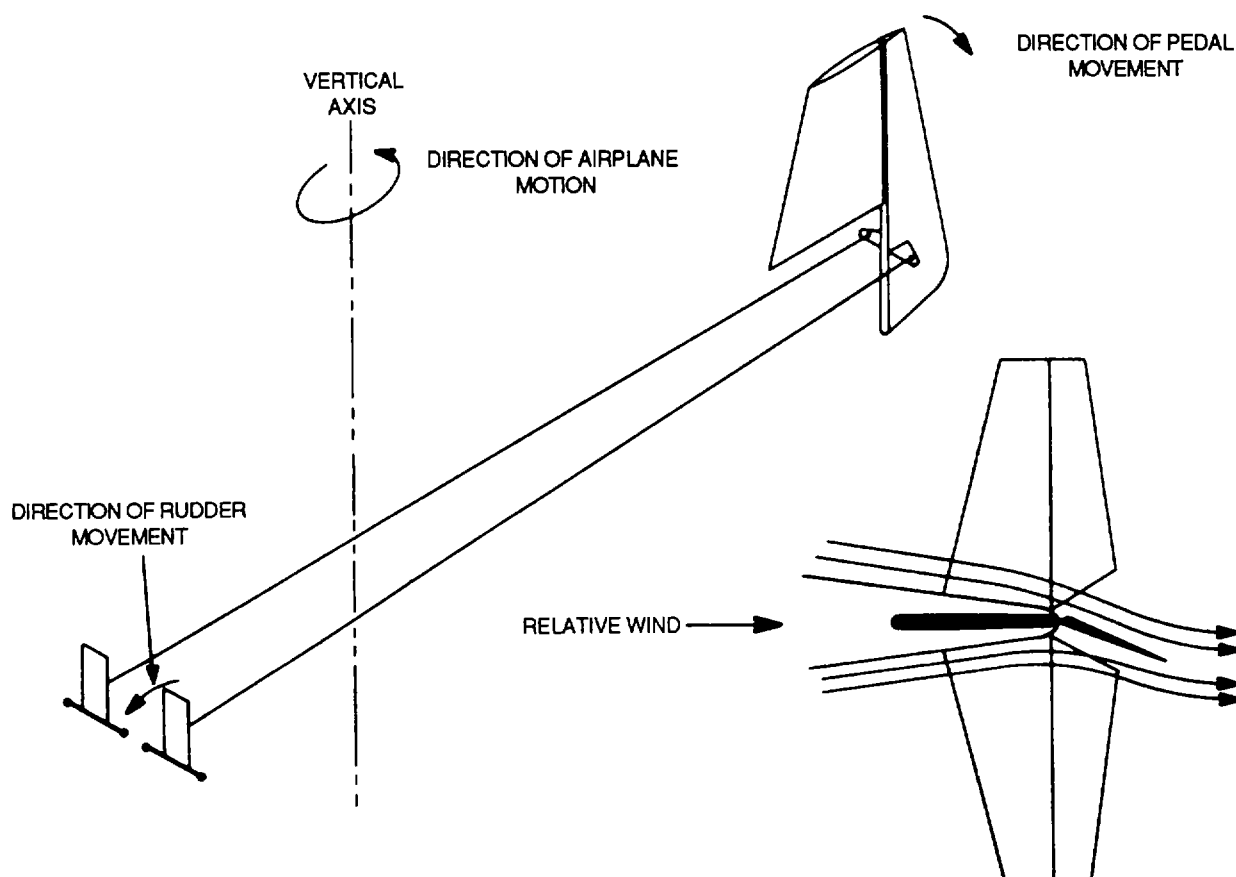


Figure 9-15. Rudder Action

(5) Trim tabs. Trim tabs trim the aircraft in flight. To trim means to correct any tendency of the aircraft to move toward an undesirable flight attitude. Trim tabs control the balance of an aircraft so that it maintain straight and level flight without pressure on the control column, control wheel, or rudder pedals. Figure 9-17 shows a trim tab. Note that the tab has a variable linkage which is adjustable from the cockpit. Movement of the tab in one direction causes a deflection of the control surface in the opposite direction. Most of the trim tabs installed on aircraft are mechanically operated from the cockpit through an individual cable system. However, some aircraft have trim tabs that are operated by an electrical actuator. Trim tabs are either controlled from the cockpit or adjusted on the ground before taking off. Trim tabs are installed on elevators, rudders, and ailerons.

b. Inspection of Flight Controls. Inspect all flight control surfaces in accordance with the applicable aircraft maintenance manual.

c. Repair of Flight Controls. Make all repairs to flight controls in accordance with the applicable aircraft maintenance manual.

d. Flight Control Operation Systems. Three types of control systems commonly used are the cable, push-pull, and torque tube systems. The cable system is the most widely used because deflection of the structure to which it is attached do not affect its operation. Many aircraft incorporate control systems that are combinations of all three types. The systems which operate the control surfaces, tabs, and flaps include flight control system hardware, linkage, and mechanisms. These items connect the control surfaces to the cockpit controls. Included in these systems are cable assemblies, cable guides, linkage, adjustable stops, control surface snubber or locking devices, surface control booster units, actuators operated by electric motors, and actuators operated by hydraulic motors.

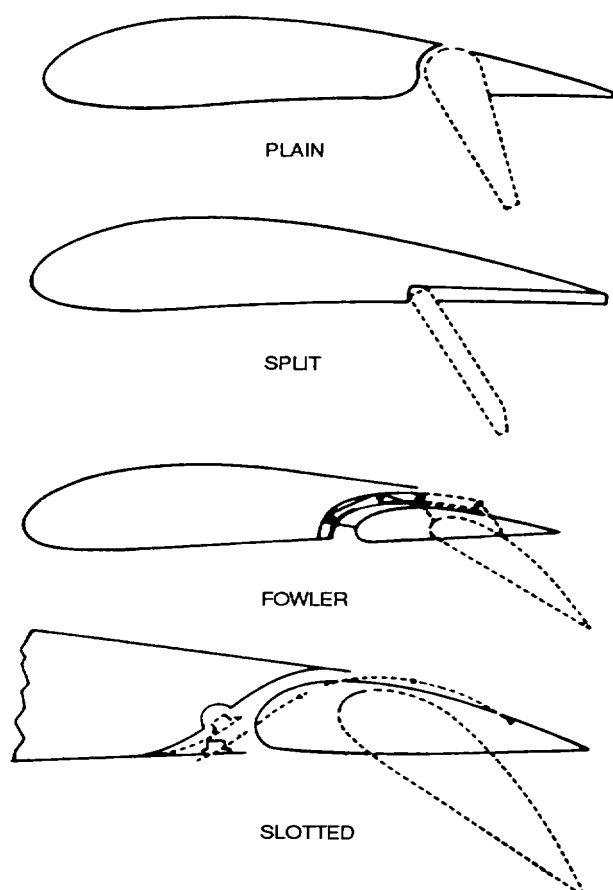


Figure 9-16. Types of Wing Flaps

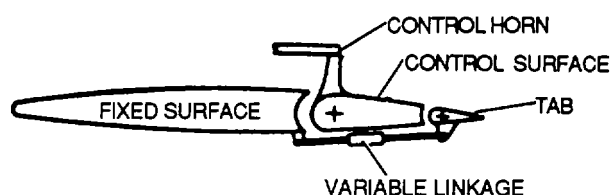


Figure 9-17. Trim Tab Assembly

e. Control Cables. Aircraft control cables are generally fabricated from carbon steel or corrosion-resistant steel wire and may consist of either flexible or nonflexible type construction.

(1) *Control cable sizes*. Cable size is measured in diameter as shown in figure 9-18. Control cables vary in diameter, ranging from 1/16 to 3/8 inch. Figure 9-18 also shows common cable designations. Cable designations are based on the number of strands and the number of wires in each strand.

(2) *Control cable inspection and maintenance*. Aircraft cable systems are subject to a variety of environmental conditions and forms of deterioration, such as wear, corrosion, and distortion. The following are general procedures for control cable inspection and maintenance.

(a) Inspect cables for broken wires by passing a cloth along length of cable. Cloth will snag when it passes over broken wire. Figure 9-19 shows cross sections of a 7x7 and a 7x19 cable.


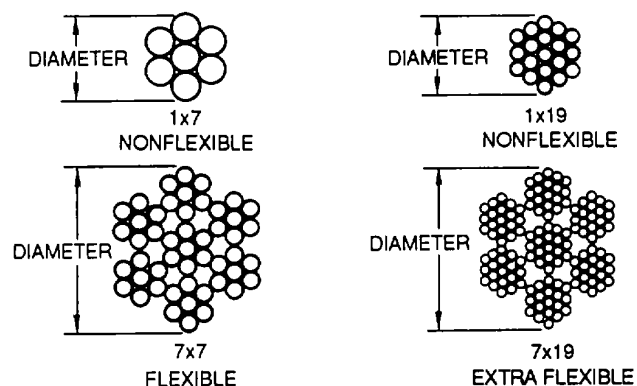


Figure 9-18. Cable Cross Sections

TM 1-1500-204-23-1

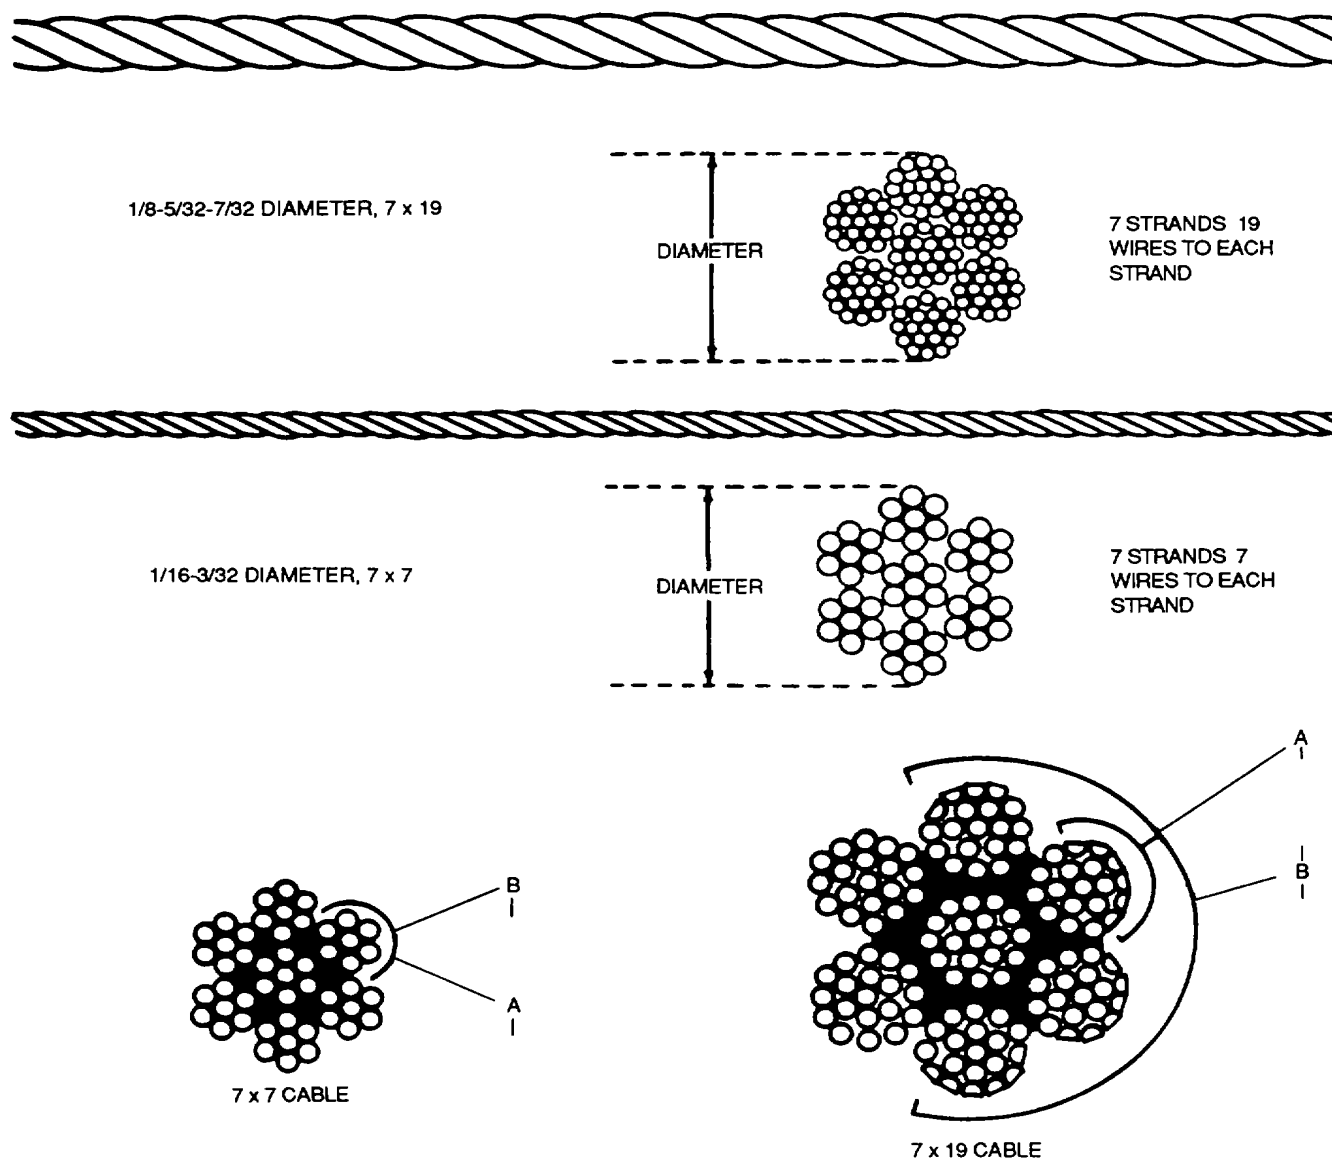


- A TYPICAL OUTER WIRE WEAR AREA ON CABLE STRAND
 HAIRLINE CRACKS BETWEEN WIRES OR FULLY BLENDED SURFACE
 APPEARANCE OF APPROXIMATELY SIX WIRES FOR 7 x 19 CABLE OR
 3 WIRES FOR 7 x 7 CABLE PER OUTER CABLE STRAND INDICATES 50
 PERCENT WIRE WEAR IF THIS APPEARANCE IS VISIBLE, THE CABLE
 SHOULD BE REPLACED
- B TYPICAL CABLE WEAR MAY OCCUR ON ONE SIDE ONLY OR ON FULL
 CIRCUMFERENCE AND MAY EXTEND ALONG THE CABLE FOR A
 DISTANCE EQUAL TO NORMAL CABLE MOVEMENT
- NOTES
- 1 WHENEVER CABLE WEARS IS FOUND, CAUSE FOR WEAR MUST BE
 DETERMINED AND CORRECTED
 - 2 ALL DIMENSIONS IN INCHES

Figure 9-19. Control Cable Cross Section and Wear Limits

NOTE

- Breakage usually occurs in that length of a cable normally passing over a pulley or through a fairlead, as shown in figure 9-20.
- Any cable not within specified allowable limits listed in table shall be considered unserviceable and must be replaced.
- In addition to limits specified in table 9-1 the maximum allowable number of broken wires shall not occur in any two consecutive inches of cable, that is, if six wires are broken in one inch of a 7 x 19 cable, none would be allowed in the next consecutive inch. For any flexible cable, a maximum of three broken wires per inch shall be allowable in the length of cables passing over pulleys, drums, or through fairleads.

(b) Replace badly worn cables even if number of broken wires is less than specified for replacement.

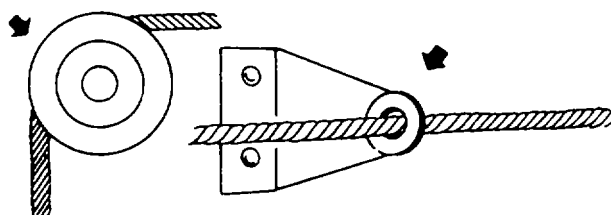

WHERE CABLES PASS OVER PULLEYS OR THROUGH GUIDES OR FAIRLEADS

Figure 9-20. Typical Breakage Point

NOTE

- Any 7x7 cable having three wires or less per inch worn not more than halfway through the wire diameter, or any 7 x 19 cable having six wires or less per inch worn not more than halfway through wire diameter, shall be considered serviceable if broken wires are present in the worn area.
- The cable shall be considered serviceable if broken wires are present but are not in the worn area.
- One less worn wire per inch is allowed for each broken wire present in the same inch if more than one worn area is found, but all are within specified limits, the cable is satisfactory, provided no two worn spots are adjacent circumferentially.
- Any wire worn completely through, or worn to a point of breaking, shall be considered unserviceable.
- Kinked, twisted, or birdcaged cables must be repaired or replaced.
- Wear will normally extend along the cable equal to the distance the cable moves at that location. Wear may occur on one side of the cable only or on its entire circumference.
- Replace cables when the individual wire in each strand appears to blend together (outer wire worn 40 to 50 percent) as depicted in figure 9-19. Actual instances of cable wear beyond recommended point are shown in figure 9-21.

(c) Move surface controls of the particular cable to the extremities to reveal the cable in the pulley contact, fairlead area, or drum.

Table 9-1. Cable Damage Limits

| Cable type | Allowable broken wire |
|--------------------|--|
| 7x7 (flexible) | 2 per inch of strand, provided not more than 3 exist in that inch of cable |
| 7x19 (flexible) | 3 per inch of strand, provided not more than 6 exist in that inch of cable |
| 1x19 (nonflexible) | None |

(d) If the surface of the cable is corroded, relieve cable tension and carefully force the cable open by reverse twisting. Visually inspect the interior.

NOTE

Corrosion on the interior strands of the cable constitutes failure, and the cable must be replaced

(e) If no internal corrosion is detected, remove loose external rust and corrosion with a clean, dry, coarse-weave rag or fiber brush. After thorough cleaning, apply corrosion preventive, MIL-C-16173 Grade 2, sparingly. Do not apply the material so thick that it will interfere with the operation of cables at fairleads, pulleys, or grooved bellcrank areas.

NOTE

Do not use metallic wools or solvents to clean installed cables. Use of metallic wool will imbed dissimilar metal particles in the cables and create further corrosion problems. Solvents will remove internal cable lubricant allowing cable strands to abrade and further corrode.

(3) Control cable tension adjustment. Rig aircraft as outlined in the applicable aircraft maintenance manual. After rigging, measure for proper tension on control cables, using a tensiometer. Use the following procedures to measure cable tension.

(a) Place cable under the two blocks on instrument, and pull lever on side of instrument down. This pushes up on the center block, called a riser. The force required to raise the center block is indicated by a pointer on the scale.

(b) Convert indicator reading to tension pounds (see figure 9-22).

(c) Adjust cable tension to proper value by either tightening or loosening turnbuckles.

(4) Control cable emergency repair. If possible, duplicate spare cables should be used for replacement. When spare cables are not available and immediate replacement is imperative, use one of the following methods of splicing.

CAUTION

Care must be taken that splice does not foul fairlead or pulley, nor in any other way prevent proper movement of the cable

(a) Woven spliced terminals. Use woven spliced terminals on cables 3/32 inch diameter or greater in place of swaged terminals. Fabrication components needed are shown in table 9-2. Perform the following procedures to fabricate woven spliced terminals:

1 Sweat solder or wrap cable prior to cutting to prevent fraying.

Table 9-2. Fabrication Components

| Nomenclature | Specification |
|----------------------------|---------------|
| Cable, corrosion-resistant | MIL-W-83420 |
| Wire rope, 1 tinned steel | MIL-W-83420 |
| Cord, serving | V-T-291 |
| Solder, tin-lead | QQ-S-571 |


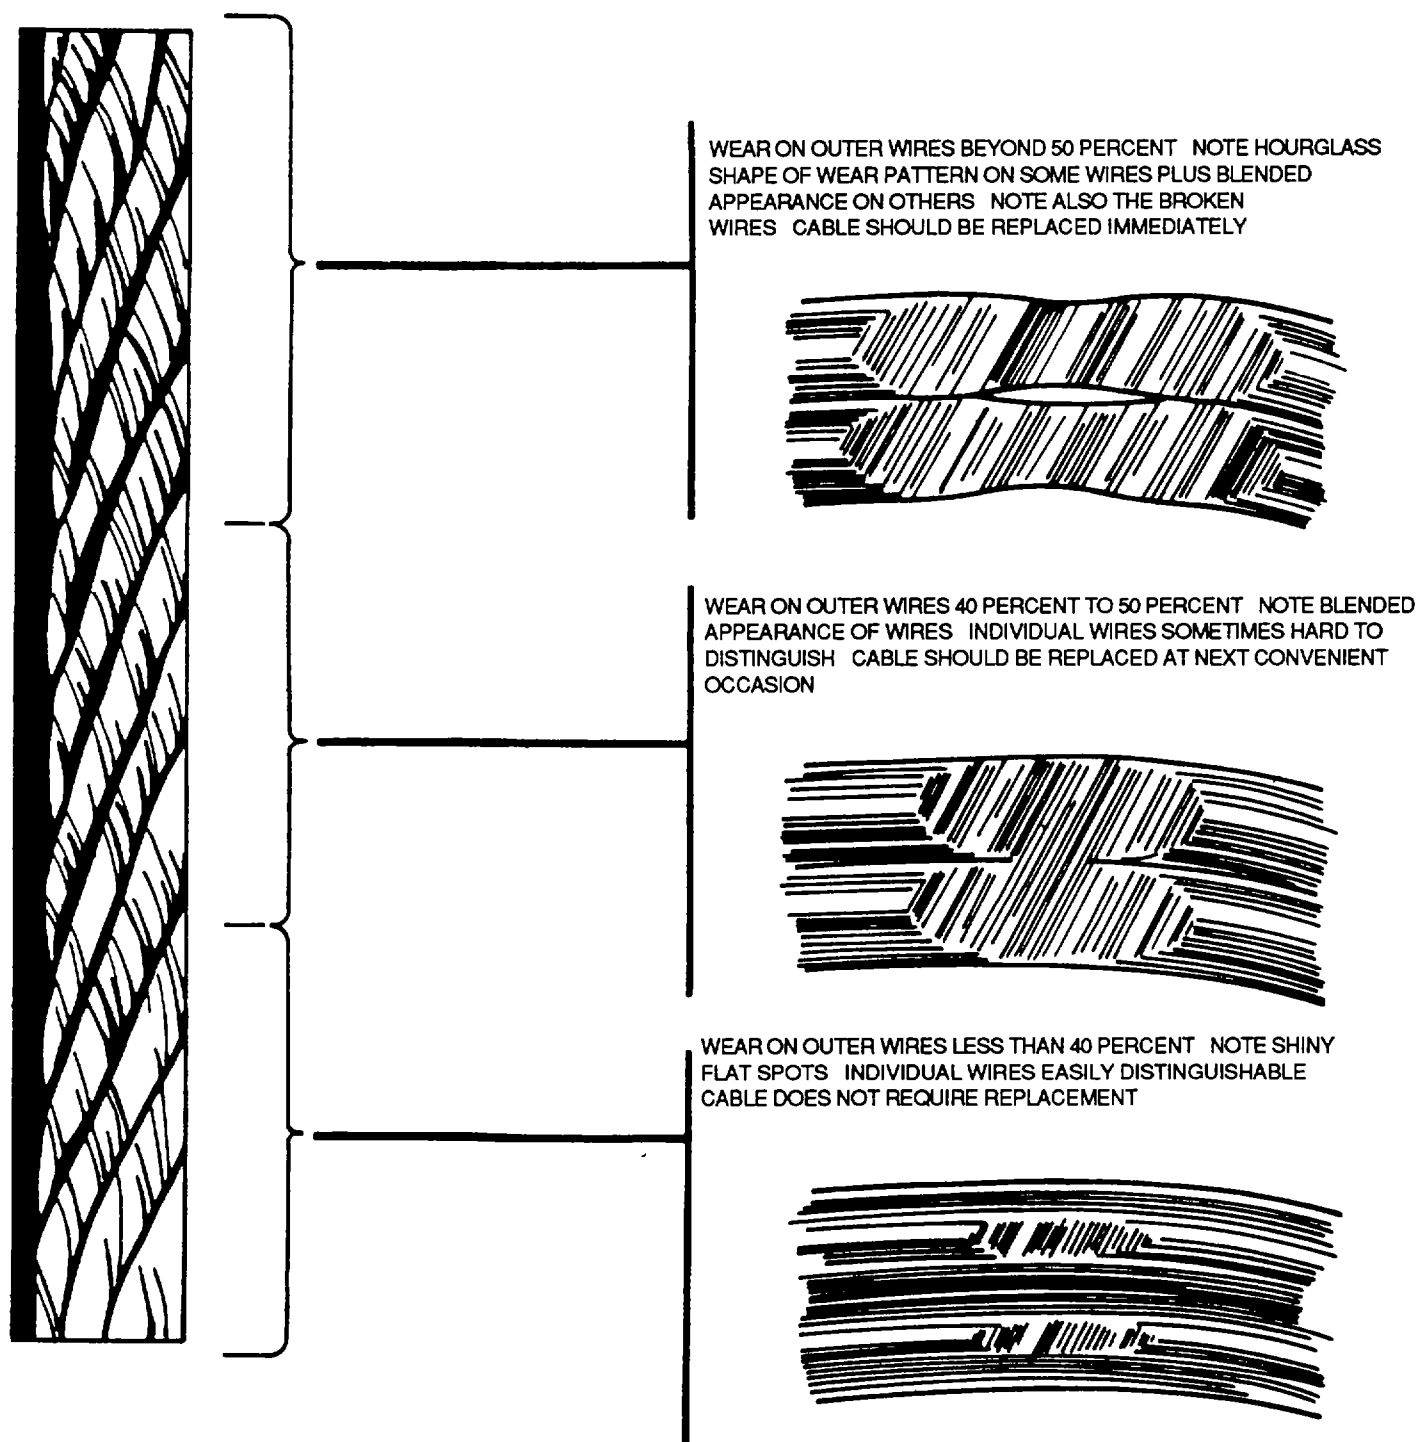


Figure 9-21. Control Cable Wear Limits

TM 1-1500-204-23-1

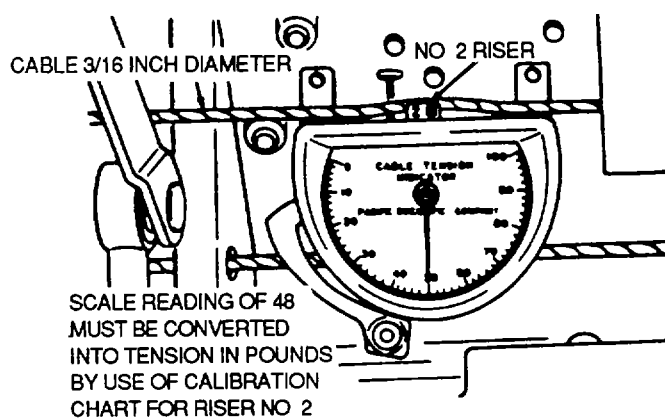

| NO 1 | | | | RISERS | → NO 2 | | NO 3 | |
|--|------|------|-----|---------------|--------|------|------|-----|
| DIA | 1/16 | 3/32 | 1/8 | TENSION LB | 5/32 | 3/16 | 7/32 | 1/4 |
| 14 | | 17 | 21 | 30 | 18 | 26 | | |
| 20 | | 24 | 28 | 40 | 24 | 32 | | |
| 25 | | 30 | 35 | 50 | 29 | 38 | | |
| 30 | | 35 | 42 | 60 | 34 | 43 | | |
| 35 | | 40 | 48 | 70 | 39 | 48 | | |
| 39 | | 45 | 54 | 80 | 43 | 53 | | |
| 44 | | 50 | 60 | 90 | 47 | 58 | | |
| 48 | | 55 | 65 | 100 | 51 | 62 | | |
| 52 | | 60 | 70 | 110 | 55 | 66 | | |
| 56 | | 64 | 75 | 120 | 59 | 70 | | |
| | | 68 | 80 | 130 | 63 | 74 | | |
| | | 72 | 84 | 140 | 66 | 78 | | |
| | | | 89 | 150 | 69 | 82 | | |
| | | | 93 | 160 | 72 | 85 | | |
| | | | | 170 | 75 | 89 | | |
| | | | | 180 | 78 | 92 | | |
| | | | | 190 | 81 | 96 | | |
| | | | | 200 | 83 | 99 | | |
| TYPED FIGURES ARE INSTRUMENT SCALE READINGS CORRESPONDING TO TENSION | | | | 210 | | | | |
| | | | | 220 | | | | |
| | | | | 230 | | | | |
| CABLE DIAMETERS IN INCHES | | | | 240 | | | | |
| | | | | 250 | | | | |

Figure 9-22. Cable Tensiometer

2 Secure cable around a bushing or thimble by means of a splicing clamp leaving 8 inches or more of free end. Secure splicing clamp in a vise with free end to the left of standing wire and away from operator.

3 Select free strand (1, figure 9-23) nearest standing length and separate this strand from rest of separate ends.

4 Insert a marlin-spike under first three strands (A, B, and C) of standing length nearest separated strands of free end and separate them momentarily by twisting marlin-spike.

5 Insert free strand (1) under three separated strands through opening created by marlin spike. Pull free strand taut, using pliers.

6 Unwind a second strand (2), located to left of first strand tucked, and insert this second strand under first two standing strands (A and B).

7 Loosen third free length strand (3) located to left of first two, and insert it under first standing strand (A).

8 Remove center or core strand (7) from free end and insert it under same standing strands (A and B).

9 Temporarily secure core strand to body of standing cable.

10 Loosen strand (6) located to right of first strand (1) and tuck it under last two strands (E and F) of standing cable.

11 Tuck fifth free end (5) around fifth standing strand (E). Tuck fourth free end (4) around sixth standing strand (F).

12 Pull all strands snug toward end fitting with pliers. This completes first tuck.

13 Begin with first free strand (1) and work in a counterclockwise direction, tucking free strands under every other standing strand

14 After completion of every tuck, pull strands taut with pliers. Pull toward end fitting.

15 After completion of third complete tuck, have the number of wires in each free strand. Make another complete tuck with remaining wires.

16 At completion of fourth tuck, again halve number of wires in free strands and make one final tuck with remaining wires.

17 Cut off all protruding strands and pound splice with a wooden or rawhide mallet to relieve strains in wires.

18 Serve splice with waxed line cord. Start 1/4 inch from end of splice and carry wrapping over loose end of cord and along tapered splice to a point between second and third tucks

19 Insert end of cord back through last five wrappings and pull snug.

20 Cut off end, and when a thimble is used as an end fitting, bend down points.

21 Apply two coats of shellac, Federal Specification TT-S-271, to the cord, allowing 2 hours between coats.

22 Carefully inspect cable strands and splices for local failure. Weakness in a woven splice is made evident by a separation of strands of serving cord.

(b) Wrapped solder splice. The wrapped solder splice may be used on 1/16-inch cable only to fabricate end fittings. The procedure is as follows (see figure 9-24).

1 Arrange cable and fittings as required, allowing approximately 2 1/4 inches of free end.

2 Place assembly in a splicing clamp and secure in a vise.

3 Starting as close as practical to end fittings, press free end standing lengths of cable together tightly, and wrap with a single layer of 0.020 inch brass or copper wire, Federal Specification QQ-W-343, leaving a space of approximately 1/8 inch between every 1/2 inch of wrapping.

NOTE

Care must be exercised to prevent standing length from twisting during this operation.

TM 1-1500-204-23-1

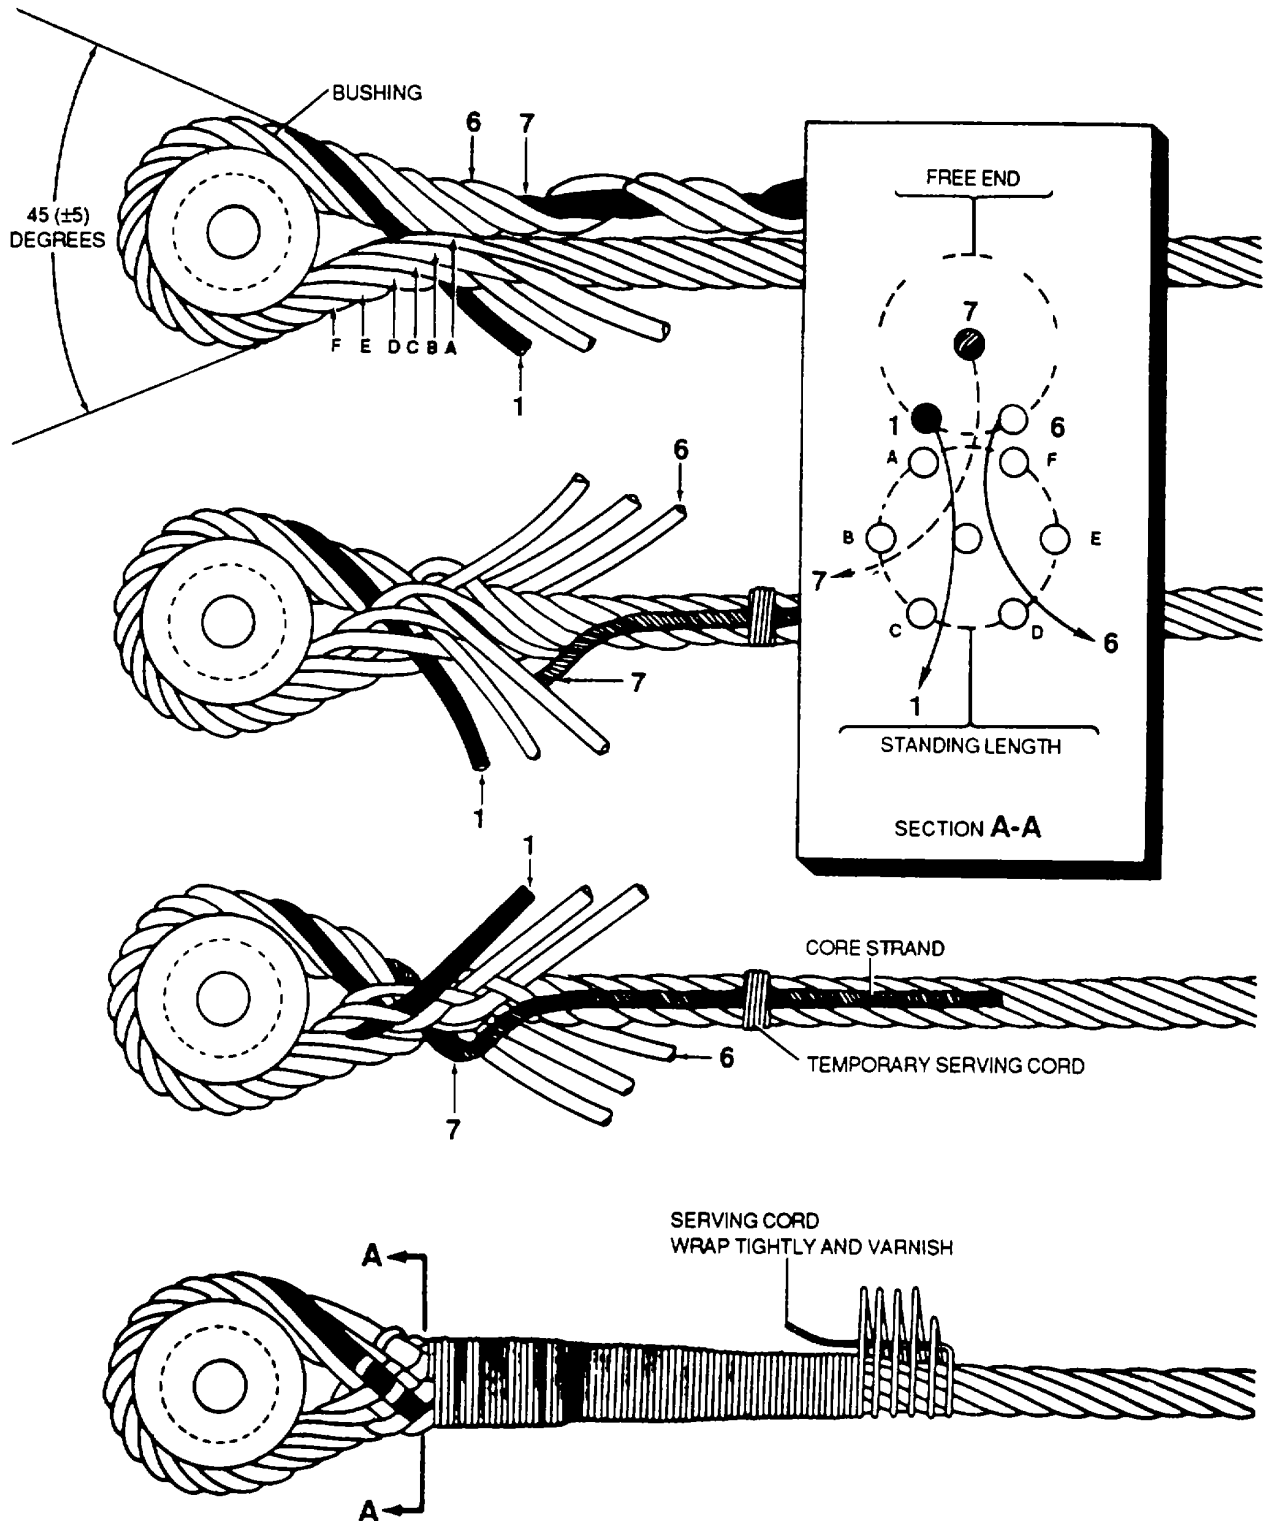


Figure 9-23. Preparation of Woven Cable Splice

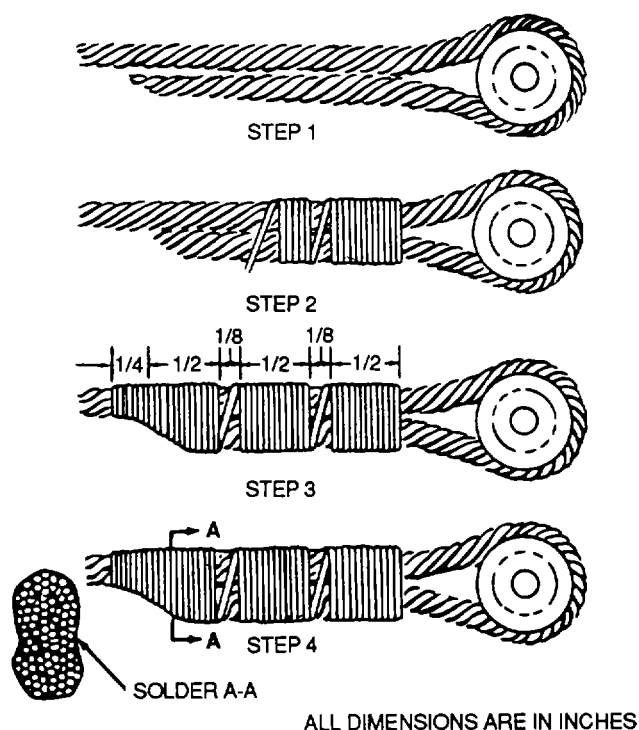


Figure 9-24. Wrapped Solder Splice

4 Allow wrapping to extend approximately 1/4 inch beyond free end.

5 Dip wrapping in tin-lead solder, Federal Specification QQ-S-571.

NOTE

Carefully sweat solder into cable and about wrapping

6 Apply solder until wrapping wire is barely discernible, and ensure that open spaces between wrap sections are thoroughly impregnated with solder.

7 After splice has cooled, thoroughly wipe clean and remove all solder residue.

8 Wipe cable and impregnate spliced section with corrosion preventive compound, MIL-C-16173, Grade I.

9 Carefully inspect splice. A wrapped soldered splice, easily bent with fingers, is unsatisfactory because of lack of solder penetration.

NOTE

Cracks in solder located between wrapping wire and short space provide between wraps is a positive indication of slippage in wrap soldered splice.

(5) Testing of cables and splices. Test all cables and splices prior to installation using the following procedures:

WARNING

A suitable guard should be placed over cable, during testing, to prevent injury in event of cable failure.

(1) Arrange cable to simulate installation, including pulleys, when required.

(2) Apply test load (refer to Table 9-3) gradually to one end of the cable for 3 minutes.

Table 9-3. Cable Test

| Cable size (inches) | Load in pounds ¹ |
|------------------------|-----------------------------|
| 1/16 | 288 |
| 3/32 | 552 |
| 1/8 | 1200 |
| 5/32 | 1680 |
| 3/16 | 2520 |
| 7/32 | 3360 |
| 1/4 | 4200 |
| 9/32 | 4800 |
| 5/16 | 5870 |
| 3/8 | 8640 |

¹60 percent of minimum allowable breaking strength.

TM 1-1500-204-23-1

f. Control System Components. Control system components are explained in the following paragraphs.

(1) *Turnbuckles.* A turnbuckle assembly is a mechanical screw device consisting of two threaded terminals and a threaded barrel. Figure 9-25 shows a typical turnbuckle assembly. Turnbuckles are fitted in the cable assembly for the purpose of making minor adjustments in cable length and for adjusting cable tension. One of the terminals has right-hand threads and the other has left-hand threads. The barrel has matching right- and left-hand internal threads. The end of the barrel with the left-hand threads can usually be identified by a groove or knurl around that end of the barrel.

(a) *Turnbuckle replacement criteria.* Replace turnbuckles and turnbuckle barrels that are cracked, corroded, or have stripped threads.

(b) *Turnbuckle tolerances.* Turnbuckle tolerances are three visible male (cable terminal) threads or four visible female (turnbuckle barrel) threads, each of which should be free of evidence of corrosion at the root of the threads. (The maximum of four visible female (turnbuckle barrel) threads applies only to initial installation of the cable, so that if the cable stretches, the turnbuckle can be adjusted to the desired cable tension, at which time, more or less than four barrel threads may be exposed.) Safety all turnbuckles.

(2) *Cable terminals.* Terminal fittings are generally of the swaged type. They are available in the threaded end, fork end, eye end, single-shank ball end, and double-shank ball end. The threaded end, fork end, and eye end terminals are used to connect the cable to a turnbuckle, bellcrank, or other linkage in the system. The ball-end terminals are used for attaching cables to quadrants and special connections where space is limited. Figure 9-26 shows the various types of terminal fittings. Visually inspect and replace clevis or terminals that are scratched, nicked, dented, corroded, have stripped threads, or are found bent (distorted).

NOTE

Minor nicks, scratches, corrosion pits, less than 0.005 inch deep, may be removed by cleaning and burnishing smooth, to restore the part to useful service.

(3) *Fairleads.* Fairleads, as shown in figure 9-27, are used to guide cables in a straight line

through or between structural members of the aircraft. Inspect fairleads for wear, breakage, alignment, cleanness, and security. Examine cable routing at fairleads to assure that deflection angles are no greater than 3 degrees maximum. Determine that all guides and anti-abrasion strips are secure and in good condition. Replace rubber or nylon grommets that show evidence of excessive wear. Replace worn or cracked phenolic fairleads. Reposition fairleads that allow cables to chafe.

(4) *Pulleys.* Pulleys are used to guide cables and change the direction of cable movement. Various cable system malfunctions may be detected by analyzing pulley conditions. These include such discrepancies as too much tension, misalignment, pulley bearing problems, and size mismatches between cables and pulleys. Examples of these conditions are shown in figure 9-28 inspect pulleys using the following procedures:

(a) Reposition pulleys that do not align with cables within 2 degrees. Replace inoperative or other- wise defective pulleys.

(b) Inspect pulleys for roughness, sharp edges, and presence of foreign material embedded in the grooves.

(c) Inspect pulleys for excessive grooving by visual examination of the surface, and by rotating pulley and observing if the cable twists, rotates, or jumps up and down, as a result of interplay between the grooves of the pulley and the lay of the cable.

(d) Examine pulley bearings to assure proper lubrication, smooth rotation, freedom from flat spots, dirt, and paint spray. Inspect pulley bearings for roughness, binding, noise, rust, lubricant leakage, and excessive looseness compared to a new bearing.

(e) Maintain pulley alignment to prevent the cable from riding on the flanges and chafing against guards, covers, or adjacent structure.

(f) Check all pulley brackets and guards for damage, alignment, and security. Replace if cracked, corroded, or otherwise damaged.

(g) Periodically rotate pulleys, which turn through a small arc, to provide a new bearing surface for the cable.

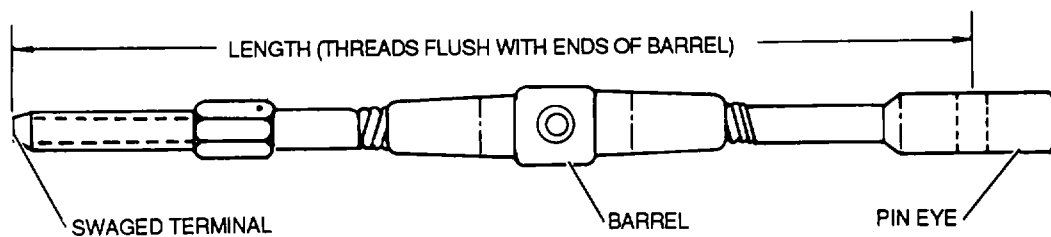


Figure 9-25. Turnbuckle Assembly

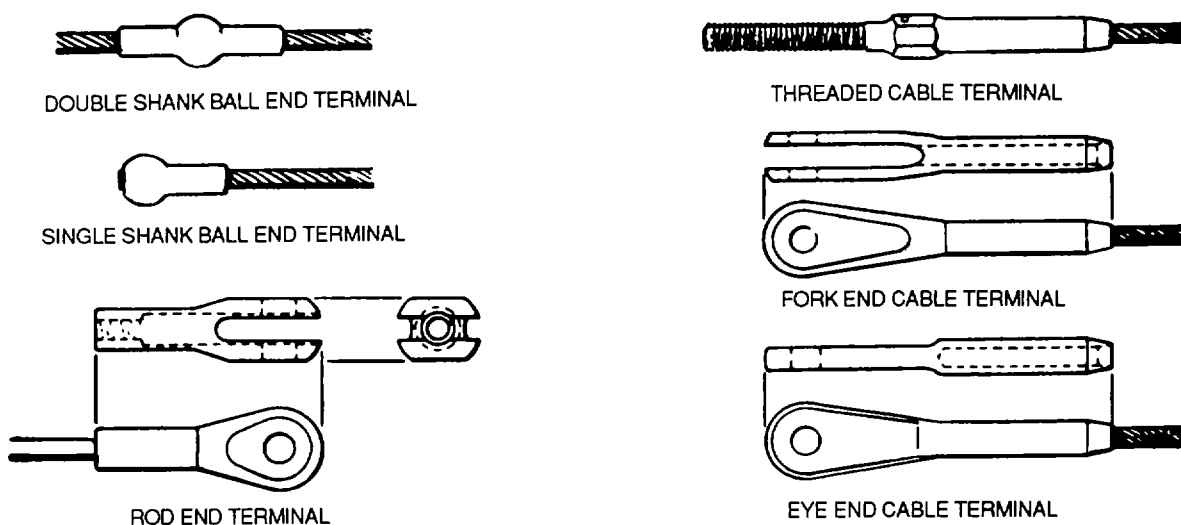


Figure 9-26. Types of Terminal Fittings

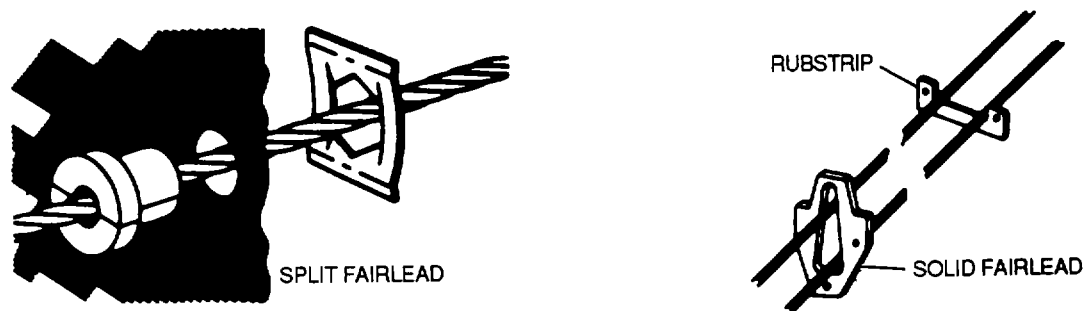


Figure 9-27. Fairleads

TM 1-1500-204-23-1

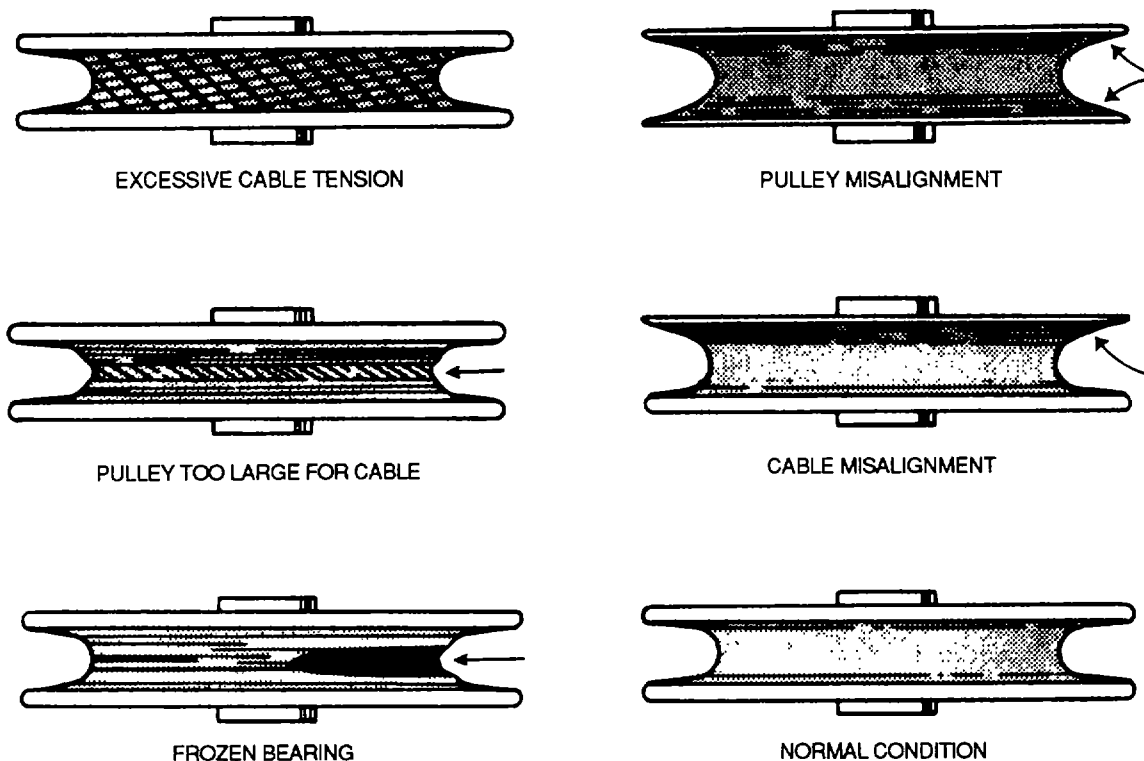


Figure 9-28. Pulley Wear Patterns

NOTE

It is good practice to rotate the pulley 90 degrees while inspecting, so as to relocate the used area to another position and thereby prolong the life of the pulley

(5) *Control rods.* Control rod assemblies are used as links in mechanical systems to allow remote operation and adjustment of components. Push-pull linkage is designed and constructed so that both torsional and compression forces will be transmitted to the component being operated. Two common types of push-pull linkage are the control tube and the control rod. Control tubes, as shown in figure 9-29, consist of a metal tube, usually made of steel or an aluminum alloy, and two rod ends. One rod end is attached to each end of the metal tube, which may be swaged, expanded, or reamed at the ends to engage the rod ends. The rod ends are welded or riveted to the tube.

NOTE

Operation or adjustment of some accessories or flight controls requires a rotating motion which often is accomplished by means of torque tubes. To effect changes in direction of the torque tube, universal joints are required. The most common are MS20270 and MS20271, which are attached to the tube by bolts or rivets.

(a) *Inspection of control tubes.* The procedure which follows is common to all control tube assemblies. Refer to the applicable manual for inspection of each particular component.

1 Check for bent or flattened tube.

2 Check tube for nicks, dents, gouges, scores or scratches, corrosion, and cracks.

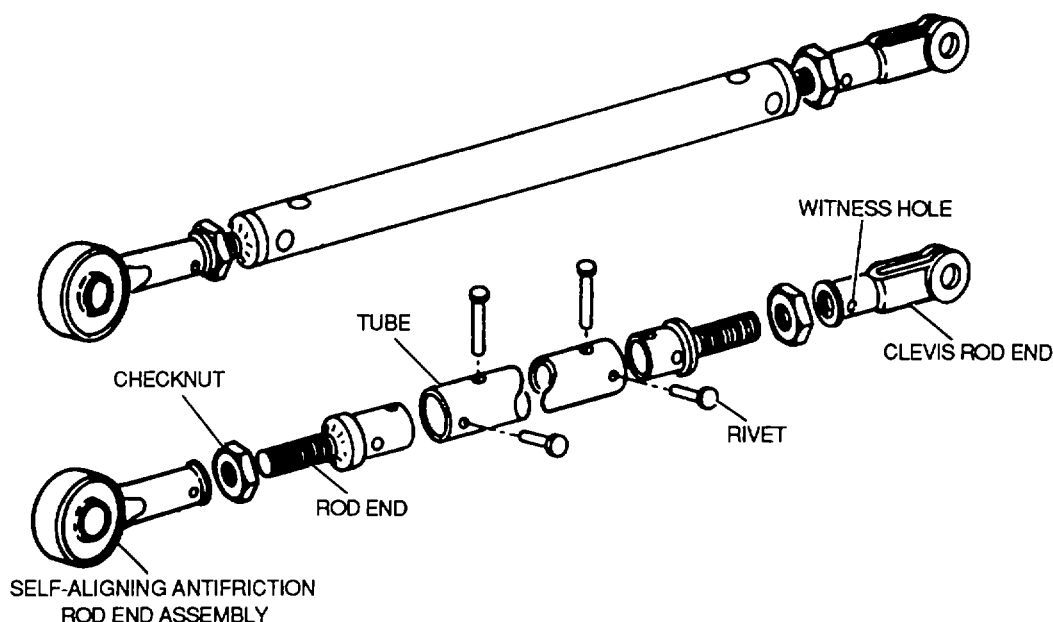


Figure 9-29. Control Tube Assembly

NOTE

If in doubt as to presence of cracks in tube, strip the paint and make a magnetic-particle or fluorescent-penetrant inspection.

3 Check rod ends for security (loose rivets), cracks or breaks, and damaged threaded portions.

(b) Repair of control tubes. Control tubes can be repaired by methods similar to those used on structural members. When repairing a control tube, a perfect straightness must be obtained to preserve the full strength of the tube. Sleeve reinforcements may be added to steel tubes with a scarfed or fishmouth cut and then welded in place. Aluminum alloy tubes can be repaired in the same manner, using rivets for attachment. If possible, the tube should be replaced and the terminals salvaged. AN490 threaded rod ends should be replaced because of difficulty in picking up the original rivet holes.

NOTE

Do not attempt tube repair if center one-third of assembly is damaged. When replacing rod ends that are riveted to control tube, rotate tube 90 degrees and redrill prior to riveting in emergency, repair tubular type control rod by inserting a scarfed or fishmouth sleeve reinforcement.

(c) Installation of control tubes. Install control tube assembly and rod ends as a unit, and make adjustments at time of installation. Consult applicable aircraft manual for proper dimensions and settings. The following are general procedures:

1 Install checknut on tube assembly or threaded end of rod, and attach rod end to assembly.

2 Adjust rod end to obtain correct length of tube assembly. Tighten checknut against rod end to prevent its coming loose.

NOTE

Type AN943 internally threaded rod ends are equipped with a witness hole a short distance from the threaded end to ensure adequate thread engagement when installed on an externally threaded rod end. Proper thread engagement is ensured when threads of an externally threaded rod end can be seen and a piece of safety wire cannot be passed through the hole. If you can pass a piece of 0.020 safety wire through the hole, the rod is not screwed in far enough

3 Install tube assembly with correct bolts, nuts, and washers

NOTE

When connecting a ball bearing rod end, install a plain or countersunk washer, MS20002, of appropriate size under the attaching nut and bolt head to prevent any possibility of rod end slipping off over the bearing retaining nut or bolt head. Attaching nut and bolt must clamp tightly the inner race of bearing to face of washer and supporting structure. Use caution when installing washers so that full movement of rod end is not limited. Nuts and bolts that are only fingertight do not use the bearing for the purpose for which it was intended. Control tubes using clevis rod ends may have washers, if required, installed under bolt and nut heads on outside of fork or between fork and bearing, if space permits. Tighten nuts to torque values shown in applicable aircraft manual.

4 Check for freedom of movement, full travel, and excessive side play.

5 Secure rod ends, bolts, and nuts with applicable safety devices.

(6) Rod ends. Rod ends are used on push-pull linkage as attachment points and to effect minor adjustments. Rod ends are available with threaded, clevis, and bearing ends. Those with internally threaded shanks are used on threaded control rods or control tube assemblies which have threaded rod ends Other rod ends are used to make up control tube

assemblies Rod ends are used to make adjustments in control tube length and usually are safetied with a checknut or lockwire

(a) *Inspection of rod ends.* Clean and inspect rod ends using the following procedures:

- 1 Check for cracks and breaks.
- 2 Check for threaded portion for damaged threads
- 3 Check for evidence of corrosion.
- 4 Check for bent or misaligned clevis forks and elongated bolt holes

5 Thoroughly clean, inspect, and lubricate bearings in accordance with TM 55-1500-322-25.

(b) *Repair of rod ends.* Minor repairs maybe accomplished using the following procedures:

- 1 Smooth out small nicks and scratches with fine abrasive cloth, Federal Specification P-C-451.
- 2 Correct minor thread irregularities by chasing threads with a tap or die.
- 3 Replace defective bearings.
- 4 Major defects will require replacement of rod end.

(c) *Installation of rod ends.* Install rod ends and control tube assembly as a unit. Refer to paragraph 9-12f (5)(c).

(7) Bellcranks. Bellcranks, as shown in figure 9-30, change direction of motion and transmit motion to parts such as control rods, cables, and torque tubes Replace all worn, bent, or otherwise defective bellcranks.

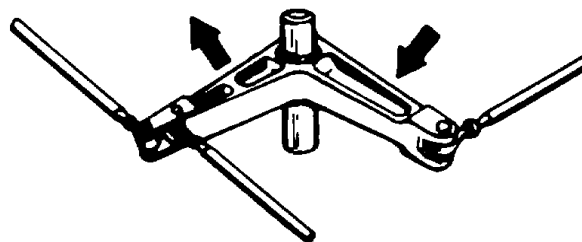


Figure 9-30. Bellcrank

(8) Mixing units. Mixing units combine four motions from the cockpit (pitch, roll, yaw, and thrust) and convert them into two outputs. Inspect and maintain in accordance with the applicable maintenance manual.

(9) Drive chains. Replace defective links in chains and maintain in accordance with applicable maintenance manual.

(10) Speed rigs. Speed rigs are fitted in the cable assembly for the purpose of making rapid minor adjustments.

9-13. Environmental Control Systems.

Environmental control systems heat, cool, and remove moisture from the air supplied to the crew or passenger compartments.

a. Types. The forced air heating system, combustion heater, and pressurized system are used by Army aircraft. Each is explained in the following paragraphs.

(1) Forced air heating system. Heated air is provided for crew comfort, deicing, defrosting, and anti-icing. Air is forced into muffs or jackets installed around the tailpipes. The air routed through the muff or jacket picks up heat by convection through the tailpipe material. The heated air is then routed to an air-to-air heat exchanger before going on to perform various heating functions. Maintenance to this type of system is limited, and will consist of the following:

WARNING

Degreasing Solvent, MIL-PRF-680, is combustible and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames or other sources of ignition.

(a) Wash all metal parts of heating system in degreasing solvent, MIL-PRF-680. Wash flexible tubing with mild soap, Federal Specification P-S-620, and water.

(b) Lubricate valve cranks and push-pull levers with a small amount of molybdenum-disulfide technical powder, MIL-M-7866.

(c) Pressure-test any repair made to heat exchanger tube before installation. A repaired tube is considered a temporary measure and will be replaced when parts become available.

NOTE

Heaters with an engine exhaust heat source require an operational test for carbon monoxide levels upon installation of the heater or following extensive heat exchanger maintenance, modification, or suspected malfunction.

The test will be performed at heat duct opening with the heater full on and the engines operating at full military power. An indication of 50 parts per million (ppm/0.005 percent) or greater requires corrective action prior to heater use. Suggested test equipment is: Detector Kit, Carbon Monoxide, Colorimetric, NSN 6665-00-618-1482 and Indicator Tubes, Carbon Monoxide, NSN 6665-00-276-7545 .

(2) Combustion heater. The combustion heater provides heat by routing outside air past a burner section. The outside air picks up heat by convection from the burner section and is then routed to perform various heating functions. Maintenance of heater between overhauls will normally consist of inspection, cleaning, or replacement of parts as explained in the following procedures:

WARNING

DELETED

CAUTION

Do not use a metal instrument, as it may damage core passage.

(a) Clean core tip and body of spray nozzle with degreasing solvent, MIL-PRF-680. Use a wooden stick to scrape off any dirt remaining on spray nozzle.

TM 1-1500-204-23-1

a. Complete Engine Conditioning. Complete engine conditioning is a complete investigation of the condition of an engine and correction of any difficulty detected. Complete engine conditioning will be given engines being overhauled with the exception of idle mixture and speed, fuel, oil, and water pressure adjustments, and final check and adjustment of the engine after the engine is installed on the aircraft. Perform this conditioning using the instructions contained in table 7-2.

b. Minor Engine Conditioning. Minor engine conditioning is the investigation and correction of any malfunction revealed during flight or through the cockpit checks (daily, intermediate, and complete cockpit checks). Perform the following procedures for minor engine conditioning:

(1) Perform a complete cockpit check (steps 6 through 14, table 7-2) when a new engine is installed, when an aircraft is removed from storage, at each major and minor inspection, and when minor conditioning fails to correct a malfunction. The engine cockpit check will be handled in the following manner:

(a) Record all readings on cockpit check sheet as shown in figure 7-23.

(b) File form in aircraft flight log folder for future reference by both maintenance and flight personnel.

NOTE

The daily check will be carried out by the air crew and will only be recorded in the flight log when performance is unsatisfactory. The serviceability of the engine is established by the air crew by comparing its readings against those recorded on the complete cockpit check made by the maintenance crew.

(2) Perform steps 6 through 13, 15, and 17, table 7-2.

(3) Perform intermediate check after last flight of day. The check may be made any time after the last flight of the day and before the next flight by either the air crew or maintenance personnel. Any difficulties encountered during flight are corrected at this time. The intermediate check is outlined in steps 12 through 15 and 17, table 7-2. The readings obtained are recorded in the flight log only when engine performance is unsatisfactory.

7-7. AIR INDUCTION SYSTEM. The air induction system supplies air to the carburetor or master control.

It forms a long curved channel which conducts air and fuel-air mixture to the supercharger section. The channel consists of an air scoop, temperature controlling device, and a thermometer. General maintenance procedures are explained in the following paragraphs.

a. Inspection, Maintenance, Cleaning, and Replacement. Perform the following procedures for general inspection, maintenance, cleaning, and replacement of air induction system components:

(1) Check induction system for foreign matter and articles to prevent such items from damaging impeller or clogging air passages.

(2) Install flexible channel, joining certain types of induction systems together, in such a manner to prevent flexible channel from being sucked down and restricting air flow.

(3) Correct leaks in induction systems soon as possible after detection, as fuel-air mixture will be adversely affected.

(4) Clean air filters at intervals specified in applicable maintenance manual using the following procedures:

WARNING

Degreasing Solvent, MIL-PRF-680, is combustible and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames or other sources of ignition.

(a) Immerse filter in degreasing solvent, MIL-PRF-680, and agitate to remove all imbedded dirt particles.

(b) Drain by placing on a 25-degree angle draining rack and allowing to dry thoroughly.

(c) When completely dry, immerse filter in a mixture of 1 part corrosion-preventive compound, MIL-C-5545, and three parts lubricating oil, MIL-L-6082, Grade 1120, at a temperature of 70°F (21°C) for 2 to 5 minutes.


NOTE

Repairs of flexible ducts made of fiberglass impregnated with chloroprene shall be made with adhesive , NSN 8040-00-390-7960 (P/N Bostick 4006A and 4006B) utilizing fiber-glass cloth. Repairs will be accomplished in a well-ventilated area.

9-14. Deicing Systems. Pneumatic deicing systems use rubber deicers, called boots or shoes, attached to the leading edge of the wing and stabilizers. The deicers are composed of a series of inflatable tubes. During operation, the tubes are inflated with pressurized air, and deflated in an alternating cycle as shown in figure 9-31. This inflation and deflation causes the ice to crack and break off. The ice is then carried away by the airstream.

a. Deicing System Precautions. Exercise the following precautions to assure maximum service life of deicer shoes:

- Repair all damage promptly.
- Keep deicer shoes free of oil, gasoline, paint remover, solvents, and other injurious substances.
- Clean deicer shoes, using a mild soap, A-A-50, and water solution not exceeding 180°F (82°C).
- Do not rest ladders of work stands against leading edges having deicer shoes installed. Wrap padding around those portions of work stands which could come in contact with installed deicer shoes.
- Do not drag fuel or oil servicing hoses over the deicer shoes.
- Do not walk or lay tools and objects on upper stretch area of shoes. Deicer shoes, when installed, are under tension and therefore readily susceptible to abrasion.
- Protect deicer shoes from abuse.

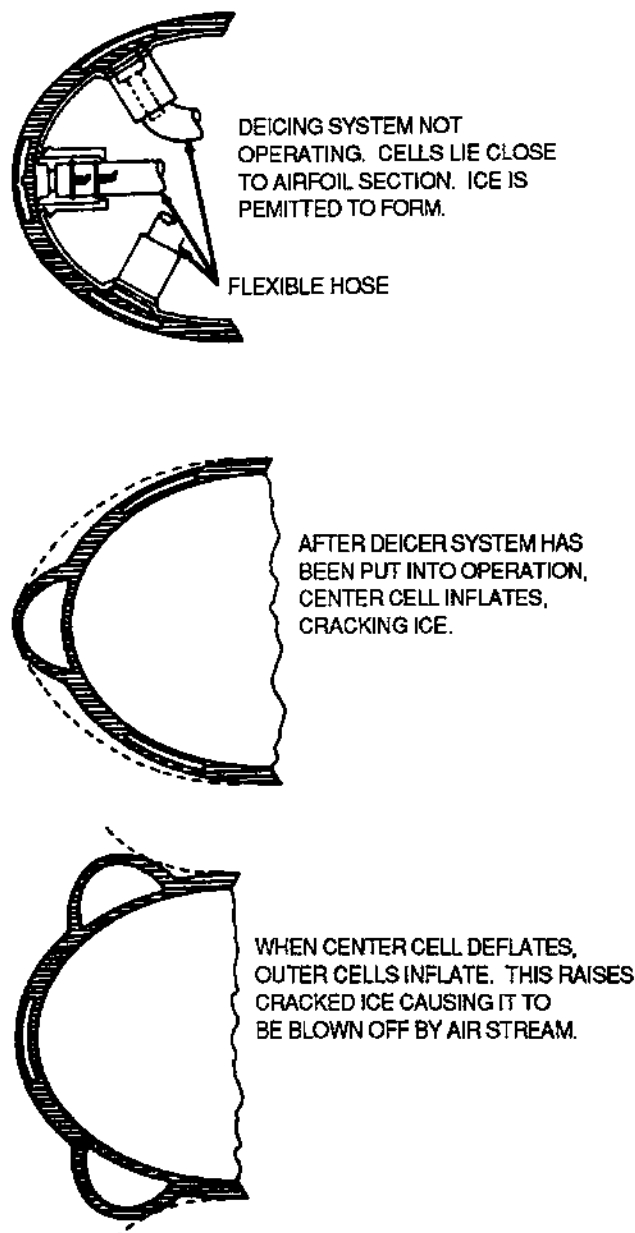

MS030229

Figure 9-31. Deicer Boot Inflation Cycle

b. Deicing System Preventive Maintenance. Preventive maintenance for deicing systems will entail the following procedures:

CAUTION

DELETED

WARNING

Aliphatic Naphtha, TT-N-95, is extremely flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

(1) Thoroughly clean affected Aliphatic Naphtha, TT-N-95.

WARNING

Avoid breathing vapors from cements and solvents utilized during this operation.

(2) Apply a brush coating of sealing area using compound, PR-1826 B1/2, approximately 1/32 inch thick over clean area.

(3) Allow sealing compound to dry until no longer tacky.

(4) Rub down sealing compound to remove brush marks and feather edges using abrasive paper, 400 grit, Federal Specification P-P-101, or equivalent.

(5) Remove powdered sealing compound with compressed air or a dry, clean cloth.

(6) Apply one coat of approved conductive cement to entire surface of shoe.

c. Deicing System Troubleshooting. A typical troubleshooting chart for deicing systems is shown in table 9-4.

d. Deicing System Maintenance. Maintenance of deicer system consists primarily of the care and repair of deicing shoes and the replacement of defective component parts. The following paragraphs explain general maintenance for deicing systems.

(1) **Patch installation.** Install patches using the following procedures:

(a) Thoroughly clean affected area, using Aliphatic Naphtha, TT-N-95.

(b) Buff affected area until completely roughened.

(c) Clean buffed area with a clean cloth completely dampened with Aliphatic Naphtha.

(d) Select a patch of ample size to cover damage.

(e) Apply one coat of Goodrich 60 cement, or equivalent, to damaged area and patch, and allow to dry thoroughly (5 to 10 minutes).

(f) Reactivate both cemented surfaces with a cloth dampened with Aliphatic Naphtha, and apply patch to deicer shoe, starting at edge and working down carefully to avoid trapping air beneath patch.

(g) Allow patch to set 15 minutes, then wipe patch and surrounding area with Aliphatic Naphtha.

(h) Buff and clean a minimum area of 1/2 inch around patch.

(i) Apply a brush coat of sealing compound, PR-1826 B1/2.

NOTE

Weather-checked surfaces and abraded areas not requiring a patch will be treated as outlined in paragraph 9-14b.

Repair cuts, tears, and severe scuff damage to tube or stretch area with reinforced (one-way stretch) neoprene patches. Damage to non-stretch areas will be repaired with plain neoprene patches.

(2) **Cold patch limits.** Limits for cold patching are as follows:

(a) Cuts up to one inch on deicer shoes attached with fairing strips.

(b) Cuts up to three inches in length on deicer shoes attached with cement.

9-15. Fire Detection and Extinguishing Systems.

Fire detection and extinguishing systems are explained in the following paragraphs.

a. Fire Detection Systems. The fire detection systems are designed to detect the presence of fire in zones such as engine compartment and combustion-type heater compartment, and to light a red warning light in the pilot's compartment in event of fire. To detect fires or overheat conditions, detectors are placed in the various zones to be monitored. Fires are detected in aircraft using one or more of the following:

Table 9-4. Troubleshooting Pneumatic Deicing Systems

| Trouble | Probable cause | Remedy |
|--|--|--|
| 1. Pressure gauge oscillates | a. Faulty lines or connections. | Repair or replace lines. Tighten loose connections. |
| | b. Deicing boots torn or punctured | Repair faulty boots. |
| | c. Faulty gauge | Replace gauge. |
| | d. Faulty air relief valve | Adjust or replace relief valve. |
| | e. Faulty air regulator | Adjust or replace regulator. |
| 2. Pressure gauge oscillates; peaks at a specified pressure while instrument vacuum gauge shows no reading | a. Vacuum check valves installed improperly | Reinstall correctly. |
| | b. Vacuum relief valve Improperly adjusted or faulty | Adjust or replace valve as necessary. |
| | c. Faulty lines between pump and gauge | Tighten, repair, or replace faulty lines or connections. |
| 3. Pressure gauge shows no pressure while vacuum gauge shown normal reading. | a. Faulty pressure gauge line | Repair or replace line. |
| | b. Faulty pressure gauge | Replace gauge. |
| | c. Pressure relief valve faulty | Adjust or replace as necessary. |
| | d. Pressure regulator faulty | Adjust or replace as necessary. |
| 4. Cycling period irregular | a. Loose or faulty tubing and connection | Tighten, repair, or replace as necessary. |
| | b. Boots torn on punctured | Repair faulty boots. |
| | c. Faulty electronic timer | Replace timer. |

TM 1-1500-204-23-1

- Rate-of-temperature rise detectors
- Radiation sensing detectors
- Smoke detectors
- Overheat detectors
- Carbon monoxide detectors
- Combustible mixture detectors
- Fiber-optic detectors
- Flame detectors
- Observation by crewmembers

b. Types of Fire Detection Systems. A fire detection system should signal the presence of a fire. Units of the system are installed in locations where there are greater possibilities of a fire. Three detector systems in common use are the thermal switch system, thermocouple system, and the continuous-loop detector system.

(1) *Thermal switch system.* The thermal switch system uses a bimetallic thermostat switch or spot detector similar to that shown in figure 9-32. Each detector unit consists of a bimetallic thermoswitch. These thermal switches are heat-sensitive units that complete electrical circuits at a certain temperature. If the temperature rises above a set value in any one section of the circuit, the thermal switch will close, completing the light circuit to indicate the presence of a fire or overheat condition.

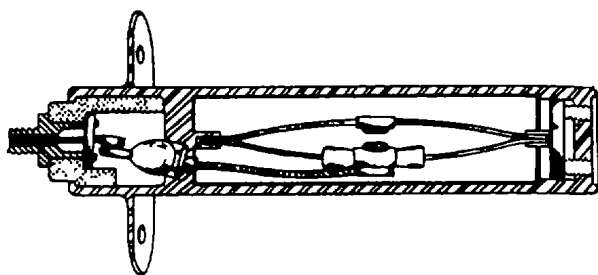


Figure 9-32. Thermal Switch

(2) *Thermocouple system.* The thermocouple is constructed of two dissimilar metals such as chrome and constantan. The point where these metals

are joined and will be exposed to the heat of a fire is called a hot junction. There is also a reference junction enclosed in a dead air space between two insulation blocks. A metal cage surrounds the thermocouple to give mechanical protection without hindering the free movement of air to the hot junction. If there is a fire, the hot junction will heat more rapidly than the reference junction. This will complete a circuit from the aircraft power system to the coil of the slave relay which closes and completes the circuit to the fire-warning light.

(3) *Continuous-loop system.* A continuous loop detector or sensing system permits more complete coverage of a fire hazard area than any type of spot-type temperature detectors. Continuous-loop systems are versions of the thermal switch system. They are overheat systems, heat-sensitive units that complete electrical circuits at a certain temperature. There is no rate-of-heat-rise sensitivity in a continuous-loop system. Two widely used types of continuous-loop system are the Kidde and the Fenwal systems.

(a) *Kidde system.* The Kidde continuous-loop system, as shown in figure 9-33, has two wires imbedded in a special ceramic core within an Inconel tube. One of the two wires in the Kidde sensing system is welded to the case at each end and acts as an internal ground. The second wire is a hot lead (above ground potential) that provides a current signal when the ceramic core material changes its resistance with a change in temperature.

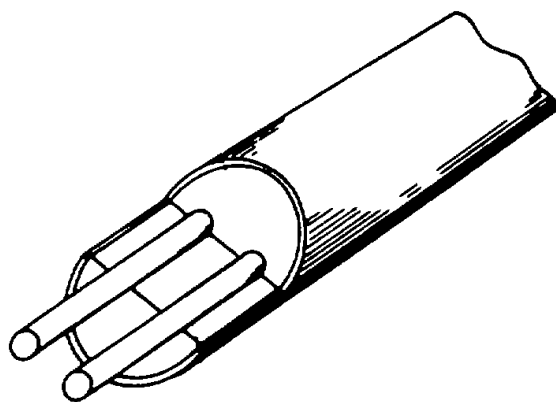


Figure 9-33. Kidde Sensing Element

(b) Fenwal system. The Fenwal system, as shown in figure 9-34, uses a single wire surrounded by a continuous string of ceramic beads in an Inconel tube. The beads in the Fenwal detector are wetted with a eutectic salt which possesses the characteristic of suddenly lowering its electrical resistance as the sensing element reaches its alarm temperature.

c. Maintenance of Fire Detection Systems. Inspect fire detection systems for the following:

- Cracked or broken sections caused by crushing or squeezing between inspection plates, cow panels, or engine components.
- Abrasion caused by rubbing of element on cowling, accessories, or structural members
- Pieces of safety wire or other metal particles which may short the spot detector terminals.
- Condition of rubber grommets in mounting clamps, which may be softened from exposure to oils, or hardened from excessive heat
- Dents and kinks In sensing element sections

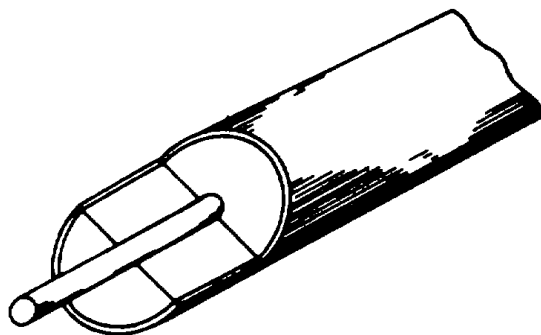


Figure 9-34. Fenwal Sensing Element

NOTE

Limits on the element diameter, acceptable dents or kinks, and degree of smoothness of tubing contour are specified by manufacturers. No attempt should be made to straighten any acceptable dent or kink, since stresses may be set up that could cause tubing failure.

- Loose nuts or broken safety wire at the end of the sensing elements

NOTE

Loose nuts should be re-torqued to the value specified in the manufacturer's instructions. Some types of sensing element connections require the use of copper crush gaskets. These gaskets should be replaced any time a connection is separated

- Broken or frayed flexible leads, if used.

NOTE

The flexible leads is made up of many fine metal strands woven into a protective covering surrounding the inner insulated wire. Continuous bending of the cable or rough treatment can break these fine wires, especially those near the connectors. Broken strands can also protrude into the insulated gasket and short the center electrode.

- Proper sensing element routing and clamping.

NOTE

Long unsupported sections may permit excessive vibration which can cause breakage. The distance between clamps on straight runs is usually about 8 to 10 inches, and is specified by each manufacturer. At end connectors, the first support clamp is usually located about 4 to 6 inches from the end connector fittings. In most cases, a straight run of 1 inches is maintained from all connectors before a bend is started, and an optimum bend radius of 3 inches is normally adhered to

TM 1-1500-204-23-1

- Rubbing between a cowl brace and a sensing element.
- Correct grommet installation.
- Thermocouple detector mounting brackets should be repaired or replaced when cracked, corroded, or damaged.

d. Troubleshooting of Fire Detection Systems. A typical troubleshooting chart for fire detection systems is shown in table 9-5.

e. Repair or Replacement of Fire Detection Components. Repair or replace fire detection components using the following procedures:

(1) Replace defective control unit with a serviceable unit.

CAUTION

Do not bend sharply, kink, or twist sensing element during installation. Minimum allowance curve radius is one inch. Damage may otherwise result

Table 9-5. Troubleshooting of Fire Detection Systems

| Trouble | Probable cause | Remedy |
|---|---|--|
| 1. Intermittent alarms | a. Short In the detector system wiring | Repair or replace defective wiring. |
| | b. Kinks and bends in sensing element | Repair damaged areas of sensing element. |
| 2. False alarms | a. Short between loop connections and control units | Repair or replace defective wiring. |
| | b. Bent areas of sensing loop in contact with hot parts of the engine | Repair bent areas of sensing loop. |
| | c. Short In the sensing loop | Replace shorted section of sensing loop. |
| | d. Moisture in detection system | Remove moisture contamination. |
| 3. Failure to obtain an alarm signal when the test switch is actuated | a. Defective test switch or control unit | Replace test switch or control unit. |
| | b. Lack of electrical power | Provide electrical power. |
| | c. Inoperative Indicator light | Replace indicator light. |
| | d. An opening in sensing element or connecting wiring | Repair sensing element or connecting wiring. |

(2) Replace sensing element only when physical damage such as chafing, bending, twisting, or breaking has occurred. Replace attaching parts when found to be defective.

CAUTION

Bends will not be less than two inches in radius.

(3) Replace cable detector only when physical damage such as chafing, bending, twisting, or breaking has occurred. Make all bends and routing with fingers only. Replace attaching parts when found to be defective

(4) Replace mounting brackets of thermocouple detectors when cracked, corroded, or damaged. Replace attaching parts when found to be defective

NOTE

When replacing thermocouple detector, note which wire is connected to identified plug terminal of defective unit, and connect replacement in the same way.

f. Testing of Fire Detection System Test fire detection system using the following procedures

(1) Test system for proper operation by turning on power supply and placing FIRE DET TEST switch in test position Red warning light should flash on within 10 seconds. Turn switch and power off

(2) Test required after repair or replacement of units in fire detector system or when system is Inoperative as follows

- Replace lamp in warning light, when warning light does not flash on.
- Polarity, ground, resistance, and continuity tests are required for systems with thermocouple detect or units.
- Resistance and continuity tests are required for systems with sensing elements or cable detector units.

WARNING

- **Repeated or prolonged exposure to high concentrations of bromochloromethane (CB) or**

decomposition products should be avoided. CB is a narcotic agent of moderate intensity but of prolonged duration. It is considered less toxic than carbon tetrachloride, methylbromide, or usual products of combustion. Normal precautions should be taken while using bromochloromethane Including use of oxygen masks when available. Injury to personnel may otherwise result.

- **Monobromotrifluoromethane (CF₃Br) is highly volatile but is not easily detected by its odor. Although nontoxic, it must be considered to be about the same as other freons and carbon dioxide, causing danger to personnel primarily by reduction of oxygen available for proper breathing. The liquid should not be allowed to come into contact with skin, as it may cause frostbite or low temperature burns.**

g. Fire Extinguishing Systems. The fire extinguisher system is the one-shot type consisting of one or more charged containers of bromochloromethane or monobromotrifluoromethane (CB and CF₃Br), discharging tubing, overboard discharge tube, discharge indicator, circuit breakers, and control panel switch. The container is charged with bromochloromethane or monobromotrifluoromethane under pressure, which is discharged through tubing into the engine compartments by actuating FIRE EXT switch to the ON position

h. Maintenance of Fire Extinguishing Systems. Maintenance of fire extinguisher system consists of inspection and replacement of defective parts using the following procedures:

(1) Check for specific pressure on pressure gauge as given in applicable aircraft maintenance manual

(2) Inspect overboard discharge indicator for evidence of system being discharged due to thermal expansion.

CAUTION

Do not flush system with water. Damage to system may otherwise result

(3) Purge system thoroughly with clean, dry, compressed air immediately after landing when system has been used in flight, or immediately after discharged on the ground. Absorb residual bromochloromethane remaining on surface areas with dry cloths and clean, dry, compressed air

(4) Inspect compartments and components that may have come in contact with extinguishing agent for possible damage. Replace defective parts

(5) Inspect rubber materials and insulations where extinguisher was used. Replace when found defective.

(6) Relubricate all lubricated parts exposed to extinguishing agent

(7) Replace overboard discharge indicator disc after system has been discharged.

CAUTION

Disconnect positive electrical lead on solenoid valve before removing container, and do not connect lead until all circuit tests have been completed and firing switch on control panel is in OFF position. Damage to equipment may otherwise result.

(8) Replace discharged container and bonnet assembly with fully charged assemblies

WARNING

Before attempting to perform continuity test of the fire extinguishing electric circuit, the extinguisher cartridges must be removed to preclude accidental firing during test

(9) Make a visual inspection of the electrical circuit wiring for obvious damage. Test the continuity of the entire circuit excluding the fire extinguisher container cartridge.

NOTE

Install cartridges in the assigned locations (see DA Form 2408-18) to preclude incorrect age life control removals at a later date.

9-16. Hoist Systems. The hoist system which provides a means of raising and lowering equipment or personnel during flight or ground operation is of two types: hydraulic and electric.

a. Hydraulic Hoist System. Maintenance and testing procedures for hydraulic hoist systems are explained in the following paragraphs

(1) Maintenance of hydraulic hoist system. Maintenance of the hydraulic hoist system consists of replacement of defective parts using the following procedures

(a) Service system with fluid, MIL-H-5606, and maintain indicated reservoir level

(b) Cap all tubing disconnected during removal of units to prevent entry of foreign matter.

(c) Replace damaged tubing. Use old tubing or a piece of string as a pattern in routing new tubing

(d) Reuse fittings of hose and tube assemblies unless damaged

NOTE

Clean and thoroughly flush tubing and hose prior to installation.

(e) Replace hoist cable when kinked or when cable has broken.

(f) Replace micron filters periodically to assure delivery of uncontaminated fluid

(g) Lubricate hoist as prescribed in the applicable aircraft maintenance manual.

(2) Testing of hydraulic hoist system. Test hydraulic hoist system for operation periodically (and when a new unit is installed in the system) by performing a functional check using the following procedures:

NOTE

Use an external hydraulic test unit or the aircraft hydraulic system with engine operating

(a) Check operation of down-limit switch by unwinding winch to its limit to assure that winch will stop when cable is fully unwound

(b) Check operation of up-limit switch by running cable until up-limit switch is actuated

b. **Electrical Hoist System.** Maintenance and testing procedures for electric hoist systems are explained in the following paragraphs

(1) **Maintenance of electric hoist system.** Maintenance of the electric hoist system consists primarily of replacement of defective parts using the following procedures.

(a) Replace hoist cable when kinked or when cable has been broken strands.

(b) Replace monorail attaching parts when found to be defective.

(c) Lubricate hoist as prescribed in the applicable aircraft maintenance manual.

(2) **Testing of electric hoist system** Perform a functional check, to test the electric hoist system for operation periodically, and when a unit or electrical wiring is replaced in the system.

9-17. Oxygen Systems. Oxygen system types, maintenance, and servicing is explained in the following paragraphs.

a. **Oxygen System Types.** The design of the various oxygen system types used in aircraft depends largely on the type of aircraft, its operational requirements, and, where applicable, the pressurization system. In some aircraft a continuous-flow oxygen system is installed for both passengers and crew. The pressure demand system is widely used as a crew system, especially on the larger transport aircraft. Many aircraft have a combination of both systems which may be augmented by portable equipment.

(1) **Continuous-flow system.** The continuous flow oxygen system is shown in figure 9-35. The oxygen

flows from the charged cylinder through the high-pressure line to the pressure-reducing valve, which reduces the pressure to that required at the mask outlets. A calibrated orifice in the outlets will control the amount of oxygen delivered to mask.

(2) **Pressure-demand system.** A simple pressure-demand oxygen system is shown in figure 9-36. Note that there is a pressure-demand regulator for each crewmember, who can adjust the regulator according to his requirements.

b. **Maintenance of Oxygen Systems.** Maintenance of oxygen systems is described in the following paragraphs.

(1) **Oxygen leaks.** Use soap test to locate leaks unless individual leaks are large enough for personnel to hear or feel. Apply soap solution, using mild soap, A-A-50, to suspected part using a soft brush and watch carefully for frothing, bubbling, or growing bubbles

WARNING

Do not allow petroleum base products to come in contact with components of the oxygen system, as explosion or fire may result.

CAUTION

Drain tubing of all solutions and blow out with oxygen prior to installation in aircraft. Contamination may otherwise result.

(2) **Tubing and fittings.** Maintenance, repair, replacement, and installation of oxygen system tubing is given in TM 1-1500-204-23-2.

(3) **Cylinders** Replace all damaged cylinders. No maintenance is authorized on installed low or high pressure cylinders.

NOTE

All low pressure oxygen cylinders which carry a maximum charge of 450 psi will be painted yellow. High pressure oxygen cylinders which carry a maximum of 2000 psi will be painted green.

TM 1-1500-204-23-1

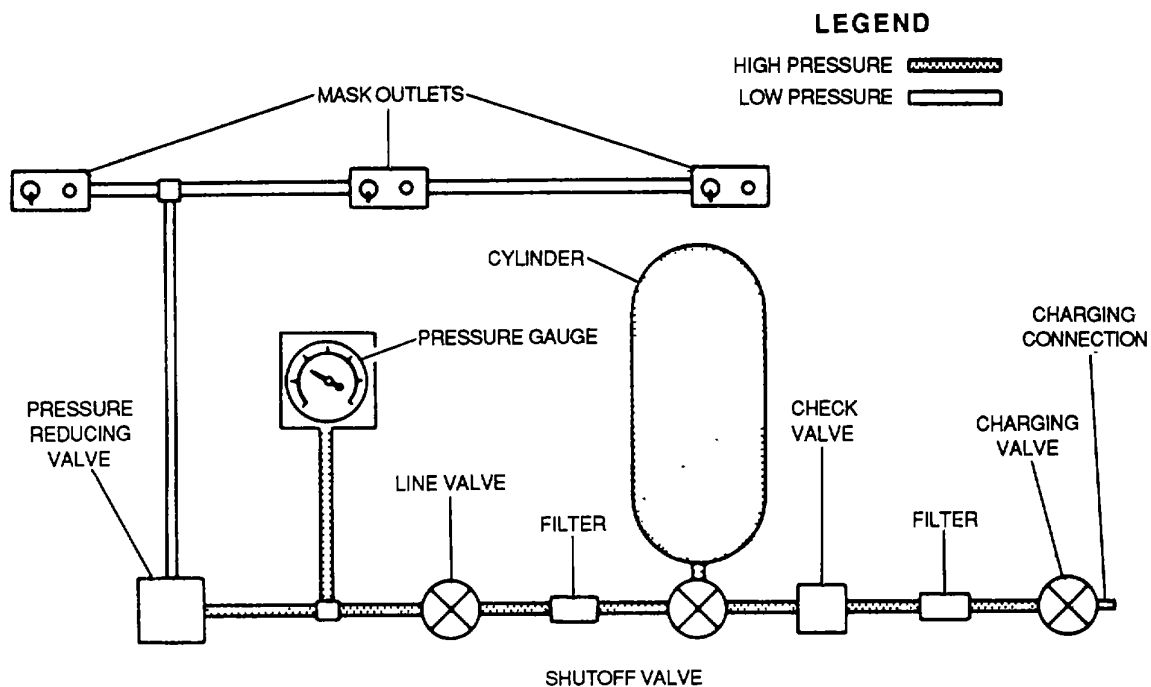


Figure 9-35. Continuous Flow Oxygen System

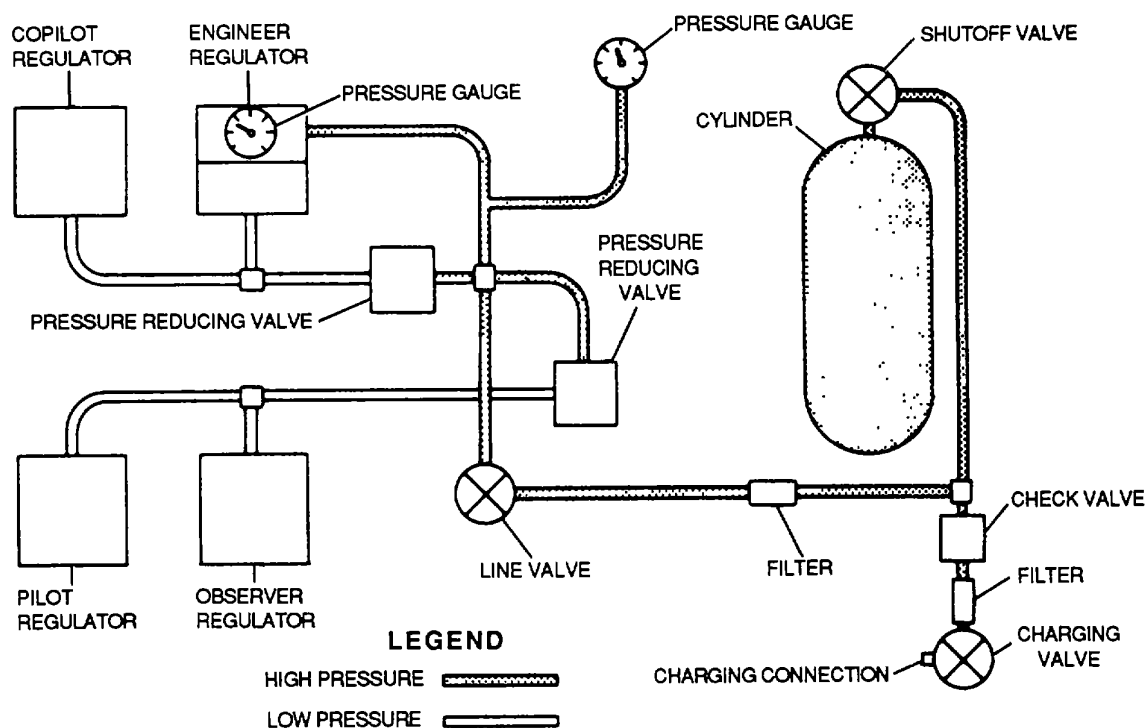


Figure 9-36. Pressure-Demand Oxygen System

(4) *Check valves.* Replace all faulty check valves as complete units. Check valves cannot be repaired.

WARNING

Do not use masking tape to seal openings in oxygen regulators. Its use on either serviceable or repairable oxygen equipment constitutes a safety hazard

(5) *Regulators.* Do not apply oil or grease to any part of an oxygen regulator.

(6) *Flexible hose.* Maintain flexible hose using the following procedures

(a) To remove contamination other than oil and grease from flexible hose, remove hose and clean with mild soap, A-A-50, and warm water solution, thoroughly rinse with fresh water and thoroughly dry with a stream of clean, dried, water-pumped air or nitrogen

(b) Replace hoses damaged or contaminated with oil or grease. Repair and replacement procedures for flexible hose are outlined in TM 1-1500-204-23-2.

(c) Examine fittings for tightness.

(7) *Open lines.* Plug or cap all open lines and equipment when opening system for replacement of any part. When system has been accidentally left open, system will be purged by one of the following methods

- In aircraft having filler lines connected to one end of cylinder, and distribution lines connected to opposite ends of cylinder, purging will be accomplished by connecting a service trailer to aircraft filler valve. With all regulators open, pass oxygen through system for at least 30 minutes at a pressure of 50 psi at filler valve
- In aircraft having filler lines and distribution lines commonly connected at one end of cylinder, purging will be accomplished by filling system with oxygen and then draining system. This cycle shall be performed at least three times.

(8) *Charging after flight.* Charge oxygen system on aircraft that have had all the oxygen supply drained during flight within two hours after landing. When

oxygen system is not charged within two hours after landing, system will be purged.

NOTE

- **Do not use lubricant other than antiseize tape, MIL-T-27730, on aircraft oxygen systems**
- **Do not use cleaning solutions, or any other solutions, inside any part of oxygen system when installed in aircraft.**
- **Do not use any gases other than oxygen inside any part of oxygen system when installed in aircraft.**

c. Servicing of Oxygen Systems. Prior to servicing an aircraft oxygen system, personnel shall familiarize themselves with the system, precautions, and instructions for handling gaseous oxygen, operation of servicing equipment, and potential hazards involved. Oxygen servicing requires the utmost precautionary measures due to the highly explosive and flammable capabilities of oxygen. All personnel shall heed the following precautionary procedures when servicing:

CAUTION

Only qualified personnel shall be authorized to operate equipment for servicing of an aircraft oxygen system. Damage to equipment may otherwise result.

(1) Aircraft shall not be serviced with oxygen when any of the following conditions prevail,

- Aircraft electrical switches are on.
- Ground powered equipment is operating within 50 feet of the servicing area.
- Aircraft is being serviced with fuel, oil, or anti-icing fluids
- Any combustible materials, fluids, etc., are evident around oxygen servicing equipment.

TM 1-1500-204-23-1

(2) When aircraft is being serviced with oxygen within 50 feet of an area where smoking is permitted, NO SMOKING signs shall be placed at a 50-foot radius around the servicing area.

(3) All aircraft parked outside will be grounded and bonded, in accordance with FM 1-500, to the aerospace ground equipment while servicing oxygen systems

CAUTION

Oxygen equipment shall be kept clean at all times. No organic matter or flammable substance of any nature shall be allowed to contact oxygen. Ensure that all components of the systems are free of moisture, oil, and grease at all times. Oxygen is a nonflammable gas; however, it supports combustion and lowers the flash or ignition point of all combustible materials. Oxygen shall be handled as a flammable gas.

(4) To prevent overfilling of tanks, personnel shall observe aircraft oxygen system gauges at all times during servicing operation.

(5) Personnel shall be stationed at the oxygen servicing unit at all times during servicing operation to shut off unit valves immediately upon receiving a command from personnel watching aircraft system gauge.

(6) Service aircraft from cylinders clearly labeled DRY or AVIATOR'S BREATHING OXYGEN. Other Oxygen may have moisture which could cause flow stoppage at temperatures below freezing.

(7) Always use a pressure-reducing device when servicing low-pressure oxygen system from high pressure bottles.

(8) Fill oxygen system slowly to prevent explosion resulting from heat generated by filling too fast.

(9) An aircraft oxygen system not equipped with shutoff devices at cylinders shall be completely discharged of all pressure prior to removing components.

All electrical power shall be shut off during oxygen discharge operations.

(10) Refer to applicable aircraft maintenance manual for additional information and maintenance procedures.

9-18. Relief Tube System. Maintenance of relief tubes primarily consists of cleaning and replacing of parts. Clean or replace parts using the following procedures:

a. To clean and deodorize relief tube systems, a solution of 1 1/2 ounces of MIL-SPEC A-A-1634 general purpose deodorant and 5 gallons of water will be used to wash area around relief tube exit and relief tube entrance.

b. Pour remainder of solution through the tube. When an offensive odor remains, use a stronger solution and reclean until odor is removed.

NOTE

The area of relief tube exhaust will be primed with zinc chromate primer, Federal Specification TT-P-1757, and painted with acid proof lacquer, Federal Specification TT-L-54

c. Replace deteriorated hose, broken or damaged horn, and broken or damaged attaching parts.

NOTE

Install hose so as to eliminate any residue pockets.

9-19. Windshield Wiper System. Maintenance and adjustment of the windshield wiper system is explained in the following paragraphs.

a. Maintenance of Windshield Wiper System. The maintenance of the windshield wiper system consists primarily of replacement of defective parts, as follows.

(1) Replace wiper motor, wiper units, wiper arms, and flexible cables that are inoperative, cracked, bent or otherwise defective.

(2) Replace wiper blades that are worn, deteriorated, or torn, or when rubber has lost its elastic qualities.

b. Adjustment of Windshield Wiper System. The windshield wiper system shall be adjusted as follows:

CAUTION

Do not operate wipers on dry glass.

(1) Loosen locknut on wiper blade, align blade, and tighten locknut.

(2) Remove locknut from wiper unit shaft, adjust position of arm on shaft to give full sweep on windshield, and reinstall locknut.

(3) Adjust tension nut at base of wiper arm until blade exerts 1 ½ to 2 pounds pressure against windshield.

NOTE

Measure tension at tip of wiper arm in a direction perpendicular to windshield surface.

9-20. Aircraft Seats. Maintenance of aircraft seats shall be accomplished in accordance with the procedures explained in the following paragraphs.

a. Troop Seats. Cleaning, repair and installation and removal procedures for fabric or cotton canvas troop seats are explained in the following paragraphs.

(1) **Cleaning.** Clean troop seats as follows:

(a) Unfold and place parts face up.

(b) Brush with a firm bristle brush to remove excess dirt.

(c) Prepare a cleaning solution of 1 ounce of anionic synthetic detergent (alkyl benzene sulfonate), Federal Specification P-D-410, per gallon of water.

(d) Work up heavy suds by repeatedly squeezing of a sponge saturated with detergent solution. Apply heavy suds to soiled areas.

(e) Scrub soiled areas briskly, using a firm bristle brush or heavy cloth. Wipe off with a damp cloth.

(f) Allow treated area to dry. Brush to raise nap.

WARNING

Degreasing Solvent, MIL-PRF-680, is combustible and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames or other sources of ignition.

(g) Remove grease spots with degreasing solvent, MIL-PRF-680.

(h) Remove blood stains by use of cold water applied with sponge. Remove residue with a 10 percent solution of ammonia hydroxide, MIL-STD-612, or a paste of cornstarch, Federal Specification N-C-541. Allow treated area to dry. When cornstarch is used, brush dried material from fabric.

(2) **Repair.** Repair and patch fabric material of troop seats using repair procedures outlined in paragraph 9-22.

(3) **Installation and removal.** Follow instructions contained in the applicable aircraft maintenance manual for installation and removal procedures.

b. Metal Seats. Cleaning, repair, and installation and removal procedures are explained in the following paragraphs.

WARNING

DELETED

(1) **Cleaning.** Clean with clean cloth moistened with degreasing solvent, MIL-PRF-680.

(2) **Repair.** Patches and reinforcement repairs to metal seats will be accomplished in accordance with repair procedures in TM 1-1500-204-23-10.

(3) **Installation and removal.** Follow instructions contained in the applicable aircraft maintenance manual for installation and removal procedures.

c. Upholstered Seats. Cleaning, repair, and installation and removal procedures are explained in the following paragraphs.

(1) Cleaning. Clean upholstered seats by using cleaning materials and methods as prescribed in paragraph 9-20a.

(2) Repair. Repair small rips or tears with a sewed or unsewed patch. Attach unsewed patches with adhesive, Federal Specification MMM-A-1617.

(3) Installation and removal. For instructions installation and removal, refer to the applicable maintenance manual for particular aircraft.

d. Raschel Knit Seat Covers. Raschel knit seat cover maintenance limits are listed below:

- Deterioration or discoloration which indicates a strength decrease to the point where it affects the integrity of the seat(s) is not allowed.
- Tears, cuts, or holes greater than 2.5 inch in length or diameter are not allowed; the seat should be replaced
- Tears, cuts, or holes less than 2.5 inch in length can be repaired. Repair is not allowed for seat covers with holes, cuts, or tears in raschel knit material that are located close to the seams of the adjoining panels and do not allow sufficient space for the darning procedure. Repair should be used as a temporary measure until new seat covers or back covers can be installed. In the fine-mesh duck cloth surrounding the raschel knit material, tears, cuts and holes up to 2.5 inches in length can be repaired. A different method for repairing is required and is as follows:

Tears, cuts or holes less than 0.5 inch in length may be repaired by stitching which extends 0.5 inch into the sound material surrounding the damaged area.

Tears, cuts or holes of up to 1.0 inch in length may be repaired with the use of a patch made of the same material as the seat cover. Locate on the underside of the damaged area and sew a zigzag stitch over the tear area and into patch extending 0.5 inch into the sound material surrounding the damaged area.

Tears, cuts, or holes of 1.0 to 2.5 inches in length may be repaired with the use of a patch made of the same material as the seat cover. The patch should be sized to extend 1.0 inch in all directions to the damaged area and include 0.50 inch of material to fold under to finish all the edges of the patch. The patch should be located on the underside of the damage area with the folded edges to the inside. Zig-zag sew the damage area into the patch, followed by a minimum of two (2) rows of stitching around the patch using 6-9 stitches per inch.

NOTE

A 24 month service life pertains only to those covers which are used in an energy attenuation application.

- Replace the original nylon spall shield, or use new ballistic nylon MIL-C-12369 for replacement. Apply a thin even coat of contact adhesive EC 1300L (FSCM 04963) to the tile surface. Allow adhesive to dry until tacky. Carefully mate the spall shield to the tile, working it on by hand pressure. Fit the nylon snugly over the fiberglass patch (or patches). Do not wrap the spall shield over the edge of the panel. Tears in the spall shield shall not exceed 3 inches. Any unbonded area of the spall shield, (as evidenced by bulges), shall not exceed a diameter of 1 inch.
- Seat covers made of raschel knit nylon cloth shall have a service life of 24 months. Seat covers that are not marked with an installation date shall be assumed to have the same date as the day of acceptance of the aircraft. Replacement covers shall be marked with contrasting ink conforming to MIL-I-6903. The size of marking shall be of sufficient size and location so that it can easily be read. The following is an example of marking installation date: 7 Mar 88

e. Polyester Fabric Seat Covers (Uh-60). Cleaning, repair, and installation and removal procedures for polyester fabric seat covers are explained in the following paragraphs.

(1) Cleaning. Clean the polyester fabric seat and back using the following procedures:

(a) Brush fabric with firm bristle brush removing excess dirt.

(b) Use enough liquid to allow complete immersion of the seat cover to be washed.

(c) Mix 3 ounces of low strength laundry soap, Federal Specification P-S-1792, to each gallon of water. Synthetic detergent is permissible as an alternative.

NOTE

The water temperature should not exceed 100°F (37°C).

(d) Immerse one cover at a time in the soap solution, let stand for 20-25 minutes, and hand wash for 5 minutes.

(e) Rinse cover in clean water until all soap is removed

NOTE

If machine washed, use complete wash and rinse cycles.

(f) Spread covers on a clean surface out of direct sunlight to dry.

(2) Repair. Repair polyester fabric covers using the following procedures.

(a) Inspect for cuts, tears, punctures, rums and broken stitches. Any damage less than 2-1/2 inches long x 1 inch wide in the seat bottom may be repaired. Replace seat bottoms with damage greater than 2-1/2 inches long x 1 inch wide.

NOTE

Seat backs do not have a damage size limit for repair

(b) All seats will be repaired using polyester thread, Specification Federal V.T. 285 and cloth polyester (P/N SS9512) as required.

(c) Repairs will be accomplished using the details in figure 9-37.

(d) Damage that is close to the edge of the seat cover which has insufficient space to allow a complete patch pattern will not be repaired.

(3) Installation and removal. For instructions on installation and removal, refer to the applicable maintenance manual for the particular aircraft.

9-21. Aircraft Litters. Litters installed in Army aircraft shall be installed and removed as described in the following paragraphs.

a. Installation. Install Litters using litter kits provided with each aircraft. Refer to the applicable aircraft maintenance manual for specific installation procedure.

b. Removal. Upon completion of mission involving litters, remove from aircraft and return to supplying agency. Stow litter kit in original container in aircraft when applicable.


9-22. Protective Covers. The instructions contained below are applicable to all types of aircraft protective covers and shields used by the Army.

a. Installation and Removal Precautions. Installation and removal precautions for the protective covers are as follows.

- Protective covers shall be installed to protect airframe components which are affected by extreme weather conditions.
- Covers shall be installed when aircraft is to remain in an exposed area for any extended length of time, or when snow or ice is anticipated.
- To keep out dust, rain, and foreign matter, protective shields, such as intake duct and exhaust covers, shall be installed to cover openings and passages in the aircraft structure and engine nacelle which leads to internal components of aircraft.
- Do not drag covers over sharp objects; prevent contact with ground when installing and removing.
- Spread wet covers out to dry before folding and storing.
- When installing and removing covers, do not allow attaching buckles to scratch or mar plexiglass sections of aircraft.


TM 1-1500-204-23-1

HOLES OR WORN AREAS
 LESS THAN 0.50 DIAMETER

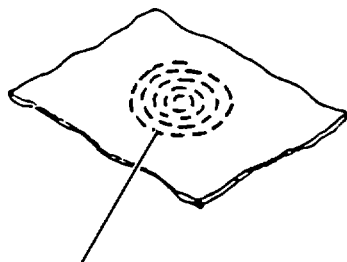

CIRCULAR DARN
 NOTES 2 AND 4
 NO REINFORCING PATCH REQUIRED

HOLES OR TEARS
 0.500 TO 0.750 DIAMETER OR LENGTH

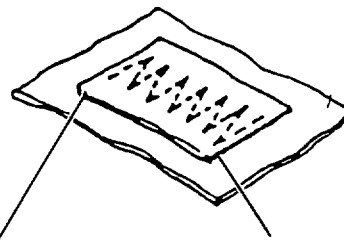


REINFORCING PATCH
 SAME MATERIAL AND
 WEIGHT AS ORIGINAL
 LOCATE ON UNDERSIDE
 OF HOLE OR TEAR BEFORE DARNING

ZIG-ZAG OR CIRCULAR DARN
 NOTES 2 AND 4

REPAIR FOR HOLES OR TEARS
 EXCEEDING 0.750 DIAMETER OR LENGTH IN CANVAS


TEARS LESS THAN 0.50 LONG

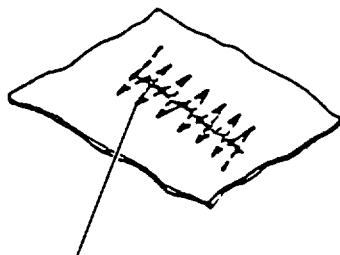

ZIG-ZAG DARN
 NOTES 2 AND 4
 NO REINFORCING PATCH REQUIRED

STITCHING MINIMUM 2 ROWS
 ROW DISTANCE
 0.375 TO 0.500
 NOTES 2 AND 4

ZIG-ZAG DARN
 HOLE-TYPE DAMAGE MAY
 BE CUT AWAY AFTER
 PATCH IS ATTACHING

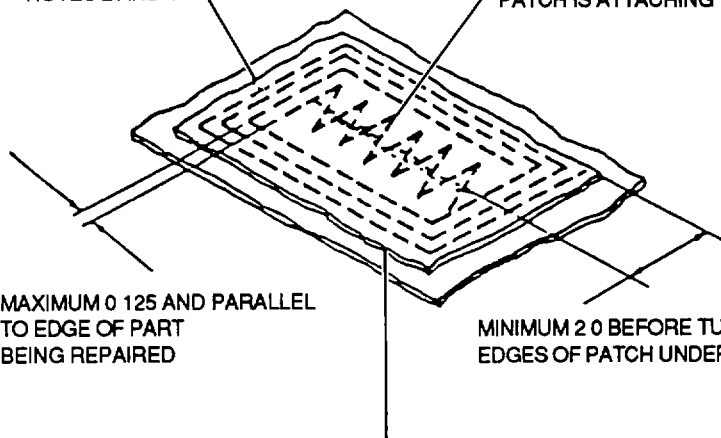

MAXIMUM 0.125 AND PARALLEL
 TO EDGE OF PART
 BEING REPAIRED

MINIMUM 2.0 BEFORE TUCKING
 EDGES OF PATCH UNDER

ENFORCING PATCH SAME MATERIAL AND
 WEIGHT AS ORIGINAL LOCATE ON UNDER
 SIDE OF PART BEING REPAIRED

NOTES

- 1 ALL DIMENSIONS ARE IN INCHES
- 2 STITCHING TO BE IN ACCORDANCE WITH DDD-S-751 5 TO 8 STITCHES
 PER INCH DEPENDING UPON WEIGHT OF MATERIAL USE FEWER STITCHES
 PER INCH FOR HEAVIER MATERIAL.
- 3 INSERT TO BE SAME MATERIAL AND WEIGHT AS ORIGINAL
- 4 USE THREAD VT285 COLOR TO MATCH COLOR OF ORIGINAL MATERIAL

Figure 9-37. Repair Pattern for Polyester Cloth

b. Maintenance of Protective Covers. Cleaning, repair, waterproofing, and storage of protective covers are explained in the following paragraphs.

(1) Cleaning. Protective covers contaminated with salts from the atmosphere, specifically chlorides (in marine areas) and sulphur compounds (in industrial areas), can promote corrosion of aircraft skins. Grease, oil, or dirt can mar or discolor plexiglas portions of the aircraft. Therefore, only clean covers will be used. Clean protective covers using the following procedures.

NOTE

To increase life expectancy, protect covers against rain, wind, snow, sand, and mildew when not installed on aircraft.

(a) Remove all possible ropes and wooden attaching parts.

(b) Tape or wrap all attaching parts, such as buckles, snaps, hooks, and D-rings to prevent tearing and snagging of covers during soaking or washing.

(c) Brush soiled section with firm bristle brush to remove excessive soil.

(d) Select a container that will hold enough liquid to allow complete immersion of cover to be washed.

(e) Mix soap solution containing 3 ounces of low strength laundry soap, Federal Specification P-S-1792, to each gallon of water. Synthetic detergents are permissible when available.

NOTE

The temperature of water should not exceed 100°F (37°C)

(f) Immerse one cover at a time in soap solution for a period not to exceed 30 minutes.

(g) Rinse over in clean water until all soap has disappeared.

(h) Spread covers on a clean surface to dry.

(2) Repair. Make prompt repairs to aircraft protective covers to prolong service life. Inspect for

damage immediately after use and make repairs using the following paragraphs.

(a) Puncture, snagged, or torn areas. Repair punctured, snagged or torn areas as follows:

1 Repair punctured, snagged, or torn areas by sewing in place a patch of material equal to basic material in weight, quality, and color.

2 Reinforce and darn punctures and small holes (1/2 Inch or less).

3 Trim and turn under frayed edges to make a neat and durable repair.

4 Use circular patches on small holes and rectangular patches on larger holes, irregular snags, or tears.

5 Mend a cluster of holes with one suitable patch, after first removing damaged area and turning under all edges.

6 Provide best possible water drainage by extending patch seams diagonally from centerline of cover section whenever possible.

7 Do not extend patches over more than one section of cover (seam to seam).

8 Restitch all open seams. Stitch pattern and type thread will follow as near as possible the type stitch and thread used in original construction of item being repaired.

(b) Edge damage. Repair edge damage as follows.

1 Repair damaged areas along edge of covers where grommets or attaching points are located by folding a piece of material equal to the basic material over damaged area by sewing in place.

2 Replace corner areas where attaching points are located by sewing on a patch composed of three thicknesses of material equal to basic material.

3 Replace any worn or missing webbing keepers, defective elastic webbing, or reinforcement patches.

TM 1-1500-204-23-1

(c) *Attaching equipment damage.* Repair attaching equipment damage as follows.

1 Repair, when practicable, or replace all damaged attaching equipment such as straps, buckles, webbing, keepers, cords, cables, cable fittings, grommets, etc.

2 Dip ends of all new webbing in a mixture of 50 percent paraffin, Federal Specification VV-W-95, and 50 percent beeswax, Federal Specification C-B-191

3 Dip ends of sash cords in shellac, Federal Specification TT-S-271.

(3) *Waterproofing.* Restore water, mildew, and weather resistant qualities of a protective cover by coating with water repellent textile finish compound as follows

WARNING

Solvents contained in the compounds are highly flammable and toxic; therefore all work shall be accomplished in an open area away from any flame

(a) Stir compound thoroughly until uniform mixture is obtained.

(b) Spread cover out completely on a clean flat surface, with inside of cover down.

WARNING

Solvents contained in compound may tend to irritate skin, therefore, prolonged contact shall be avoided.

(c) Apply moderate application of compound to outside of cover with a brush or spray.

(d) Apply compound well into seams, as they are particularly susceptible to mildew and leakage

(e) Dry cover thoroughly until odor of compound has completely disappeared

(4) *Storage.* Store protective covers as follows:

(a) Fold covers neatly to facilitate easier and faster installation when covers are needed.

(b) Store covers in a dry place on a platform or on slats of wood. Never store covers on ground or concrete.

9-23. Armor Plating. The repair instructions that follow are limited to composite armor composed of a ceramic facing bonded to a fiberglass reinforced plastic backing. The ceramic facing is covered with a flexible spall shield to protect the crew members from ballistic fragments. A rubber molding is also provided on the edges of some panels for crew protection. These repair procedures were developed with the objective of matching, to a high degree, the original strength and ballistic properties of the undamaged armor panel, with a minimum increase in weight. Extending the service life of armor panels will facilitate the mission capabilities of organizational units by the effective use of material assets. The ceramic facing may consist of one of the following materials.

- Aluminum Oxide (Al₂O₃)
- Boron Carbide (B₄C)
- Silicon Carbide (SiC)

a. *Armor Plating Inspection and Repair Definitions.* Table 9-6 gives definitions relative to inspection and repair criteria.

b. **General Inspection of Armor Plating.** Radiographic inspection of the assembled armor panel is the primary method used for nondestructive testing in determining the extent and location of internal damage. The radiographic skills and equipment required for this type of testing, while available at Depot installations, are not available to Army field units. Therefore, for field units, a visual inspection of the panels must be made, which requires removal of the nylon spall shield. Remove the edge molding and peel off the nylon spall shield. Exercise care when removing the spall shield to avoid damage to the cloth. Use the following inspection procedures.

CAUTION

Handle armor panels with care. Ceramic tile is brittle and cracks easily.

Table 9-6. Armor Plating Definitions

| Terms | Definitions |
|--------------|--|
| Panel | Each individual removal unit or module of the total assembled armor protective system. |
| Delamination | Any area where the fiberglass ply or plies have become detached from the binding resign in the reinforced plastic backing. |
| Backing | The ballistic energy absorber and structural support system for the brittle ceramic tile. The backing is a composite of fiberglass lamination impregnated with plastic resign. |
| Spall Shield | A cover on the ceramic tile to protect crew members from flying fregments during a ballistic impact. The spall shield is made of nylon cloth MIL-C-12369. |

(1) Inspect for the following damages which cannot be repaired In the following substeps (a) and (b), the allowable deviation is zero; therefore the panel must be scraped. In the Note following substep (c) an acceptance tolerance is specified, therefore, do not scrap panels that are within the allowable tolerance Send panel to a higher level of maintenance for repair.

(a) Inspect all panels for ballistic damage. Do not repair armor panels with any ballistic damage (direct hit).

(b) Inspect for cracked resign or ridges in the backing that show evidence of a structural failure.

NOTE

This damage will be matched by a tile crack generally paralleling the failure line in the backing This damage may occur at a weaker reduced sections of the panel, such as the area around the head Accidental blows from tools or hard objects, and the use of armor panels as handholds, are usually the cause of this type of damage Do not repair armor panels with any cracked resin or ridges In the backing

(c) Inspect the panel for unbonded tiles

NOTE

To check for unbonded tile on armor having multiple tile sections, lightly tap the ceramic surface using a coin Any area that has a lack of bond between the tile and plastic backing should respond with a dull thud, as opposed to the higher pitched sound of a well bonded area However, the distinction between the bonded and unbonded area will not always be clearly evident

NOTE

To determine a characteristic sound, compare with a well-bonded area, such as along a panel edge. Press firmly by hand all over the tile surface, observing any tile movement on release of hand pressure. Outline any unbonded area on the face of the tile for reference A 100 percent bond between tile and backing Is not required for ballistic efficiency. Do not make allowance for any additional support of the tile by the spall shield. Do not repair armor panels having a total unbonded area In excess of 20 percent for each tile section For monolithic armor (one piece cast tile), the tile bond as a whole should be adequate .

TM 1-1500-204-23-1

(2) Refer to the repair procedures in paragraph 9-23 d for inspection of damage and for damage limitations other than those specified. If the panel is damaged beyond the limits specified, it cannot be repaired.

WARNING

Aliphatic Naphtha, TT-N-95, is extremely flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

c. Adhesives, Resins, and Solvents for Repair of Armor. The following paragraphs explain adhesives, resins, and solvents used for repair of armor.

(1) **Adhesives.** For adhesives, follow manufacturer instructions concerning storage, agitation, mixing, thinning, temperature, range, fire and health hazards, plus contamination by moisture and dust. The adhesive used for repair can be applied to the fraying surfaces by any convenient means that will give a smooth, uniform spread of the adhesive. Use methods such as a brush, a hand roller, an extrusion gun and squeegee. Clean all tools immediately after each use with Aliphatic Naphtha, TT-N-95. Do not let adhesive polymerize (cure) before cleaning.

NOTE

Use Polysulfide Sealing Compound, PR-1826 B1/2, Class A-2 or B-2 for adhesive. Pro-Seal 890 (FSCM 83527) is a qualified product meeting or exceeding the requirements of PR-1826 B1/2. Use Pro-Seal 890, Class B-2 for application by squeegee or extrusion gun. Use Pro-Seal 890BT, Class A-2 for application by brush or hand roller.

(2) **Resins.** Many tertiary amines, phenolic materials, alcohols and water catalysts accelerate the

reaction between the Diethylene Triamine (DTA) curing agent and EPON resin. Although catalysts are used to control the curing rate of resins, they reduce the pot life of a mixture formulation, such as DTA and EPON. Do not use any curing agent accelerators. Since water is an accelerator, avoid any contact of the mixture formulation with water.

NOTE

- As the room temperature decreases the resin curing rate time falls rapid. The DTA curing agent may be applied at a temperature as low as 55°F (13°C), although the time to reach a given stage of cure is at least double that required at normal room temperature.
- The viscosity of the resin may be too high for some methods of application. Add methyl ethyl ketone, TT-M-261, up to a maximum of five percent by weight of the total solution content, to lower viscosity.

(3) **Solvents.** For solvents and cleaning solutions, observe all of the usual precautions for ventilation to prevent the accumulation of toxic vapors and to avoid a fire hazard.

(4) **Instructions for Pro-Seal 890 sealant.** Instructions are as follows:

NOTE

- Bonding material Pro-Seal 890 consists of two parts: Pro-Seal 890 Sealant and Pro-Seal 890A Curing Agent .
- Both Pro-Seal 890 and its curing Agent Pro-Seal 890A should be used as received. Do not thin with solvent.
- Curing agent Pro-Seal 890A contains no solvent to assure a minimum amount of shrinkage when mixed with Pro-Seal 890 Sealant. Pro-Seal 890A contains an oxidizing compound, therefore avoid prolonged contact with the skin. Wash hands thoroughly before eating or smoking.

(a) Open curing agent Pro-Seal 890A and thoroughly mix it in the container until it becomes a smooth paste.

(b) Thoroughly mix 10 parts of Pro-Seal 890A to 100 parts of Pro-Seal 890 by weight, or 8.4 parts of Pro-Seal 890A to 100 parts of Pro-Seal 890 by volume.

(c) Carefully fold the material upon itself and blend for a period of at least five minutes. This will give a satisfactory mix.

NOTE

Avoid violent agitation in order to beat as little air into mixture as possible. Also, frictional heat developed from violent agitation may reduce work life of the material.

(5) Curing requirements for Pro-Seal 890 sealant (2 cure option). Requirements are as follows:

- Mixed, uncured Pro-Seal 890 sealant material (Class A-2 or B-2) requires 72 hours at room temperature for a full cure.
- If the production schedule is not flexible enough to allow for the long-time room temperature cure, accelerated step curing conditions may be employed to fully cure the sealant material in four hours at elevated temperatures. The step curing conditions are two hours at 120°F (49°C), followed by an additional two hours at 158°F (70°C). This means that you should use two ovens set at the two different temperatures specified to fully cure the uncured material under accelerated conditions.

d. Repair of Armor Plating. Specific repairs and inspections for armor plating are described in the following paragraphs.

(1) Repair and inspection of cracked tile. Repair and inspection procedures are as follows:

(a) Inspect for cracked tiles.

NOTE

Multiple cracks converging at an angle of 15 degrees or less are not repairable. You may repair cracks occurring in the ceramic tile 1/16 of an inch or less in width, provided that the backing is not damaged beyond repair. Do not repair ar-

mor panels where a crack (or cracks) wider than 1/16 if an inch is found. Total allowable defects are three or less cracks, chips, or spalls in any 2-inch square area.

(b) Repair cracked tile by bonding a 1/8 inch thick sheet of fiberglass, type GEE, MIL-P-18177, over the crack (or Cracks) overlapping the damaged area by three (3) inches on each side, using Polysulfide Sealant Pro-Seal 890 (FSCM 83527).

(c) Bevel all edges of the fiberglass patch ¼ inch deep and 30 degrees from the top surface so the nylon spa shield will fit smoothly over the patch.

NOTE

For ceramic having raised edges at the joints, one side of the patch may be cut short of the 3 inch overlap requirement. If the crack extends through a raised edge on the tile, shape the patch, by undercutting, to fit over the raised edge. Use good judgment in determining this, bearing in mind that the patch is to restore structural integrity of the panel. When patching along a panel edge, cut patch to fit the edge boundary along periphery of the tile.

WARNING

Aliphatic Naphtha, TT-N-95, is extremely flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

(d) Remove existing sealant residue from the tile surface by using Aliphatic Naphtha, TT-N-95.

(e) Lightly abrade the fiberglass patch and ceramic surface surrounding the cracked area where the patch (or patches) is to be bonded.

(f) Clean the abraded ceramic and patch surface using a clean cloth moistened with Aliphatic Naphtha, TT-N-95. To obtain satisfactory adhesion, apply sealant only to a clean dry surface, free of oil and grease.

NOTE

Do not use reclaimed solvents when preparing a surface for bonding.

(g) Mix Pro-Seal sealant according to paragraph 9-23c(4).

(h) Apply sealant to the ceramic surface, and press the fiberglass patch over the crack (or cracks) to be repaired.

(i) Apply metal clamps or weights to the patch to apply contact pressure equal to about five pounds per square inch.

(j) Place pieces of 1/8 inch fiberglass of 1/4 inch plywood pads under the clamps to distribute the clamping force.

NOTE

Do not use rigid pads, as these will concentrate the clamping force on the point of contact and may crack the ceramic tile. Maintenance activities having the necessary equipment may use the vacuum bag method for clamping the patch to the tile surface. The vacuum bag process is used for both fabrication and repair of glass fabric reinforced plastic sheets. The process consists of applying pressure by vacuum and then curing by infrared heat lamp or oven. An autoclave is also used to apply heat and pressure for curing.

(k) Cure Pro-Seal sealant according to paragraph 9-23c(5).

(2) Repair and inspection of spalled or chipped tile. Repair and inspection procedures are as follows:

(a) Inspect for spalled or chipped tiles.

(b) Repair spalled areas or chips in the ceramic tile, except at the tile joints that do not exceed 1 square inch, and whose depth (at any point) does not exceed 1/10 of the thickness of the ceramic material.

NOTE

- Do not repair armor panels where spalled areas or chips have a total area greater than 1 square

inch or a depth exceeding 1/10 of the thickness of the ceramic material.

- Total allowable defects are 3 or less cracks, chips, or spalls in any 2-inch square area. Edge chips or spalling are acceptable without limit within the 3/4-inch edge boundary of the tile around the periphery of the armor panel.

(c) Repair spalled areas or chips occurring in the ceramic, if they do not exceed the limits as specified, by applying Polysulfide Sealant Pro-Seal 890.

(d) Fill the chipped or spalled areas with sealant, smooth flush with the ceramic surface and apply a 1/8 inch thick fiberglass patch. The fiberglass patch should overlap the chipped or spalled areas by three (3) inches on each side.

(e) Bevel all edges of the fiberglass patch 1/4 inch deep and 30 degrees from the top surface so that the nylon spall shield will fit smoothly over the patch.

WARNING

Aliphatic Naphtha, TT-N-95, is extremely flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

NOTE

For ceramic having raised edges at the joints, one side of the patch may be cut short of the three inch overlap requirement. If the crack extends through a raised edge on the raised edge. When patching along a panel edge, cut patch to fit the edge boundary along periphery of the tile.

(f) Remove existing sealant residue from the tile surface by using Aliphatic Naphtha, TT-N-95.

(g) Lightly abrade the fiberglass patch, the ceramic surface surrounding the spalled or chipped area where the patch (or patches) are to be bonded, and the inside surface of the chipped or spalled area.

WARNING

Aliphatic Naphtha, TT-N-95, is extremely flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

(h) Clean the abraded ceramic surface, including the fiberglass patch and the chipped or spalled surface, using a clean cloth moistened with Aliphatic Naphtha, TT-N-95. To obtain satisfactory adhesion, apply only to a clean dry surface, free of oil and grease.

NOTE

Do not use reclaimed solvents when preparing a surface for bonding.

(i) Mix Pro-Seal sealant according to paragraph 9-23c(4).

(j) Apply Sealant mixture to the ceramic surface, but first fill all spalled or chipped areas with sealant and spread flush with the ceramic surface.

(k) Press the fiberglass patch (or patches) over the filled area to be repaired.

(l) Attach metal clamps or weights to the patch to apply contact pressure equal to about five pounds per square inch.

(m) Place pieces of 1/8 inch fiberglass of 1/4 inch plywood pads under the clamps to distribute the clamping force.

NOTE

Do not use rigid pads, as these will concentrate the clamping force on the point of contact and may crack the ceramic tile. Maintenance activities having the necessary equipment may use the vacuum bag methods.

(n) Cure Pro-Seal sealant according to paragraph 9-23c(5).

(3) Repair and inspection of delaminated edges of backing. Repair and inspection procedures are as follows:

(a) Inspect edges of the backing for delamination of the fiberglass layers.

NOTE

A delamination 3 inches or less in length may be repaired. No repairs can be made if a delamination is longer than 3 inches or if panel has more than one delamination.

(b) Remove dirt and grease from the delaminated cavity before repairing as follows:

1 Inject Aliphatic Naphtha, TT-N-95, into cavity with a syringe. Let solution soak for a few minutes to loosen the dirt and grease.

2 Draw out the contaminated naphtha with the syringe, or position the panel to allow the naphtha to flow out by gravity. Repeat the procedure until the cavity is clean.

3 Volatize the naphtha using an electric hot air gun, or vacuum nozzle directed into the cavity. Continue procedure for 10 to 15 minutes. Do not use compressed air because oil and dirt in the air may contaminate the cavity.

(c) Repair delamination of fiberglass plies along the edges of the backing by filling the voids with epoxy resin using a DTA curing agent. Mix 100 parts by weight of EPON 828, MIL-R-9300 (FSCM 36131) with 10 parts by weight of DTA O-D-1271 as follows:

1 Inject the resin with a syringe until the cavity is filled, then brush the edge surface smooth.

2 Attach metal clamps to the repaired area to rebond the fiberglass plies.

3 Place pieces of 1/8 inch fiberglass or 1/4 inch plywood pads under the clamps to distribute the clamping force.

NOTE

Do not use rigid pads, as these will concentrate the clamping force on the point of contact and may crack the ceramic tile.

(4) Repair and inspection of internal delamination of backing. Repair and inspection procedures are as follows:

TM 1-1500-204-23-1

(a) Inspect panels for internal delaminations. You can find the location and size of any internal delamination by lightly tapping the fiberglass reinforced plastic backing using a coin or small hammer.

NOTE

- The tapping sound will be a clear metallic ring over well-bonded areas, and a dull thudding sound over delaminated areas. Trace the outline of and delaminated area with chalk for reference during repair.
- Internal delamination up to 4 inches in diameter are acceptable without repair. Although a ballistic degradation does occur from a delamination of fiberglass plies, excessive resin in the delamination cavity has a greater degrading effect. Excessive resin promotes ballistic shearing as opposed to bulging of the fiberglass backing. Do not repair armor panels with any internal delamination in excess of 4 inches in diameter or with more than one area of internal delamination.

(b) Repair internal delaminations by using a resin and curing agent mixed as specified in paragraph 9-23d(3)(c).

(c) Drill a small hole at each end of the void (marked during inspection).

(d) Slowly inject resin using a syringe until void is filled and epoxy discharges from opposite hole. See figure 9-38. Additional holes may be needed if air entrapment occurs when injecting the resin.

(e) Attach metal clamps or brace the panel in a fixture to apply the required high contact pressure to seal the filled area. Use care to distribute the contact pressure to prevent damage to the ceramic tile.

(f) Cure the panel at room temperature

for five days.

NOTE

- Maintenance activities desiring to repair internal delaminations must have the required tools and fixtures to assure a tight relamination.
- If the delamination cavity is filled with resin without rebonding the fiberglass plies, the repair will have reduced ballistic protection.

(5) Repair and inspection of minor scars and fraying of backing. Repair and inspection procedures are as follows:

(a) Inspect panel for scars or surface abrasion, and for fraying along edges of the backing.

NOTE

After a time, fraying will occur on some permanent, exposed edges of the panel having no protective edge molding. You may repair frayed edges, but only to edges normally having no protective molding.

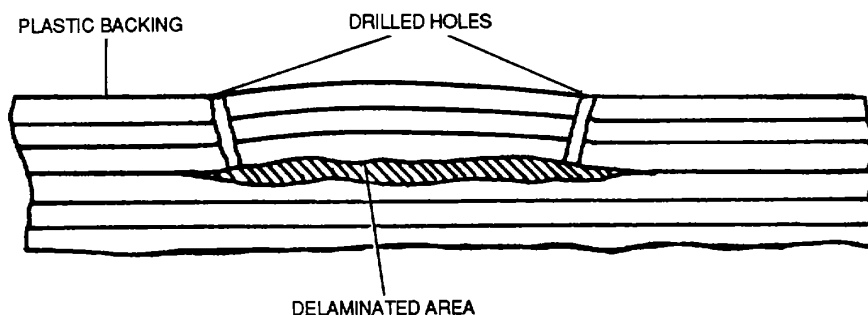


Figure 9-38. Delaminated Repair

WARNING

Aliphatic Naphtha, TT-N-95, is extremely flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

(b) Repair scars, scratches, or surface abrasion not penetrating through the facing, or fraying of the edges of the backing by first cleaning the damaged or frayed surface thoroughly and carefully using a clean cloth moistened with Aliphatic Naphtha, TT-N-95 (or other approved cleaning agent).

(c) Lightly sand the damaged surface using No. 280 grit abrasive cloth. Clean the surface thoroughly using Aliphatic Naphtha. Remove moisture and solvents completely to prevent inhibiting the curing of the resin.

(d) Apply one or two coats (depending on severity of the abrasion or fraying) of epoxy resin using DTA curing agent. Mix 100 parts by weight of Epon 828-MIL-R-9300 (FSCM 36131) with 10 parts by weight of DTA O-D-1271. Brush the surface smooth. Methyl ethyl ketone may be added to lower viscosity of the solution for brushing using a maximum of 5 percent by weight.

(e) Over this coated surface, apply a sheet of cellophane L-C-110, or polyvinyl alcohol (PVA) film extending 2 or 3 inches beyond the surface. Cellophane or polyvinyl alcohol film will prevent exposure to the air, and will provide a smooth bubble-free surface for the resin to cure.

(f) Tape the cellophane or PVA film in place and work out all air bubbles and excessive resin by hand or by using a rubber squeegee.

(g) Cure at room temperature for 24 hours. After the resin has cured or set, remove the cellophane or PVA film for finishing.

(6) Repair and inspection of cuts and gouges in backing. Repair and inspection procedures are as follows:

(a) Inspect for cuts and gouges in the backing using special care to determine extent of the damage.

(b) Count the number of fiberglass plies that have been damaged as accurately as possible. Mark the number on the backing next to the damaged area.

(c) Repair cuts or gouges not exceeding three layers of fiberglass by first removing successive layers of damaged laminate in approximately oval patches (round corner rectangular patches are permissible).

NOTE

Patches must form a step pattern as shown in figure 9-39. Steps should be at least ¼ to ½ inch long. Use a cutting tool with a controlled cutting depth to facilitate the cutout and to avoid possible damage to the layers underneath.

(d) Remove these sections by peeling from the center and working carefully back to the desired perimeter of the cutout. Cut through the overlaying ply in a series of cuts.

NOTE

Exercise care not to peel back or to rupture the adhesion of the lamination layers beyond the cutout perimeter.

(e) Scrape each step and wipe clean with a cloth moistened with Aliphatic Naphtha, TT-N-95.

(f) Cut pieces of fiberglass cloth, type 181, CI 2, MIL-C-9084 to extract size, with the weave direction such that they will overlay the original layup.

(g) Use the wet layup technique. Place the first ply of precut cloth on a clean layup table. Spread 45 to 50 percent of resin by weight on the cloth, using a squeegee to thoroughly impregnate all of the fabric.

(h) Layup the resin impregnated cloth in the previously prepared cutout, being careful not to entrap any air under the fabric. Repeat the same procedure with the next ply.

(i) Place the last ply dry in the cutout after first coating the surface of the previous ply with resin.

(j) Replace each piece of fabric being careful to maintain the wet resin content (by weight) between 45-50 percent. Use resin and curing agent as specified in paragraph 9-23d(3)(c)

(k) Cover the repair with cellophane L-C-110 or polyvinyl alcohol (PVA) film and press down to smooth the patch and to expel air bubbles.

(l) Cure at room temperature for 24 hours. After resin has cured or set, remove cellophane or PVA film for finishing.

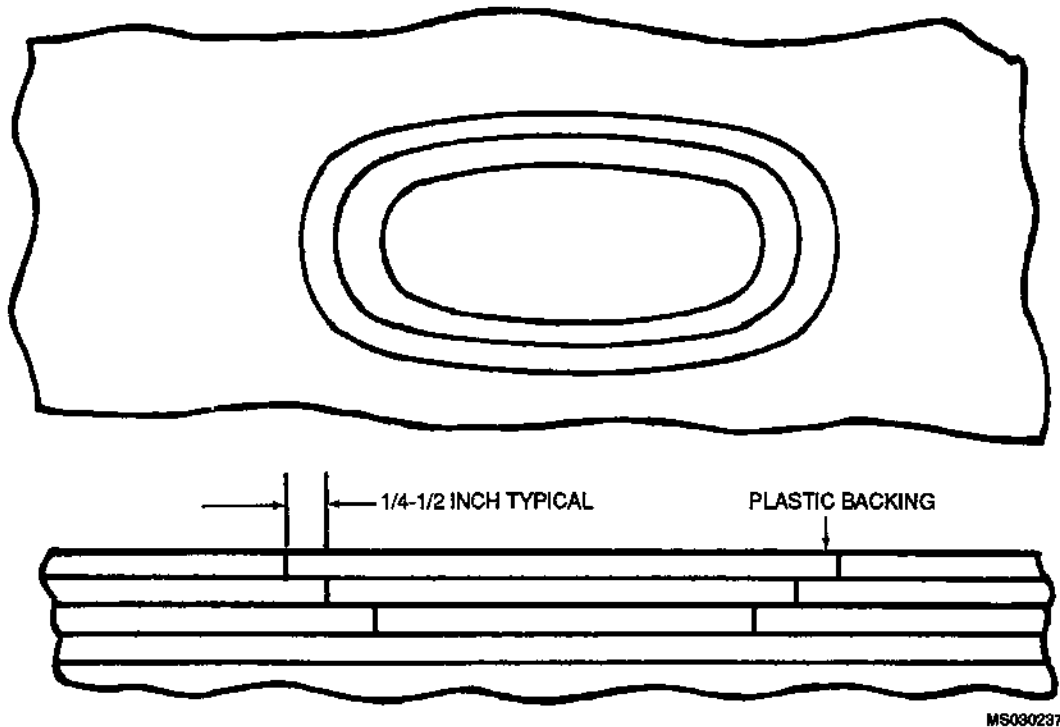


Figure 9-39. Gouge Repair

(m) Sand smooth all repaired areas after curing using No. 320-400 grit abrasive cloth.

(7) Repair and inspection of threaded inserts in backing. Repair and inspection procedures are as follows:

(a) Inspect panel for loose inserts or damaged threads.

NOTE

Inserts in a composite fiberglass-plastic type of backing have a tendency to work loose. It is important to replace any missing insert as the heavy armor panels are severely strained during a shock loading, such as a hard landing.

(b) Repair damaged insert threads, where possible, using the proper sized tap to chase threads.

(c) Where an insert is loose, drill two small holes, 180 degrees apart, in the fiberglass backing next to the insert. Angle the holes toward the bottom of the insert.

(d) Inject bonding compound, Metalset A4 (FSCM 90414) with a syringe into one hole. Fill around insert until compound discharges from second hole.

WARNING

Aliphatic Naphtha, TT-N-95, is extremely flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

NOTE

Metalset A4 resin cement is furnished as two compounds, Part A (resin) and Part B (hardener). Thoroughly mix Part A and Part B in a 1 to 1 ratio by weight or volume. Allow bonding compound to cure at room temperature for 24 hours. For accelerated curing cure bonding compound at 150°F (66°C) for two hours. Excess Metalset A4 must be removed before it hardens. Remove excess resin with Aliphatic Naphtha, TT-N-95.

(e) Replace rubber edge molding after abrading the inside surface using a fine wire wheel (0.004 inch diameter wire) or abrasive cloth.

WARNING

Aliphatic Naphtha, TT-N-95, is extremely flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, or other sources of ignition.

(f) Wipe with a cloth moistened with Aliphatic Naphtha, TT-N-95.

(g) Apply a sufficient amount of contact adhesive 1300L to cover the inside surface of the rubber and the mating surface.

(h) Allow adhesive to dry until tacky.

(i) Carefully fit and press the molding over the edge of the panel.

(j) Clean dirt and dust accumulation from the repaired panel using general purpose detergent. Do not use methyl ethyl ketone for cleaning the fiberglass backing.

CAUTION

Prolonged contact of the fiberglass to methyl ethyl ketone or acetone will result in deterioration of the resin.

(k) Rinse the washed area with clear water and dry panel with a soft cloth. Then permit panel to dry out thoroughly.

(l) Touch up repaired areas of spall shield and fiberglass backing with acrylic lacquer, MIL-L-81352.

(m) Apply a base coat of epoxy primer, MIL-PRF-23377. Feather the primer coating onto to surrounding color coat.

(n) Allow the primer to air dry for a minimum of 30 minutes.

(o) Apply two coats of acrylic lacquer to match the original finish color as applicable.

9-24. Cargo Tiedown Equipment. Cargo tiedown equipment devices may be assembled from webbing, nets, rope, cables, or fittings. Use snaps, hooks,

clamps, buckles or other acceptable fasteners. Install tensioning devices or other means to provide a method of tightening and adjusting restraint system. Provide covers or guards to prevent damage to or jamming of aircraft equipment, structure, or control cables. Inspect and repair in accordance with the applicable maintenance manual.

9-25. Vibration Isolators. Vibration isolators are shock absorbing mountings which absorb vibrations or movements of a component. They are utilized with armament equipment, electronic equipment, photographic equipment, instruments, instrument panels, and other like equipment requiring shock mounting.

a. Type of Vibration Isolators. Vibration isolators are commonly classified in three types: open-type, closed-type, and combined vibration isolator mounting base type.

(1) Open-type. Open-type vibration isolators are those on which the shock absorbing material is exposed, and are usually so constructed that the load is supported on rubber in shear (A and B, figure 9-40) or compression (C, figure 9-40).

(2) Closed-type. Closed-type vibration isolators are those on which the shock absorbing material is enclosed by a metal cup or housing. The shock absorbing material is usually a coil spring, rubber, or metal mesh in compression, or a combination of these materials as shown in figure 9-41.

(3) Combined vibration isolator mounting base type. Combined vibration isolator mounting base type vibration isolators are formed by combining resilient material such as sponge rubber, metal mesh pads, or coil springs with a mounting base and supporting structure as shown in figure 9-42.

b. Installation of Vibration Isolators. Installation of vibration isolators should be accomplished in such a manner as to allow free movement of mounted equipment with adequate clearance around brackets, piping lines, and other items of equipment. Accomplish the following procedures when installing vibration isolators:

(1) Measure vertical and horizontal clearance between equipment and nearest supporting structure.

NOTE

A vertical and horizontal clearance of 1/16 inch shall be maintained. Maintain adequate distance between mounted equipment and nearest object (bracket, pipe, line, structure, etc.).

TM 1-1500-204-23-1

(2) Move equipment to extreme positions in every direction to ensure that retaining fasteners are secure and the isolators have not sagged.

NOTE

Prior to any attempt to install vibration isolators, the high, or low side, must be found. Each isolator has a low side and a high, or load side. In some instances, the words LOAD SIDE will be stamped in the high side of the isolator to facilitate identification.

c. Inspection of Vibration Isolators. To prevent unsatisfactory isolation and eliminate damage, vibration isolators shall be inspected and replaced in accordance with the applicable phase maintenance inspection checklist. The following are general inspection procedures for all types of vibration isolators:


(1) Using a standard thickness gauge or 6 inch scale, measure vertical and horizontal clearance between isolated load (equipment case, mounting base, or instrument panel), and nearest support structure (iso-

lator mounting cup, mounting base, or aircraft structure) with vibration isolators with any vertical or horizontal clearances of less than 1/16 inch.

(2) Move equipment or instrument panel to extreme positions in every direction to determine if isolators have sagged, or retaining rivets or holddown screws are loose.

(a) When elastic rubber parts of open-type vibration isolators are stretched to their extreme position, examine rubber for cracks, or separation of rubber to metal bond. Replace isolators with any of these conditions visible.

(b) When equipment on combined vibration isolator mounting base is moved to extreme positions in all directions, examine sponge rubber or metal mesh pads for deterioration and permanent packing. Replace vibration isolators with cracked or deformed pads which seriously affect isolation efficiency of mounting system.

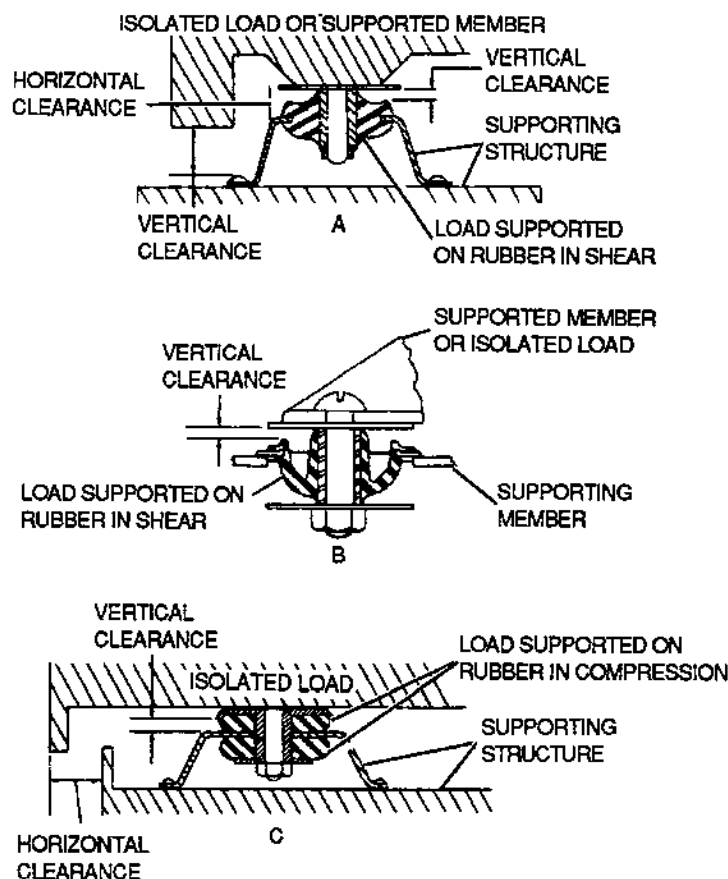

MS030238

Figure 9-40. Open-Type Vibration Isolators

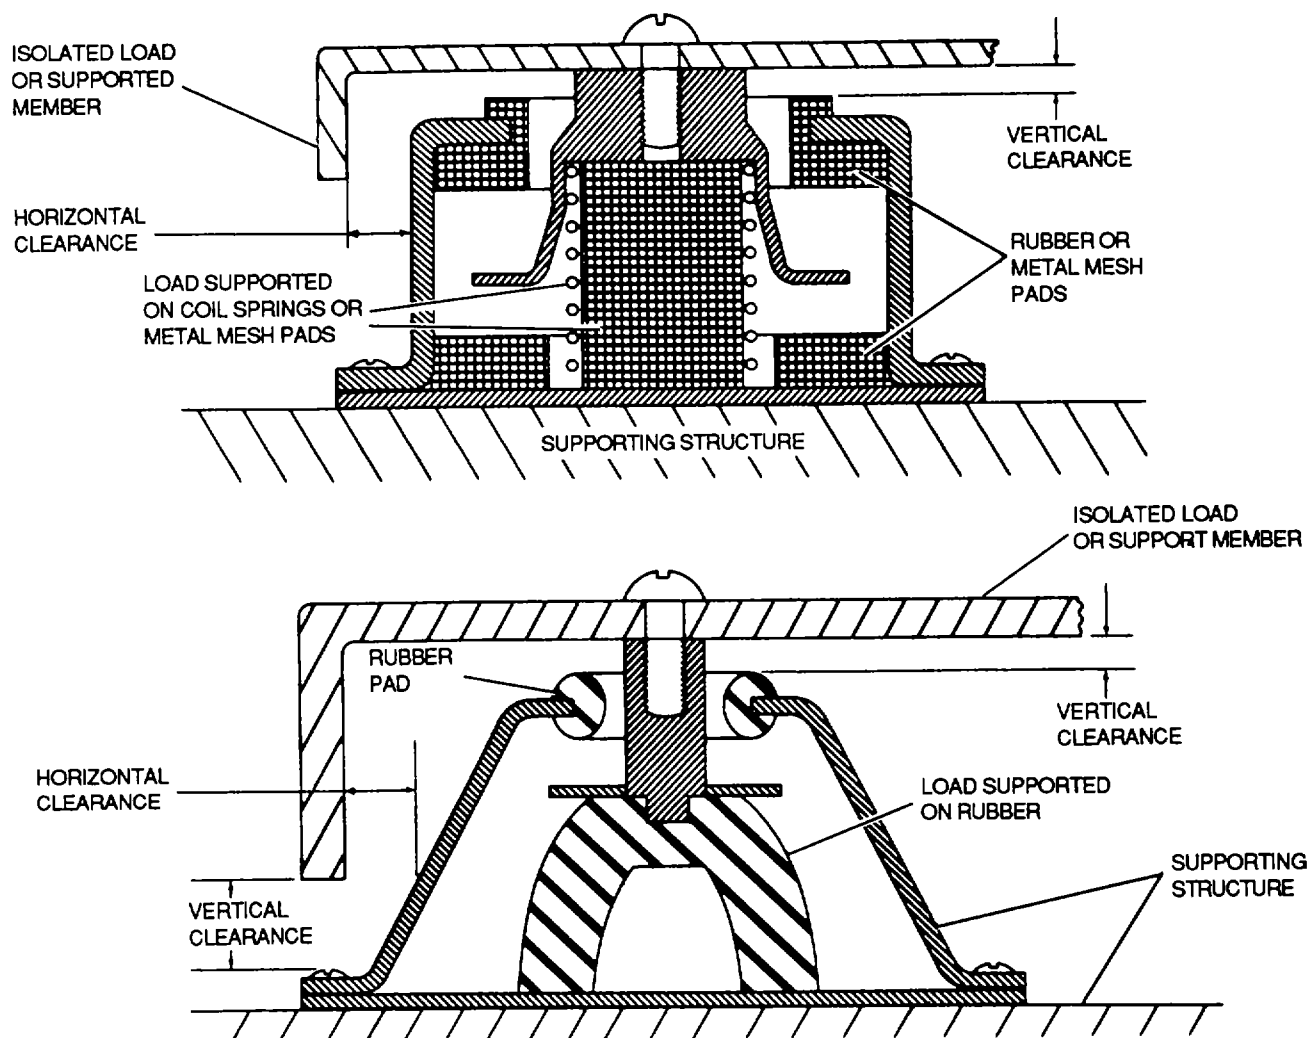


Figure 9-41. Closed-Type Vibration Isolators

TM 1-1500-204-23-1

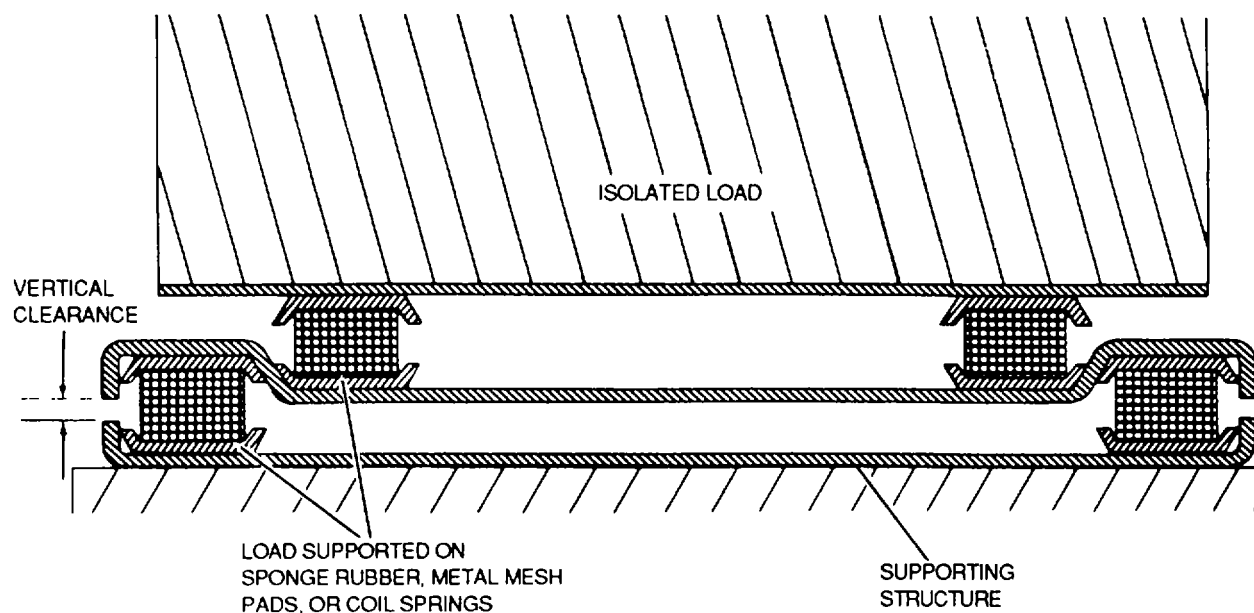


Figure 9-42. Combined Vibration Isolator Mounting Base

9-26. Elastic Shock Cord Assemblies Elastic shock cord assemblies are explained in the following paragraphs.

a. *Inspection and Testing.* Inspection and testing of elastic shock cord assemblies are described in the following paragraphs.

(1) *Inspection.* All cords installed in aircraft shall be visually inspected at each phase maintenance inspection. Any cord that shows irregularity in diameter must be replaced. Cords found to be over five years old will not be considered serviceable. Observe the following inspection requirements:

- Cords in stock shall be inspected and tested every six months as specified below. At the time a test is made, a serviceable parts tag shall be affixed to the spool or cord as follows

INSPECTED
 DATE..
 ACCORDING TO
 TM 1-1500-204-23-1
 TO BE REINSPECTED AND RETESTED
 6 MONTHS FROM DATE HEREON

NOTE

Sections of cord shipped to service activities shall have a duplicate tag affixed to provide information for reinspection date

- Cords in stock at all activities other than depots shall be visually inspected for irregularities in diameter or other evidence of deterioration and to see that serviceable parts tag is attached as specified.
- Cords that fail to meet test requirements shall not be installed on aircraft, but will be made available for use on ground equipment or for other uses
- Cord requiring reinspection will be retested and retagged if facilities are available. If facilities are not available, cord shall be returned to depot for reinspection.
- Cords not suitable nor required for ground equipment or other uses shall be administratively condemned or condition condemned.

(2) Testing. Cords requiring testing shall be tested when facilities are available. When facilities are not available, return cords to depot for testing. Elongation testing should be accomplished in the following manner:

(a) Test bungee or endless ring type cord as a complete unit using suitable jigs or spools and test load specified in table 9-7.

(b) Jigs or spools for stretching shock absorber cords should be smooth and not less than 1 1/2 inches in diameter to prevent damaging cords during testing.

(c) Prepare straight and elastic exerciser cords for testing by marking 6-inch gauge lengths on one side of cord. Use soft lead pencil for marking.

(d) Mark bungee cords with 6-inch gauge marks penciled on opposite sides of ring.

(e) Attach cord to be tested to suitable jigs or spools. Apply specified test pressure slowly

(f) After test load has been applied, remove cord from rig and measure between gauge marks.

(g) Reject cords which elongate more than 100 percent during test

(h) Reject cords which have gauge marks more than 6 1/4 inches apart 10 minutes after pressure is released.

(i) After testing, fill in and attach an Acceptable or Serviceable Tag (DD Form 1574) to cord with a note:

To be reinspected and retested 6 months from date hereon.

b. Fabrication Requirements. Elastic shock cord used for fabrication of assemblies shall not be over 20 quarters (5 years) old from date of manufacture. Date of manufacture of elastic shock cord shall be determined from table 9-8 Date of manufacture is indicated by colored threads in the cotton braid. The first two colored threads indicate the year of manufacture and the third colored thread indicates the quarter Replace cord using the following procedures'

(1) Cut the elastic shock cord square with a knife or other sharp cutting tool.

Table 9-7. Test Loads

| Cord | Diameter Inches | Load pounds |
|---------------------|------------------------|--------------------|
| Straight cord | 1/4 | 13 |
| | 3/8 | 80 |
| | 1/2 | 155 |
| | 5/8 | 225 |
| | 3/4 | 360 |
| Endless ring bungee | 3/8 | 155 |
| | 7/16 | 235 |
| | 1/2 | 315 |
| | 9/16 | 380 |
| | 5/8 | 450 |
| | 11/16 | 585 |
| | 3/4 | 720 |
| Elastic Exerciser | 113/16 | 1000 |
| | 3/16 | 5 |
| | 5/16 | 7 |

TM 1-1500-204-23-1

Table 9-8. Color Coding

| Year Identification | | |
|------------------------|---|--------|
| 1984 | - | Yellow |
| 1985 | - | Black |
| 1986 | - | Green |
| 1987 | - | Red |
| 1988 | - | Blue |
| 1989 | - | Yellow |
| 1990 | - | Black |
| 1991 | - | Green |
| 1992 | - | Red |
| 1993 | - | Blue |
| Quarter Identification | | |
| January | | Red |
| February | | |
| March | | |
| April | | Blue |
| May | | |
| June | | |
| July | | Green |
| August | | |
| September | | |
| October | | Yellow |
| November | | |
| December | | |

NOTE

For succeeding years and quarters, this cycle repeats.

(2) Wrap cord with masking tape prior to cutting to prevent raveling of cotton braid during subsequent fabrication or handling operations.

(3) Stretch elastic shock cord to 2 1/4 times its original free length

NOTE

Stretch fixtures used to elongate elastic shock cord will be capable of securely holding ends of cord without slippage. When elastic shock cord is stretched to twice its original free length, stretch fixture shall not damage cord ends.

(4) Dip or brush cut ends of elastic shock cord with a coat of sealant MIL-S-4383, and allow to air-dry.

NOTE

Coating should be heavy enough to prevent raveling of cotton braid

(5) Locate lockrings approximately 1/2 inch from ends of elastic shock cord, however, do not extend ends of cord outside body of terminal fastener.

(6) Stretch elastic shock cord 50 percent in area of lockring or splice location prior to crimping lockring in place or serving elastic cord.

(7) Crimp lock rings securely in place to form a continuous ring around elastic shock cord.

(8) Accomplish serving of elastic shock cord using the following items:

- Elastic cord, MIL-C-5651
- Cotton cord, Style A, No. 10 (Use for serving elastic shock cord 1/2-inch and smaller in diameter.)
- Nylon Cord, MIL-C-5040, Type I (Use for serving elastic shock cord larger than 1/2-inch diameter)

NOTE

Minimum serving lengths are specified in table 9-9.

Table 9-9. Minimum Serving Length

| Elastic cord diameter (Inches) (Inches) | Serving length |
|---|----------------|
| 1/4 | 1 1/2 |
| 3/8 | 2 |
| 1/2 | 2 1/2 |
| 5/8 | 3 |
| 3/4 | 4 |
| 1 | 4 |

c. Identification. Colored threads in the outer cover are used to indicate date of manufacture. The color code for threads is given in table 9-8. Bungee and shock absorber cords have two threads to indicate year and one to indicate quarter. Elastic exerciser cords have three threads to indicate year and one for quarter. Elastic shock cord, used in some compass mounts, is covered with a solid black braid with no colored thread to indicate date of manufacture. Although these cords do not have a limited shelf life, they must pass the elongation test before installation.

d. Fabrication Procedures. Fabricate elastic shock cord assemblies using the following procedures.

(1) Cut elastic shock cord a minimum of 4 inches longer than required finished assembly length.

(2) Wrap ends of cut elastic shock cord with masking tape to prevent raveling of cotton braid.

(3) Center mark required finished assembly length on elastic shock cord as shown in figure 9-43.

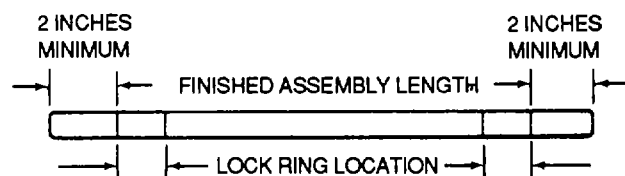


Figure 9-43. Marking Elastic Shock Cord

(4) Measure back from each end of marked finished assembly length a distance equal to locking dimension specified in table 9-10, and mark this dimension.

Table 9-10. Lockring Locating Dimensions

| Cord size | 3/8 Inch | 1/2 Inch | 5/8 Inch |
|--------------------------|----------|----------|-------------|
| Lockring Locating dim | 1.5 Inch | 2.0 inch | 2.25 inches |

(5) Install end fittings back to back on elastic shock cord.

(6) Clamp elastic shock cord in a stretch fixture in such a manner that markings for finished assembly length and locking locations are approximately equal distances between stretch fixture jaws.

(7) Stretch elastic shock cord until distance between cord markings has increased 50 percent.

(8) Crimp lockrings on cord at marked locations. Crimp each ring until ring ends are in contact with each other.

(9) Remove elastic shock cord from stretch fixture and cut elastic shock cord approximately 3/4 inch beyond lockrings.

NOTE

After cutting elastic shock cord, ends will shrink approximately 1/4 inch.

(10) Dip or brush cut ends of elastic shock cord with a coat of sealant, MIL-S-4383, and allow to air-dry. Coating should be heavy enough to prevent raveling of cotton braid.

(11) Reinstall assembly in stretch fixture, and pull until finished assembly length has increased 50 percent. Ensure that there is no slippage of lockrings or end fittings.

TM 1-1500-204-23-1

e. Serving Elastic Shock Cord. Serve elastic shock cord using the following procedures:

(1) Secure adjacent sections of elastic shock cord in stretch fixture and mark minimum length of cord to be served. Minimum serving lengths are specified in table 9-9.

(2) Stretch elastic shock cords until marked serving length has increased 100 percent. Maintain this length during entire serving operation.

(3) Use a piece of serving cord of sufficient length to form a loop extending a minimum of 1 inch past mark used to designate one end of elongated serving area.

(4) Form a tail extending a minimum of 6-inches past mark used to designate other end of elongated area, as shown in figure 9-44.

(5) Place loop on top of elastic shock cords over area to be served.

NOTE

Types of serving cord are specified in paragraph 9-26b, step (8).

(6) Hold loop firmly on top of adjacent sections of elastic shock cord and wrap serving cord around elastic shock cord. Make wraps over loop using a half hitch knot in serving cord at completion of each wrap. Pull serving cord tight.

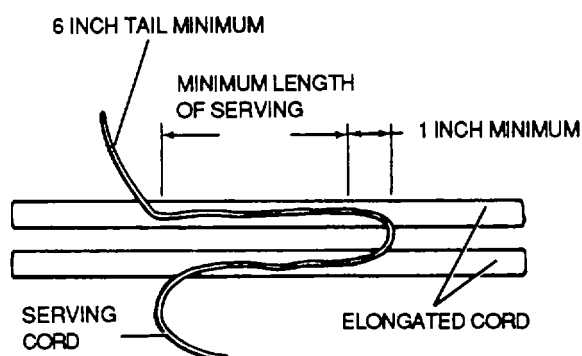


Figure 9-44. Preparation for Serving Shock Cord

(7) Continue serving elastic shock cord as specified above until required length of serving has been applied.

NOTE

While serving, keep tail end of loop outside of half hitches for a distance of half the length of the required serving. Keep it under serving for remainder of required distance as shown in figure 9-45.


(8) When the required length of elastic shock cord has been served, put end of serving cord through loop and pull tail end until both ends have been pulled through. Cut ends of serving cord as close as practical to serving wraps.

f. Process Control. The following procedures are used for elastic shock cord process control:

(1) Accomplish periodic checks of storage area to assure requirements of paragraph 9-26b are complied with

(2) Maintain control of elastic shock cord as specified in TM 1-1500-204-23-6.

(3) Crimp lockrings securely in place with ends of ring in contact with each other.

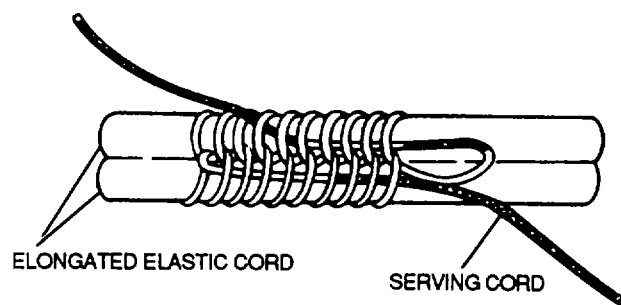

NOTE:

LOOPS AROUND ELASTIC CORD ARE SHOWN SEPARATED FOR CLARITY OF SERVING OPERATION.

Figure 9-45. Serving Elastic Shock Cord

NOTE

Slight marking on ring caused by crimping tool shall not be cause for rejection. Cotton braid caught between crimped ends of locking will not be cause for rejection providing no elastic bands in shock cord are pinched or cut.

(4) Assure that minimum of 1/2 inch of elastic shock cord extends beyond last wrap of serving cord.

(5) Test finished elastic shock cord assemblies as outlined in paragraph 9-26d, step (11).

g. Storage of Elastic Shock Cords. In addition to the general storage requirements for rubber items in TM 1-1500-204-23-6, the following practices shall be employed during storage of shock absorbers and elastic exerciser cords.

- Store cords so they shall not be subject to stresses.
- Keep stocks of cord at a minimum, but consistent with operating requirements.
- Maintain temperature of storage area between 32 and 80°F (0 and 270C) when possible. During summer months, keep elastic shock cord and assemblies in the coolest part of the storage area.
- Locate storage area where elastic shock cord and assemblies shall be free of contact with oil, grease, solvent, fumes, direct sunlight, or local heat concentrations. Avoid storage adjacent to steam pipes, space heaters, or like conditions.
- Do not store items containing chemicals harmful to rubber products near elastic shock cord and assemblies.
- Store elastic shock cord and assemblies from storage areas for manufacture or delivery on the basis of the oldest material being used first. This assures that no cord shall spend an excessive time in storage and thus lessen its active service life.
- Dispense elastic shock cord and assemblies from storage areas for manufacture or delivery on the basis of the oldest material being used first. This assures that no cord shall spend an excessive time in storage and thus lessen its active service life.

CHAPTER 10

ARCTIC, DESERT, AND TROPIC MAINTENANCE

10-1. General. Arctic, desert, and tropic maintenance, inspections, and operations are explained in the following paragraphs.

10-2. Arctic Maintenance. The following paragraphs contain the basic principles and procedures which are essential for efficient utilization of aircraft, equipment, and personnel in arctic areas. The operation of aircraft in arctic regions is seriously handicapped because of the effect of the elements on both personnel and equipment. With a decrease in temperature, an increase in time required to perform duties is inflicted due to reduced flexibility of packings and rubber parts, higher viscosity of lubricants, and binding of metal parts due to contraction. General procedures for all aircraft are discussed within these paragraphs. For specific problems on a particular aircraft or piece of equipment, refer to the applicable maintenance manual.

a. Precautions. Maintenance personnel shall observe the following precautions as a guide to successful performance of duty in severe weather.

(1) Exercise care when stepping or walking on snow or frost-covered or very cold surfaces. Wearing proper shoes will aid in walking on slippery surfaces and reduce the possibility of injuries from slipping.

(2) Exercise caution when touching very cold metal with bare hands, moisture on hands will tend to freeze skin to metal. When practical, wear gloves and cover metal tool handles.

(3) Do not exert excessive torque or tension on bolts, nuts, cables, or similar items when making repairs on equipment that has been exposed to extreme cold. These items tend to freeze or snap as metal expands upon warming.

b. Preheating. The following paragraphs explain general procedures for preheating aircraft and engines.

CAUTION

Do not permit air from heaters with temperature in excess of 251°F (122°C) to blast against ignition harness, flexible hose, self-sealing tanks, or other rubberized or fabric materials. Damage may otherwise result.

(1) *Preheat requirements.* Engine preheat is normally required only on reciprocating engines. Jet engines do not require preheat unless the available auxiliary power unit is not sufficient to overcome additional starter loads. Preheat requirements can be considerably reduced by following proper oil dilution procedures.

(2) *Preheat for starting.* At low temperature, apply heat to engine as a starting aid. Reduce starter loads by preheating engine, thereby reducing oil viscosity. Generally, preheat will not be required if temperature is above 0°F (-18°C) and engine oil has been properly diluted.

(3) *Preheat time.* Preheat time required to prepare an engine for starting depends on outside air temperature, size of engine, heater output, and velocity and direction of wind. Also, when oil dilution, method of preheat application, or use of covers and nose shields are inefficiently applied, the required preheat time will be lengthened.

(4) *Preheat application.* Apply heat to both the power and accessory sections until cylinder heat, temperature reaches 68°F (20°C). Do not rely entirely upon temperature gauge as readings may be misleading because of thermocouple being located in path of heater blast. Where heater supply is limited, concentrate heat on rear accessory section, particularly main oil drain, oil lines, and oil sump, with second priority going to nose gear, propeller hub, and power section.

TM 1-1500-204-23-1

(5) *Preheat for accessories.* At temperature below -22°F (-30°C), apply heat to batteries, feathering pumps, master brake cylinder, and actuating cylinders. Aircraft with constant speed drives for alternators should have drives heated.

(6) *Heater placement.* Prevent possible heat loss during preheat period by placing heaters as close as possible to aircraft, but avoid areas under fuel and oil drains, vents, or supplies. Inspect heater ducts for leaks. Cover heater and ducts with noncombustible canvas covers. Provide adequate fire bottles in flight area.

CAUTION

Do not apply heat directly against plastic or plexi-glass windshields or windows. Directly applied heat will cause crazing, cracking, and discoloration. Remove existing snow deposits before heating crew compartment. When cabin heat is applied on the ground with temperatures below freezing, the snow will melt and cause accumulation of ice on top of fuselage and windshields

(7) *Preheat off light compartment.* Apply heat to flight compartment and cabin to ensure operation of instruments and equipment, reduce windshield frosting, soften canopy seals, and increase crew comfort. Heater ducts may also be positioned so as to direct heated air toward any valves found to be sticking. Preheat vacuum pumps in aircraft employing vacuum-driven instruments to ensure low viscosity of oil in and around pumps and to prevent pump drive shaft from shearing.

c. *Pre flight.* The following procedures and inspections shall be accomplished during preflight for aircraft operating in arctic conditions.

(1) During severe weather, delay removal of engine covers, propeller covers, flight compartment covers, and miscellaneous covers until just prior to engine start. Leave wing and empennage covers in place until just prior to taxiing.

CAUTION

Exercise care to prevent flow of melted ice into areas where freezing would cause restricted movement of flight controls and restricted flow of air through vents. Where water flows toward any of these areas, it shall be mopped up immediately.

(2) Inspect entire aircraft for snow, frost, or ice. Any deposit can cause loss of lift and treacherous stalling characteristics. Brush off loose snow or frost. Remove remaining ice by spraying or brushing on a coat of anti-icing and deicing-defrosting fluid, MIL-A-8243. Work from upper surfaces downward to prevent accumulation of ice on previously cleared surfaces.

(3) When rapid frosting occurs after initial removal, apply a coat of defrosting fluid to retard accumulation of frost before taxiing. Also apply a coat of defrosting fluid after the last flight of the day to help retard further accumulation of ice, snow, or frost.

(4) Inspect control surfaces for freedom of operation. Sudden temperature drops will cause ice to form on the inside of the surfaces as well as on the outside. When evident that ice has formed on the inside restricting control surface movement, remove by application of heat.

(5) Inspect windows and windshields for cracks. To prevent cracking, open all windows before removing aircraft from heated hanger.

(6) Inspect fuel and oil tank caps and vents and crank-case breathers for presence of ice, snow, or frozen condensate. Plugged lines or vents can cause collapsing fuel tanks and swelling of oil tanks.

(7) Inspect wing and fuselage drains and vents for ice and snow. Thaw clogged drains or vents.

(8) Inspect fuel and oil tank sumps for ice. Where water condensate has frozen, heat to permit drainage.

(9) Inspect hydraulic reservoirs for evidence of freezing. If evident, apply heat to thaw.

(10) Inspect cylinder struts and hydraulic pistons for accumulation of dirt and ice. Ice and grit which will damage cylinder strut packings shall be removed. Pistons shall be wiped with a clean cloth saturated in hydraulic fluid, MIL-H-5606.

(11) Using an auxiliary power source, check radios and electrically operated controls and equipment for proper operation.

(12) Inspect exposed limit switches and microswitches for presence of ice or snow and for proper operation.

(13) Inspect hydraulic accumulators, landing gear struts, and tires for proper inflation. Air pressures will drop due to a temperature drop.

NOTE

Exposure of aircraft to low temperatures will cause contraction of metals and hardening of rubber seals. Frequent inspections for leakage and looseness of connections is necessary to prevent leakage.

d. *Anti-Icing, Deicing, and Defrosting.* A protective coating of unheated, undiluted, anti-icing and deicing-defrosting fluid will prevent frozen accumulations from forming on aircraft surfaces if applied before freezing conditions begin and as often as necessary during the precipitation. Any frost or thin layer of ice that does form can be removed easily by application of additional fluid. A protective coating of fluid applied before installation of covers will permit easy removal with a minimum sticking of covers.

WARNING

When handling and applying glycol-water products, wear eye, hand, and body protection. Avoid Inhaling vapors and skin contact. Follow Material Safety Data Sheet procedures for individual product use Injury may otherwise result.

(1) *Types of fluid* Anti-icing, deicing, and defrosting fluid characteristics are explained in the following paragraphs.

(a) *Ethylene/propylene glycol.* Anti-icing and deicing-defrosting fluid, specification MIL-A-8243B, is basically a mixture of ethylene glycol and propylene glycol and is recommended for preventing formation and removing deposits of frost, ice, and snow on exterior aircraft surfaces on the ground in temperatures ranging from -65 to 32°F (-54 to 0°C). Ethylene glycol and propylene glycol are formulated with intrinsic corrosion inhibitor, as prescribed in MIL-A-8243B.

(b) *Glycol-water.* Glycol-water anti-icing and deicing-defrosting fluids, including MIL-A-8243 anti-icing fluid, are not recommended for use around aircraft electronic equipment which employs silver or silver coated electrical/electronic circuitry.

WARNING

Rapid oxidation and fire can occur when glyco-water solutions come in

contact with a short across bare or defective insulated silver or silver-coated electrical circuits such as wiring, switches, and circuit breakers which carry positive direct current (dc), such as electronic black boxes.

NOTE

The fluid shall be homogenous and free of sediment and abrasive. A slight waxy separation in the fluid shall be no cause for rejection if the separation is dispersable by several seconds of moderate agitation Fluid shall remain dispersed for at least 24 hours.

(2) *Fluid application.* The following paragraphs describe methods and equipment used to apply antiicing, deicing, and defrosting fluids.

WARNING

Special care must be taken by personnel to prevent slipping and falling when walking on wing surfaces coated with deicing fluid. Otherwise death or injury may result.

(a) *Spray method.* If hangars, covers, or equipment for heating fluid-water solutions are unavailable, the preventive spray method will be used to maintain standby and alert aircraft in a state of readiness. The preventive spray method is application of cold, undiluted fluid on surface to be protected in a quantity to wet the area thoroughly without excessive drainage

(b) *Spray pattern.* Suitable spray equipment should be used, as application of fluid is done best by spraying surfaces. Spray should not be applied in a solid stream, but be fine enough to prevent waste. A fan-shaped pattern is recommended

(c) *Spray equipment.* Cleaning or other decontaminating equipment may be modified to spray deicing fluids. Spray guns on this equipment can be used as they are, but better spray coverage can be obtained if they are modified slightly. A common garden hose nozzle will give satisfactory result in accumulation removal if the solid stream is used. This nozzle also can be used to apply a protective coating of fluid if a fine conical spray is used.

TM 1-1500-204-23-1

(d) *Spray nozzles.* The three nozzles shown in figure 10-1 may be fabricated in any base shop and used with equipment in the preceding paragraph (c) with good results. Each is explained in the following paragraphs.

1 *Bent tube nozzle.* The bent tube nozzle is made by drilling approximately 60 holes along the longitudinal axis through one side of an aluminum, brass, or steel tube. Holes are 0.043-inch diameter. Tube is capped and bent in a tube bender to give about a 90-degree fan spray.

2 *Pipe nipple nozzle.* The pipe nipple nozzle consists of a one-inch pipe nipple with 0.0512-inch holes drilled radially around 90 degrees from outer edge.

3 *Pipe cap nozzle.* The pipe cap nozzle is hardest to fabricate. It consists of a 3/4 or one-inch pipe cap with 0.0312-inch drilled holes in center and 0.0469-inch drilled holes toward edges, all radiating from a point in base of cap.

(e) *Alternate application method.* Cold deicing fluid may be applied with a mop, broom, or soft bristle brush if spray equipment is unavailable.

(f) *Support equipment.* Use of maintenance stands and work platforms is recommended to position personnel safely near wing and tail surfaces during application of fluid.

e. *Prevention and Removal of Snow, Ice, and Frost Deposits.* The following paragraphs contain methods for the prevention and removal of snow, ice, and frost deposits.

(1) *Prevention of deposits.* The following paragraphs explain the prevention of snow, ice, and frost deposits.

(a) *Snow deposit prevention.* If snow is expected, wing and tail covers should be used. Deicing fluid should not be used for protective coating if snow is predicted, except in conjunction with installation of covers. If attempts are made to use the fluid to prevent snow accumulation, a frozen deposit will be encountered which is difficult to remove. The fluid is diluted by the melting snow to form a slush which freezes in place. Use of covers after coating aircraft surfaces with fluid will prevent snow from forming directly on aircraft and permit easy removal of covers. If covers are unavailable, the best method of preventing heavy snow accumulation is constant removal by brushing or sweeping during the snowfall.

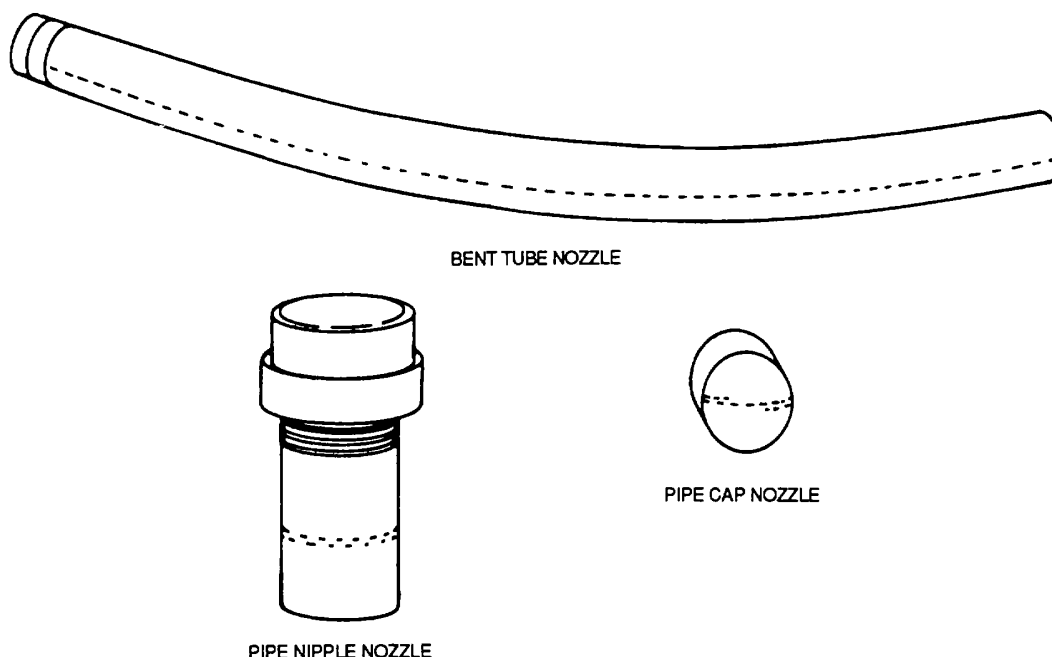


Figure 10-1. Types of Spray Nozzles

(b) *Ice deposit prevention.* Deicing fluid will protect aircraft surfaces as long as it remains on the surfaces. However, freezing rain will tend to wash surfaces clean of fluid, as well as dilute the fluid to the point at which ice will form. The amount of protection afforded by the fluid depends on the amount of freezing rain. The following steps should be taken if ice caused by freezing rain is expected.

1 On aircraft for which covers are available, a coating of fluid applied before covers are installed will prevent covers from freezing on aircraft surfaces and make removal of covers much easier. However, care should be taken to ensure that only a minimum amount of rain is allowed to blow under covers. Otherwise, dilution of fluid will allow freezing to occur.

2 On larger aircraft for which covers are unavailable, the best method of prevention is to keep the surfaces wet with fluid. As long as this fluid remains on the surface, protection is afforded. Since rain eventually will dilute the fluid and render it ineffective for preventing ice formation, protection must be maintained during precipitation by continual spraying of fluid. If weather conditions are such that it is impossible to prevent ice formation, removal should be accomplished.

(c) *Frost deposit prevention.* A satisfactory procedure for protection of aircraft from frost is the application of a layer of unheated, undiluted, deicing fluid to aircraft surfaces after the last flight of the day or as close to midnight as possible, whichever is later. This should permit early morning departure without further fluid application. The length of time that an aircraft will be protected by a single coat of fluid depends on the climatic conditions.

(2) *Removal of deposits.* The following paragraphs explain the removal of snow, ice, and frost deposits.

CAUTION

Extreme care shall be taken to prevent damage to aircraft. Sharp instruments, such as picks, knives, or screwdrivers, will not be used to loosen ice formation.

(a) *Snow removal.* Deicing fluids should not be used to remove heavy snow accumulation. Snow absorbs wasteful amounts of fluid to form a slush which is difficult to remove and eventually will refreeze. The slush will get into control surface hinges and freeze, causing additional difficulty. Snow will be removed by brushing or sweeping or by moving the covers. Usually after snow

removal, a layer of rough ice remains. This frozen crust can be removed with hot, diluted, deicing fluid. In an emergency when aircraft must get off ground as quickly as possible, thin layers of snow can be removed with hot, diluted, deicing fluid. If sufficient fluid is used, the combination of heat from fluid and force of the stream will permit removal of slush, as it is formed without refreezing. Quantity of heated fluid required for snow removal is prohibitive. Remove snow, water and ice from aircraft fuel filler cap wells before removing fuel filler cap. Only one filler cap should be removed at a time, and it should be replaced immediately after servicing is completed.

(b) *Ice and frost removal.* If hangars and covers cannot be used to prevent frozen formations on aircraft, but equipment is available for heating fluidwater solutions, removal of frozen formations by hot, diluted, deicing fluid will be used in place of preventive spraying. Accumulations should be allowed to form and then be removed just after each precipitation or just before each flight, whichever is most practicable or compatible with operational mission of the aircraft.

f. Preventive Maintenance. Accomplish the following preventive maintenance procedures:

(1) Avoid parking aircraft in wet or slushy areas.

(2) Use caution when towing aircraft in extremely low temperatures to prevent damage to hydraulic seals which would result in strut leakage.

(3) Inspect oil and fuel drains and crankcase breathers for ice and frost. Remove any existing frost or ice.

(4) If layovers are to be over 4 hours and temperature is below -20°F (-290°C), remove battery and store in a warm place.

(5) Drain oil system when there is no provision available for preheating oil and a long layover period is anticipated.

(6) When temperature rises above freezing during a long layover, drain fuel and oil tank sumps of water before temperature drops.

(7) Install protective covers and shields to protect aircraft from accumulation of snow, frost, or ice.

TM 1-1500-204-23-1

(8) Partly open canopy when parking aircraft for the night, or provide some other opening to prevent accumulation of frost on windows.

(9) Clean dirt, ice, and grit from landing gear struts and hydraulic pistons. Wipe struts with a clean cloth saturated in hydraulic fluid, MIL-H-5606. Inspect struts for proper inflation.

(10) Inspect tires for proper Inflation.

(11) Install or remove snow and ice-grip tires to comply with change of seasons. Use of snow and ice grip tires on clear, hard surfaced runways reduces the life and effectiveness of the tires.

(12) In emergency arctic conditions, tie down aircraft using trees or the arctic-type mooring anchor shown in figure 10-2. The following procedures can be used to construct an arctic-type mooring.

(a) Thaw ground with fire where pit is to be dug.

CAUTION

During thawing operation, no aircraft will be parked within a 100-foot radius of operation. Damage to equipment may otherwise result.

(b) Dig pit a minimum of 3 feet deep and wide enough to accommodate a 3-foot length of log or similar object.

(c) Connect rope, insert log or similar object and fill pit with gravel and snow.

10-3. Desert Maintenance. The following paragraphs contain the basic principles and procedures which are essential for efficient utilization of aircraft, equipment, and personnel in desert areas. In the desert, aircraft can be protected from deterioration problems by using protective covers, preventive maintenance, and maintaining regular inspections. These paragraphs are not considered as a substitute for detailed maintenance and operating instructions, but as a supplement to each aircraft operation and maintenance manual.

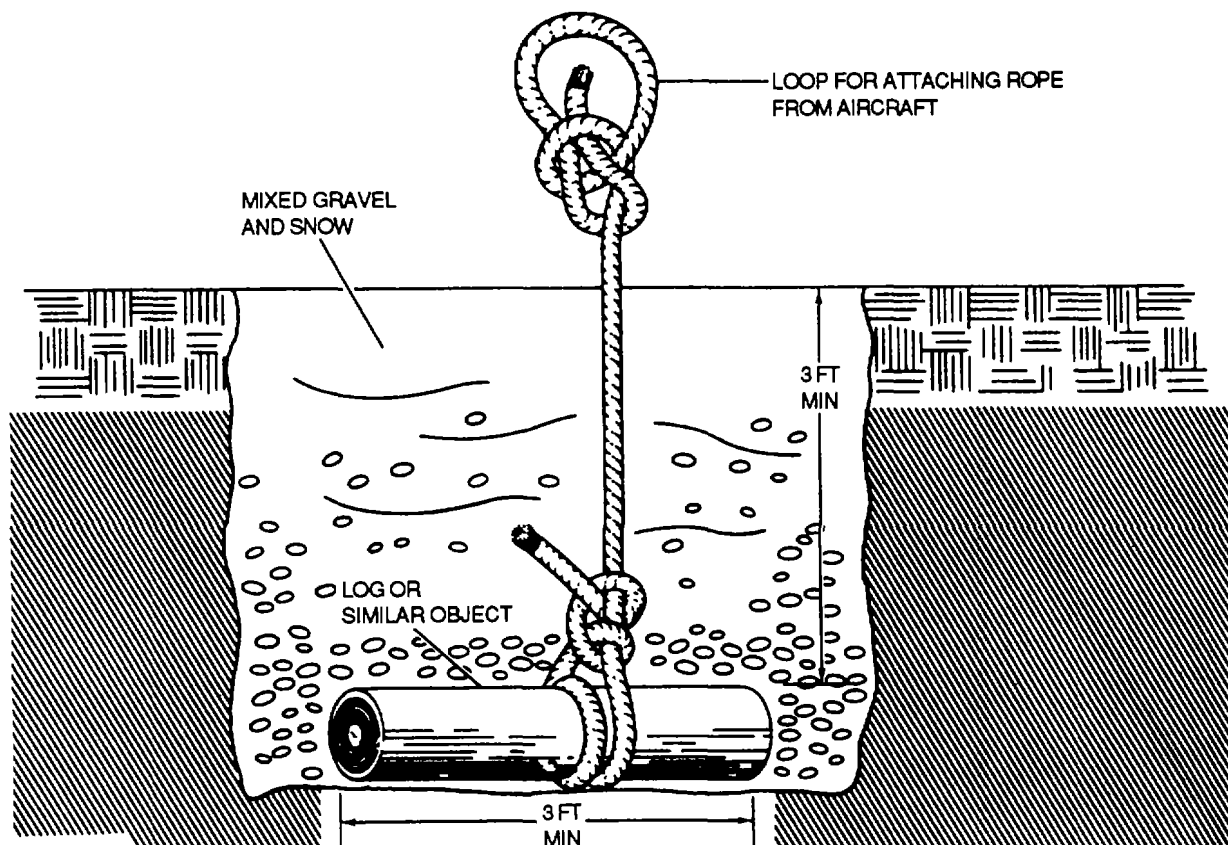


Figure 10-2. Arctic-type Mooring

a. Deterioration Factors. Deterioration problems result from sand and dust, high day temperatures, temperature fluctuations, ultraviolet radiation, and terrain. Considerations for each problem are explained in the following paragraphs.

(1) Sand and dust. The large quantities of loose sand and dust create serious erosion problems for rotor blades, propellers, turbine engine compressors, windshields and other exposed surfaces of the aircraft. While sitting on the ground, the aircraft is exposed to blowing sand and dust from frequent desert windstorms and sand and dust clouds created by vehicular traffic and operation of other aircraft nearby. Sand and dust particles collect on all surfaces of the aircraft and will penetrate almost any crack or crevice to accumulate inside the aircraft. Electronic gear and optical equipment are very susceptible to sand and dust. Weapons are particularly susceptible since many parts are often covered with a light coat of lubricant.

(2) High day temperature. In the desert, heat creates serious problems for people and equipment. The temperature inside a parked aircraft which has been closed up to keep the sand and dust out can reach temperatures much higher than outside temperatures. Extreme heat can cause the failsafe device in electronic gear to shut the equipment off. High temperatures can cause lubricants to break down, distort seals and gaskets, and result in increased leaking problems. Other problems due to high temperatures include softening of plastics, high stress on pressurized containers, and shortened battery life.

(3) Temperature fluctuations. Daytime temperatures can reach over 100°F (38°C), while night time temperatures could reach freezing (or close to it). The condensation resulting from this extreme temperature variation contributes to increased corrosion.

(4) Ultraviolet radiation. The abundant desert sunlight produces a high level of ultraviolet radiation which can cause unprotected plastic components to become very brittle and easily cracked. Ultraviolet radiation also accelerates deterioration of nylon webbing used in seats and restraint systems.

(5) Terrain. The terrain causes problems with moving aircraft and associated support equipment on the ground. Sand can bog a vehicle or aircraft down to the axles. A condition known as Cap Rock is often encountered. The terrain appears rocky, however, the substrate will not support weight and a vehicle can sink up to the frame when attempting to travel over Cap Rock. Aircraft tires can easily be damaged in rocky desert terrain.

b. Precautions. Maintenance personnel will observe the following precautions as a guide to successful performance of duty under desert conditions:

WARNING

Severe burns can result when bare skin touches metal parts of aircraft or equipment.

- Exercise caution when touching aircraft surfaces or metal tools that have been exposed to the sun. Wear gloves and use mats or pad, when practical, to prevent burns or blisters.
- Use extreme care when handling engine fuel at temperatures above 120°F (49°C), to prevent possible sparks and explosion. Open gasoline drums with bronze or other nonsparking tools.
- Electronic gear and optics must be shielded from direct sunlight and/or otherwise cooled for efficient operation.

c. Inspection and Maintenance. The following procedures are for the inspection and maintenance of aircraft operating in desert conditions:

NOTE

Aircraft should be cleaned daily. Frequent use of a vacuum cleaner will prevent accumulation of sand and dust in aircraft. Pay particular attention to abrasion/erosion problems during inspections.

(1) Inspect bungee cords, seals, tires, etc., frequently for blisters and other signs of deterioration.

(2) Inspect vibration isolators every two weeks and replace where cracking or permanent set is excessive.

(3) Keep a chart showing engine oil consumption. A sharp rise on the chart will indicate faulty or inefficient engine operation. An inefficient engine should not be continually operated. It is better to correct the trouble so the engine will operate at peak performance.

(4) Inspect, clean, or replace filters at regular intervals. Sand and dust quickly choke fuel and oil filters and air cleaners. Keep an adequate reserve stock of cleaners and filters.

TM 1-1500-204-23-1

(5) Keep parachute pack flaps sealed and covered when not in use. Seals must be removed before takeoff.

(6) Inspect and clean flags, control hinges pulleys, bearings, worm gears, cowl slides, landing gear, and tail wheel assemblies regularly to arrest corrosive action.

(7) Inspect aircraft regularly for adequate lubrication, leakage, contaminated hydraulic fluid, specific cable tension, and condition of materials, such as rubber and hydraulic equipment. Excess lubricant must be wiped off all exposed bearing surfaces, joints, fittings, components, and fuselage.

(8) Carefully smooth pitted propellers (if not beyond permissible limits) with a fine file and emery cloth. Remove all rough burrs and ragged edges around pits at frequent intervals.

(9) Inspect dead air spaces in wings, fuselage, and tail group at regular intervals for accumulation of sand. Remove accumulated sand to prevent a weight and balance change of aircraft.

(10) Clean engines, where possible, with a highpressure spray gun filled with appropriate cleaning fluid.

(11) Clean instrument filters thoroughly at regular intervals. Replace wornout filters promptly

(12) Clean oil and gasoline tanks periodically, as sand accumulates in corners, seams, and bottom of tanks.

(13) Clean metal parts not in use carefully, cover with grease, and either wrap or store away from sand and dust.

(14) Clean Plexiglas surfaces with clean water. Do not rub Plexiglas surfaces during cleaning nor use Plexiglas cleaning kit.

d. Preventive Maintenance. Accomplish the following preventive maintenance procedures:

(1) Protect aircraft from excessive surface temperatures by covering with canvas or native matting. Use protective covers as soon as possible prior to operation. Covers over Plexiglas should be installed so that they do not touch the surface of the glass. Barrier material may be installed for this purpose.

NOTE

Ensure that all weather stripping on doors, panels, covers, etc, is serviceable and that these items are adjusted to make proper contact with sealing surface

(2) Leave canopy partly open, except during dust or rain storms, to permit circulation of air within the flight compartment.

NOTE

Ensure that sealant installed around windows, seams, chin bubbles, and sheet metal repairs is serviceable.

(3) Install protective covers and dust excluder plugs on all engine openings, vents, air intakes, exhaust outlets, breathers, propeller hubs and feathering domes, cowls, and other vital openings to prevent entry of sand and dust. Keep aircraft pointed into wind when not being serviced or prepared for flight.

(4) Run up engine on a hard surface, as shown in figure 10-3, such as a landing mat, or sand and dust-free area, to prevent sand blasting, rotor blade, propeller, fuselage, and tail surfaces. Landing/taxi area should be located as far as possible from maintenance area and allow as much space between aircraft as tactically feasible.


(5) Never taxi aircraft under its own power unless necessary. This will aid preventing pitting of the rotor blade, propeller, fuselage, and tail surfaces. Tow aircraft, using proper tow fittings. Do not move aircraft over desert crust or hardpan any more than necessary.

(6) Keep pitot heads and gyro instrument venturi covered when not in use.

(7) Make all possible ground checks before starting engine. Inspect controls for freedom of movement to ensure no binding is caused by sand.

(8) Do not run up aircraft in such a manner as to damage other aircraft or injure personnel by blown sand. Engine should never be run on ground longer than necessary. Use ground guides to prevent landing gear from resting on sharp rocks while parking aircraft.


(9) Do all shop (bench) repairs in enclosed shelter. Never use sand-encrusted tools on aircraft.

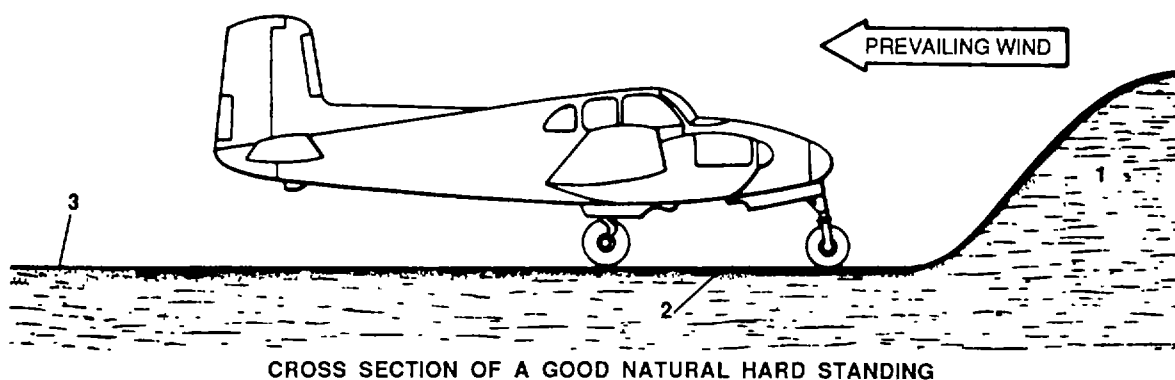

CROSS SECTION OF A GOOD NATURAL HARD STANDING


LEGEND

- 1 CRUST RISING INTO UP-WIND PROTECTIVE TOPOGRAPHICAL FEATURE
- 2 TIGHTLY PACKED HARD SAND CRUST
- 3 AREA OF LOOSE SAND, WELL DOWN-WIND OF HARD STANDING AREA

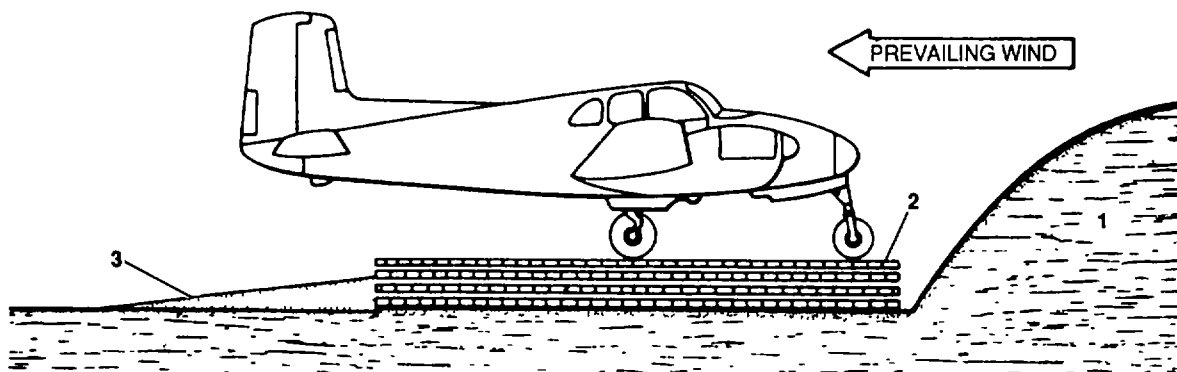

LEGEND

- 1 DESERT CRUST RISING TO PROTECTIVE TOPOGRAPHICAL FEATURE
- 2 STACK OF STEEL LANDING MATS
- 3 AREA OF LOOSE SAND

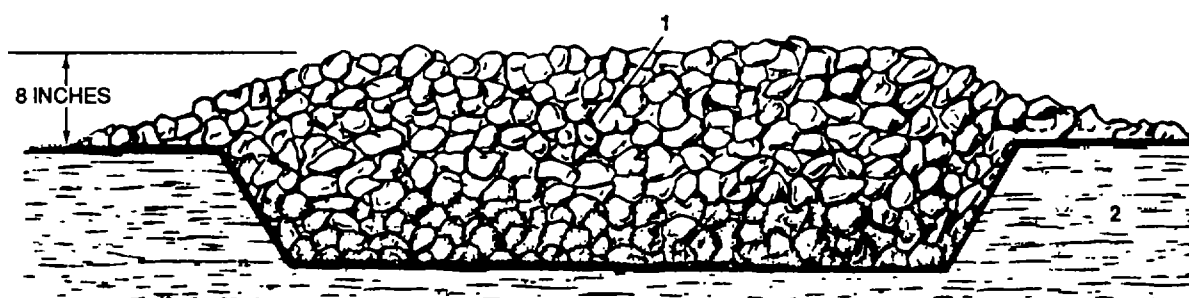

LEGEND

- 1 PIT FILLED WITH ROCK ROCK EXTENDING ABOUT 8 INCHES ABOVE DESERT SURFACE
- 2 PIT WILL ALLOW SAND TO FILTER DOWN THROUGH ROCKS AND OUT OF REACH OF ENGINE BLAST ROCK MUST BE TAKEN OUT AND PIT CLEANED OF ACCUMULATED SAND AT INTERVALS

Figure 10-3. Construction of Hard Stands

TM 1-1500-204-23-1

(10) When possible, accomplish repairs and servicing during early morning hours, or in late afternoon, evening, and night, when heat is less intense. Desert camouflage netting can be used for shade.

(11) Ground aircraft, funnel, and fuel nozzle during refueling operation. Accomplish filling of gasoline from cans, using a filter funnel that fits snugly into tank opening. Exercise every precaution to exclude sand from gasoline and oil during servicing operations.

(12) Where possible, service oil system directly from can to oil tank, without using an intermediate measuring can.

(13) Keep lubricants and gasoline drums covered, and where possible, maintain storage temperature below 120°F (49°C).

(14) Use polarized sunglasses during sunlight hours.

(15) Use eye protection in blowing sand/dust. Extra measures should be used to secure aircraft and shelter.

(16) Ensure voltage regulators are properly set during all temperature changes.

(17) Tape all opening or seams around windows, chin bubbles, seldom used access panels, etc., being sure not to inhibit or restrict airflow required for cooling, or increase Infrared (IR) signature. An entry is required on DA Form 2408-13 in the aircraft log book after tape has been installed. Use tape MIL-T-21595 Type I.

10-4. Tropic Maintenance. The following paragraphs contain basic principles and procedures essential for efficient utilization of aircraft equipment and personnel in tropic areas. Factors having deteriorating influence on fabrics in tropic areas can be categorized as high humidity, high temperatures, salt-laden air, and sunshine. These factors create corrosion, rot, mildew, and mold. Preventing these deteriorating effects to ensure safety and proper operation requires constant, regular inspections and preventive maintenance measures. This paragraph is not to be considered as a substitute for detailed maintenance and operating instruction, but as a supplement to each aircraft operation and maintenance manual.

a. Inspection and Preventive Maintenance. Proper cleaning, packaging, and storing ensures longer life and serviceability of aircraft and equipment. The following practices should be used as a guide:

(1) Treat corrosion-affected area.

(2) Prevent rot, mildew, and mold by keeping fabrics, rubber, and other susceptible items as dry as possible. Clean fabrics in aircraft daily. The effects of moisture and fungus on fabrics are listed in table 10-1.

(3) Operate all heat-producing electrical equipment daily to remove moisture. When this procedure is not practical, dry equipment using a ground heater or by placing in sun.

(4) Wash aircraft often, and lubricate moving parts when aircraft is exposed to salt-laden air or mud.

CAUTION

Before drilling holes, ensure that the aircraft will not be weakened structurally and the operating characteristics will not be adversely affected. Damage may otherwise result.

(5) Keep all drain holes clear of obstructions, and drill holes where necessary in wings, fuselage, enclosed equipment, etc., (when approved by the maintenance officer), to facilitate draining where a noticeable accumulation of water is observed.

(6) Leave canopy windows or doors open when aircraft is parked in sun to permit air circulation within flight compartment. Protect windshields and windows from sun by covering with canvas.

(7) Blow out brakes frequently with compressed air when operating from muddy or dusty fields to prevent damage to brake disks.

(8) To prevent rust, wipe control cables daily with an oily rag.

(9) Check battery every third day to maintain proper electrolyte level.

(10) Every 25 hours, dip paper air filter cartridges in leaded gasoline and dry thoroughly.

(11) Drain all fuel traps and strainers immediately prior to flight.

(12) While aircraft is on ground, avoid excessive water in fuel systems by keeping fuel tanks completely filled.

Table 10-1. Part and Fabrics Affected by Moisture and Fungi

| Part or fabric | Effects of moisture and fungi |
|---|---|
| Cotton, Linen, Paper, and Cellulose Derivatives: Insulation, coverings, webbing, belting, laminations, dielectrics, etc. | Insulating and dielectric properties are lost or impaired by moisture, causing arcing, flash-overs and cross talk. Fungi causes rot and complete destruction. |
| Fiber: Terminal strips and insulators. | Moisture causes electrical leakage paths to form, in turn, causing flash-overs, cross talk, and loss of insulating properties Fiber terminal strips and insulators are destroyed by fungi. |
| Fiber: Washers, supports, etc. | Moisture causes swelling which, in turn, causes supports to misalign, resulting in binding of supported parts Washers are destroyed by fungi. |
| Glass Lenses, windows, etc. | Fungi grow on organic dust, insect tracks, insect feces, dead insects, etc. Dead mites and fungus growth on glass obscures visibility and corrodes nearby metal parts. |
| Laminated Plastics: Terminal strips and boards, switchboard panels, etc, tube sockets and coil . forms, and connectors | Moisture causes electrical leakage paths to form, in turn, causing flash-overs, cross talk, and loss of insulating properties Delamination occurs and fungi grow on surfaces and around edges Extreme temperature changes cause expansion and contraction. |
| Leathers Straps, cases, gaskets, etc. | Fungus destroys tanning and protective materials, causing rotting due to moisture bacteria fungi. |
| Metals | High temperature and moisture vapor cause rapid corrosion Fungus and bacterial growth produce acids and other products which speed corrosion, etching of surfaces, and oxidation This interferes with the operation of moving parts, screws, etc. and causes dust between terminals, capacitor plates, air condensers, etc, thus causing noise, loss in sensitivity, and arc-overs. |
| Metals Two or more. | Different metals which have different potentials when moisture is present cause electrolysis, thus causing formation of salts and beep etching of surfaces as one metal is plated onto the other This happens at riveted and bolted joints, bearings, slides, and screw threads. |

Table 10-1. Parts and Fabrics Affected by Moisture and Fungi - CONT

| Part or fabric | Effects of moisture and fungi |
|---|--|
| Molded Plastics: Terminal strips and boards, switchboard panels, connectors, etc., and tube sockets and coil forms. | Machined, sawed, or ground edges or surfaces are supporters of fungi, causing shorts and flash-overs. Fungus growth reduces resistance between parts mounted on plastic to such an extent that the item is useless. |
| Soldered joints | Excessive soldering flux on terminal boards holds moisture, which speeds up corrosion and growth of fungi Soldering irons should not come in contact with wire insulation. |
| Wax: For impregnation | Fungus-inhibiting waxes which are not clean support fungi, thus causing destruction of insulating and protective qualities and permitting entrance of moisture which destroys parts and unbalances electrical circuit. |
| Wood: Cases, houses and housings, plastics fillers, masts, etc. | Moisture and fungi cause dry rot, swelling, and delamination. |

(13) Run up reciprocating engines at least once every third day.

(14) Operate gas turbine engines at least once every seven days for approximately 10 minutes at flight idle.

(15) Inspect webbing for wear and fungi.

(16) Inspect canvas or duct covers for wear, torn seams, stains, fungi, etc.

b. Parts and Fabrics Affected by Moisture and Fungi. Parts and fabrics affected by moisture and fungi are shown in table 10-1.

CHAPTER 11

AVIATION LIFE SUPPORT EQUIPMENT MAINTENANCE

11-1. General. Organizing Aviation Life Support Equipment (ALSE) servicing facilities is based on many factors, such as the number of aircrew members assigned, and the type and quantity of equipment. With this in mind, the ALSE maintenance shop should be tailored to the needs of the aviation unit, activity or facility. The minimum standards for the ALSE facility and equipment contained in this Technical Manual (TM) are not mandatory requirements, but are standards which can be used for planning purposes. Local Commanders are authorized to deviate from these standards whenever circumstances cannot be reasonably obtained. It will be the responsibility of the local Commander to be certain that any deviation permitted will not foster unsafe or unsanitary practices, recognizing that ALSE has specific areas of supporting the user in hostile conditions i.e., high altitude, in water, land survival, etc. This equipment must perform to standards the first time upon being activated for use. These standards will not be compromised.

11-2. Administration. Administration of the unit Life Support Program must have the Commander's approval. The unit Training Officer must provide scheduling time and training for ALSE. Included should be Code of Conduct/Survival, Evasion, Resistance, and Escape (SERE) Training in accordance with AR 350-30. The unit Aviation ALSE Officer must not only supervise the ALSE technician's work, but also the training of the unit aircrew personnel in the care and use of ALSE, and survival training. The ALSE technician will inspect, repair/replace, and service the equipment in accordance with the applicable Technical Manuals (TMs), Technical Orders (TOs), and Naval Air Manuals (NAVAIRs), and maintain the required forms and records as well as supervise the ALSE training performed by aircrew personnel.

11-3. Safety. The ALSE maintenance area will comply with all Army safety regulations and unit Standing Operation Procedures (SOP). The area will have all regulatory signs i.e., NO SMOKING, EXIT, OXYGEN, etc., conspicuously posted. Horseplay will not be tolerated or permitted in the area at any time. Personal safety equipment will be used while working/servicing ALSE i.e., goggles, face shield, apron, gloves, etc. Fire extinguishers will be located as needed by type and weight. It is recommended an extinguisher be located in each of the work, storage, and administrative areas.

11-4. Personnel. Maintenance of ALSE will be performed only by school-trained, qualified personnel, either military or civilian personnel trained in accordance with paragraph 11-19 may inspect first aid kit. General purpose, panel mounted, NSN 6545-00-919-6650, for aircraft. Also maintenance personnel must be graduates of the U.S. Army 600-ASIQ2, U.S. Air Force C3AABR92230-000, U.S. Navy LSE C-602-2010, or other courses of instruction approved by U.S. Army Aviation Logistics School (USAALS), Ft. Eustis, VA. USAALS has responsibility for training ALSE maintenance personnel. Refresher courses do not qualify personnel to service ALSE.

11-5. Publications. ALSE consists of equipment unique to aviation needs while flying or in a survival condition. This equipment covers several Federal Supply classifications i.e., Clothing 8415, Flotation Equipment 4220, Aircraft Air-Conditioning, Heating and Pressurizing 1660, etc. Each stock classification is initially assigned to a command to manage i.e., stock classification 1660 is assigned to the Air Force Logistics Command while 4220 is assigned to Naval Sea Systems Command. Army Technical Manuals are assigned numbers by basic series and stock classification i.e., (TM 55-1600, 55 signifies transportation while 1660 signifies aircraft air-conditioning and pressurizing equipment). Because the management responsibility is fragmented between many managers, which includes engineering and maintenance, all ALSE items cannot be combined into a single TM. The following paragraphs will describe the ALSE items and then reference the repair manuals for that item.

11-6. Administration Area. The ALSE administration area should have a desk and chair, bookcase file cabinet, and enough chairs for the efficient use of the area. A library containing the necessary Army Regulations (ARs) and the applicable TMs, TOs, and NAVAIRs for the ALSE being used by the unit/units being serviced. Included should be a microfiche viewer with current maintenance and publications fiche. A supply of ALSE maintenance forms will be maintained and used in accordance with DA PAM 738-751. Visual boards relating to ALSE maintenance scheduling shall be located near the desk of the individual assigned to that particular equipment for quick reference, (Refer to FM 1-508). Loitering of personnel in the ALSE area will not be permitted. Loitering fosters horseplay and other unsafe actions by personnel.

11-7. Maintenance Area. The ALSE maintenance area consists of work, storage, and fitting areas. Access to a classroom adjacent to or in close proximity of the life support area is desired for lectures and instructions on the equipment being used and survival conditions. The shop should contain not less than 1,000 square feet of usable area that is environmentally controlled within a range of +60°F (15.6°C) to 75°F (23.8°C) and have a potable water source i.e., hot and cold water. The area will be protected from pilferage, dampness, fire, dust, insects, rodents, direct sunlight, and be free from uncontrolled foot and vehicle traffic. To ensure that all ALSE is maintained in a high state of readiness through inspecting, cleaning, fitting, testing, adjusting, and repairing, all maintenance will be in accordance with the applicable TM, TO, or NAVAIR. For additional information refer to FM 1-508. Table 11-1 lists recommended test equipment for the ALSE work area.

11-8. Work Area Criteria. The work area will have bench surfaces free from rough or abrasive materials, splinter-free tops with a nonporous surface. The area is to be well-lighted with accessible electrical outlets to all bench and desk areas. Cabinets and work benches/tables with locks should be used for securing test equipment, tools, and supplies. Units that have oxygen equipment will have an area set aside for oxygen maintenance that will have hot and cold running water, stainless steel sinks, and floors that are sealed and protected from spills. The area will be restricted to ALSE personnel only. Units supporting flotation equipment will have a moisture and oil-free source of low-pressure, high-volume air and a vacuum source. A vacuum cleaner may be used; however, the vacuum cleaner must not be used for cleaning at any time, because dirt and dust must not be induced into the flotation cells. The floor of the work shop will be sealed and coated to prevent chemical spills from penetrating the floor surface. The work area will have hot and cold running water for cleaning equipment as well as a wash area. Cleanliness is very important in maintaining the equipment. Smoking, eating or drinking should not be permitted in the area.

11-9. Storage Area Criteria. The storage area will be well-ventilated, out of direct sunlight, and well-lighted. The storage area will have storage shelves and cabinets that provide security for the stored equipment and be free from dust, moisture, fire, insects, and rodents. The floor is to be sealed and covered with a dust-free flooring material. A refrigerator will be used to store batteries used in life support equipment; because of health and food service regulations, food will not be stored in refrigerators.

11-10. Fitting Area Criteria. The fitting area will be well-lighted and have enough space so personnel may be fitted with clothing and equipment being assigned to them, i.e. survival vest, flight clothing, flight helmet, parachute harness, etc.

11-11. Tools and Special Repair Equipment. All ALSE items will be serviced and repaired in accordance with applicable TM/TO. The required and authorized tools and special repair equipment are found in the Repair Parts and Special Tools List (RPSTL) of the applicable TWO.

11-12. Training Equipment. Most equipment used for training can be returned to service, providing the equipment is serviceable and can pass all inspection criteria for that item, before it is returned to service. The exceptions are as follows:

- All flotation equipment - these are to be marked **FOR TRAINING ONLY** in accordance with TM 5-4220-202-14.
- Sleeping bags - either those packed inside a 12" by 12" by 1" hard fiberglass container or the new vacuum packed soft plastic package.
- DELETED

11-13. Temporary Storage of Life Support Equipment. Equipment being stored is subject to dry rot, rodent damage, mildew and other contamination. It is important for the area to be environmentally controlled as well as secured from pilferage.

a. Survival Kits. Survival kits to be in temporary storage will:

- Be inspected, repaired, and if needed, cleaned.
- Have components replaced if necessary.
- Have matches and pyrotechnics removed and stored in accordance with post policy for units operating within a military base, or local policy for those units not operating on a military base.
- Have kits appropriately tagged with annotations about items not in the kit being stored.

Table 11-1. Test Equipment

| Nomenclature | NSN |
|-----------------------|------------------|
| Multimeter, AN/PSM-45 | 6625-01-139-2512 |
| Test set, AN/PRM-32A | 6625-01-013-9900 |
| Test set, AN/R/TS-24 | 6625-01-128-8588 |
| Test set, strobe | 6625-01-085-9669 |
| Test set, TS-2530A/UR | 6625-00-238-0223 |

For flotation equipment

| | |
|---|------------------|
| Cleaner, vacuum (not for cleaning purposes) | 7910-00-550-9123 |
| C02 Transfer unit | 3655-00-288-0309 |
| Manometer | 6685-00-526-5323 |
| Scale, dial and beam | 6670-00-255-0239 |
| Separator, oil and water | 4920-00-242-4100 |

For oxygen equipment

| | |
|-------------------------------|------------------|
| Parts kit, oxygen mask repair | 1660-00-672-3945 |
| Regulator | 1660-00-700-9776 |
| Tester, oxygen mask, MQ-1A | 1660-01-097-0441 |
| Tester, oxygen regulator | 4920-00-128-8584 |

NOTE

Storage cabinets or workbenches/tables with storage shelves/drawers that can be secured with locks should be used for securing test equipment, tools, equipment, and supplies. The storage cabinets, workbenches/tables will be marked to identify the tools, equipment, supplies and test equipment contained within them.

- Be stored on shelved well-ventilated and out of direct sunlight.

b Survival Vests. Survival vests to be put in temporary storage will:

- Be inspected, repaired, and if needed, cleaned.
- Have components replaced if necessary
- Have signal kits, personnel distress removed and stored in accordance with post policy if unit is operating from a military base, or local policy if unit is operating off a military base.

- Have radios removed from vest. Battery will be removed from the radio and put into refrigerated storage.
- Have the light marker distress removed from the vest and the battery from the light marker removed and put into refrigerated storage.
- Have vest appropriately tagged and items not in vest annotated on the tag. The vest will be hung on a hanger for storage, out of direct sunlight.

TM 1-1500-204-23-1

c. Flotation Equipment. Flotation equipment to be put into storage will be stored in accordance with TM 5-4220-202-1 4/T.O.14S-1-102.

d. Pyrotechnics. Pyrotechnics will be stored in accordance with post policy, if unit is operating on a military post, or in accordance with local policy if unit operates off a military base.

e. Oxygen Equipment. Oxygen equipment to be put into storage in accordance with TM 55-1660-24513/TO 15X-1-1.

f. New Equipment. All newly assigned ALSE equipment prior to storage will be inspected upon receipt from supply/individual turn-in, and prior to issue/reissue, and then in accordance with TM 55-1680-317-23&P or the applicable TM/TO for that piece of equipment.

11-14. Flight Clothing. Flight clothing consists of flight coveralls, nomex flight jackets, nomex or leather flight gloves, anti-exposure suits, flight helmet, and aircrew body armor. Nylon flight jackets are no longer authorized for flight duty use.

a. Inspection. Inspection of flight clothing, anti-exposure suits, flight helmet, and aircrew body armor will be in accordance with the applicable TM, TO, or NAVAIR.

b. Repair. Repair will be in accordance with TM 10-8400-201-23, General Repair Procedure for Clothing and Inspection Equipment The applicable TM/TO, for the item to be repaired, will be the damage repair criteria guidance.

c. Cleaning. Cleaning will be done in accordance with the applicable TM/TO Clothing will not be returned to unit supply, Repairable Exchange (RX) point, or salvage points needing to be cleaned. Cleaning of all flight clothing is the responsibility of the aircrew member The ALSE technician will instruct the users in the proper use and care of flight clothing. Table 11-2 gives references for flight clothing.

11-15. Survival Kits. Survival kits currently are issued only to individual aircrew personnel and only for the climatic zone they will be operating in. The current survival kits are Individual Hot Climate, Individual Cold Climate, Individual Overwater, and the Rigid Seat Survival Kit (RSSK). The RSSK kit will contain only one of the following climatic conditions: Hot Climate, Cold Climate or Overwater Included are two types of survival

vest kits; the SRU-21 IP is used by all aircrew personnel except OV-1 aircrews who wear the vest designed for the OV-1 aircraft. Both types of vests come in two sizes; the median chest size is 37 inches, and that determines which size is to be used by the wearer The survival kits contain items to support the aircrew personnel in a particular environment, i e. , land, either Hot or Cold Climate, or Overwater The Overwater kit contains a one man liferaft This is the only kit that contains flotation equipment. The survival vests ensure the individual will have a limited amount of survival equipment. The vests are a supplement to the survival kits. Individual underarm flotation equipment is available to those aircrew personnel who fly overwater and is worn with the vest. AR 95-1 and AR 95-3 regulate the use of survival equipment for Army aircraft and aircrews. Table 11-3 gives references for survival kits.

a. Inspection. Inspection of the survival kits will be in accordance with TM 55-1680-317-23&P, Army Aircraft Survival Kit Maintenance Manual.

b. Repair. Repair/replacement will be in accordance with TM 55-1680-317-23&P, and FM 10-16, General Fabric Repair Most survival items will be required to be replaced rather than repaired This is due to the nature of packaging for the particular item or the shelf life. The RSSK lid and lower container may be repaired in accordance with TM 55-1500-204-25/1, using Parts Kit Repair, Fiberglass NSN 1560-00-8569222. This is for the fiberglass repair of the container.

c. Cleaning. Clean survival kits using the following procedures.

(1) Clean the canvas inner or outer cases using procedures. In TM 10-8400-201-23 for lightweight load carrying equipment.

(2) Clean the RSSK lid and lower case using soap and warm water; rinse with clean, warm water, and dry with a clean cloth. On the lid, finish the drying process by using compressed air to ensure no moisture remains In the release mechanism.

(3) Empty the contents of all pockets of the survival vest and remove any flotation equipment. Wash the empty vest using soap and warm water. Rinse with clean, warm water. Put vest on a hanger and air dry out of direct sunlight. The vest may be machine washed using a delicate wash cycle.

Table 11-2. References for Flight Clothing

| Publication | Description |
|----------------------|---|
| TM 10-8400-201-23 | Organizational and Direct Support Maintenance Manual: General Repair Procedures for Clothing and Individual Equipment |
| TM 10-8400-202-13 | Maintenance Instructions for NOMEX Flight Gear Coveralls Types CWU-27/P and CWU-28P; Gloves, Type GS-FRP-2; Jacket Flyer's, Summer, Type CWU-35/P and Winter, Type CWU-45/P Hood, Flyer's (CWU-17/P Jacket); Trousers, Flyer's Extreme Cold Weather, CWJ-18/P (TO 14P3-1-112) |
| TM 10-8415-206-12P&P | Operator's and Organizational Maintenance Manual Including Repair Parts and Special Tools List for Helmet, Flyer's, Protective, Model SPH-4 Regular and X-Tra Large |
| TM 10-8470-202-13 | Operation and Service Instructions for Ground and Aircrew Body Armor (TO 14P3-1-102) |
| TM 10-8475-200-13 | Use, Inspection, Fitting, and Maintenance Instructions for Anti-Exposure Assembly. Type CWU-21/P (TO 14P3-5-81) |
| TM 10-8475-202-13 | Operation, Service and Maintenance Instructions for Quick Donning Anti-Exposure Flying Coverall, Type CWU-16/P TO 14P3-5-61 |
| TM 10-227 | Fitting of Army Uniforms and Footwear |
| FM 10-16 | General Fabric Repair |
| FM 10-267 | General Repair for Clothing and Textiles |
| FM 21-15 | Care and Use of Individual Clothing and Equipment |
| CTA 50-900 | Clothing and Individual Equipment |
| FED STD 757 | Stitches, Seams, and Stitching |
| FM 1-508 | Maintaining Aviation Life Support Equipment (ALSE): Maintenance Program |

11-16. Flotation Equipment. Flotation equipment consists of underarm flotation bladders (life preservers), one man liferafts, seven man liferafts and 20 man multi-place liferafts. All flotation equipment contains an air bladder or air chambers, an inflation device, inflating gas (usually CO₂) in cylinders of varying sizes and capacities to fit the particular piece of flotation equipment, and a topping off valve to replenish lost gas or to relieve excess pressure. The device will either be an oral inflation tube or a hand pump in the case of multi-place rafts. The type and quantity of flotation equipment will depend on the

type of aircraft being flown and the number of aircrew and passengers on board (refer to table 11-4, Liferafts for Aircraft.) Any and all flotation equipment used for training will not be used as serviceable equipment for survival kits or issued for individual use in lieu of serviceable flotation equipment. There will be no waivers for this policy. Flotation equipment used for training equipment will be visibly marked FOR TRAINING ONLY in accordance with TM 5-4220-202-14/TO 14S-1-102. Table 11-5 gives references for flotation equipment.

Table 11-3. References for Survival Kits

| Publication | Description |
|------------------------|---|
| TM 9-1370-203-20P& P | Organizational Maintenance Manual for Military Pyrotechnics |
| TM 10-8400-201-23 | General Repair Procedures for Clothing and Individual Equipment |
| TM 55-1680-316-10 | Operator's Manual for Rigid Seat Survival Kit and Survival Vest for OV-1 Aircrews |
| TM 55-1680-317-23P & P | Maintenance Manual for Army Aircraft Survival Kits |
| TM 55-1680-322-12 | Operation and Service for Distress Marker Light, P/N SDU-5/E |
| TM 55-1680-348-10 | Survival Kit, Cold Climate, Individual |
| TM 55-1680-349-10 | Operator's Manual for Survival Kit, Hot Climate |
| TM 55-1680-350-10 | Operator's Manual for Survival Kit Overwater, Individual |
| TM 55-1680-351-10 | Operator's Manual for SRU-21/P Army Vest |
| FM 1-508 | Maintaining Aviation Life Support Equipment (ALSE): Maintenance Program |
| FM 10-16 | General Fabric Repair |
| FM 10-267 | General Repair for Clothing and Textiles |
| FM 10-1269 | Repair of Canvas and Webbing |
| FM 21-15 | Care and Use of Individual Clothing and Equipment |
| FED STD 757 | Stitches, Seams and Stitching |
| DA PAM 738-751 | Functional Users Manual for the Army Maintenance Management System-Aviation (TAMMS-A) |
| TB 9-1300385 | Munitions Suspended or Restricted |
| TB 740-10 | Quality Control Depot Storage Standards. Appendix M Medical Supplies. |
| DOD Medical Catalog | VOL I, VOL II, VOL III MCRL I, II, III |
| DOD 5154.4S | DOD Ammunition and Explosives Safety Standards |
| SB 8-75 SERIES | Army Medical Department Supply Information 8-75-1 thru 8-75-35 |
| SB11-6 | FSC Class 6135; Dry Battery Supply Data |
| SB11-30 | FSC Class 6135; Dry Battery Management Data |

Table 11-3. References for Survival Kits - CONT

| Publication | Description |
|---|--|
| SB742-1370-94-721 | Signal, Smoke and Illumination, Marine MK13, MOD O Surveillance Function Test |
| <p>a. <u>Precautions</u>. Comply with the following precautions when handling or accomplishing maintenance on liferafts:</p> <p>(1) Prevent hydrocarbons, such as gasoline, oil, or grease from contacting liferaft materials.</p> <p>(2) Do not drop or throw liferafts, as damage to liferaft or accessories may occur.</p> <p>(3) Do not step or sit on packed liferafts, or place weights or items on liferafts which are not required.</p> | <p>(4) Do not step on any part of liferaft while wearing shoes when accomplishing inspections or repairs.</p> <p>b. <u>Stowage in Aircraft</u>. Liferafts shall be stowed in aircraft as follows:</p> <div style="border: 1px solid black; padding: 2px; text-align: center; margin: 10px 0;">CAUTION</div> <p>Do not sit or place equipment or tools on liferafts stowed in aircraft. Keep the liferaft free of oil, grease, and other rubber deteriorating agents. Damage to liferaft may otherwise result.</p> |

Table 11-4. Liferrafts for Aircraft

| Type | Aircraft | | Maximum number on board Crew | Pax | Total | Authorized liferaft one-man | Authorized optional liferaft 7-man | Authorized- liferaft 10-12 man | Optional liferaft 20-man |
|-------|----------|------------------|---------------------------------------|-----|-------|-----------------------------------|---|--------------------------------------|--------------------------------|
| | Type | Model | | | | | | | |
| OV-1 | | B,C,D | 1 | 1 | 2 | 2 | | | |
| RV-1 | | C,D | 1 | 1 | 2 | 2 | | | |
| U-8 | | F | 1 | 5 | 6 | 6 | 1 | 1 | |
| UV-18 | | A | 2 | 18 | 20 | 20 | 3 | 2 | |
| U-21 | | A,D,F,H,J | 2 | 6 | 8 | 8 | 1 | 1 | |
| RU-21 | | A,B,C,D | 2 | 6 | 8 | 8 | 1 | 1 | |
| AH-1 | | G,S | 2 | 0 | 2 | 2 | | | |
| TH-1 | | G | 2 | 0 | 2 | 2 | | | |
| AH-64 | | A | 2 | 0 | 2 | 2 | | | |
| RC-12 | | D,G | 2 | 1 | 3 | 3 | | | |
| C-12 | | A,C,D | | | | | | | |
| CH-47 | | A,B,C,D | 3 | 33 | 36 | | | | 2 |
| CH-54 | | A,B | 5 | 0 | 5 | 5 | | | |
| CH-54 | | A,B, with pod | 5 | 45 | 50 | 50 | | | 2 |
| OH-6 | | A | 1 | 3 | 4 | 4 | | | |
| OH-58 | | A,C | 1 | 3 | 4 | 4 | | | |
| OH-58 | | D | 2 | 0 | 2 | 2 | | | |
| UH-1 | | B,X | 2 | 4 | 6 | 6 | 1 | | |
| UH-1 | | B,C,M | 2 | 7 | 9 | 9 | 1 | 1 | |
| UH-1 | | D,H | 2 | 11 | 13 | 13 | 2 | | |
| UH-60 | | A | 3 | 14 | 17 | 17 | 2 | | |
| T-42 | | A | 1 | 3 | 4 | 4 | 1 | | |

NOTE

Underarm flotation devices must be worn by all persons on board all Army Aircraft flying over water. This requirement complies with AR 95-3.

(1) Prior to stowing liferaft assemblies in aircraft, inspect liferaft compartment or stowage area to ensure freedom from oil, dust, water, sharp protruding edges, or any foreign substances or articles that could cause damage to the liferaft.

(2) Refer to aircraft manuals for proper installation and location within the particular aircraft.

(3) Leave liferaft assemblies stowed in fuselage (not in compartment) in the carrying cases. Stow auxiliary kit in same manner.

(4) Heavy multi-place liferafts are to be carried, not dragged over floor areas.

c. Inspection. All flotation equipment will be inspected in accordance with TM 5-4220-202-14/TO 14S-1-102.

d. Repair. All repairs of flotation equipment will be in accordance with TM 5-4220-202-14/TO 14S-1-102. The flotation maintenance facility will conform to the requirements of the same TM/TO.

Table 11-5. References for Flotation Equipment

| Publication | Description |
|-----------------------------------|---|
| TM 55-1680-321-12 | Inspection, Maintenance and Disposition Instructions, Desalter Kit, Type MK-2 |
| TM 5-4220-202-14/ TO 14S-1-102 | Maintenance Instructions with Parts Breakdown USAF Flotation Equipment |
| FM 1-508 | Maintaining Aviation Life Support Equipment (ALSE): Maintenance Program |

Table 11-6. References for Oxygen Equipment

| Publication | Description |
|---|--|
| TM 55-1660-245-13 TO 15X-1-1 NAVAIR 03-50-1 | Maintenance Instructions: Oxygen Equipment |
| TM 55-1669-247-12 TO 15X-3-6-1 | Operation, Fitting, Inspection and Maintenance Instructions for MBU-12/P Pressure-demand Oxygen Mask. |
| TM 55-6695-217-13 | Operation and Maintenance Instructions for Tester, Oxygen Mask, Headset, Microphone and Flash Goggles Type MQ-1 A |
| TM 55-6695-217-23 & P | Aviation Unit and Aviation Intermediate Maintenance Repair Parts and Special Tools List, Tester Oxygen Mask, Headset, Microphone and Flash Goggles Type MQ-1A. |

e. Cleaning. All cleaning of flotation equipment will be in accordance with TM 5-4220-202-14 and TO 14S-1-102.

11-17. Oxygen Equipment. Oxygen equipment for ALSE consists of that equipment not a permanent/integral part of the aircraft/aircraft airframe. Oxygen to be used is Oxygen, Breathing, Aviator's, MIL-0-27210. The cylinder is color-coded with a green top, white band, green band and a green body in accordance with MIL-STD 101. There are several types of oxygen. Aviation oxygen is dry compared to the wet medical oxygen. Dry oxygen for aviation is required because of high altitude and low temperatures. Medical oxygen, which is wet, can freeze causing malfunction of oxygen equipment and oxygen masks. The handling of oxygen demands the safe handling, care, and attention to details. Refer to TM 55-1660-245-13 and TO 15X-1-1. There are many

restrictions to servicing oxygen equipment; all must be adhered to. A clean environment is required to service personal oxygen equipment, masks-regulators-oxygen bottles, etc. The mask, because it is on the users face, if not properly serviced, could cause facial skin, throat, and lung problems, or at worst, no oxygen flow when needed causing hypoxia and possible death. Table 11-6 gives references for oxygen equipment.

a. Inspection. Inspection of all oxygen equipment will be in accordance with the applicable TM/TO.

b. Repair. Repair of all oxygen equipment will be in accordance with the applicable TM/TO/NAVAIR. The maintenance facility will conform to the requirements of TM 55-1660-245-13/TO 15X-1-1/NAVAIR 03-50-1) a tri-service manual for oxygen and some oxygen equipment maintenance including the requirements for the oxygen maintenance area.

c. Cleaning. Cleaning of oxygen equipment will be in accordance with the applicable manual for that piece of oxygen equipment.

11-18. Signaling Devices. Signaling devices are flares, whistles, reflections from shining surfaces (mirrors, plexiglass from doors or windows etc.), smoke, radios, sea dye, cloth, vegetation, and rocks. The use of these items are found in FM 21-76 Survival Manual or AFM 64-5 Survival Manual or the applicable survival radio TM/TO. Caution must be used with flares and fire signals. Table 11-7 gives references for signaling devices.

a. Inspection. Inspection will be accomplished in accordance with the applicable TM/TO/NAVAIR.

b. Repair. Repairs, if any, will be accomplished in accordance with the applicable TM/TO/NAVAIR.

c. Cleaning. Cleaning will be accomplished in accordance with the applicable TM/TO/NAVAIR.

11-19. First Aid Kits. This section establishes the responsibility and procedures for installation and inspection, and furnishes information regarding source of supply of approved First Aid Kit, General Purpose, Panel Mounted, NSN 6545-00-919-6650, for aircraft. This kit provides first aid essentials for use by flight crews and passengers sustaining injuries due to combat, accident, malfunctioning of equipment, or survival conditions.

NOTE

This publication will be used as authority to identify and inspect first aid kits for Army aircraft. Other references in this chapter are used only for purposes specified.

a. Basis of Issue. The property book officer for authorized activities will submit requests for first aid kits to the supporting medical supply officer, based on one per crew compartment in Army aircraft; and one for each five passenger seats/capacity or fraction thereof.

b. First Aid Kit Installation. Maintenance personnel will insure that serviceable first aid kits are installed in aircraft, as specified in the applicable -10 manual. The absence of required serviceable first aid kits from an

aircraft combined with the inability of securing and installing required kits prior to flight shall warrant placing the aircraft in a limited (one kit in crew compartment and one kit for each five passenger seats installed or fraction thereof) operable status, IAW DA PAM 738-751. Kits will be installed in aircraft locations indicated in the applicable aircraft maintenance technical manual. When the required quantity of first aid kits, for troop transport mission(s) is in excess of the provisions for installation of the kits, the additional kits will be carried on board as loose equipment. Upon completion of mission(s), the additional first aid kit(s) will be removed and turned in.

c. Identification. There are two configurations of authorized first aid kits, with identical NSN part numbers for use on aircraft. The older design as shown in figure 11-1 is marked with a red cross, and the words First Aid Kit, Airplane, appear on the outer fabric case. It has a side pocket compartment. The newer configuration as shown in figure 11-2 is marked with a red cross and the words First Aid Kit, General Purpose, appear on the outer fabric case. The older design kit will be used until stocks are depleted and the kit is no longer serviceable. Original markings will not be changed for standardization purposes. See TM 55-1500-345-23 in the event that the markings on kits must be restored.

d. Protection of Contents. The first aid kit will be closed and sealed when carried in aircraft. Serviceable kits will always be tagged with a DD Form 1574 (Serviceable Tag-Materiel) as shown in figure 11-3, properly completed and attached. This will be the responsibility of designated personnel.

NOTE

This seal will be broken on installed first aid kits only when the contents are to be used for first aid treatment of an injury. When the seal has been broken, it will be annotated on DA Form 2408-13-1/DA Form 2408-13-1-E (Aircraft Inspection and Maintenance Record).

e. Controlled Substances. All narcotics and non-narcotic controlled substances have been deleted from this medical kit. Controlled substances are normally not included in the medical kit. Amphetamines will not be added to medical kits under any circumstances.

Table 11-7. References for Signaling Devices

| Publication | Description |
|-----------------------|---|
| TM 9-1300-200 | Ammunition, General |
| TM 9-1300-206 | Ammunition and Explosives Standards |
| TM 9-1300-214 | Military Explosive |
| TM 9-1300-250 | Ammunition Maintenance |
| TM 11-5820-640-15 | Operator's, Organizational, Direct Support, General Support Depot Maintenance Radio Sets AN/URC-10, AN/URC-10A and ACR RT-10 |
| TM 11-5820-640-25P | Combined Organizational, DS, GS, and Depot Maintenance Including Repair Parts and Special Tools List Radio Set AN/URC-10A |
| TM 11-5820-767-12 | Operator's and Organizational Maintenance Manual Including Repair Parts and Special Tools List; AN/URC-68 |
| TM 11 -5820-767-20P | Organizational Maintenance Manual Including Repair Parts and Special Tools List Radio Set AN/URC-68 |
| TM 11 -5820-767-30P | Direct Support Maintenance Repair Parts and Special Tools List for Radio Set AN/URC-68 |
| TM 55-5820-767-34 | Direct Support Maintenance and General Support Maintenance Manual for Radio Set AN/URC-68 |
| TM 11-5820-800-13 & P | Operator's Aviation Unit and Intermediate Maintenance Manual Including Repair Parts and Special Tools List for Radio Set AN/PR C90 |
| TM 11-6625-2631-14 | Operator's Organizational, Direct Support and General Support Maintenance Manual for Test Set Battery TS-2530/UR and Test Set TS-2530A/UR |
| TM 11-6625-2631-40P | General Support Maintenance Repair Parts and Special Tools List for Test Set, Battery TS-2530/UR and TS-2530A/UR |
| TM 11-6625-2632-14 | Operator's Organizational, Direct Support and General Support Maintenance Manual Including Depot Maintenance Repair Parts and Special Tools List for Radio Test Set AN/PRM-32 |
| TM 11-6625-2632-14-1 | Operator's, Organizational, Direct Support and General Support Maintenance Manual Radio Set AN/PRM-32A |

TM 1-1500-204-23-1

Table 11-7. References for Signaling Devices - CONT

| Publication | Description |
|------------------------|---|
| TM 11 -6625-2632-24P-1 | Organizational, Direct Support, and General Support Maintenance Repair Parts and Special Tools List for Radio Test Set AN/PRM-32A |
| SB 11-6 | FSC Class 6135, Primary Battery Supply Data |
| SB 11-30 | FSC Class 6135; Primary Battery Management Data |
| SB 742-1370-94-721 | Signal, Smoke and Illumination Marine: AN-MK 13, MOD O (L275) Ammunition Surveillance Surveillance Procedures |
| TM 55-1680-317-23 & P | Maintenance Manual for Army Aircraft Survival Kits |
| TM 55-1680-322-12 | Operator's and Service, Distress Marker, Light, SDU-5/E |

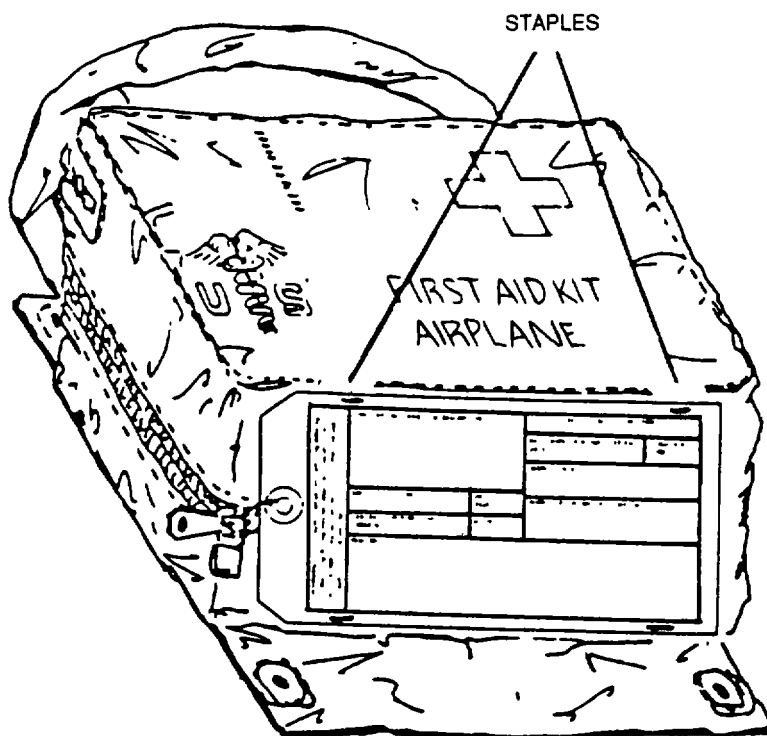


Figure 11-1. First Aid Kit, Airplane (Older Configuration)

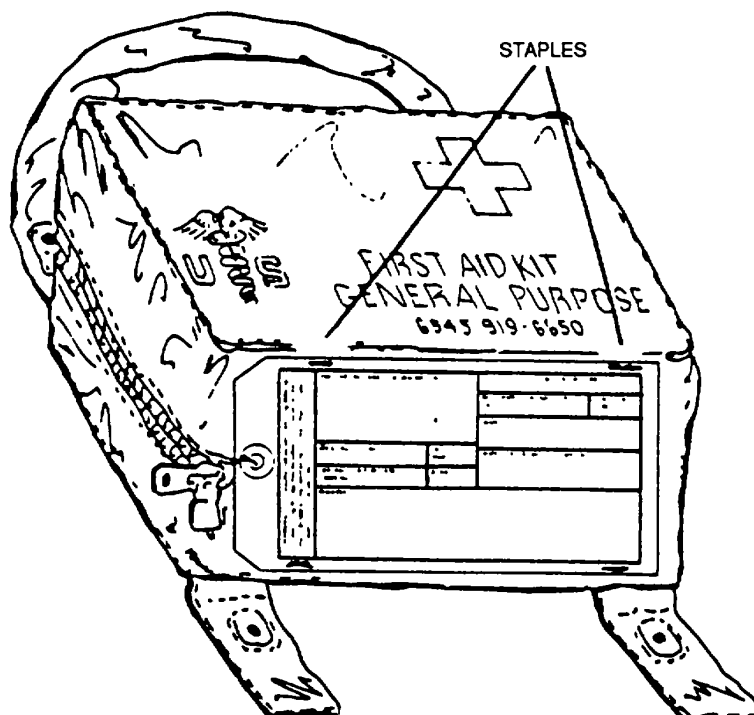


Figure 11-2. First Aid Kit, General Purpose (Newer Configuration)

| | | | | |
|--|----------------------------------|---------------|------------------------------------|----------------|
| WARNING: Unauthorized persons removing, defecting or destroying this tag may be subject to a fine of not more than \$1,000 or imprisonment for not more than one year or both (18 USC 1361) | FSN PART NO AND ITEM DESCRIPTION | | SERVICEABLE TAG-MATERIEL | |
| | | | NEXT INSPECTION DUE/OVER-AGE DATE | CONDITION CODE |
| | | | INSPECTION ACTIVITY | |
| | SERIAL NO./LOT NO | UNIT OF ISSUE | INSPECTOR'S NAME OR STAMP AND DATE | |
| | CONTRACT OR PURCHASE ORDER NO | QUANTITY | | |
| REMARKS | | | | |

Figure 11-3. Serviceable Tag-Materiel (DD Form 1574) (Yellow)

f. Inspection. Inspections of first aid kits by ALSE medical personnel, or other certified personnel are described in the following paragraphs.

(1) Inspection by ALSE, medical or other certified personnel. First aid kits will be inspected for serviceability and completeness upon receipt. Inspecting personnel will annotate the DD Form 1574 with the date of the shortest expiration dated item contained in the kit. This date will be used to schedule the next inspection due, or when:

- Suspension of the kit, or an item within the kit, is announced by the supporting medical supply officer, the US Army Medical Materiel Agency, or the Medical Supply Bulletin (SB 8-75 SERIES).
- The kit is turned in by using activities. Using activities will ensure that the kit is removed for inspection and quality assurance prior to the next inspection due/overage date or immediately upon receiving notice from the supporting medical supply officer of an applicable item suspension. Personnel may be medical, ALSE, TIs or safety personnel as authorized in writing by the unit commander.

(a) Inspection procedures. ALSE medical or certified personnel shall accomplish the following inspection procedures:

1 Ensure kit is properly marked using the appropriate material condition tags and labels listed in paragraph 5-3.

2 Replace all expiration dated items with less than 12 months shelf/service life whenever possible. The NEXT INSPECTION DUE DATE annotated on the serviceability tag will be that of the item that has the shortest expiration date.

3 Ensure that the kit contains no Schedule II controlled medical items unless a current MACOM authorization is on file.

4 Ensure that contents of the kit are complete and serviceable.

5 Ensure that items are inspected in accordance with the following inspection tests.

a Replace bandages, dressings, and compresses when there is evidence of mildew, mold, dry rot, discoloration, or when instructions are illegible.

b Replace adhesive tape when the adhesive mass separates from the backing fabric upon unwinding (unwinding shall consist of not less than six inches nor more than seven inches of length from the starting end) or when the adhesive mass is not uniform.

c Replace petrolatum gauze when there is evidence of separation or delamination of the package material or evidence of petrolatum seepage.

d Replace ammonia inhalant ampules when there is evidence of broken glass or the container shows staining marks.

e Replace surgical razor blade when there is evidence of rust, corrosion or pitting on the metal surface of the blade.

f Ensure that a list of contents is included in the kit. Local reproduction of the listing, Table 11-8 is authorized.

g Ensure that component items of first aid kit that are deleted through normal supply actions are replaced or withdrawn from the kit. It is not necessary to recall the kit in use to effect replacement of deleted items unless otherwise specified.

NOTE

Using activities may use the inspection codes identified in DLAM 4155.5, Quality Control, Depot Serviceability Standards manual, for additional assistance in the identification of serviceable/non-serviceable medical material contained in the first aid kit.

(2) Inspection by maintenance personnel. Installed First Aid Kit will be inspected by maintenance personnel at the Preventive Maintenance Daily inspection as prescribed in the applicable aircraft Preventive Maintenance Daily (PMD) inspection checklist.

NOTE

 
If a seal has been broken, and no kit is immediately available, a circled red X status symbol will be entered in block 16 and a statement entered in Part I, Fault Information Section of DA Form 2408-13-1/ DA Form 2408-13-1-E (Aircraft Inspection and Maintenance Record) restricting the aircraft to a specified number of passengers until a serviceable kit is installed. Kits on which seal has been broken will be turned in to designated ALSE personnel for a replacement kit.

When kit is due for an inspection or kit is considered unserviceable due to missing or illegible materiel condition tag, torn case, broken seal, or (on older design) incomplete side pocket contents, etc., inspector will remove DD Form 1574 (Serviceable Tag-Materiel) and retag kit with DD Form 1577-2 Unserviceable (Repairable) Tag-Materiel, as shown in figure 11-4.

g. Sealing. The following paragraphs describe the materials and procedures used to seal first aid kits.

(1) Materials. Requisition the following materials through normal supply channels:

- Seal, lead, 3/8-inch-diameter, 1/8-inch-thick, with 5-1/2-inch 27 AWG single-crimped copper wire, NSN 5340-00-391-4240.
- Flat-head pin, NSN 5315-00-989-7631.
- Seal, anti-pilferage, NSN 5340-00-779-3516 (alternate seal).
- Seal, anti-pilferage, NSN 5340-01-004-9387 (alternate seal).
- Copper wire, NSN 5340-00-391-4240.

| | | | | | |
|--|------------------------------------|------------------|---|--|-------------------|
|  <p>WARNING: Unauthorized persons removing defacing, or destroying this tag may be subject to a fine of not more than \$1,000 or imprisonment for not more than one year or both (18 USC 1361)</p> | FSN. PART NO. AND ITEM DESCRIPTION | | UNSERVICEABLE (REPARABLE) TAG-MATERIEL | | |
| | | | INSPECTION ACTIVITY | | CONDITION CODE |
| | | | REASON FOR REPARABLE CONDITION | | |
| | | | | | |
| | SERIAL NO./LOT NO. | UNIT OF ISSUE | REMOVED FROM | | |
| | CONTRACT OR PURCHASE ORDER NO. | QUANTITY | INSPECTOR'S NAME OR STAMP AND DATE | | |
| | REMARKS | | | | |

MS028149

Figure 11-4. Unserviceable (Repairable) Tag-Materiel (DD Form 1577-2) (Green).

T M 1- 15 00- 2 04- 23 -1

NOTE

If copper wire, NSN 5340-00-391-4240, is not available, use copper wire, NSN 6145-00-234-4991, and lead seal NSN 5340-00-598-3417. Use press seal NSN 5120-00-221-1668 for crimping the lead seal.

(2) **Sealing procedures.** Accomplish the following procedures when sealing first aid kits:

(a) Complete DD Form 1574 in accordance with DA PAM 738-751.

NOTE

The inspection DUE DATE will be no longer than the first item with an expiration period. That date will become the DUE DATE for the next inspection.

Supplies of Materiel Condition Tags will be requisitioned through normal publication channels.

(b) Reseal kit by closing zipper and placing slide fastener tab in down and locked position, and install flat-head pin into slide fastener loop.

(c) Slip free end of sealing wire through hole in end of flat-head pin already installed in loop and pull wire through until lead seal is against end of pin.

(d) Continue by passing free end of wire through one of the holes in seal and pull wire so that seal is held tightly against end of pin.

(e) Proceed, by passing end of wire through hole of materiel condition tag.

(f) Position tag along with wire, approximately one inch away from seal, continue by passing the free end of wire through one of the holes in the lead seal.

(g) Extend wire so that both wires from tag to seal are even, then take free end of wire, and pass it through hole in materiel condition tag again.

(h) Crimp seal, then twist materiel condition tag three or four times. This will create a loop that will hold tag in position.

(i) After completing the resealing action, position tag to the double edge of fabric, as shown in figure 11-5, with a minimum of two staples from a standard office type stapler. This action is intended to reduce the inadvertent loss of the tag due to wind movement when operating aircraft with door/windows open.

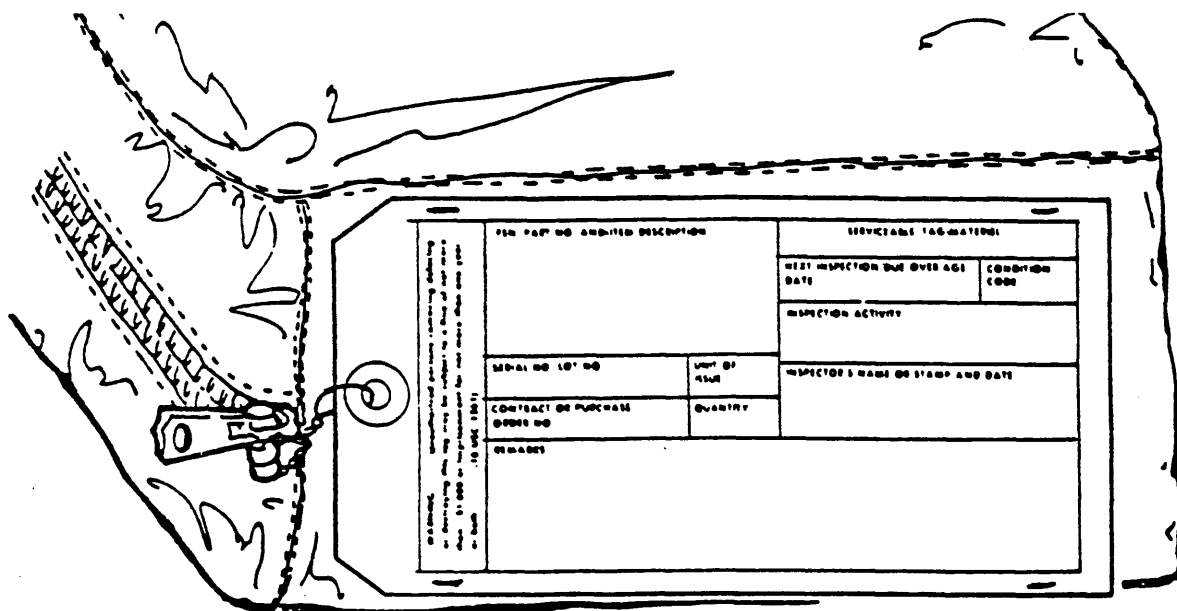


Figure 11-5. Properly Attached Flat-Head Pin, Lead Seal, and Identification Tag.

NOTE

Only one strand of 27 AWG is to be put through the lead seal. Using more than a single strand of 27 AWG wire could make the breaking of the seal more difficult and hinder ready accessibility to the first aid components.

Any slack in wire between lead seal and end of pin is to be avoided; however, do not place pin under such extreme tension that the possibility of accidental breakage is increased.

h. Replacement of Components. A kit will be considered unserviceable after the expiration date of the first item that expires within the kit, or when the DD Form 1574 tag is missing, or the seal is missing. The kit will be retagged with a DD Form 1577-2 tag and the inspector will annotate in Reason for Repairable Condition block, Inspection Due, per paragraph 11-19f or the applicable aircraft maintenance manual. Kits requiring replacement of items will be reconstituted by authorized unit ALSE/Certified personnel in accordance with the list of items contained inside each kit and with DOD Medical Catalog. Replenishment items will be requested from the supporting medical supply officer.

i. First Aid Kit Components. First aid kit items required are listed in table 11-8 and references in table 11-9.

j. Inspection Training Procedures. Only those personnel medically trained (MOS 91B, C or 91Q) and qualified, or ALSE school trained (with an ASI of Q2), may certify and instruct other unit personnel in the inspection of first aid kit, general purpose, panel mounted, aircraft. ALSE personnel school trained, with an ASI of Q2, will not be subject to retraining at the unit level. Only certified ALSE, medical or other certified personnel will be appointed on unit orders by the Commander, to perform inspections on the first aid kit, general purpose aircraft.

(1) Training. Training will consist of the following using an aircraft first aid kit:

(a) Using the instruction from paragraph f for inspection procedures.

(b) Using the instructions from paragraph f and TB 740-10, Appendix M, for the replacement of time expired components of the first aid kit.

(c) Using the instructions from paragraph g for the sealing and tagging of the kits.

(d) Describing what effects outdated or contaminated components would have on an injured or wounded person.

(2) Certification. Upon successfully completing the course of instruction, will be noted on a memorandum from the certifying individual to the unit commander concerned.

NOTE

Under no circumstances will personnel, other than ALSE qualified, authorized under the guidance of this paragraph, maintain other ALSE equipment including those first aid kits in survival kits in accordance with AR 95-3.

11-20. Nuclear, Biological, and Chemical Equipment. Unit chemical personnel are supposed to support training and maintenance of all Nuclear, Biological, and Chemical (NBC) equipment. If the ALSE technician has been assigned this task, particularly the aircrew members equipment, the ALSE technician should become very proficient in the care, use, inspection, repair or replacement of NBC equipment and train the aircrew members in the care and use of their NBC equipment. NBC equipment consists basically of the following: a breathing apparatus, mask with filters to eliminate airborne chemicals, protective clothing to protect the individuals from airborne chemicals, cooling apparatus to cool the individuals body while wearing the protective clothing, and warning devices to alert personnel of contamination by chemicals of the air in the immediate vicinity, or dangerous radiation levels in the area. Table 11-10 gives references for NBC equipment.

a. Inspection. Inspections will be accomplished in accordance with the applicable TM, TO, NAVAIR for the particular item involved.

b. Repair. Repairs will be accomplished in accordance with the applicable TM, TO, or NAVAIR for the item at the authorized maintenance level.

c. Cleaning. Cleaning will be accomplished in accordance with the applicable TM, TO or NAVAIR for the particular item needing to be cleaned.

TM 1-1500-204-23-1

Table 11-8. First Aid Kit Components

| Stock No. | Nomenclature | Unit | Quantity | Shelf life (months) |
|------------------|--|------|----------|---------------------|
| 6545-00-912-9860 | Case, medical instrument and supply set, nylon non-rigid, No. 2, 7-1/2 inches long by 4-3/8 inches wide by 4-1/2 inches high | EA | 1 | Conditional |
| 6505-00-106-0875 | Inside upper, pocket Ammonia inhalant solution, aromatic 15 to 22 PCT Ammonia and 35 to 40 PCT Ethyl Alcohol | PG | 10 | Conditional |
| 6510-00-200-3075 | Compress and bandage, camouflaged, 2 by 2 inches, 4S | PG | 1 | Conditional |
| 6510-00-201-1755 | Bandage, muslin, compressed, camouflaged, 37 by 37 by 52 inches. | EA | 1 | Conditional |
| 6510-01-112-6414 | Gauze, petrolatum, 3 by 36 inches, 3s | PG | 3 | Conditional |
| 6515-00-754-0426 | Blade, surgical prep razor, straight single edge, 5s | PG | 1 | Conditional |
| | Inside lower, pocket | | | |
| 6510-01-060-1639 | Adhesive tape, surgical, camouflaged, 1 inch by 2 yards | PG | 3 | 36 |
| 6510-00-159-4883 | Dressing, first aid, field, camouflaged, 4 by 7 inches | EA | 3 | Conditional |
| 6545-00-853-6309 | First aid kit, eye dressing In outside, pocket (If old type case is used) | EA | 1 | 36 |
| 6510-01-010-0307 | Providone-iodine solution, USP, 10 percent pads, individually packaged | PK | 10 | 36 |
| 6510-00-200-3185 | Bandage, gauze, compressed, camouflaged, 3 inches by 6 yards | EA | 2 | Conditional |
| 6510-00-913-7909 | Bandage, adhesive, 3/4 by 3 inches (When newer kit is used, these three items will be located in lower pocket) | EA | 18 | 36 |
| 6515-01-364-8554 | Glove, Patient Examining (Glove is placed inside of Dental Prosthesis Bag) | PG | 4 | 48 |
| 6520-00-926-9041 | Bag, Dental Prosthesis | PG | 1 | Conditional |

Table 11-9. References for First Aid Kits

| Publication | Description |
|---------------------|--|
| DOD Medical Catalog | VOL I, Identification/Management Data VOL II, Sets, Kits, and Outfits VOL III, MCRL 1, II, & III |
| SB 8-75-Series | Army Medical Department Supply Information 8-75-1 thru 8-75-33 |
| TB 740-10 | Quality Control Depot Storage Standards, Appendix M, Medical Supplies |

Table 11-10. References for Nuclear, Biological, and Chemical Equipment

| Publication | Description |
|----------------------|---|
| TM 3-4230-216-10 | Operator's Manual for Decontaminating Kit, Skin M258A1, and Training Aid Skin Decontaminating M581A |
| TM 3-4240-280-10 | Operator's Manual for Mask Chemical-Biological: Aircraft ABC-M24 and Accessories Mask Chemical-Biological, Tank M24/M24A1 and Accessories |
| TM 3-4240-280-23 & P | Organizational and Direct Support Maintenance Manual Including Repair Parts and Special Tools List Mask Chemical-Biological: Aircraft ABC-M24 and Accessories and Mask, Chemical-Biological, Tank, M25/M25A1 and Accessories |
| TM 3-4240-312-12 & P | Aviation Unit Maintenance, Chemical-Biological Mask Aircrew M43 |
| TM 55-1660-248-12 | Operation and Maintenance Instructions Aircrew Chem-Defense Ensemble |
| FM 3-3 | NBC Contamination Avoidance |
| FM 3-4 | NBC Protection |
| FM 3-5 | NBC Decontamination |
| FM 3-6 | Field Behavior of NBC Agents (including smoke and incendiaries) |
| FM 3-10 | Employment of Chemical Agents |
| FM 3-100 | NBC Operations |

TM 1-1500-204-23-1

11-21. Restraint Equipment. Restraint equipment, as used in this section, includes safety lap belts, shoulder harnesses, and other fabric devices used in Army aircraft for personnel restraint purposes. Restraint equipment is to be installed as directed in the applicable maintenance manual. On all pilot/copilot and crewman seat belts, the safety belt release handle should point to the left.

NOTE

Seat belts will not be replaced for cosmetic reasons.

a. **Inspection.** All personnel restraint equipment is to be visually inspected at time of installation and at specified intervals thereafter. Inspections are explained in the following paragraphs.

- New Restraint Equipment. Perform daily inspection for new seat belt latches (MS3488(AS)) also inspect for fingertip access.
- New Assemblies of Restraint Equipment This equipment requires no inspection during depot storage.
- Seat belt latch (MS3488(AS)). Inspect for fingertip clearance. Inspect each seat belt latch by using a steel scale to measure the clearance distance between the inside face of the top of the grip and the top of the webbing, as shown in figure 11-6.

WARNING

Except for leg garters used with the MK-5D ejection seat, all restraint assemblies made of cotton webbing shall be removed from service. Use extreme caution when inspecting restraint equipment on ejection seat equipped aircraft. Ensure appropriate safety pins are installed. Injury to personnel may otherwise result.

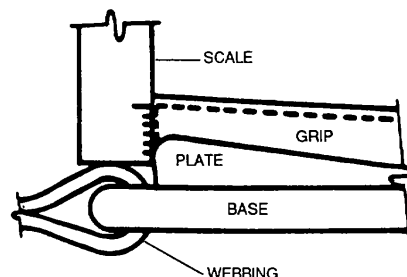


Figure 11-6. Measuring Fingertip Clearance

(1) **Installation inspection.** Visually inspect all restraint equipment prior to installation. Seat belt latches shall be inspected for fingertip clearance in accordance with the following procedures.

(a) Inspect each seat belt latch by using a steel scale to measure the clearance distance between the inside face of the top of the grip and the top of the webbing, as shown in figure 11-6

(b) If the distance measured above is less than the thickness of gloved fingers (minimum 0.8 inch) alter latch using the following procedures:

1 Open latch so that sides may be placed in vise equipped with aluminum or brass protective plates on jaws.

2 Squeeze sides of latch handle together using constant, even vise pressure until jaws are approximately 1 3/4 inches apart. Latch will deform upward and inward, as shown in figure 11-12.

3 Repeat as necessary to obtain 7/8-inch clearance dimension due to spring back of metal.

4 Perform visual inspection for cracks.

5 Check operation of latch and detent for complete lock and release.

NOTE

When new nylon webbing is installed, it will be flexed by pulling it across or around a metal bar approximately 1/4 inch in diameter. This action is accomplished by holding each end of the new webbing and pulling it in a back and forth motion. This will assist in making the webbing pliable by breaking down the finishing glaze that is applied to new nylon fabric. Repeat the back and forth motion until the glaze on the fabric is broken down to such an extent that the belt or harness can be readily adjusted. The flexing procedure will be accomplished on both sides of the webbing.

(2) *Daily inspection.* Perform the daily Inspection using the following procedures

(a) Check seat belt shoulder harness, restraint harness, inertia reel strap webbing for:

- Deterioration resulting from contact with foreign matter, (i.e acid, petroleum based products, strong caustic soaps) shall be cause for removal from service. Surface mold or mildew may be removed by washing. If no deterioration is evident after washing, webbing shall be considered serviceable.

NOTE

Surface mold or mildew may be removed by washing if no deterioration is evident after washing, webbing shall be considered serviceable.

- Cuts of the webbing caused by a sharp-edged instrument or object that severs the vertical or horizontal yarns of the webbing, shall be reason for removal.
- Broken stitches Identified by missing, skipped, torn or ruptured threads in the stitch pattern Stitching may be repaired and will not be cause for rejection TM 1-1500-204-23-1.

- Fraying of the exterior surface of the webbing, causing separation or rupture of yarns sufficient to obscure the identity of any yarn exceeding 20 percent of the width or 2 inches in length, shall render the webbing unserviceable. Fuzzing of the exterior surface caused by broken individual filaments in the yarns is not cause for rejection.

NOTE

Fuzzing of the exterior surface caused by broken individual filaments in the yarns is not cause for rejection.

- Discoloration of webbing caused by contact with strong caustic soaps, or acid shall be reason for removal from service. Webbing discoloration resulting from contact with metal articles and hardware is not cause for removal.

NOTE

Webbing discolored or soiled by grease, oil, aviation fuels and hydraulic fluids shall be cleaned, I.A.W. paragraph d, c. Fading of webbing by subjection to sunlight is an unreliable indicator of deterioration and shall not be cause alone for webbing rejection.

(b) Any metal restraint hardware which is corroded or defective in operation shall be inspected for operational use and replaced if found to be substandard or excessively damaged. Missing or unserviceable adjuster webbing retarder springs and loose or missing bolts will be replaced.

(c) Check buckle mechanisms for ease of locking and releasing. When locked, the latch should not have a tendency to release inadvertently, nor should it be excessively difficult to release.

(d) Pilot/troop type belts, check for freedom of movement of the link within the mated hook and guide bar. The link shall not bind in any position (i.e. pivot and hook tip) within its operating limits.

TM 1-1500-204-23-1

(e) Inertia reels, check for damage, security, positive locking and unlocking, manual lock-unlock control for proper operation.

(f) Examine restraint system attaching points to aircraft. Check for loose bolts, deformity, corrosion or sharp and jagged edges which may damage webbing.

b. Repair. Broken or missing stitches can be repaired using a sewing machine in accordance with the following repair requirements

- If five or more stitches are broken or loose within one linear inch, restitching is required.

NOTE

When restitching safety belts, restraint harness, hoist operators harness, gunners harness, stitch directly over the original stitching and follow the original stitch pattern as closely as possible.

- Only one repair per stitch pattern is authorized. Restitching should be accomplished with thread which matches the color of the original stitching, when possible. Restitching should be locked by over stitching each end of the stitch formation by 1/2 inch. All stitching shall be with nylon thread conforming to Spec V-T-295, thread size, stitching pattern and stitches per inch shall be I.A.W. original construction.
- Restitching should be locked by over stitching each end of the stitch formation by 1/2 inch.
- All stitching shall be with nylon thread conforming to Spec V-T-295, thread size, stitching pattern and stitches per inch shall be in accordance with original construction.

c. Cleaning. Cleaning of personnel restraint equipment will be accomplished when webbing is soiled using the following procedures

CAUTION

Do not use a bleach. Bleach may cause webbing to deteriorate.

NOTE

No cleaning is authorized to inertia reel webbing strap.

(1) Prepare a concentrated soap and hot water solution, using laundry soap chips, Federal Specification P-S-1792, or equivalent. Cool the solution to approximately 120°F (49°C), prior to application.

(2) Dampen an approved clean brush, such as NSN 7920-00-244-7431, with the soap solution and rub lightly over the affected surface area.

(3) Rinse the webbing thoroughly with clear, lukewarm water.

(4) Place webbing in open air or a drying room to dry.

NOTE

Do not expose the wet webbing to freezing temperatures or to direct sunlight during cleaning, drying, or storage. Redying or painting is prohibited

(5) After cleaning visually inspect in accordance with paragraph a.

NOTE

Belts utilized in aircraft conducting salt water pick-up training shall be washed in fresh water and corrosion preventive compound (MIL-C-81309, NSN 8030-00-938-1947) shall be applied to metal components

d. Replacement Equipment determined to be unserviceable by visual inspection will be replaced. Unserviceable equipment will be disposed of through normal disposal channels to the nearest property disposal activity. The following personnel restraint equipment having dacron or nylon webbing is to be replaced if determined to be unserviceable.

- Safety lap belts (crew or troop)
- Shoulder harness (crew or troop)
- Safety belt tiedown straps

- Personnel restraining harness (gunner and hoist operator)
- Safety belts (airline type)
- Inertia reel strap (webbed strap only)
- Leg restraints
- Litter straps

NOTE

- **Safety belts will not be replaced for cosmetic reasons.**
- **Safety belts having cotton webbing are to be removed from service.**
- **Replace loose, missing, or damaged bolts, nuts, washer, and shims in the anchoring points.**

(1) *Spring webbing retarder.* Replace spring webbing retarder used in shoulder harness and seat belt webbing adjusters as follows:

(a) For shoulder harness webbing adjuster, P/N MS22007, use spring, P/N 65D34083-7 and the following procedures

1 Hook one end of webbing retarder spring around flat end of knurled locking bar as shown in figure 11-7.

2 Cut a 16-inch length of type 1 nylon cord, and tie the loose ends together to form a loop in the cord.

3 Insert the nylon cord loop through the slot of the adjuster plate, and hook loop over the webbing retarder spring hook end.

4 Pull the nylon cord through adjuster plate slot and around the bar.

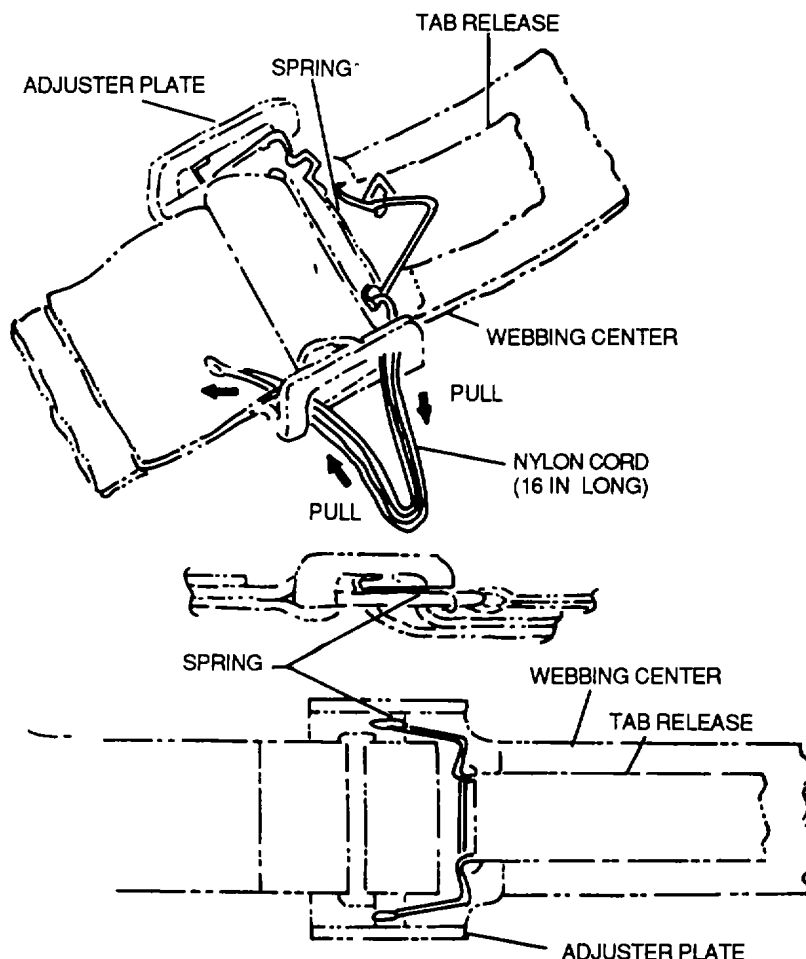


Figure 11-7. Shoulder Harness Webbing Retarder Spring Installation

TM 1-1500-204-23-1

5 Press the locking bar back with the left thumb, leaving enough space to slide the loop through adjuster plate slot once the hook end of the retarder spring has engaged on the locking bar.

6 Pull the nylon cord over the knurled locking bar to disengage the cord from the retarder spring.

7 Work the center of the webbing retarder spring into the adjuster plate pull tab slot.

8 Ensure that shoulder harness webbing is centered on adjuster plate locking bar and can be adjusted, (fig. 11-7).

(b) For seat belt webbing adjuster P/N MS22004-1 NSN 1680-00-876-0971 use spring P/N 62B4407 NSN 1680-00-975-2987 and the following procedures.

1 For ease in replacing webbing retarder spring, remove adjustment webbing from adjuster plate. Spring can be replaced without removal of seat belt from aircraft.

2 Hook one end of webbing retarder spring around flat end of knurled locking bar. Work other end of spring around opposite flat end of knurled bar as shown in figure 11-8.

3 Insert center section of webbing retarder spring into adjuster plate tab release, (fig 11-8).

4 Replace adjuster webbing in adjuster plate. Ensure that webbing is centered on adjuster plate knurled bar and can be adjusted as desired.

(2) *Installation or replacement of snap safety pin.* Install or replace snap safety pin on personnel restraint harness as follows:

(a) Secure the snap (MS22042-1) in a vise, and ensure that the snap guard is not contained within the jaws.

(b) Drill a 3/32-inch diameter hole through both sides of snap guard as shown in figure 11-9. Remove all metal burrs and filings from the snap.

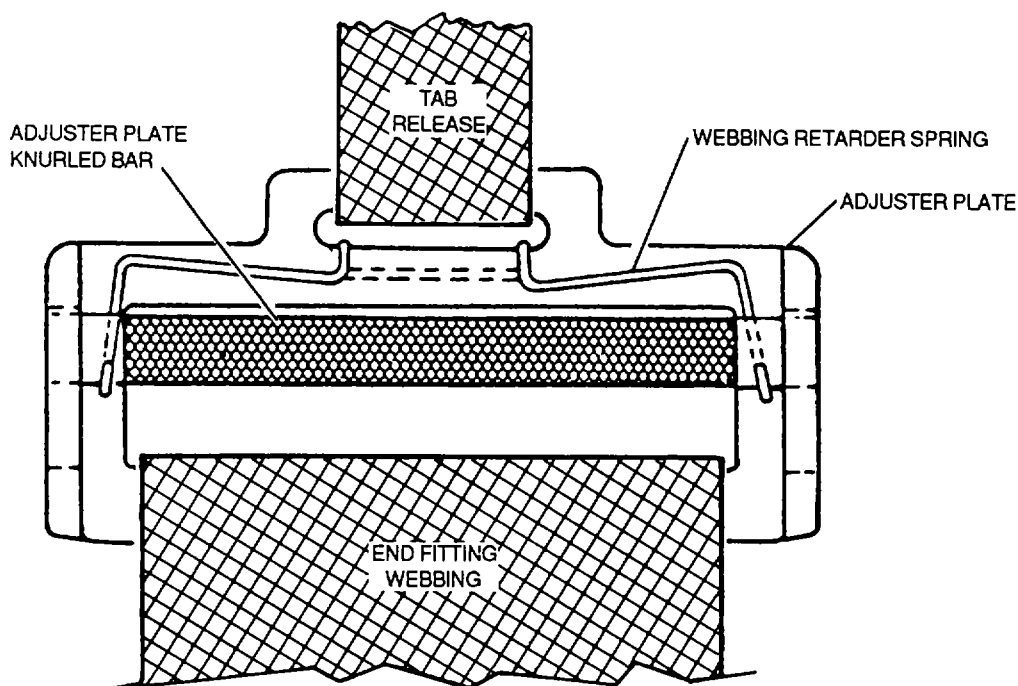


Figure 11-8. Seat belt webbing retarder spring installation

(c) Cut a five-inch length of 0.080-inch diameter corrosion-resistant wire (NSN 9505-00-8924616), and construct a safety pin as shown in figure 11-10.

(d) Cut a 15-inch length of type III nylon cord (NSN 4020-00-246-0688). Remove the inner core threads and sear the ends of the cord.

(e) Pass half of the cord length through the safety pin loop. Tie a square knot up against the loop. Tie another square knot about 4-1/2 inches from previously tied knots.

(d) Pass one loose end of the cord through the snap where the webbing is attached. Tie the two cord ends together with a square knot as shown in figure 11-11. Tie an overhand knot in each loose end of cord.

11-22. Personnel Parachute and Parachute Harness. Inspection criteria, procedures, and report for the personnel parachute assembly and parachute harness are explained in the following paragraphs.

a. Inspection Criteria. Any of the equipment listed below which is in use, installed in aircraft as extra equipment, located in an aviation unit ready-for-use facility, or in the possession of aircraft crew members will be inspected on a routine basis every 30 days and prior to issue for use. When an aviation unit is not conveniently located, E.G. on same installation as their supporting parachute packing activity, designated parachute inspectors will check and ensure that shelf/service life items are withdrawn from use at the end of their service life in accordance with TB 43-0002-4 and will sign the required document to support turn-in of expired items.

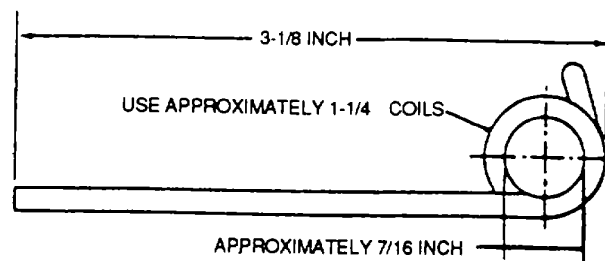


Figure 11-10. Snap Hook Safety Pin Construction Details

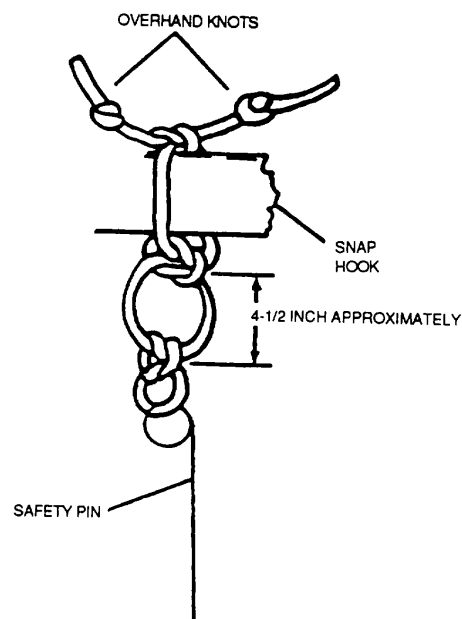


Figure 11-11. Safety Pin Retaining Cord Secured to Snap Hook



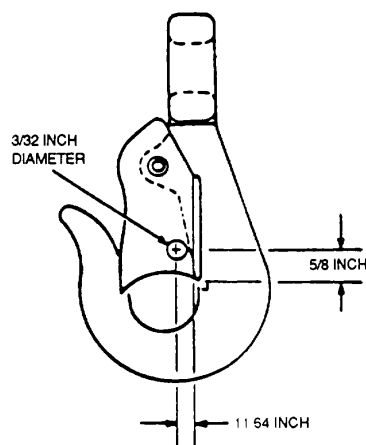


Figure 11-9. Snap Hook Safety Guard Drill Details

TM 1-1500-204-23-1

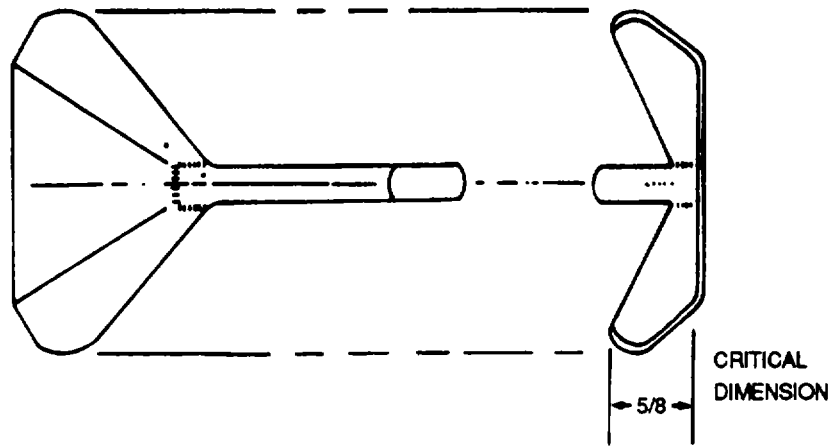

ORIGINAL SEAT BELT LATCH

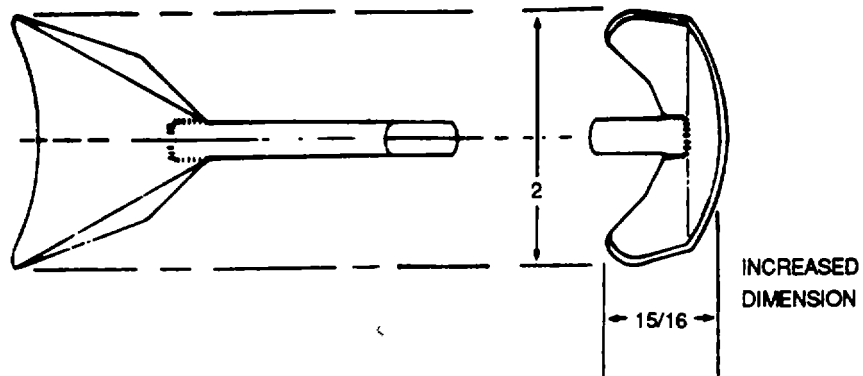

MODIFIED SEAT BELT LATCH

NOTE:
DIMENSIONS ARE IN INCHES

Figure 11-12. Seat Bet Latch Modification

NOTE

- **Aircrew members who perform flight duties away from home station or assigned unit will ensure that Individual emergency type parachutes and harnesses are inspected every 30 days by qualified parachute inspectors. However, if a situation occurs which precludes inspection due to a lack of qualified parachute inspection, personnel, parachutes and harnesses may continue to be used until arrival at a facility which can satisfy the inspection criteria, as soon as practical. In no case will the 30 day inspection requirement exceed 60 days.**
- **Unit commanders/aviation life support personnel will ensure that individual emergency type parachutes, i.e., seat, back, chest, or ejection seat type including drogue chutes and harnesses when separate from the parachute, I.E. chest harnesses and ejection seat harnesses, including seat belts, when integrated into the harness such as the MK-J5D parachute system, will be inspected every 30 days by an individual qualified to perform 30-day parachute inspections. These personnel will have been trained in parachute inspection methods by a qualified parachute rigger. This training will be documented in individual training folders and designated as parachute inspectors on unit orders by the aviation unit commander.**
- **Generic Description of Equipment**
 - (1) **Parachutes, personnel, emergency type: back, chest and seat types.**
 - (2) **Parachutes, personnel and drogue, ejection seat type.**
 - (3) **Harnesses, personnel parachute, used with above parachutes.**

b. Inspection Procedures. Inspection procedures for personnel parachute assemblies and the MK-J5 ejection seat personnel parachute harness are explained in the following paragraphs.

(1) Personnel parachute assemblies. Inspection procedures for emergency type personnel parachute assemblies including back, seat, and chest types are as follows:

(a) Remove DA Form 3912 from assembly log record and survival manual pocket. Check record for date of last pack. An emergency-type personnel parachute which has exceeded 120 days (200 days for MK-J5 ejection seat parachute) since the last pack will be considered unserviceable. Process for repack according to step j. After determining the last pack date, return the form to the log record and survival manual pocket.

NOTE

An emergency type chest parachute has two parachute log records. One log record is located on the parachute pack, and the other is found on the harness. Each of these log records shall be maintained. On an emergency type back parachute, the log record may be located either on the pack right wing flap or on the pack bottom stiffener panel.

(b) Ensure that a copy of TM 10-1670-1 is located in the log record and survival manual pocket. On a chest parachute assembly, the technical manual will be found in the pocket on the parachute harness.

(c) Without opening the pack, visually check external condition of pack and harness for defects or deterioration of webbing, canvas fabric, or stitching, and broken or loose tacking.

(d) Check metal components for cracks or rust. Check ripcord housing for dents or breaks.

(e) Inspect the two canopy release assemblies, if applicable, to ensure that each release is assembled and locked properly.

(f) Inspect ripcord grip pocket to ensure the ripcord grip is secure and the grip protrudes enough to allow immediate accessibility. Ensure that removal of ripcord is not obstructed by misplaced stitching or tacking and that harness chest strap on back parachute is not routed through ripcord grip.

(g) Ensure that each pack opening spring band is connected. Check the elasticity of each band.

(h) Open ripcord protector flap and inspect ripcord pins for proper seating in the pack release cones. Ensure that pins are not bent or corroded. On back of personnel parachute, each ripcord pin shall extend 3/4 inch beyond pack release cone (measuring from top of pin to eye of cone).

TM 1-1500-204-23-1

(i) On back personnel parachute, grasp harness webbing at a point on the lift web above the ripcord grip pocket. Pull against the weight of pack assembly to ensure the ripcord pins will not move from the prepositioned location given in (h) above.

(j) If after completing steps (a) thru (i) above, it is determined conditions exist which require repair, repack, or more extensive inspection, prepare DD Form 1577-2 as shown in DA PAM 738-751. Attach form to the item. The item then shall be segregated from serviceable items by a physical barrier and evacuated to a parachute maintenance facility. An emergency type personnel parachute which is considered serviceable will have the inspection recorded as described in paragraph c, and the parachute will be returned to service.

(2) *MK-J5 ejection seat personnel parachute harness.* Inspection procedures for the MK-J5 ejection seat personnel parachute harness are as follows:

(a) Remove DA Form 3912 from harness log record and survival manual pocket located on inside lower right of harness stiffener. Check record for date of last 200 day MK-J5 ejection seat harness inspection. A parachute harness which has exceeded 120 days (200 days for MK-J5 ejection seat harness) since last technical rigger-type inspection, will be considered unserviceable. After determining the last inspection date, return the form to the log record and survival manual pocket.

(b) Ensure that a copy of TM 10-1670-1 is located in the log record and survival manual pocket.

(c) Visually examine harness webbing for cuts, frays, tears, broken or loose stitching, worn areas, discoloration, dampness, or evidence of contact with petroleum products.

(d) Check harness shoulder pads, chest strap ejector snap pads, and leg strap ejector snap pads for damage, broken or loose stitching, and broken or loose tacking. Ensure that tacking between each ejector snap and adjacent pad is not broken or loose.

(e) Inspect strap fasteners, quick release adapters, connector links, ejector snaps and survival kit retention buckles for bends, breaks, and corrosion. Check all moving metal components for ease of operation. Ensure that spring tension is maintained in each ejector snap.

(f) Check elastic webbing retainers for cuts, frays, tears, loose or broken stitching, and loss of elasticity.

NOTE

An MK-J5 ejection seat personnel parachute harness with any defects above will be considered unserviceable. Process for evacuation according to step (1) (j). A harness which is considered serviceable will have the inspection recorded as described in paragraph c, and the harness will be returned to service.

c. *Inspection Report.* Record and report inspection MK-J5 ejection seat personnel parachute harness on DA Form 2407 in accordance with DA PAM 738-751. Further inspection record will be made on the individual parachute harness DA Form 3912 as follows:

(1) Open DA Form 3912 to page, entitled jump inspection and repack data, for the routine inspection entry accomplishment.

(2) Enter inspection date in date column.

(3) Make checkmark in routine Inspection column.

(4) Repeat the number entered previously in the jumped or dropped columns.

(5) Enter signature in the inspector's name column.

(6) Enter designation of the unit to which inspector is assigned in the unit column.

NOTE

The 30-day routine inspection requires recording on DA Form 3912.

11-23. Consolidated List of ALSE References.

Table 11-11 gives a list of references to be used as a guide only. Do not maintain manuals that do not pertain to the units Life Support Equipment authorized and on hand. Department of the Army Pamphlet 25-30 should be consulted frequently for the latest changes or revisions of the references listed in table 11-11 and for new publications covered in this section. Instructions for establishing and maintaining a library are found in DA Pam 310-13.

Table 11-11. Consolidated List of ALSE References

| Publication | Description |
|------------------------------|---|
| Army Regulations (AR) | |
| AR 25-400-2 | The Modern Army Record Keeping Systems (Marks) |
| AR 32-15 | Classification and Inspection |
| AR 40-5 | Preventive Medicine |
| AR 40-8 | Temporary Flying Restrictions Due to Exogenous Factors |
| AR 40-61 | Medical Logistics Policies and Procedures |
| AR 40-501 | Standards of Medical Fitness |
| AR 40-656 | Veterinary Surveillance Inspection of Subsistence |
| AR 40- 657 | Veterinary Medical Food Inspection and Laboratory Service |
| AR 40-660 | DOD Hazardous Food and NON Prescription Drug Recall System |
| AR 95-1 | Army Aviation Flight Regulations |
| AR 95-3 | General Provisions; Training, Standardization and Resource Managements |
| AR 190-11 | Physical Security of Arms, Ammunition, and Explosives |
| AR 310-70 | Equipment Interservicing of Technical Manuals and Related Technology |
| AR 340-1 | Records Management Program |
| AR 350-30 | Code of Conduct/Survival, Evasion, Resistance, and Escape (SERE) Training |
| AR 385-32 | Protective Clothing and Equipment |
| AR 385-64 | Ammunition and Explosives Safety Standards |
| AR 385-95 | Army Aviation Accident Prevention |
| AR 700-89 | Identification, Control, and Utilization of Shelf Life Items |
| AR 710-1 | Centralized Inventory Management of the Army Supply System |
| AR 710-2 | Supply Policy Below the Wholesale Level |
| AR 725-50 | Requisitioning, Receipt, and Issue System |

TM 1-1500-204-23-1

Table 11-11. Consolidated List of ALSE References- CONT

| Publication | Description |
|---|---|
| Army Regulations (AR) - CONT | |
| AR 750-1 | Army Material Maintenance Policies |
| AR 750-32 | Airdrop, Parachute Recovery and Aircraft Personnel Escape Systems |
| AR 755-1 | Reporting, Utilization, and Redistribution of Installation USAMC, and Overseas Command Excess Property |
| AR 755-2 | Disposal of Excess, Surplus, Foreign Excess, Captured and Unwanted Material |
| Department of Defense Publications (DOD Pub) | |
| DOD 4160.21-M | Defense Utilization and Disposal Manual |
| DOD 5154 4S | DOD Ammunition and Explosives Safety Standards |
| Defense Logistics Agency | |
| DLAM 4155 5 | Quality Control Depot Serviceability Standards (Medical Supplies), Appendix M |
| Medical Catalog | Containing VOL I, VOL II, VOL III |
| NOTE | |
| Department of Defense Customer Assistance Program call Autovon 284-7871. They will mail copies | |
| FED STD 757 | Stitches, Seams, and Stitching |
| Technical Manual (TM) | |
| TM 3-4230-216-10 | Operator's Manual for Decontaminating Kit Skin: M25H1 and Training Aid, Skin Decontaminating M58A1 |
| TM 3-4240-212-14&P | Operator's Organizational, Direct Support and General Support Maintenance Manual (Including Repair Parts and Special Tool List) Breathing Apparatus, Oxygen Generating, M20 |
| TM 5-803-4 | Planning of Army Aviation Facilities |
| TM 5-4220-201-12 | Operator's and Organizational, Maintenance, Life Preserver, Underarm, Parachutist (B-7) |

Table 11-11. Consolidated List of ALSE References-- CONT

| Publication | Description |
|-------------------------------------|---|
| Technical Manual (TM) (Cont) | |
| TM 5-4220-202-14 | Maintenance Instructions with Parts Breakdown USAF Flotation Equipment (TO. 14S-1-102) |
| TM 9-1290-333-15 | Operators, Organizational, Direct Support, General Support, and Depot Maintenance Manual (Including Repair Parts and Special Tools List) Compass Magnetic Unmounted M2 |
| TM 9-1300-206 | Ammunition and Explosives Standards |
| TM 9-1370-203-34&P | Direct Support and General Support Maintenance Manual (Including Repair Parts and Special Tools List) Military Pyrotechnics |
| TM 9-1370-206-10 | Operator's Manual: Pyrotechnic Signals |
| TM 9-4940-461-15P | Operator's Organizational, DS, GS, and Depot Maintenance Repair Parts and Special Tools List for Separator Oil and Water, Spray Gun, Wall MTD |
| TM 10-1670-1 | Survival and Emergency Use of the Parachutes (AFP 64-15) |
| TM 10-1670-250-20 | Organizational Maintenance Manual (Including Repair Parts and Special Tools List). Parachute System Used w/Martin Baker MK-J5D Ejection Seat |
| TM 10-1670-213-10 | Operator's Manual for Parachute Personnel, Types 28 Foot Diameter, Back, 28 Foot Diameter, Chest; NB-8 Back and Martin Baker Ejection Seat Harnesses |
| TM 10-1670-251-12 | Operator's and Organizational Maintenance Manual (Including, Repair Parts and Special Tool List). Lowering Device, Cargo and Personnel, 500 LB Capacity |
| TM 10-1670-262-12 | Operator's and Organizational Maintenance Manual (Including, Repair Parts and Special Tools List)' For Personnel Stabo Extractson System and Cargo and Personnel Lowering Anchor Device |
| TM 10-3530-202-24 | Organizational and Field Maintenance Manual Sewing Machines for the Repair of Parachutes and Allied Equipment |
| TM 10-8400-201-23 | Organizational and Direct Support Maintenance Manual General Repair Procedures for Clothing and Individual Equipment |
| TM 10-8415-206-12&P | Operator's and Organizational Maintenance Manual (Including Repair Parts and Special Tools List). For Helmet, Flyer's Protective, Model SPH-4 Regular and X-Tra Large |

Table 11-11. Consolidated List of ALSE References -CONT

| Publication | Description |
|-------------------------------------|---|
| Technical Manual (TM) - CONT | |
| TM 10-8475-200-13 | Use, Inspection, Fitting, and Maintenance Instructions for Anti-Exposure Assembly, Type CWU-21/P or CWU-21A/P(TO 14P3-5-81) |
| TM 10-8475-202-13 | Operation, Service and Maintenance Instructions for Quick Donning Anti-Exposure Flying Coveralls Assembly. Type CWU-16/P (T O 14P3-5-61) |
| TM 11-5820-640-15 | Operator's Organizational, Direct Support, General Support, and Depot Maintenance Manual: Radio Sets, AN/URC-10A, AN/URC-10A, and ACR RT-10 |
| TM 11-5820-767-12 | Operator's and Organizational Maintenance Manual Including Repair Parts and Special Tools List, Radio Set, AN/URC-68 |
| TM 11-5820-767-34 | Direct Support and General Support Maintenance Manual Including Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools) for Radio Set, AN/URC-68 |
| TM 11-5820-800-13&P | Operator's and Organizational Maintenance Manual, (Including Repair Parts and Special Tools List) Radio Set AN/PRC-90 |
| TM 11-5965-279-13P | Operator's Organizational and Direct Support Maintenance Repair Parts and Special Tools List for Headset-Microphone Kit MK-896/AIC for Helmet, Flyers Protective SPH-4 |
| TM 11-5965-285-23 | Organizational and DS Maintenance Manual (Including Repair Parts and Special Tools List) Headset Microphone 19LB-87 |
| TM 11-6625-2631-14 | Operator's Organizational, Direct Support and General Support Maintenance Manual Including Repair Parts and Special Tools List. Test Set, TS-2530/UR and TS-2530A/UR |
| TM 11-6625-2632-14 | Operator's Organizational, Direct Support and General Support Maintenance Manual (Including Depot Maintenance Repair Parts and Special Tools) For Radio Set AN/PRM-32 |
| TM 38-711-2 | Standard Army Intermediate Level Supply Subsystem (SAILS) Procedures for Customers |
| TM 55-1660-247-12 | Operation, Fitting, Inspection and Maintenance Instructions with Illustrated Parts Breakdown for MBU-12/P Pressure Demand Oxygen Mask |
| TM 55-1680-316-10 | Operator's Manual for Rigid Seat Survival Kit and Survival Vest for OV-1 Aircraft |

Table 11-11. Consolidated List of ALSE References - CONT

| Publication | Description |
|-------------------------------------|--|
| Technical Manual (TM) - CONT | |
| TM 55-1680-317-23P&P | Organizational and DS Maintenance Manual Including Repair Parts and Special Tools List for Army Aircraft Survival Kits |
| TM 55-4240-284-12&P | Operating and Maintenance Manual, Rescue Seat, Forest Penetrating Including Repair Parts and Special Tools List |
| TM 55-1680-248-10 | Operator's Manual: Survival Kit, Cold Climate, Individual |
| TM 55-1680-249-10 | Operator's Manual: Survival Kit, Hot Climate, Individual |
| TM 55-1680-350-10 | Operator's Manual: Survival Kit, Overwater, Individual |
| TM 55-1680-351-10 | Operator's Manual for SRU-21/P Army Vest, Large/Small |
| TM 55-1680-322-12 | Operations and Service, Distress Marker, Light Part No. SDU-5/E |
| TM 750-244-1 -2 | Procedures for the Destruction of Life Support Equipment to Prevent Enemy Use |
| TM 750-244-1-5 | Procedures for Destruction of Aircraft and Associated Equipment to Prevent Enemy Use |
| Field Manuals (FM) | |
| FM 1-100 | Combat Aviation Operations |
| FM 10-16 | General Fabric Repair |
| FM 10-267 | General Repair for Clothing and Textiles |
| FM 20-151 | Aircraft Emergency Procedures Overwater |
| FM 21-15 | Care and Use of Individual Clothing and Equipment |
| FM 21-76 | Survival |
| FM 38-725-23 | Logistic Codes NICP/Depot and DS/GS/Installation |
| Technical Bulletins (TB) | |
| TB CML 93 | Adapter, Compressed Air Breathing Apparatus, M4 (End Item Code 201) and Detector Kit, Carbon Monoxide, Colormeter, M23 |
| TB 9-1300-385 | Munitions: Suspended or Restricted |
| FM 1-508 | Maintaining Aviation Life Support Equipment (ALSE): Maintenance Program |

Table 11-11. Consolidated List of ALSE References - CONT

| Publication | Description |
|--|--|
| Technical Bulletins (TB) - CONT | |
| TB 34-9-127 | Medical Gas Cylinders |
| TB 34-9-210 | NATO Standardization Agreement for Air Pyrotechnics Interchangeability Chart STANG 3398 |
| TB 34-9-242 | Aircraft Gaseous Oxygen Replenishment Connections |
| TB 34-9-243 | Aircraft Compressed Air Replenishment Connections |
| TB 34-9-245 | Compressed Breathing Air Characteristics |
| TB 34-9-330 | Mask, Protective, Aircraft, ABC-M24 and Hood Aircraft Protective Mask, ABC-M7 |
| TB 43-0002-4 | Maintenance Expenditure Limits for FSC Group 16, FSC Classes 1610, 1615, 1620, 1630, 1650, 1660, 1670, and 1680 |
| TB 43-180 | Calibration and Repair Requirements for the Maintenance of Army Material |
| TB 740-10 | Quality Control Depot Serviceability Standards |
| Supply Bulletins (SB) | |
| SB 3-30-2 | Chemical, Biological Canisters and Filter Elements Serviceability Lists |
| SB 8-75 SERIES | Army Medical Department Supply Information SB 8-75-1 through 8-75-35 |
| SB 11-6 | FSC Class 6135; Dry Battery Supply Data |
| SB 11-30 | FSC Class 6135; Primary Battery Management Data |
| SB 11-576 | Cold Weather Batteries for Radio Sets AN/PRC6,8,8A, 9A, 10, 10A, 25,28 and 77 and Cable Assemblies for Cold Weather Operation of Transmitting Set Radio AN/PRT-4 and Receiving Set, Radio AN/PRR-9 |
| SB700-20 | Army Adopted/Other Items Selected for Authorization/List of Reportable Items |
| SB708-30 | Department of Defense Ammunition Code (Cataloging Handbook H3) (GSA-FSS-H-3) |

Table 11-11. Consolidated List of ALSE References - CONT

| Publication | Description |
|---|---|
| Supply Bulletins (SB) - CONT | |
| SB 708-6 | Federal Item Directory for Supply Cataloging |
| SB 708-21 | Federal Supply Classification; Part 1 -Groups and Classes (Cataloging Handbook H2-1) |
| SB 708-22 | Federal Supply Classification; Part 2 Numeric Index of Classes (Cataloging Handbook H2-2) (GSA-FSS-H2-2) |
| SB708-41/SB 708-42 | Federal Supply Code for Manufacturers; United States and Canada-Name to Code (Cataloging Handbook H4-1) (GSA-FSS-H4-1/H4-2) |
| SB 708-43 | Cataloging Handbook H4/H8 Commercial and Government Entity (GAGE) |
| SB 742-1 | Ammunition Surveillance Procedures |
| SB742-1370-94-721 | Signal, Smoke and Illumination, Marine: AN-MK 13 MOD O Ammunition (DODAC 1370-L 275) Surveillance Procedures |
| Supply Catalogs (SC) | |
| SC5180-91-CL-R07 | Tool Kit, Electronic Equipment, TK-105/G |
| SC5180-91-CL-R13 | Tool Kit, Electronic Equipment, TK-101/G |
| Department of the Army Supply Catalogs (Federal) | |
| C 1 ARMY | Introduction to the Federal Supply Catalog and Related Publications |
| C 6500-AL | Federal Supply Catalog: Alphabetical Index (Medical Materiel) |

Table 11-11. Consolidated List of ALSE References - CONT

| Publication | Description |
|--|--|
| Department of the Army Supply Catalogs (Federal) - CONT | |
| C 6505-GL | FSC Glossary of Colloquial Names and Therapeutic Index (FSC Class 6505) |
| MCRL-1 | Master Cross Reference List - 1, Cross Reference from Part Number to NSN |
| MCRL-2 | Master Cross Reference List - 2, Cross Reference from NSN to Part Number |
| C 6700/9500-ML | Management Data List: FSC Groups 67 Thru 95 (Items of Medical Materiel Only) |
| C 8900-SL | Federal Supply Catalog: Stock List, FSC Group 89, Subsistence |
| Department of the Army Pamphlets (PAM) | |
| PAM 25-30 | Consolidated Index of Army Publications and Blank Forms |
| PAM 310-10 | The Standard Army Publications System (STARPUBS) User's Guide |
| PAM 310-13 | Posting and Filing Publications |
| PAM 700-3 | Why and How to Use SF 364 to Report Package Discrepancies |
| PAM 710-2-1 | Using Unit Supply System Manual Procedures |
| PAM 738-751 | Functional User's Guide to the Army Maintenance Management System-Aviation (TAMMS-A) |
| Common Tables of Allowance (CTA) | |
| CTA 8-100 | Army Medical Department Expendable/Durable Items |
| CTA 50-900 | Clothing and Individual Equipment |
| CTA 50-909 | Field and Garrison Furnishings and Equipment |
| CTA 50-970 | Expendable/Durable Items (Except: Medical, Class V, Repair Parts and Heraldic Items) |

Table 11-11. Consolidated List of ALSE References - CONT

| Publication | Description |
|--|---|
| Air Force Technical Orders (TO) | |
| TO: 0-1-01 | Numerical Index |
| TO: 0-1-02 | Numerical Index |
| TO: 00-5-1 | Technical Order System |
| TO: 00-5-2 | Technical Order Distribution System |
| TO: 00-35A-39 | Instructions for Procurement, Issue, Use and Maintenance of Medical Kits |
| TO: 11A-1-1 | Ammunition Restricted or Suspended |
| TO: 11A10-24-7 | Storage and Maintenance Procedures, Pyrotechnics |
| TO 12R2-2PRC90-2 | PRC-90 Survival Radio |
| TO 12R2-2PRC90-3 | PRC-90 Survival Radio |
| TO 12R2-2PRC90-4 | PRC-90 Survival Radio |
| TO 14S-1-102 | Maintenance Instructions with Parts Breakdown USAF Flotation Equipment |
| TO: 14S1-4-1 | Distillation Kit |
| TO: 14S10-2-2-SDU-5/E | Marker Distress Light |
| TO: 14S1-4-22 | Desalting Kit |
| TO 15X1-1 | Oxygen Equipment |
| TO: 15X1-4-2-4 | Bail Out Bottles (Parts Manual) |
| TO: 15X1-4-2-12 | Bail Cut Bottles (Maintenance Manual) |
| TO: 15X3-3-4-3 | MB4 Diluter Demand |
| TO: 15X5-3-6-1 | MBU-12/P Pressure-Demand Oxygen Mask Operation, Fitting, Inspection and Maintenance Instructions with Illustrated Parts Breakdown |
| TO: 15X5-4-1-101 | Oxygen Mask Connector (CRU-60/P) |

■ **Table 11-11. Consolidated List of ALSE References - CONT**

| Publication | Description |
|--|---|
| Naval Publications | |
| Department of the Army (DA) Forms | |
| DA Form 12-R | Request for Establishment of a Publications Account |
| DA Form 12 Series | Requirements for DA Publications |
| DA Form 17 | Requisition for Publications and Blank Forms |
| DA Form 17-1 | Requisition for Publications and Blank Forms (Continuation Sheet) |
| DA Form 581 | Request for Issue and Turn-In of Ammunition |

Table 11-11. Consolidated List of ALSE References- CONT

| Publication | Description |
|---|--|
| Department of the Army (DA) Forms - CONT | |
| DA Form 2028 | Recommended Changes to Publications and Blank Forms |
| DA Form 2062 | Hand Receipt/Annex Number |
| DA Form 2063-R | Prescribed Load List (LRA) |
| DA Form 2064 | Document Register for Supply Actions |
| DA Form 2402 | Exchange Tag |
| DA Form 2404 | Equipment Inspection and Maintenance Worksheet |
| DA Form 2405 | Maintenance Request Register |
| DA Form 2407 | Maintenance Request |
| DA Form 2407-1 | Maintenance Request - Continuation Sheet |
| DA Form 2408-21 | Life Raft Inspection Record |
| DA Form 2408-22 | Helmet and Oxygen Mask/Connector Inspection Record |
| DA Form 2408-23 | Survival Radio/Emergency Locator Transmitter (ELT) Inspection Record |
| DA Form 2408-24 | Survival Kit Inspection and Maintenance Record |
| DA Form 2408-25 | Mesh Net Survival Vest Inspection Record |
| DA Form 2408-26 | Life Preserver Inspection Record |
| DA Form 2408-27 | Life Preserver Data |
| DA Form 2408-28 | Oxygen Console Service Record |
| DA Form 2408-29 | Anti-Exposure Coveralls Inspection Record |
| DA Form 2696-R | Operational Hazard Report |
| DA Form 2765-1 | Request for Issue or Turn-In |
| DA Form 3161 | Request for Issue or Turn-In |
| DA Form 3749 | Equipment Receipt |
| DA Form 4569 | USAPC Requisition Code Sheet |

Table 11-11. Consolidated List of ALSE References - CONT

| Publication | Description |
|--|---|
| Department of Defense (DD) Forms - CONT | |
| DD Form 173/1 | Joint Message Form |
| DD Form 448 | Military Interdepartmental Purchase Request |
| DD Form 1348 | DOD Single Line Item Requisition System Document (MANUAL) |
| DD Form 1348-1 | DOD Single Line Item Release/Receipt Document |
| DD Form 1348-6 | DOD Single Line Item Requisition System Document (MANUAL-LINE FORM) |
| DD Form 1574 | Serviceable Tag-Materiel |
| DD Form 1574-1 | Serviceable Label-Materiel |
| DD Form 1575 | Suspended Tag-Materiel |
| DD Form 1575-1 | Suspended Label-Materiel |
| DD Form 1576 | Test/Modification Tag-Materiel |
| DD Form 1576-1 | Test/Modification Label-Materiel |
| DD Form 1577 | Unserviceable (Condemned) Tag-Materiel |
| DD Form 1577-1 | Unserviceable (Condemned) Label-Materiel |
| DD Form 1577-2 | Unserviceable (Repairable) Tag-Materiel |
| DD Form 1577-3 | Unserviceable (Repairable) Label-Materiel |
| Standard Forms (SF) | |
| SF 364 | Report of Discrepancy (ROD) |
| SF 368 | Quality Deficiency Report (Category II) |

CHAPTER 12

PYROTECHNICS

12-1. General. The following paragraphs explain pyrotechnics used on Army aircraft. Refer to TM 9-1377200-20&P for descriptive information, care and handling of stock class 1377 cartridges.

WARNING

Electrically activated cartridges shall be protectively wrapped in aluminum foil or electrically shunted whenever removed from the aircraft installation to preclude "STRAY" electrical voltage activation and resulting personal injury.

12-2. Ejection Seats. Ejection seats use pyrotechnics for seat ejection, automatic parachute deployment, and separation of seat from occupant after ejection.

WARNING

Electrically activated cartridges shall be protectively wrapped in aluminum foil or electrically shunted whenever removed from the aircraft installation to preclude "STRAY" electrical voltage activation and resulting personal injury.

12-3. Fire Bottle Cartridges. Fire bottles use cartridges to discharge extinguishing agents when activated by aircraft crewmember or automatic detecting device.

12-4. External Stores Cartridges. External stores cartridges are used to release external stores from racks

CAUTION

Do not use damaged cartridges. Damaged cartridges may function erratically and cause damage to equipment.

NOTE

- Shelf life (storage life) for the cartridge is established at 8 years, beginning from date of manufacture stamped on cartridge or on hermetically

sealed metal container, of which not more than 12 months shall have elapsed after opening container. Cartridges are overage if either of these time limits is exceeded. When a container is opened, the service life expiration date (month and year) shall be marked with indelible ink on the side of the cartridge.

- Cartridge is considered unserviceable after ten insertions and removals from ejector rack, or after the expiration date marked on the side of the cartridge. Each time a cartridge is removed, place a radial mark on the base of cartridge with indelible ink. Monitor service life by record of inked markings and expiration date.

WARNING

Electrically activated cartridges shall be protectively wrapped in aluminum foil or electrically shunted whenever removed from the aircraft installation to preclude "STRAY" electrical voltage activation and resulting personal injury.

12-5. Cable Cutter Cartridges. The cargo hoist cable cutter is a mechanical cable shearing device mounted on the hoist cable guide. It is actuated by an electrically fired cartridge. When the pilot throws the CABLE SHEAR switch or the aft pilot throws the HOIST CABLE SHEAR switch, electrical power, supplied by the 28 vdc primary bus through the HOIST CABLE SHEAR circuit breaker on the overhead circuit breaker panel, fires the cartridge, actuating the cable cutter, and shearing the cable. After firing, the cable cutter assembly must be replaced.

TM 1-1500-204-23-1

12-6. Pyrotechnic Pistols. The pyrotechnic pistol fires devices such as flares. The following procedures are for the maintenance of these pistols:

a. Clean and oil pistol thoroughly after firing, using lightweight preservative lubricating oil, MIL-L-7870. Also, perform this maintenance function at regular inspection intervals as prescribed in aircraft organizational maintenance manual.

b. Daily maintenance is required under dusty, wet, or salt. air conditions.

12-7. Pyrotechnics Storage and Handling. Existing safety requirements and precautions shall be complied with by all personnel handling pyrotechnic signal flares. This type pyrotechnic is hazardous due to the nature of its explosive, flammable, or toxic filler. The following precautions in handling. signals and flares used in pyrotechnic pistols will be followed in order to prevent personal injuries.

a. Store flares and signals in a dry, well-ventilated place, out of direct rays of sun and protected against excessive or variable temperatures.

b. Post NO SMOKING signs in storage area.

WARNING

Handle pyrotechnic flares with the same care as high explosives. Personnel injury may result from improperly handled flares.

c. Protect flares and signals from moisture.

NOTE

Open all containers which show signs of dampness or moisture. Destroy contents when there is evidence of moisture.

d. Disassembly of flares is strictly prohibited.

e. Do not use flares when dented or deformed.

f. Avoid any rough handling, throwing, or dropping of pyrotechnics.

g. Remove flares and signals from aircraft that are parked in maintenance or storage hangars, and from survival kits placed in storage.

CHAPTER 13

AIRCRAFT CLEANING

13-1. GENERAL. Proper and frequent cleaning is the most important part of a corrosion control program. Frequency of cleaning and related treatment will depend on type of aircraft and local conditions. All aircraft shall be washed and cleaned every 30 days, unless aircraft are stationed within two miles of salt water. Extended or low level operations over salt water require daily fresh water rising. External corrosion prone areas will require more frequent cleaning.

WARNING

Do not use synthetic wiping cloths with highly flammable solvents having a flash point of 100°F (37.8°C) or less, such as aliphatic naphtha TT-N-95. Static electricity may build up and cause ignition.

CAUTION

DELETED

NOTE

Use only authorized cleaning materials and equipment.

13-2. CLEANING PRACTICES AND PROCEDURES.

The following paragraphs explain preparation for cleaning, cleaning methods, cleaning of corrosion prone areas, and post-cleaning.

a. Preparation for Cleaning. Prepare aircraft for cleaning by accomplishing the following procedures:

CAUTION

Make sure that static vents are not fouled by tape adhesive transfer. Cover static vents with a properly sized disc of suitable material, then apply masking tape. Fouled vents will give wrong readings.

(1) Prior to lubricating any components or parts, remove all foreign matter from joints, fittings, and bearing surfaces. Cleaning cloth CCC-C-46 shall be used for this purpose. Clean up all spilled or excess

oil or grease. Some solvents can damage rubber, neoprene, and electrical insulation. They can also damage paint and should be removed as soon as possible.

(2) To protect against cleaning solution entrapment, inspect all lubrication points that have exposure type lubrication fittings. Lubricate those that have not been regularly lubricated in accordance with the applicable maintenance manual.

(3) Close all doors and emergency openings.

(4) Make sure that all drain holes are clear by inserting a probe such as a pipe cleaner, except where pressurized flapper valves are located.

WARNING

Cleaning Compound, MIL-PRF-85570, Type II, can irritate eyes, skin, and respiratory tract. Wear protective gloves and goggles. Avoid repeated or prolonged contact. Use in well ventilated areas.

b. Cleaning Methods. Various cleaning methods are explained in the following paragraphs. The method used depends upon the availability of tap water.

(1) **Waterless wipedown.** Waterless wipedown procedures will be used when water is not available for rinsing or when cold weather prevents the use of water. The preferred waterless wipedown method for removing soils and corrosive salt residues is accomplished using the following procedures.

WARNING

Open all circuit breakers associated with battery power prior to application of MIL-C-43616 cleaning compound. This compound is flammable.

DELETED

(a) Spray the exterior surfaces of the aircraft with water emulsion cleaning compound MIL-PRF-85570.

TM 1-1500-204-23-1

(b) When the foam begins to break, wipe cleaner and soil from the surface.

(c) Rinsing with a cloth wet with fresh water following the use of MIL-PRF-85570 is desirable.

(d) Rinse the cleaned surface with fresh water when water becomes available.

(2) Detergent cleaning with limited water. When limited water is available, the following no rinse procedures may be used:

WARNING

Cleaning Compound, MIL-PRF-87937, Type II, can irritate eyes, and skin. Wear protective gloves and goggles. Avoid repeated or prolonged contact.

Cleaning Compound, MIL-PRF-85570, Type II, can irritate eyes, skin, and respiratory tract. Wear protective gloves and goggles. Avoid repeated or prolonged contact. Use in well ventilated areas.

(a) Mix one part of aircraft cleaning compound MIL-PRF-85570 or MIL-PRF-87937 and nine parts of water in a bucket.

(b) Apply the cleaner with a scrub brush, sponge, rag, or cleaning and polishing pad. Apply to one small area at a time.

(c) Scrub the area and remove the cleaner and loosened soil with a cloth.

NOTE

For soils that are resistant to the limited water procedure, clean again with a mixture of one part cleaner in four parts water.

(d) Apply MIL-C-81309 Type II and wipe with a clean dry cloth.

(3) Water detergent cleaning (preferred method). Where water of suitable quality is available

for rinsing purposes, the following procedures shall be used:

WARNING

DELETED

Open all circuit breakers associated with battery power prior to application of MIL-C-43616 leaning compound. This compound is flammable.,

(a) Mix one part of aircraft cleaner MIL-C-43616 or MIL-C-25769 with nine parts water.

(b) Apply the mixture using foaming equipment with aircraft washing kit or fiber brush.

(c) To prevent streaking, start at the lower surfaces, working upward and out. Scrub the surface with the washing kit or fiber brush.

CAUTION

Do not rinse aircraft with a solid stream of water. Use a soft, spray pattern to avoid damaging fragile sections or causing water intrusion.

(d) Rinse away the loosened soil and cleaner with a stream of water. For rinsing, a rubber padded shutoff-spray nozzle is recommended.

(4) Rinsing. Rinse the cleaner and loosened soil from aircraft surface with pressure equipment having a fan spray nozzle. Direct water at an angle between 15 and 30 degrees from the surface to rinse it. Continue rinsing until all evidence of cleaner and soils have been removed from aircraft.

(5) Deluge rinsing. To prevent buildup of salt deposits, the deluge rinse facilities shall be used as frequently as possible.

NOTE

Use of deluge rinsing facilities does not replace aircraft washing requirements.

c. Cleaning of Corrosion Prone Areas. Specific efforts shall be made to clean all corrosion prone areas as frequently as possible, even if unusual conditions prevent complete aircraft cleaning. Refer to the applicable maintenance manual.

d. Post-Cleaning. Corrosion prevention depends on carrying out the prescribed preservation and lubrication procedures. Strict compliance with the following procedures is essential. Post-cleaning procedures shall be done in the following order:

(1) Remove covers from all static vents, pilot tubes, air ducts, heater ducts, etc. Tape shall be removed from all other openings sealed with masking tape.

(2) Clean all drain holes by inserting a probe such as a pipe cleaner except where pressurized flapper valves are located. Assure that all areas accumulating water have been drained. Whenever this is recurring problem, procedures shall be developed and implemented to remove entrapped water and prevent accumulation.

(3) Inspect for corrosion and deterioration as part of routine maintenance procedures.

(4) Relubricate, preserve, and seal.

(5) Polish and wax.

13-3. Cleaning Safety. All cleaning procedures should be accomplished with the applicable maintenance manual. Proper precautions must be taken when working with cleaning substances.

NOTE

The use of cleaning agents with high alkaline content should not be used. Failure to comply with this note will cause components and assemblies to corrode at an accelerated rate. At no time should cleaners high in alkaline be used in areas that have parts made of magnesium or aluminum or other areas not protected by a corrosion protective coating.

APPENDIX A REFERENCES

| | |
|------------------------|--|
| AFM 64-5 | |
| ANA Bulletin 166 | |
| AR 25-400-2 | The Modern Army Record Keeping Systems (Marks) |
| AR 32-15 | Classification and Inspection |
| AR 40-5 | Preventive Medicine |
| AR 40-8 | Temporary Flying Restrictions Due to Exogenous Factors |
| AR 40-61 | Medical Logistics Policies and Procedures |
| AR 40-501 | Standards of Medical Fitness |
| AR 40-656 | Veterinary Surveillance Inspection of Subsistence |
| AR 40-657 | Veterinary Medical Food Inspection and Laboratory Service |
| AR 40-660 | DOD Hazardous Food and NON Prescription Drug Recall System |
| AR 95-1 | Army Aviation: Flight Regulations |
| AR 95-3 | General Provisions; Training, Standardization and Resource Management |
| AR 190-11 | Physical Security of Arms, Ammunition, and Explosives |
| AR 310-70 | Equipment Interservicing of Technical Manuals and Related Technology |
| AR 340-1 | Records Management Program |
| AR 350-30 | Code of Conduct/Survival, Evasion, Resistance, and Escape (SERE) Training |
| AR 385-10 | The Army Safety Program |
| AR 385-30 | Safety Color Code Markings and Signs |
| AR 385-32 | Protective Clothing and Equipment |
| AR 385-64 | Ammunition and Explosives Safety Standards |
| AR 385-95 | Army Aviation Accident Prevention |
| AR 700-89 | Identification, Control, and Utilization of Shelf Life Items |
| AR 710-1 | Centralized Inventory Management of the Army Supply System |
| AR 710-2 | Supply Policy Below the Wholesale Level |
| AR 725-50 | Requisitioning, Receipt, and Issue System |
| AR 746-1 | Packing of Army Materiel for Shipment and Storage |
| AR 750-1 | Army Materiel Maintenance Policies |
| AR 750-5 | Army Materiel Maintenance Policies |
| AR 750-23 | Engine Operating Time Limits |
| AR 750-32 | Airdrop, Parachute Recovery and Aircraft Personnel Escape Systems |
| AR 755-1 | Reporting, Utilization, and Redistribution of Installation USAMC, and Overseas Command Excess Property |
| AR 755-2 | Disposal of Excess, Surplus, Foreign Excess, Captured and Unwanted Material |
| C 1 ARMY | Introduction to the Federal Supply Catalog and Related Publications |
| C 6500-AL | Federal Supply Catalog: Alphabetical Index (Medical Materiel) |

APPENDIX A - CONT REFERENCES

| | |
|---|--|
| C 6505-GL | FSC Glossary of Colloquial Names and Therapeutic Index (FSC Class 6505) |
| C 6545-IL-VOL 2 | Federal Supply, Catalog: Identification List, FSC 6545, Medical Sets, Kits and Outfits |
| C 6700/9500-ML | Management Data List: FSC Groups 67 Thru 95 (Items of Medical Materiel Only) |
| C 8900-SL | Federal Supply Catalog: Stock List, FSC Group 89, Subsistence |
| CTA 8-100 | Army Medical Department Expendable/Durable Items |
| CTA 50-900 | Clothing and Individual Equipment |
| CTA 50-909 | Field and Garrison Furnishings and Equipment |
| CTA 50-970 | Expendable/Durable Items (Except: Medical, Class V, Repair Parts and Heraldic Items) |
| DA FORM 12-R | Request for Establishment of a Publications Account |
| DA FORM 12 SERIES | Requirements for DA Publications |
| DAFORM 17 | Requisition for Publications and Blank Forms |
| DA FORM 17-1 | Requisition for Publications and Blank Forms (Continuation Sheet) |
| DA FORM 581 | Request for Issue and Turn-In of Ammunition |
| DA FORM 2028 | Recommended Changes to Publications and Blank Forms |
| DA FORM 2062 | Hand Receipt/Annex Number |
| DA FORM 2063-R | Prescribed Load List (LRA) |
| DA FORM 2064 | Document Register for Supply Actions |
| DA FORM 2402 | Exchange Tag |
| DA FORM 2404 | Equipment Inspection and Maintenance Worksheet |
| DA FORM 2405 | Maintenance Request Register |
| DA FORM 2407 | Maintenance Request |
| DA FORM 2407-1 | Maintenance Request - Continuation Sheet |
| DA Form 2408 | |
| DA Form 2408-1-E | |
| DA Form 2408-13-1 DA Form 2408-13-1 | |
| DA FORM 2408-1-13-1-E | |
| DA Form 2408-5 | |
| DA Form 2408-13 | |
| DA FORM 2408-13-1 DA FORM 2408-13-1 | |
| DA Form 2408-16 | |
| DA Form 2408-18 | |
| DA FORM 2408-21 | Life Raft Inspection Record |
| DA FORM 2408-22 | Helmet and Oxygen Mask/Connector Inspection Record |
| DA FORM 2408-23 | Survival Radio/Emergency Locator Transmitter (ELT) Inspection Record |
| DA FORM 2408-24 | Survival Kit Inspection and Maintenance Record |
| DA FORM 2408-25 | Mesh Net Survival Vest Inspection Record |
| DA FORM 2408-26 | Life Preserver Inspection Record |
| DA FORM 2408-27 | Life Preserver Data |

GLOSSARY

| | |
|--------------------|---|
| ATOMIZATION - | The process of changing liquid particles to a fine spray. |
| BONDING - | Two or more layers held together by adhesive. |
| DATUM - | A reference used as a basis for calculating or measuring. |
| DESICCANT - | A drying agent that absorbs moisture. |
| FOD - | Foreign Object Damage. |
| GROUNDING - | Electrically connecting an object with the earth. |
| HYPOXIA- | A deficiency of oxygen reaching the tissues of the body. |
| OHM - | A measurement of electrical resistance. |
| PHENOLIC - | A cotton fabric filled with a phenolic resin to form a hard material. |
| SERVING - | The process of winding wire tightly around cable for protection. |
| SPECIFIC GRAVITY - | Ratio of solid or liquid density compared to pure water. |
| VAPORIZATION - | The process of converting a liquid into a vapor. |
| VISCOSITY - | A fluid's Internal resistance to flow. |

INDEX

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| A | |
| Accessories..... | 7-4h |
| Accessory Section..... | 8-5h |
| Additional Metal Particles Test | 7-5g |
| Adhesive Operations..... | 2-2k, 2-3k |
| Adhesives, Resins, and Solvents for Repair of Armor | 9-23c |
| Adjusting Mixture and Idle Speed | 7-9c |
| Adjustment of Windshield Wiper System | 9-19b |
| Administration | 11-2 |
| Administration Area..... | 11-6 |
| Air Induction System | 7-7 |
| Inspection, Maintenance, Cleaning, and Replacement..... | 7-7a |
| Turbocharger and Supercharger Maintenance..... | 7-7b |
| Aircraft and Equipment, Parking of, in Hangars | 2-6 |
| Aircraft Cleaning, General..... | 13-1 |
| Aircraft Component, Preservation and Packing | 4-12 |
| Aircraft Grounding Receptacle Installation..... | F3-2 |
| Aircraft, Liferrafts | T11-4 |
| Aircraft Litters..... | 9-21 |
| Installation | 9-21a |
| Removal | 9-21b |
| Aircraft Preparation for Storage..... | 4-4 |
| Aircraft Refueling | 3-5 |
| Fuel Truck Operations | 3-5d |
| Open-Port Hot Refueling..... | 3-5b |
| Open-Port Refueling | 3-5a |
| Rapid Hot Refueling..... | 3-5c |
| Aircraft Removal from Storage | 4-9 |
| Aircraft Seats | 9-20 |
| Metal Seats | 9-20b |
| Polyester Fabric Seat Covers (UH-60)..... | 9-20e |
| Raschel Knit Seat Covers | 9-20d |
| Troop Seats..... | 9-20a |
| Upholstered Seats | 9-20c |
| Aircraft, Shipment | 4-11 |
| Aircraft, Static Grounding of | 3-4 |
| Aircraft Storage and Shipment, General..... | 4-1 |
| Aircraft Storage and Shipment, Responsibility | 4-3 |
| Airframe Maintenance, General..... | 9-1 |
| Airplane, First Aid Kit (Older Configuration) | F11-1 |
| Alignment, Landing Gear..... | 9-6 |
| Anti-Icing, Deicing, and Defrosting | 10-2d |
| Application and Installation of Identification Tapes | 6-3 |
| Application and Removal of Decals, General | 6-1 |
| Application of Identification Tapes | 6-3c |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

A - Continued

| | |
|--|-------|
| Approach Route, Fuel Truck..... | F3-3 |
| Arctic-Type Mooring..... | F10-2 |
| Armor Plating..... | 9-23 |
| Adhesives, Resins, and Solvents for Repair of Armor..... | 9-23c |
| Armor Plating Inspection and Repair Definitions..... | 9-23a |
| General Inspection of Armor Plating..... | 9-23b |
| Repair of Armor Plating..... | 9-23d |
| Armor Plating Definitions..... | T9-8 |
| Armor Plating Inspection and Repair Definitions..... | 9-23a |
| Arctic Maintenance..... | 10-2 |
| Anti-Icing, Deicing, and Defrosting..... | 10-2d |
| Precautions..... | 10-2a |
| Preflight..... | 10-2c |
| Preheating..... | 10-2b |
| Prevention and Removal of Snow, Ice, and Frost Deposits..... | 10-2e |
| Preventive Maintenance..... | 10-2f |
| Arctic, Desert, and Tropic Maintenance, General..... | 10-1 |
| Assemblies, Connecting Rod..... | F7-9 |
| Assemblies, Elastic Shock Cords..... | 9-26 |
| Assembly, Cylinder..... | F7-11 |
| Assembly, Turbine, Elements..... | F8-10 |
| Aviation Life Support Maintenance, General..... | 11-1 |
| Axial Flow Compressor, Rotor and Stator Components of..... | F8-7 |
| Axial-Flow Engine..... | F8-2 |

B

| | |
|-------------------------------------|------------|
| Backing Approach, Fuel Truck..... | F3-5 |
| Balance (of Tires and Tubes)..... | 9-9c |
| Balancing Equipment..... | 2-2l, 2-3l |
| Basic Mechanical Failure..... | 7-5k |
| Basis of Issue, First Aid Kits..... | 11-19a |
| Bearing Types..... | F7-8 |
| Bearings..... | 7-4c |
| Bleeding Brakes..... | 9-7i |
| Booster Coil..... | F7-20 |
| Brake Assemblies..... | 9-7b |
| Brake Assembly Adjustment..... | 9-7g |
| Brake Assembly Cleaning..... | 9-7c |
| Brake Assembly Inspection..... | 9-7d |
| Brake Assembly Servicing..... | 9-7h |
| Brake System Safety..... | 9-7j |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

B - Continued

| | |
|--|-------|
| Brake Systems..... | 9-7 |
| Bleeding Brakes..... | 9-7i |
| Brake Assemblies..... | 9-7b |
| Brake Assembly Adjustment..... | 9-7g |
| Brake Assembly Cleaning..... | 9-7c |
| Brake Assembly Inspection..... | 9-7d |
| Brake Assembly Servicing..... | 9-7h |
| Brake System Safety..... | 9-7j |
| Brake Types..... | 9-7a |
| Corrosion Treatment of Brake Assemblies..... | 9-7e |
| Repair and Replacement of Brake Assembly Components..... | 9-7f |
| Brake Types..... | 9-7a |
| Built-in Timing Marks..... | F7-17 |

C

| | |
|--|-------|
| Cable Cutter Cartridges..... | 12-5 |
| Cable Damage Limits..... | T9-3 |
| Cable Test..... | T9-5 |
| Can-Annular Combustion Chamber Components and Arrangement..... | F8-9 |
| Can-Type Combustion Chamber Arrangement..... | F8-8 |
| Can-Type Combustion Chamber..... | F8-9 |
| Carbon Monoxide Detection..... | 3-12c |
| Carburetion and Fuel Injection..... | 7-9 |
| Adjusting Idle Mixture and Idles Speed..... | 7-9c |
| Depreservation..... | 7-9b |
| Inspection..... | 7-9a |
| Installation..... | 7-9f |
| Preservation..... | 7-9e |
| Repair or Replacement..... | 7-9d |
| Cargo Tiedown Equipment..... | 9-24 |
| Cartridges, Cable Cutter..... | 12-5 |
| Cartridges, External Storage..... | 12-4 |
| Cartridges, Fire Bottle..... | 12-3 |
| Categories of Storage..... | 4-2 |
| Flyable Storage..... | 4-2a |
| Intermediate Storage..... | 4-2c |
| Long Term Storage..... | 4-2d |
| Short Term Storage..... | 4-2b |
| Centrifugal-Flow Compressor Components..... | F8-6 |
| Centrifugal-Flow Engine..... | F8-1 |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|----------------|---|
|----------------|---|

C - Continued

| | |
|---|--------|
| Chain Hoists..... | 2-3e |
| Checking Propeller Shaft Runout | F7-21 |
| Cleaning, Flight Clothing | 11-14c |
| Cleaning, Flotation Equipment | 11-16e |
| Cleaning Methods | 13-2b |
| Cleaning, Nuclear, Biological, and Chemical Equipment | 11-20c |
| Cleaning of Corrosion Prone Areas | 13-2c |
| Cleaning, Oxygen Equipment..... | 11-17c |
| Cleaning Practices and Procedures..... | 13-2 |
| Cleaning Methods..... | 13-2b |
| Cleaning of Corrosion Prone Areas..... | 13-2c |
| Post-Cleaning | 13-2d |
| Preparation for Cleaning | 13-2a |
| Cleaning, Restraint Equipment | 11-21c |
| Cleaning Safety..... | 13-3 |
| Cleaning, Signaling Devices..... | 11-18c |
| Cleaning, Survival Kits | 11-15c |
| Cleaning, Tires and Tubes | 9-9a |
| Clothing, Flight..... | 11-14 |
| Cockpit Check Sheet, Engine Conditioning | F7-23 |
| Coding, Color (Elastic Shock Cords) | T9-8 |
| Coil, Booster | F7-20 |
| Cold Section Maintenance..... | 8-6g |
| Color Band, Solid, System | F6-2 |
| Color Coding (Elastic Shock Cords) | T9-8 |
| Color-Coded Tapes..... | F6-1 |
| Combustion Chamber, Can-Type..... | F8-9 |
| Combustion Chamber, Can-Type, Arrangement..... | F8-8 |
| Combustion Section | 8-5e |
| Complete Engine Conditioning | 7-6a |
| Component Replacement Criteria | 8-7b |
| Components and Airflow of a Double-Annular Chamber | F8-10 |
| Components and Arrangement, Can-Annular Combustion Chamber..... | F8-11 |
| Components, Fabrication (for Cables)..... | T9-2 |
| Components, First Aid Kits | T11-8 |
| Compressed Air and Water Outlets | 2-2f |
| Compressed Air Panels..... | 2-3f |
| Compressor Blade Damage | F8-17 |
| Compressor Blade Inspection and Repair..... | 8-6h |
| Compressor Blade Repair Limits, Typical..... | F8-18 |
| Compressor Cleaning..... | 8-6f |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

C - Continued

| | |
|---|---------------|
| Compressor Section | 8-5c |
| Compressor, Centrifugal-Flow, Components | F8-6 |
| Conditioning, Engine | 7-6, T7-2 |
| Connecting Rod Assemblies | F7-9 |
| Connecting Rods..... | 7-4d |
| Consolidated List of ALSE References | 11-23, T11-11 |
| Construction of Hard Stands..... | F10-3 |
| Consumable Materials..... | 1-3 |
| Consumption, Oil, Chart | F7-22 |
| Control Cables | 9-12e |
| Control System Components..... | 9-12f |
| Control Systems, Environmental | 9-13 |
| Control, Speed-Sensitive | F8-13 |
| Controlled Substances, First Aid Kits | 11-19e |
| Controls, Flight..... | 9-12 |
| Corrosion Preventive Mixture, Discharge Nozzle for | F7-24 |
| Corrosion Treatment of Brake Assemblies | 9-7e |
| Covers, Protective | 9-22 |
| Crankcase Opposed-Type..... | F7-4 |
| Crankcase, Radial-Type | F7-5 |
| Crankcases | 7-4a |
| Crankshaft, Opposed-Type (Six-Cylinder) (Six-Throw) | F7-6 |
| Crankshaft, Radial-Type (Single-Throw) | F7-7 |
| Crankshafts | 7-4b |
| Criteria, Fitting Area | 11-10 |
| Criteria, Storage Area | 11-9 |
| Cntena, Work Area | 11-8 |
| Cylinder Assembly | F7-11 |
| Cylinder, Marking of | F7-12 |
| Cylinders 7-4f | |

D

| | |
|---|-------|
| Damage Limits, Cable..... | T9-1 |
| Damage, Compressor Blade | F8-17 |
| Decal Types..... | 6-2 |
| Metal Decals..... | 6-2c |
| Paper Decals | 6-2a |
| Vinyl Film Decals..... | 6-2b |
| Defects of Turbine Engines, Marking of..... | 8-8 |
| Definitions, Armor Plating | T9-6 |
| Deicing System Maintenance | 9-14d |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| D - Continued | |
| Deicing System Precautions..... | 9-14a |
| Deicing System Preventive Maintenance | 9-14b |
| Deicing System Troubleshooting..... | 9-14c |
| Deicing Systems | 9-14 |
| Deicing System Maintenance..... | 9-14d |
| Deicing System Precautions | 9-14a |
| Deicing System Preventive Maintenance | 9-14b |
| Deicing System Troubleshooting..... | 9-14c |
| Depreservation..... | 4-9a |
| Depreservation of Installed Reciprocating Engines, Supplemental Instructions..... | 4-10 |
| Depreservation (of Carburetors)..... | 7-9b |
| Depreservation of Reciprocating Engines | 7-13 |
| Depreservation Run..... | 7-13b |
| Preoiling | 7-13a |
| Depreservation Run | 7-13b |
| Desert Maintenance | 10-3 |
| Deterioration Factors | 10-3a |
| Inspection and Maintenance | 10-3c |
| Precautions..... | 10-3b |
| Preventive Maintenance | 10-3d |
| Design and Construction, Turbine Engine..... | 8-5 |
| Designation Examples..... | 8-2b |
| Designation Examples (Reciprocating Engines) | 7-2b |
| Details, Snap Hook Safety Guard Drill | F11-9 |
| Details, Snap Hook Safety Pin Construction..... | F11-10 |
| Detection and Extinguishing Systems, Fire..... | 9-15 |
| Deterioration Factors | 10-3a |
| Devices, Signaling | 11-18 |
| Diffuser Section | 8-5d |
| Discharge Pressure Pickup Line, Turbine..... | F8-21 |
| Disconnect, Electrical..... | F8-22 |
| Disconnect, Fuel Line | F8-23 |
| Disconnect, Power Level..... | F8-24 |
| Divided Entrance Inlet Duct (Centrifugal-Flow Engine) | F8-4 |
| Double-Annular Chamber, Components and Airflow of a..... | F8-10 |
| Duplex Fuel Nozzle | F8-18 |
| Dust and Dirt Control..... | 2-2i, 2-3i |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| E | |
| Earth Ground Testing | 3-4c |
| Earth Grounds..... | 3-4b |
| Ejection Seats | 12-2 |
| Elastic Shock Cord Assemblies..... | 9-26 |
| Fabrication Procedures..... | 9-26d |
| Fabrication Requirements..... | 9-26b |
| Identification | 9-26c |
| Inspection and Testing | 9-26a |
| Process Control..... | 9-26f |
| Serving Elastic Shock Cord | 9-26e |
| Storage of Elastic Shock Cords..... | 9-26g |
| Electrical Disconnect..... | F8-20 |
| Electncal Hoist System | 9-16b |
| Electncal Safety | 2-5a |
| Electrical Utilities | 2-2g, 2-3g |
| Emergency Evacuation of Aircraft from Hangar | 2-6i |
| Emergency Extension Systems | 9-3b |
| Engine Components, Major (Reciprocating Engines)..... | 7-4 |
| Engine Conditioning | 7-6, T7-2 |
| Complete Engine Conditioning | 7-6a |
| Minor Engine Conditioning | 7-6b |
| Engine Conditioning Cockpit Check Sheet | F7-23 |
| Engine Mounting Systems | 7-11 |
| Engine Operation | 3-10 |
| Reciprocating Engines | 3-10b |
| Safety Procedures | 3-10a |
| Turbine Engines..... | 3-10c |
| Engine Overspeed | 7-5l |
| Engine Removal Criteria (Reciprocating Engine)..... | 7-5 |
| Additional Metal Particles Test | 7-5g |
| Basic Mechanical Failure | 7-5k |
| Engine Overspeed | 7-5l |
| Excessive Maintenance | 7-5n |
| Excessive Manifold Pressure..... | 7-5m |
| Excessive Oil Consumption | 7-5o |
| Excessive Spark Plug Copper or Silver Runout | 7-5h |
| Expiration of Operating Time Limit | 7-5a |
| Identification of Metal Particles | 7-5e |
| Low Cylinder Compression..... | 7-5i |
| Metal Particles in Oil | 7-5d |
| Parts Failure | 7-5j |
| Significance of Metal Particles | 7-5f |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

E - Continued

| | |
|---|------------|
| Sudden Engine Stoppage | 7-5b |
| Sudden Reduction In Engine RPM..... | 7-5c |
| Engine Replacement Criteria | 8-7a |
| Engine Types and Designations..... | 7-2, 8-2 |
| Designation Examples | 7-2b, 8-2b |
| Types | 7-2a, 8-2a |
| Engine, Axial-Flow | F8-2 |
| Engine, Centrifugal-Flow..... | F8-1 |
| Engine, Opposed-Type | F7-2 |
| Engine, Turbine, Theory..... | 8-3 |
| Engines and Components, Replacement Criteria for..... | 8-7 |
| Entries in Aircraft Forms..... | 4-7 |
| Entries, Method of Accomplishing | 5-4 |
| Environmental Control | 2-2m |
| Environmental Control Systems | 9-13 |
| Repair of Flexible Air Ducts | 9-13b |
| Types | 9-13a |
| Equipment, Flotation | 11-16 |
| Equipment Maintenance Forms..... | 2-4d |
| Equipment Mounted In Mobile Shelters..... | 2-3c |
| Equipment, Nuclear, Biological, and Chemical | 11-20 |
| Equipment, Oxygen | 11-17 |
| Equipment, Restraint | 11-21 |
| Equipment, Test..... | T11-1 |
| Equipment, Training | 11-12 |
| Excessive Maintenance..... | 7-5n |
| Excessive Manifold Pressure | 7-5m |
| Excessive Oil Consumption..... | 7-5o |
| Excessive Spark Plug Copper or Silver Runout..... | 7-5h |
| Exhaust Section | 8-5g |
| Exhaust System | 7-8 |
| Expiration of Operating Time Limit | 7-5a |
| External Storage Cartridges | 12-4 |

F

| | |
|---|-------|
| Fabncation Components (for Cables)..... | T9-2 |
| Fabrication of Ground Cable | 3-4d |
| Fabrication of Static Grounding Cable Assembly..... | F3-1 |
| Fabrication Procedures | 9-26d |
| Fabrication Requirements (Elastic Shock Cords)..... | 9-26b |

INDEX

VOLUME 1

| Subject | Paragraph, Figure, Table Number |
|---|---------------------------------------|
| F - Continued | |
| Fingertip Clearance, Measuring | 11-6 |
| Fire Bottle Cartridges | 12-3 |
| Fire Detection and Extinguishing Systems | 9-15 |
| Fire Detection Systems | 9-15a |
| Fire Extinguishing Systems | 9-15g |
| Maintenance of Fire Detection Systems | 9-15c |
| Maintenance of Fire Extinguishing Systems | 9-15h |
| Repair or Replacement of Fire Detection Components | 9-15e |
| Testing of Fire Detection System | 9-15f |
| Troubleshooting of Fire Detection Systems | 9-15d |
| Types of Fire Detection Systems | 9-15b |
| Fire Detection Systems | 9-15a |
| Fire Detection Systems, Troubleshooting of | T9-5 |
| Fire Extinguisher Nameplates | F2-3 |
| Fire Extinguishing Systems | 9-15g |
| FireSafety | 2-5c |
| First Aid Kit Components | T11-8 |
| First Aid Kit, Airplane (Older Configuration) | F11-1 |
| First Aid Kit, General Purpose (Newer Configuration) | F11-2 |
| First Aid Kit, References | T11-9 |
| First Aid Kits | 11-19 |
| Basic of Issue | 11-19a |
| Controlled Substances | 11-19e |
| First Aid Kit Components | 11-19i |
| Identification | 11-19c |
| Inspection | 11-19f |
| Inspection Training Procedures | 11-19j |
| Installation | 11-19b |
| Protection of Contents | 11-19d |
| Replacement of Components | 11-19h |
| Sealing | 11-19g |
| Fitting Area Criteria | 11-10 |
| Flammable Materials | 2-3n |
| Flat-Head Pin, Lead Seal, and Identification Tag, Properly Attached | F11-5 |
| Flight Clothing | 11-14 |
| Cleaning | 11-14c |
| Inspection | 11-14a |
| Repair | 11-14b |
| Flight Clothing References | T11-2 |
| Flight Control Operating Systems | 9-12d |
| Flight Controls | 9-12 |
| Fire Extinguisher | 2.5C(5)F2-3 |

INDEX- CONT

VOLUME 1

| Subject | Paragraph, Figure, Table Number |
|---------|---------------------------------------|
|---------|---------------------------------------|

F - Continued

| | |
|--|--------------|
| Flightline Equipment | 3-2g |
| Flightline Operations General | 3-1 |
| Flightline Safety | 3-2 |
| Flightline Equipment | 3-2g |
| Foreign Object Damage | 3-2b |
| Hearing Protection | 3-2a |
| Parking and Mooring | 3-2e |
| Preparation of Aircraft for Storms | 3-2f |
| Reflectorizing of Equipment | 3-2h |
| Safety Around Airplanes | 3-2d |
| Safety Around Helicopters | 3-2c |
| Float Maintenance | 9-11 |
| Flotation Equipment | 11-3c, 11-16 |
| Cleaning | 11-16e |
| Inspection | 11-16c |
| Precautions | 11-16a |
| Repair | 11-16d |
| Storage in Aircraft | 11-16b |
| Flotation Equipment References | T11-5 |
| Flyable Storage | 4-2a, 7-12e |
| Flyable Storage for Depreservation of Installed Reciporating Engines | 4-10a |
| Flyable Storage for Preservation of Installed Reciporating Engines | 4-5a |
| Foreign Object Damage | 3-2b |
| Foreign Object Damage Inspection | 8-6e |
| Form Entries for Aircraft | 4-8 |
| Fuel Line Disconnect | F8-21 |
| Fuel Nozzle, Duplex | F8-16 |
| Fuel Nozzle, Simplex | F8-15 |
| Fuel System | 8-6o |
| Fuel Systems.. | 8-5k |
| Fuel Truck Approach Route | F3-3 |
| Fuel Truck Backing Approach | F3-5 |
| Flue Truck Operations | 3-5d |
| Fuel Truck Required Spacing | F3-4 |

G

| | |
|---|-------|
| General Position Indicators | 9-3d |
| General Airframe Maintenance | 9-1 |
| General Inspection of Armor Plating | 9-23b |

INDEX - CONT

VOLUME 1

Subject

Paragraph Figure, Table Number

G - Continued

| | |
|---|-------|
| General Maintenance of Shock Struts | 9-5d |
| General Procedures (Turbine Engine Inspection and Maintenance)..... | 8-6a |
| General Procedures (Ground Handling)..... | 3-3a |
| General Purpose First Aid Kit (Newer Configuration)..... | F11-2 |
| General Reciprocating Engine Maintenance Practices | 7-1 |
| General Turbine Engine Maintenance | 8-1 |
| General, Aircraft Cleaning | 13-1 |
| General, Aircraft Storage and Shipment..... | 4-1 |
| General, Application and Removal of Decals | 6-1 |
| General, Arctic, Desert, and Tropic Maintenance | 10-1 |
| General, Aviation Life Support Maintenance | 11-1 |
| General, Flightline Operations..... | 3-1 |
| General, Hangar and Shop Operations..... | 2-1 |
| General, Marking of Aeronautical Items | 5-1 |
| General, Pyrotechnics..... | 12-1 |
| Governor, Speed-Set | F8-12 |
| Governors and Fuel Controls | 8-51 |
| Grade 1100 Oil, Percent Dilution Versus Temperature for..... | F7-25 |
| Ground Handling..... | 3-3 |
| General Procedures..... | 3-3a |
| Pushing | 3-3c |
| Standard Visual Signals..... | 3-3d |
| Towing..... | 3-3b |
| Ground Receptacle Criteria..... | 3-3e |
| Ground Receptacle Testing | 3-4f |
| Grounding Receptacle Installation, Aircraft..... | F3-2 |
| Grounding Requirements | 3-4a |

H

| | |
|--|-------|
| Handling, Ground..... | 3-3 |
| Hangar and Shop Operations, General..... | 2-1 |
| Hangar and Shop Safety | 2-5 |
| Electrical Safety | 2-5a |
| Fire Safety | 2-5c |
| Machine Tool Safety | 2-5b |
| Hard Stands, Construction of | F10-3 |
| Harness, Ignition | F7-18 |
| Health Indication Test | 8-6b |
| Hearing Protection | 3-2a |
| Hoist Systems | 9-16 |
| Electrical Hoist System | 9-16b |
| Hydraulic Hoist System..... | 9-16a |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

H - Continued

| | |
|---------------------------------|-------|
| Hoisting 2-7b | |
| Hoisting and Jacking | 2-7 |
| Hot Section Maintenance | 8-6i |
| Hot Start Inspection..... | 8-6c |
| Hydraulic Fluid Servicing | 3-8 |
| Hydraulic Hoist System | 9-16a |

I

| | |
|---|--------|
| Identification, First Aid Kits | 11-19c |
| Identification of Elastic Shock Cords | 9-26c |
| Identification of Metal Particles | 7-5e |
| Identification Tag, Flat-Head Pin, Lead Seal, Properly Attached | F11-5 |
| Identification Tapes, Application and Installation of | 6-3 |
| Application of Identification Tapes | 6-3c |
| Installation of Identification Tapes | 6-3d |
| Printed-Symbolized System | 6-3a |
| Solid Color Band System | 6-3b |
| Igniter Plugs, Typical..... | F8-14 |
| Ignition Harness | F7-18 |
| Ignition System | 7-4i |
| Ignition System Maintenance | 8-6k |
| Ignition System, Typical, One Side of a | F8-13 |
| Ignition Systems..... | 8-5j |
| Indicator, Top Center | F7-15 |
| Induction Vibrator | F7-19 |
| Induction Vibrators, Repairing | T7-1 |
| Induction, Air, System | 7-7 |
| Inlet Duct, Divided Entrance (Centrifugal-Flow Engine) | F8-4 |
| Inlet Duct, Single Entrance (Axial-Flow Engine) | F8-3 |
| Inlet Ducts..... | 8-5a |
| Inspection | 4-9b |
| Inspection (Carburetors) | 7-9a |
| Inspection (First Aid Kits) | 11-19f |
| Inspection (Flight Clothing)..... | 11-14a |
| Inspection (Flotation Equipment) | 11-16c |
| Inspection (Nuclear, Biological, and Chemical Equipment) | 11-20a |
| Inspection (Oxygen Equipment) | 11-17a |
| Inspection (Restraint Equipment) | 11-21a |
| Inspection (Signaling Devices) | 11-18a |
| Inspection (Survival Kits) | 11-15a |

INDEX - CONT

VOLUME 1

Subject

Paragraph Figure, Table Number

I - Continued

| | |
|---|--------|
| Inspection (Tires and Tubes)..... | 9-9b |
| Inspection and Maintenance (Desert)..... | 10-3c |
| Inspection and Maintenance, Turbine Engine..... | 8-6 |
| Inspection and Preventive Maintenance, (Tropics) | 10-4a |
| Inspection and Testing (Elastic Shock Cords)..... | 9-26a |
| Inspection Criteria, Personnel Parachute and Parachute Harness..... | 11-22a |
| Inspection of Flight Controls..... | 9-12b |
| Inspection of Primer Nozzles..... | T8-1 |
| Inspection of Stored Aircraft | 4-5 |
| Inspection of Vibration Isolators..... | 9-25c |
| Inspection Procedures, Personnel Parachute and Parachute Harness..... | 11-22b |
| Inspection Report, Personnel Parachute and Parachute Harness..... | 11-22c |
| Inspection Training Procedures, First Aid Kits | 11-19j |
| Inspection, Maintenance, Cleaning, and Replacement (Reciprocating Engine)..... | 7-7a |
| Installation (Aircraft Litters) | 9-21a |
| Installation (of Carburetors)..... | 7-9f |
| Installation (of First Aid Kits) | 11-19b |
| Installation (of Turbine Engines)..... | 8-11d |
| Installation (Reciprocating Engines) | 7-10d |
| Installation (Seat Belt Webbing Retarder Spring) | F11-8 |
| Installation (Shoulder Harness Webbing Retarder Sprng) | F11-7 |
| Installation (Tires and Tubes) | 9-9e |
| Installation and Removal Procedures (Protective Covers) | 9-22a |
| Installation of Identification Tapes | 6-3d |
| Installation of Piston Position Indicators | F7-16 |
| Installation of Vibration Isolators..... | 9-25b |
| Intermediate Storage..... | 4-2c |
| Intermediate Storage for Depreservation of Installed Reciprocating Engines..... | 4-10c |
| Intermediate Storage for Preservation of Installed Reciprocating Engines | 4-5c |
| Intermediate Storage of Engines Mounted on Aircraft..... | 7-12d |
| Isolators, Vibration | 9-25 |

J

| | |
|---------------------------|------|
| Jacking 2-7a | |
| Jacking and Hoisting..... | 2-7 |
| Hoisting | 2-7b |
| Jacking | 2-7a |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| K | |
| Kit, First Aid | 11-19 |
| Kits, First Aid | 11-15 |
| L | |
| Landing Gear Alignment..... | 9-6 |
| Landing Gear Systems | 9-2 |
| Landing Gear Systems, Troubleshooting of | 9-4 |
| Lead-Acid Batteries (Depreservation)..... | 4-13e |
| Life Support Equipment Temporary Storage | 11-13 |
| Liferafts for Aircraft | T11-4 |
| Lighting 2-3o | |
| Lighting Requirements | 2-2n |
| Liquid Lock..... | F7-13 |
| Litters, Aircraft..... | 9-21 |
| Loads, Test (Elastic Shock Cords)..... | T9-7 |
| Locating Dimensions, Lockring..... | T9-10 |
| Location of Static Ground Points | 2-6e |
| Lock, Liquid | F7-13 |
| Lockring Locating Dimension | T9-10 |
| Long Term Storage | 4-2d |
| Low Cylinder Compression..... | 7-5i |
| M | |
| Machine Tool Safety | 2-5b |
| Maintenance | 4-9c |
| Maintenance Area..... | 11-7 |
| Maintenance of Fire Detection Systems | 9-15c |
| Maintenance of Fire Extinguishing Systems | 9-15h |
| Maintenance of Oxygen Systems | 9-17b |
| Maintenance of Protective Covers..... | 9-22b |
| Maintenance of Shop Equipment..... | 2-4 |
| Equipment Maintenance Forms | 2-4d |
| Major Repair | 2-4b |
| Operator Maintenance | 2-4a |
| Painting | 2-4c |
| Maintenance of Stored Aircraft..... | 4-8 |
| Maintenance of Windshield Wiper System | 9-19a |
| Maintenance Operational Checks..... | 3-12b |
| Maintenance Operational Checks, Test Flights and..... | 3-12 |
| Maintenance, Arctic | 10-2 |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

M - Continued

| | |
|---|--------------|
| Maintenance, Desert | 10-3 |
| Maintenance, Float | 9-11 |
| Maintenance, Ski | 9-10 |
| Maintenance, Tropic | 10-4 |
| Maintenance, Wheel | 9-8 |
| Major Engine Components (Reciprocating Engines) | 7-4 |
| Accessones | 7-4h |
| Bearings | 7-4c |
| Connecting Rods | 7-4d |
| Crankcases | 7-4a |
| Crankshafts | 7-4b |
| Cylinders | 7-4f |
| Ignition System | 7-4i |
| Pistons, Pins, and Rings | 7-4e |
| Valves | 7-4g |
| Major Repair | 2-4b |
| Marking of Aeronautical Items, General | 5-1 |
| Marking of Cylinder | F7-12 |
| Marking of Defects on Turbine Engines | 8-8 |
| Marking Requirements (Aeronautical Items) | 5-2 |
| Marking, Materiel | 5-3 |
| Materials, Consumable | 1-3 |
| Materiel Marking | 5-3 |
| Measuring Fingertip Clearance | F11-6 |
| Metal Decals | 6-2c |
| Metal Particles in Oil | 7-5d |
| Metal Seats | 9-20b |
| Method of Accomplishing Entries | 54 |
| Minimum Serving Length | T9-9 |
| Minor Engine Conditioning | 7-6b |
| Modification, Seat Belt Latch | F11-12 |
| Moisture and Fungi, Parts and Fabncs Affected by..... | 10-4b, T10-1 |
| Moonng, Arctic-Type | F1 0-2 |
| Mounts, Turbine Engine | 8-9 |

N

| | |
|-------------------------------------|------------|
| Nameplates, Fire Extinguisher | 2-3 |
| New Equipment | 11-13f |
| Noise Levels | 2-2h, 2-3h |
| Nosewheel Centering | 9-3e |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

N - Continued

| | |
|--|--------|
| Nuclear, Biological, and Chemical Equipment | 11-20 |
| Cleaning 11-20c | |
| Inspection | 11-20a |
| Repair . 11-20b | |
| Nuclear, Biological, and Chemical Equipment References | T11-10 |

O

| | |
|---|---------------|
| Oil Consumption | 8-6n |
| Oil Consumption Chart | F7-22 |
| Oil Servicing | 3-6 |
| One Side of a Typical Ignition System | F8-15 |
| Open Storage Areas | 2-3r |
| Open Storage for Repaired Equipment and Consumable Material | 2-2r |
| Open-Port Hot Refueling | 3-5b |
| Open-Port Refueling | 3-5a |
| Operating Cycle (Four-Stroke) Reciprocating Engine | F7-3 |
| Operation, Engine | 3-10 |
| Operational Check | 4-9d |
| Operator Maintenance | 2-4a |
| Operator Position, Painting of Shop Equipment to Highlight | F2-2 |
| Opposed-Type Crankcase | F7-4 |
| Opposed-Type Crankshaft (Six-Cylinder) (Six-Throw) | F7-6 |
| Opposed-Type Engine | F7-2 |
| Overhead Chain Hoist | 2-2e |
| Oxygen Equipment | 11-13e, 11-17 |
| Cleaning | 11-17c |
| Inspection | 11-17a |
| Repair | 11-17b |
| Oxygen Equipment References | T11-6 |
| Oxygen Servicing | 3-7 |
| Safety Precautions | 3-7a |
| Servicing | 3-7b |
| Oxygen System Types | 9-17a |
| Oxygen Systems | 9-17 |
| Maintenance of Oxygen Systems | 9-17b |
| Oxygen System Types | 9-17a |
| Servicing of Oxygen Systems | 9-17c |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| P | |
| Packaging Procedures | 4-12b |
| Painting 2-4c | |
| Painting of Shop Equipment to Highlight Operator Position | F2-2 |
| Paper Decals | 6-2a |
| Parachute Harness and Personnel Parachute..... | 11-22 |
| Parking and Mooring | 3-2e |
| Parking of Aircraft and Equipment in Hangars | 2-6 |
| Emergency Evacuation of Aircraft from Hangar | 2-6i |
| Location of Static Ground Points..... | 2-6e |
| Parking of Aircraft in Hangars | 2-6b |
| Parking of Aircraft with Fuel Tanks Less Than Full..... | 2-6c |
| Safety Lanes | 2-6a |
| Static Grounding of Aircraft | 2-6g |
| Static Grounding of Ground Support Equipment | 2-6h |
| Testing of Static Ground Points | 2-6f |
| Usage of Drip Pans..... | 2-6d |
| Parking of Aircraft in Hangars | 2-6b |
| Parking of Aircraft with Fuel Tanks Less Than Full | 2-6c |
| Particle Separators | 8-5b, F8-5 |
| Parts and Fabnacs Affected by Moisture and Fungi | 10-4b, T10-1 |
| Parts Failure | 7-5j |
| Percent Dilution Versus Temperature for Grade 1100 Oil..... | F7-25 |
| Permanent Shop Installations..... | 2-2 |
| Adhesive Operations | 2-2k |
| Balancing Equipment..... | 2-2i |
| Compressed Air and Water Outlets..... | 2-2f |
| Dust and Dirt Control | 2-2i |
| Electrical Utilities | 2-2g |
| Environmental Control | 2-2m |
| Lighting Requirements | 2-2n |
| Noise Levels | 2-2h |
| Open Storage for Repaired Equipment and Consumable Material | 2-2r |
| Overhead Chain Hoist | 2-2e |
| Shop Equipment Arrangement..... | 2-2d |
| Shop Equipment Required..... | 2-2c |
| Shop Size..... | 2-2b |
| Spray Painting..... | 2-2j |
| Storage of Compressed Gases..... | 2-2p |
| Storage of High-Value Items..... | 2-2q |
| Storage of Shop Stocks, Repair Parts, and Consumable Matenals | 2-2o |
| Typical Layout | 2-2a |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| P - Continued | |
| Personnel | 11-4 |
| Personnel Parachute and Parachute Harness..... | 11-22 |
| Inspection Criteria..... | 11-22a |
| Inspection Procedures | 11-22b |
| Inspection Report | 11-22c |
| Pistols, Pyrotechnic..... | 12-6 |
| Piston Position Indicators, Installation of | F7-16 |
| Piston, Pin, and Ring Assemblies..... | F7-10 |
| Pistons, Pins, and Rings | 7-4e |
| Plating, Armor | 9-23 |
| Pneumatic Deicing Systems, Troubleshooting | T9-4 |
| Pneumatic System Servicing | 3-9 |
| Polyester Fabric Seat Covers (UH-60) | 9-20e |
| Post- Cleaning | 13-2d |
| Postflight and Parking | 3-11c |
| Power Lever Disconnect | F8-22 |
| Practices and Procedures, Cleaning..... | 13-2 |
| Precautions (Arctic Maintenance)..... | 10-2a |
| Precautions (Desert Maintenance) | 10-3b |
| Precautions (Flotation Equipment) | 11-16a |
| Precautions, Turbine Engine | 8-4 |
| Preflight (Arctic) | 10-2c |
| Preheating | 10-2b |
| Preoiling 7-13a | |
| Preparation for Cleaning | 13-2a |
| Preparation for Installation (Reciprocating Engines)..... | 7-10c |
| Preparation for Installation (Turbine Engines)..... | 8-11c |
| Preparation for Removal (Reciprocating Engines) | 7-10a |
| Preparation for Removal (Turbine Engines) | 8-11a |
| Preparation of Aircraft for Storage | 4-4 |
| Preparation of Aircraft for Storms | 3-2f |
| Preservation (of Carburetors)..... | 7-9e |
| Preservation and Depreservation of Turbine Engines..... | 8-10 |
| Preservation and Packaging of Aircraft Components..... | 4-10 |
| Packaging Procedures..... | 4-10b |
| Special Reusable Containers..... | 4-10a |
| Preservation of Accident-Involved Engines | 7-12a |
| Preservation of Inoperable Engines..... | 7-12c |
| Preservation of Installed Reciprocating Engines, Supplemental Instructions..... | 4-5 |
| Preservation of Operable Engines to be Removed for Overhaul . | 7-12b |
| Preservation of Reciprocating Engines | 7-12 |
| Flyable Storage | 7-12e |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

P - Continued

| | |
|--|--------------|
| Intermediate Storage of Engines Mounted on Aircraft | 7-12d |
| Preservation of Accident-Involved Engines | 7-12a |
| Preservation of Inoperable Engines | 7-12c |
| Preservation of Operable Engines to be Removed for Overhaul | 7-12b |
| Prevention and Removal of Snow, Ice, and Frost Deposits | 10-2e |
| Preventive Maintenance (Arctic) | 10-2f |
| Preventive Maintenance (Desert) | 10-3d |
| Primer Nozzles, Inspection of | T8-1 |
| Printed-Symbolized System | 6-3a |
| Process Control | 9-26f |
| Propeller Shaft Runout, Checking | F7-21 |
| Properly Attached Flat-Head Pin, Lead Seal, and Identification Tag | F11-5 |
| Protected Storage Areas | 2-3q |
| Protection of Contents, First Aid Kits | 11-19d |
| Protective Covers | 9-22 |
| Installation and Removal Precautions | 9-22a |
| Maintenance of Protective Covers | 9-22b |
| Publications | 11-5 |
| Purpose (of Manual) | 1-1 |
| Pushing 3-3c | |
| Pyrotechnic Pistols | 12-6 |
| Pyrotechnics Storage and Handling | 12-7 |
| Pyrotechnics, General | 11-13d, 12-1 |

R

| | |
|--|---------------|
| Radial-Type Crankcase | F7-5 |
| Radial-Type Crankshaft (Single-Throw) | F7-7 |
| Rapid Hot Refueling | 3-5c |
| Raschel Knit Seat Covers | 9-20d |
| Reciprocating Engine Maintenance Practices, General | 7-1 |
| Reciprocating Engine Operating Cycle (Four-Stroke) | F7-3 |
| Reciprocating Engine Theory | 7-3 |
| Reciprocating Engines | 3-10b |
| References, Consolidated List of ALSE | 11-23, T11-11 |
| References for First Aid Kits | T11-9 |
| References for Flight Clothing | T11-2 |
| References for Flotation Equipment | T11-5 |
| References for Nuclear, Biological, and Chemical Equipment | T11-10 |
| References for Oxygen Equipment | T11-6 |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| R - Continued | |
| References for Signaling Devices | T11-7 |
| References for Survival Kits | T11-3 |
| Reflectorizing of Equipment | 3-2h |
| Refueling, Aircraft | 3-5 |
| Relief Tube System | 9-18 |
| Removal (Aircraft Litters) | 9-21b |
| Removal (of Turbine Engines) | 8-11b |
| Removal (Reciprocating Engines) | 7-10b |
| Removal and Installation of Reciprocating Engines | 7-10 |
| Installation | 7-10d |
| Preparation for Installation | 7-10c |
| Preparation for Removal | 7-10a |
| Removal | 7-10b |
| Removal and Installation of Turbine Engines | 8-11 |
| Installation | 8-11d |
| Preparation for Installation | 8-11c |
| Preparation for Removal | 8-11a |
| Removal | 8-11b |
| Removal of Aircraft from Storage | 4-8 |
| Depreservation | 4-8a |
| Inspection | 4-8b |
| Maintenance | 4-8c |
| Operational Check | 4-8d |
| Repair (Flight Clothing) | 11-14b |
| Repair (Flotation Equipment) | 11-16d |
| Repair (Nuclear, Biological, and Chemical Equipment) | 11-20b |
| Repair (Oxygen Equipment) | 11-17b |
| Repair (Restraint Equipment) | 11-21b |
| Repair (Signaling Devices) | 11-18b |
| Repair (Survival Kits) | 11-15b |
| Repair and Replacement of Brake Assembly Components | 9-7f |
| Repair of Armor Plating | 9-23d |
| Repair of Flexible Air Ducts | 9-13b |
| Repair of Flight Controls | 9-12c |
| Repair of Wheels | 9-8c |
| Repair or Replacement (of Carburetors) | 7-9d |
| Repair or Replacement of Fire Detection Components | 9-15e |
| Repair Parts Van | 2-3p |
| Repairing Induction-Vibrators | T7-1 |
| Replacement (Restraint Equipment) | 11-21d |
| Replacement Criteria for Engines and Components | 8-7 |
| Component Replacement Criteria | 8-7b |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|----------------|---|
|----------------|---|

R - Continued

| | |
|--|--------|
| Engine Replacement Cntena..... | 8-7a |
| Replacement Criteria for Wheels | 9-8d |
| Replacement of Components (First Aid Kit) | 11-19h |
| Required Spacing, Fuel Truck..... | F3-4 |
| Requirements, Marking (Aeronautical Items) | 5-2 |
| Responsibility, Aircraft Storage and Shipment..... | 4-3 |
| Restraint Equipment..... | 11-21 |
| Cleaning | 11-21c |
| Inspection | 11-21a |
| Repair | 11-21b |
| Replacement | 11-21d |
| Retractable Landing Gear Systems..... | 9-3 |
| Emergency Extension Systems | 9-3b |
| Gear Position Indicators..... | 9-3d |
| Nosewheel Centenng..... | 9-3e |
| Retraction Test | 9-3f |
| Safety Devices | 9-3c |
| Types | 9-3a |
| Retraction Test (Retractable Landing Gear) | 9-3f |
| Rotor and Stator Components of an Axial-Flow Compressor..... | F8-7 |
| Runup and Taxiing..... | 3-11 |
| Postflight and Parking | 3-11c |
| Safety Procedures | 3-11a |
| Taxiing | 3-11b |

S

| | |
|---|--------|
| Safety | 11-3 |
| Safety Around Airplanes..... | 3-2d |
| Safety Around Helicopters..... | 3-2c |
| Safety Devices (Retractable Landing Gear Systems) | 9-3c |
| Safety Lanes..... | 2-6a |
| Safety Pin Retaining Cord Secured to Snap Hook | F11-11 |
| Safety Precautions (Oxygen Servicing) | 3-7a |
| Safety Procedures (Engine Operation) | 3-10a |
| Safety Procedures (Runup and Taxiing) | 3-11a |
| Safety, Cleaning..... | 13-3 |
| Safety, Flightlene | 3-2 |
| Scope (of Manual)..... | 1-2 |
| Sealing (First Aid Kits)..... | 11-19g |
| Seat Belt Latch Modification | F11-12 |
| Seat Belt Webbing Retarder Sprng Installation | F11-8 |
| Seats, Aircraft | 9-20 |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| S - Continued | |
| Seats, Ejection | 12-2 |
| Separator, Particle | F8-5 |
| Servicable Tag-Matenel (DD Form 1574) (Yellow) | F11-3 |
| Servicing (Oxygen) | 3-7b |
| Servicing of Oxygen Systems | 9-17c |
| Servicing, Hydraulic Fluid | 3-8 |
| Servicing, Oil | 3-6 |
| Servicing, Oxygen | 3-7 |
| Servicing, Pneumatic System | 3-9 |
| Serving Elastic Shock Cord | 9-26e |
| Serving Length, Minimum | T9-9 |
| Shipment of Aircraft | 4-9 |
| Shock Strut Bleeding | 9-5c |
| Shock Strut Operation | 9-5a |
| Shock Strut Servicing | 9-5b |
| Shock Struts | 9-5 |
| General Maintenance of Shock Struts | 9-5d |
| Shock Strut Bleeding | 9-5c |
| Shock Strut Operation | 9-5a |
| Shock Strut Servicing | 9-5b |
| Shop and Hangar Safety | 2-5 |
| Shop Equipment Arrangement | 2-2d, 2-3d |
| Shop Equipment Required | 2-2c |
| Shop Equipment, Maintenance of | 2-4 |
| Shop Installations, Permanent | 2-2 |
| Shop Installations, Temporary | 2-3 |
| Shop Size | 2-2b, 2-3b |
| Shop, Temporary, Layout | F2-1 |
| Short Term Storage | 4-2b |
| Short Term Storage for Depreservation of Installed Reciprocating Engines | 4-10b |
| Short Term Storage for Preservation of Installed Reciprocating Engines | 4-5b |
| Shoulder Harness Webbing Retarder Spring Installation | F11-7 |
| Signaling Devices | 11-18 |
| Cleaning | 11-18c |
| Inspection | 11-18a |
| Repair | 11-18b |
| Signaling Devices References | T11-7 |
| Significance of Metal Particles | 7-5f |
| Simplex Fuel Nozzle | F8-17 |
| Single Entrance Inlet Duct (Axial-Flow Engine) | F8-3 |
| Ski Inspection | 9-10a |
| Ski Maintenance | 9-10 |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| S -- Continued | |
| Ski Inspection | 9-10a |
| Ski Repair | 9-10b |
| Ski Repair | 9-10b |
| Snap Hook Safety Guard Drill Details | F11-9 |
| Snap Hook Safety Pin Construction Details | F11-10 |
| Snap Hook Secured to Safety Pin Retaining Cord | F11-11 |
| Solid Color Band System | 6-3d, F6-2 |
| Special Repair Equipment and Tools | 11-11 |
| Special Reusable Containers | 4-12a |
| Speed-Sensitive Control | F8-11 |
| Speed-Set Governor | F8-12 |
| Spray Nozzles, Types of | F10-1 |
| Spray Painting | 2-2j, 2-3j |
| Standard Visual Signals | 3-3d |
| Static Grounding Cable Assembly, Fabrication of | F3-1 |
| Static Grounding of Aircraft | 2-6g, 3-4 |
| Earth Ground Testing | 3-4c |
| Earth Grounds | 3-4b |
| Fabrication of Ground Cable | 3-4d |
| Ground Receptacle Criteria | 3-4e |
| Ground Receptacle Testing | 3-4f |
| Grounding Requirements | 3-4a |
| Static Grounding of Ground Support Equipment | 2-6h |
| Storage and Handling, Pyrotechnics | 12-7 |
| Storage Area Criteria | 11-9 |
| Storage Categories | 4-2 |
| Storage in Aircraft, Flotation Equipment | 11-16b |
| Storage of Compressed Gases | 2-2p |
| Storage of Elastic Shock Cords | 9-26g |
| Storage of High-Value Items | 2-2q |
| Storage of Shop Stocks, Repair Parts, and Consumable Materials | 2-2o |
| Stored Aircraft, Inspection of | 4-6 |
| Stored Aircraft, Maintenance of | 4-7 |
| Struts, Shock | 9-5 |
| Sudden Engine Stoppage | 7-5b |
| Sudden Reduction In Engine RPM | 7-5c |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

S - Continued

| | |
|-------------------------------|---------------|
| Survival Kits | 11-13a, 11-15 |
| Cleaning | 11-15c |
| Inspection | 11-15a |
| Repair | 11-15b |
| Survival Kit References | T11-3 |
| Survival Vests | 11-13b |
| System, Exhaust | 7-8 |
| Systems, Brake | 9-7 |
| Systems, Deicing | 9-14 |
| Systems, Hoist | 9-16 |
| Systems, Landing Gear | 9-2 |
| Systems, Oxygen | 9-17 |

T

| | |
|---|-------|
| Tag-Materiel, Serviceable (DD Form 1574) (Yellow) | F11-3 |
| Tag-Materiel, Unserviceable (Repairable) (DD Form 1577-2) (Green) | F11-4 |
| Tapes, Color-Coded | F6-1 |
| Taxiing 3-11b | |
| Taxiing and Runup | 3-11 |
| Temperature and Humidity Control | 2-3m |
| Temporary Shop Installations | 2-3 |
| Adhesive Operations | 2-3k |
| Balancing Equipment | 2-3l |
| Chain Hoists | 2-3e |
| Compressed Air Panels | 2-3f |
| Dust and Dirt Control | 2-3i |
| Electrical Utilities | 2-3g |
| Equipment Mounted in Mobile Shelters | 2-3c |
| Flammable Materials | 2-3n |
| Lighting | 2-3o |
| Noise Levels | 2-3h |
| Open Storage Areas | 2-3r |
| Protected Storage Areas | 2-3q |
| Repair Parts Van | 2-3p |
| Shop Equipment Arrangement | 2-3d |
| Shop Size | 2-3b |
| Spray Painting | 2-3j |
| Temperature and Humidity Control | 2-3m |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| T - Continued | |
| Typical Shop Layout | 2-3a |
| Temporary Shop Layout..... | F2-1 |
| Temporary Storage of Life Support Equipment | 11-13 |
| Flotation Equipment..... | 11-13c |
| New Equipment | 11-13f |
| Oxygen Equipment | 11-13e |
| Pyrotechnics | 11-1 3d |
| Survival Kits | 11-13a |
| Survival Vests | 11-1 3b |
| Test Equipment | T.11-1 |
| Test Flights and Maintenance Operational Checks..... | 3-12 |
| Carbon Monoxide Detection | 3-12c |
| Maintenance Operation Checks | 3-12b |
| Test Flight Safety | 3-12a |
| Test Flight Safety | 3-12a |
| Test Loads (Elastic Shock Cords)..... | T9-7 |
| Test, Cable | T9-3 |
| Testing of Fire Detection Systems..... | 9-15f |
| Testing of Static Ground Points..... | 2-6f |
| Theory, Reciprocating Engines | 7-3 |
| Thermocouple Maintenance | 8-6m |
| Tiedown Equipment, Cargo..... | 9-24 |
| Timing Marks, Built-In | F7-17 |
| Tires and Tubes | 9-9 |
| Balance | 9-9c |
| Cleaning | 9-9a |
| Inspection | 9-9b |
| Installation | 9-9e |
| Valve Cores | 9-9d |
| Tools and Special Repair Equipment | 11-11 |
| Top Center Indicator | F7-15 |
| Towing 3-3b | |
| Training Equipment | 11-12 |
| Troop Seats | 9-20a |
| Tropic Maintenance..... | 10-4 |
| Inspection and Preventive Maintenance | 10-4a |
| Parts and Fabrics Affected by Moisture and Fungi | 10-4b |
| Troubleshooting of Fire Detection Systems | 9-15d, T9-5 |
| Troubleshooting of Landing Gear Systems | 9-4 |
| Troubleshooting Pneumatic Deicing Systems..... | T9-4 |

TM 1-1500-204-23-1

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| T - Continued | |
| Tube, Relief, System..... | 9-18 |
| Tubes and Tires | 9-9 |
| Turbine and Exhaust Maintenance | 8-6j |
| Turbine Assembly Elements..... | F8-10 |
| Turbine Bearing Maintenance..... | 8-6i |
| Turbine Discharge Pressure Pickup Line | F8-19 |
| Turbine Engine Analysis Ground Testing | 8-6d |
| Turbine Engine Design and Construction..... | 8-5 |
| Accessory Section | 8-5h |
| Combustion Section..... | 8-5e |
| Compressor Section | 8-5c |
| Diffuser Section | 8-5d |
| Exhaust Section..... | 8-5g |
| Fuel Systems..... | 8-5k |
| Governors and Fuel Controls | 8-5i |
| Ignition Systems | 8-5j |
| Inlet Ducts | 8-5a |
| Particle Separators | 8-5b |
| Turbine Section | 8-5f |
| Turbine Engine Inspection and Maintenance | 8-6 |
| Cold Section Maintenance | 8-6g |
| Compressor Blade Inspection and Repair | 8-6h |
| Compressor Cleaning | 8-6f |
| Foreign Object Damage Inspection..... | 8-6e |
| Fuel System | 8-6o |
| General Procedures..... | 8-6a |
| Health Indication Test | 8-6b |
| Hot Section Maintenance..... | 8-6i |
| Hot Start Inspection | 8-6c |
| Ignition System Maintenance..... | 8-6k |
| Oil Consumption | 8-6n |
| Thermocouple Maintenance | 8-6m |
| Turbine and Exhaust Maintenance..... | 8-6J |
| Turbine Bearing Maintenance..... | 8-6i |
| Turbine Engine Analysis Ground Testing..... | 8-6d |
| Turbine Engine Maintenance, General | 8-1 |
| Turbine Engine Mounts | 8-9 |
| Turbine Engine Precautions | 8-4 |
| Turbine Engine Theory..... | 8-3 |
| Turbine Engines..... | 3-10c |
| Turbine Engines, Preservation and Depreservation of | 8-10 |
| Turbine Engines, Removal and Installation of | 8-11 |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

T - Continued

| | |
|--|------------|
| Turbine Section | 8-5f |
| Turbocharger and Supercharger Maintenance..... | 7-7b |
| Types (of Reciprocating Engines)..... | 7-2a |
| Types (of Turbine Engines) | 8-2a |
| Types and Designations, Engine | 7-2 |
| Types and Designations, Engine | 8-2 |
| Types of Bearing..... | F7-8 |
| Types of Decals | 6-2 |
| Types of Environmental Control Systems..... | 9-13a |
| Types of Fire Detection Systems..... | 9-15b |
| Types of Flight Controls | 9-12a |
| Control Cables..... | 9-12e |
| Control System Components | 9-12f |
| Flight Control Operating Systems | 9-12d |
| Inspection of Flight Controls | 9-12b |
| Repair of Flight Controls | 9-12c |
| Types | 9-12a |
| Types of Retractable Landing Gear Systems..... | 9-3a |
| Types of Spray Nozzles | F10-1 |
| Types of Valves | F7-14 |
| Types of Vibration Isolators | 9-25a |
| Typical Compressor Blade Repair Limits | F8-18 |
| Typical Igniter Plugs..... | F8-14 |
| Typical Layout | 2-2a, 2-3a |

U

| | |
|--|-------|
| Unserviceable (Repairable) Tag-Materiel (DD Form 1577-2) (Green) | F11-4 |
| Upholstered Seats..... | 9-20c |
| Usage of Drip Pans | 2-6d |

V

| | |
|---|-------|
| Valve Cores | 9-9d |
| Valve Types | F7-14 |
| Valves 7-4g | |
| Vibration Isolators | 9-25 |
| Inspection of Vibration Isolators | 9-25c |
| Installation of Vibration Isolators | 9-25b |
| Types of Vibration Isolators..... | 9-25a |

INDEX - CONT

VOLUME 1

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

V - Continued

| | |
|---------------------------|-------|
| Vibrator, Induction | F7-19 |
| Vinyl Film Decals | 6-2b |

W

| | |
|---|-------|
| Wheel Cleaning | 9-8a |
| Wheel Inspection | 9-8b |
| Wheel Maintenance | 9-8 |
| Repair of Wheels | 9-8c |
| Replacement Criteria for Wheels | 9-8d |
| Wheel Cleaning | 9-8a |
| Wheel Inspection | 9-8b |
| Windshield Wiper System | 9-19 |
| Adjustment of Windshield Wiper Systems | 9-19b |
| Maintenance of Windshield Wiper Systems | 9-19a |
| Wiper, Windshield, System | 9-19 |
| Work Area Criteria | 11-8 |

INDEX - CONT

VOLUME 2

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| A | |
| Absorbing Units, Dampening and | 4-19 |
| Acceptable and Unacceptable Tube Bends | F4-5 |
| Accumulator, Cylindrical | F4-118 |
| Accumulator, Operation | 4-15b |
| Accumulator, Spherical | F4-119 |
| Accumulators | 4-15 |
| Accumulator Operation | 4-15b |
| Maintenance | 4-15c |
| Types | 4-15a |
| Actuating Cylinder, Double-Action (Extension) | F4-134 |
| Actuating Cylinder, Double-Action (Retraction) | F4-135 |
| Actuating Cylinder, Single-Action | F4-133 |
| Actuating Cylinders (Actuators) | 4-16g |
| Actuators, Troubleshooting | T4-42 |
| Adjuster Valve, Brake | F4-157 |
| After Swage Dimensions | F4-86 |
| Air Cylinder, Spherical | F4-95 |
| Air Cylinders, Hydraulic Reservoirs | 4-11 h |
| Air Filters | 4-12e |
| Air Valve Cores, High-Pressure | F4-174 |
| Aircraft Brake Systems | 4-18 |
| Brake Deboosters | 4-18c |
| Helicopter Rotor Brake Systems | 4-18d |
| Maintenance of Brake Systems | 4-18e |
| Wheel Brake Assemblies | 4-18b |
| Wheel Brake Systems | 4-18a |
| Alignment, Tube and Fitting | F4-14 |
| Alignment, Tubing | F4-20 |
| Aluminum Protective Dust Plug and Moisture Seal | F4-54 |
| AN Flared Fitting Identification | T4-9 |
| Application of Mechanical Advantage | F2-5 |
| Application of Swaged Tubing Repairs | 4-9a |
| Applications of MIL-H-83282 | 4-21c, T4-43 |
| Aromatic And Heat-Resistant Hose, MIL-H-6000 | F4-35 |
| Aromatic, Flame, and Oil-Resistant Hose, MIL-H-7938 | F4-36 |
| Aromatic-Resistant Hose, Flame and MIL-H-8794 | F4-34 |
| Aromatic-Resistant Hose, Nonself-Sealing, MIL-H-5593 | F4-37 |
| Aromatic-Resistant Hose, Self-Sealing, MIL-H-7061 | F4-38 |
| Assembly Clearance, Nipple | F4-47 |
| Assembly of High-Pressure Tetrafluoroethylene (Teflon) Hose Assemblies | 4-5j |
| Assembly of Medium-and Low-Pressure Hose Assemblies | F4-43 |

INDEX - CONT

VOLUME 2

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

A - Continued

| | |
|--|-------|
| Assembly of Medium - Pressure Tetrafluoroethylene (Teflon) | |
| Hose Assemblies | 4-51 |
| Assembly Surface, Nipple | F4-46 |
| Assembly, V-Ring Packings in Various Positions of | F4-71 |

B

| | |
|---|--------|
| Backup Ring Installation, Double | F4-76 |
| Backup Ring Installation, Single | F4-75 |
| Backup Ring, Teflon, Installing | F4-73 |
| Backup Ring, Teflon, Reversing Spiral of | F4-74 |
| Backup Ring, Teflon, Stretching | F4-72 |
| Backup Rings | 4-8 |
| Identification | 4-8a |
| Installation | 4-8b |
| Backup Rings, Leather, Installation of | F4-77 |
| Baffles and Fins | 4-11c |
| Baffles, Fins, and Finger Strainer, Reservoir with | F4-91 |
| Ball Size, Inspection, Chart | T4-13 |
| Band Identification, Solid Color | F4-2 |
| Band Location, Tube Insertion | T4-37 |
| Basic Swage Tool Assembly Showing Lower Die Block | |
| Assembly and Position of Fitting Locator | F4-84 |
| Bead Dimensions | F4-13 |
| Beaded Tubing Joints | 4-2h |
| Beading Large Tubing | F4-11 |
| Bend Radii for Conduit and Fluid Lines | T4-1 |
| Bend Radii of Hose for Fuel, Oil, and Coolant Systems | T4-32 |
| Bending Machine, Bending Tube with | F4-4 |
| Bending Tube with Bending Machine | F4-4 |
| Bending Tubing | 4-2e |
| Bends, Installation of Flexible Hose | 4-2c |
| Bent-Axis Constant-Volume Pump | F4-101 |
| Bleeding Brake Hydraulic System | F4-160 |
| Blocked Flowing Hydraulic Fuse | F4-142 |
| Boss Installation, Torque Valves for | T4-7 |
| Brake Assembly, Disc | F4-151 |
| Brake Assembly, Disc, Cross Section | F4-152 |
| Brake Bleeding, Gravity Method for | F4-161 |
| Brake Hydraulic System, Bleeding | F4-160 |
| Brake System, Rotor Blade | F4-159 |
| Brake Systems, Aircraft | 4-18 |

INDEX - CONT

VOLUME 2

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

B - Continued

| | |
|--|-------|
| Bulge, Coupling, Low-and Medium-Pressure Hose Assemblies | F4-44 |
| Bulge, Coupling, MIL-H-7061 Hose Assembly | T4-30 |
| Bulkhead and Universal Fitting Assembly, Combination | T4-27 |

C

| | |
|--|--------|
| Chafing, Installation of Flexible Hose | 4-6f |
| Check Valve, Orifice | F4-128 |
| Check Valve, Simple | F4-127 |
| Check Valves | 4-16c |
| Checking Swaged Joint with D9892 Inspection Gauge | F4-85 |
| Chipless Cutter..... | F4-81 |
| Clamp Sizes, Support (For Use with MIL-H-38360 Hose of Teflon) | T4-29 |
| Cleaning (of 55-Gallon Drums) | 3-3b |
| Cleaning Tubing..... | 4-2b |
| Clogged Filters In Differential Pressure Indicator | F4-100 |
| Clogged Fluid Filter | F4-98 |
| Closed Center Hydraulic System | 4-17b |
| Combination Bulkhead and Universal Fitting Assembly | F4-27 |
| Complex Shock Strut (Metering Pin) | F4-171 |
| Complex Shock Strut (Plunger) | F4-172 |
| Components, MS Fitting and..... | F4-17 |
| Compound Master Cylinder | F4-149 |
| Computation of Force, Area, and Pressure | 2-1b |
| Computation of Volume, Area, and Length of Stroke | 2-1c |
| Computing Force, Pressure, and Area | F2-1 |
| Computing Volume, Length, and Area | F2-2 |
| Conduit and Fluid Lines, Bend Radii for | T4-1 |
| Connections, Tubing-to-Tubing | F4-22 |
| Constant-Volume Pump, Bent-Axis | F4-101 |
| Constant Volume Pump Foot Valve | F4-104 |
| Constant Volume Pump (Piston Installation) | F4-102 |
| Constant Volume Pump (Piston Operation) | F4-103 |
| Consumable Materials..... | 1-3 |
| Contamination, Fluid | 2-4 |
| Contamination Prevention | 2-4c |
| Control Units, Flow | 4-16 |
| Control Valve, Power Brake (Brake Applied) | F4-152 |
| Control Valve, Power Brake (Brake Released) | F4-153 |
| Control Valve, Solenoid-Actuated (De-energized) | F4-126 |
| Control Valve, Solenoid-Actuated (Energized) | F4-125 |

INDEX - CONT

VOLUME 2

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

C - Continued

| | |
|--|--------|
| Control Valves | 4-16b |
| Conversion of Aircraft to Fire-Resistant Hydraulic Fluid | 4-21 |
| Applications of MIL-H-83282 | 4-21c |
| Conversion Procedures | 4-21e |
| Hydraulic Fluid MIL-H-5606 | 4-21a |
| Hydraulic Fluid MIL-H-83282 | 4-21b |
| Non-Applicability of MIL-H-83282 | 4-21d |
| Operating Temperature Limitations | 4-21f |
| Conversion Procedures (MIL-H-5606 to MIL-H-83282) | 4-21e |
| Coupling Bulge, Low-and Medium-Pressure Hose Assemblies | F4-44 |
| Coupling Bulge, MIL-H-7061 Hose Assembly | T4-30 |
| Couplings, Quick-Disconnect | 4-10 |
| Cross Section, Piston Damper | F4-163 |
| Cross Section, Vane Damper | F4-168 |
| Cutoff Factor, MIL-H-8788 or MIL-H-8790 (in Inches) | T4-15 |
| Cutoff Factors, MIL-H-38360 Hose (in Inches)..... | T4-27 |
| Cutoff Factors, Teflon Hose (in Inches) | T4-22 |
| Cutter, Chipless | F4-81 |
| Cutting Flexible Hose, Knife for | F4-39 |
| Cutting, Marking Tube Prior to | F4-46 |
| Cutting, Tube with Tube Cutter | F4-3 |
| Cutting Tubing | 4-2d |

D

| | |
|---|---------------|
| Damaged Fittings | F4-29 |
| Dampening and Absorbing Units | 4-19 |
| Hydraulic Damper | 4-19a |
| Liquid Springs | 4-19c, F4-174 |
| Shock Struts | 4-19b |
| Damper, Piston | F4-162 |
| Damper, Vane | F4-166 |
| Data Drawing, Tube Bend | F4-6 |
| Detecting Fluid Contamination | 2-4a |
| Determining Hose Assembly Length | F4-40 |
| Determining Tube Thickness and Burst Pressure | T4-11 |
| Devices for Regulating Pressure | 4-14 |
| Pressure Gauges | 4-14a |
| Pressure Reducing Valves | 4-14d |
| Pressure Relief Valves | 4-14c |
| Pressure Switches | 4-14b |

INDEX - CONT

VOLUME 2

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

D - Continued

| | |
|--|--------|
| Differential Pressure Indicator (Clogged Filters) | F4-99 |
| Differential Pressure Indicator (Normal Flow) | F4-100 |
| Dimensions, After Swage | F4-86 |
| Dimensions, Beading | F4-13 |
| Dimensions for Double-Flared Tubing | F4-8 |
| Dimensions for Single-Flared Tubing | F4-7 |
| Disc Brake Assembly | F4-154 |
| Disc Brake Assembly Cross Section | F4-155 |
| Distance Between Supports for Fluid Tubing, Maximum | T4-12 |
| Double Backup Ring Installation | F4-76 |
| Double Lap Flare, Tubing with | F4-11 |
| Double-Action Actuating Cylinder (Extension) | F4-134 |
| Double-Action Actuating Cylinder (Retraction) | F4-135 |
| Double-Action Hand Pump | F4-111 |
| Double-Flared Tubing, Dimensions for | F4-8 |
| Dual Internal O-Ring Removal | F4-64 |
| Dual Parking Brake Valve | F4-156 |
| Dual Parking Brake Valve (Off) | F4-157 |
| Dual Parking Brake Valve (On) | F4-158 |
| Dust Cap (AN-SAE Function), Plastic Protective | F4-56 |
| Dust Cap, Plastic Protective | F4-55 |
| Dust Cap, Steel Protective | F4-53 |
| Dust Plug and Moisture Seal, Aluminum Protective | F4-54 |
| Dust Plug and Moisture Seal (AN-SAE Threaded) Plastic Protective | F4-51 |
| Dust Plug and Moisture Seal, Steel Protective | F4-52 |

E

| | |
|---|-------------|
| Ease of Installation (of Hydraulic Systems) | 2-2c |
| Ease of Operation (of Hydraulic Systems) | 2-2b |
| Efficiency (of Hydraulic Systems) | 2-2a |
| Elliptical Rings | 4-7b, F4-70 |
| External O-Ring Installation | F4-69 |
| External O-Ring Removal (Spoon-Type Tools) | F4-65 |
| External O-Ring Removal (Wedge-Type Tools) | F4-66 |

F

| | |
|---|-------|
| Failure Modes and Recommended (Permaswage) Repair Methods | F4-79 |
| Field Assembly of High Pressure Teflon Hose, MIL-H-38360 | F4-50 |
| Field Disassembly of Teflon Hose | F4-45 |

INDEX - CONT

VOLUME 2

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| F - Continued | |
| Field Fabrication of High-Pressure Hose Assemblies | F4-41 |
| Filter Element Bypass Valve, Hydraulic Reservoirs | 4-11f |
| Filter Elements, Hydraulic Reservoirs | 4-11e |
| Filter Elements, Hydraulic Systems Filters | 4-12c |
| Filter Elements, Reservoir with | F4-94 |
| Filter, Fluid, Assembly | F4-96 |
| Filters, Hydraulic System | 4-12 |
| Finger Strainers, Hydraulic Reservoirs | 4-11 d |
| Fingertight-Plus Turns Methods, Hose Clamp Tightening | T4-10 |
| Fingertight-Plus Turns Methods, Hose Clamp Tightening, Beaded Tubing | F4-3 |
| Fitting Dimensions After Swaging | T4-39 |
| Fittings 4-3 | |
| Flared Fittings | 4-39 |
| Flareless Fittings | 4-3a |
| Oxygen System Tapered Pipe Thread | 4-3b |
| Rosan Fluid Fittings | 4-3f |
| Straight Pipe Thread | 4-3c |
| Universal Fittings AN 832, AN 833, and AN 834, High Pressure | 4-3e9A |
| Universal Fittings AN 832, AN 833, and AN 834, Low Pressure | 4-3d |
| Fittings, Damaged | F4-29 |
| Fittings, Tubing | F4-15 |
| Flame and Aromatic Resistant Hose, MIL-H-8794 | F4-34 |
| Flame, Aromatic, and Oil-Resistant Hose, MIL-H-7938 | F4-36 |
| Flared Fitting Identification, AN | T4-9 |
| Flared Fittings | 4-3g |
| Flareless Fitting Installation, Bulkhead | F4-24, T4-4 |
| Flareless Fittings | 4-3a |
| Flareless Fittings, MS | F4-18 |
| Flaring Tubing | 4-2f |
| Flexible Hose Assemblies | |
| Assembly of High-Pressure Tetrafluoroethylene (Teflon) | |
| Hose Assemblies | 4-5j |
| Assembly of Medium-Pressure Tetrafluoroethylene (Teflon) | |
| Hose Assemblies | 4-5i |
| Identification of Flexible Hose | 4-5a |
| Identification Tags for Field Fabricated Hose Assemblies | 4-5g, F4-42 |
| Instructions for Assembly of High-Pressure (3000 psi) | |
| Hose Assemblies MS28759 and MS28762 | 4-5e |
| Instructions for Assembly of Medium-Pressure, MS28741, and | |
| Low-Pressure, AN6270, Hose Assemblies | 4-5h |
| Instructions for Repair of Flexible Rubber Hose | 4-5d |
| Proof Testing of Flexible Hose Assemblies | 4-5f |

INDEX - CONT

VOLUME XX

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

F - Continued

| | |
|--|---------------|
| Replacement of Flexible Hose | 4-5c |
| Self-Sealing Hose for Aromatic Fuel, MIL-H-7061 | 4-5k |
| Storage of Hose and Hose Assemblies | 4-5b |
| Use of Dust Plugs, Dust Caps, and Moisture Seals | 4-51 |
| Flexible Hose, Installation of | 4-6 |
| Floating Piston Shock Strut | F4-173 |
| Floating Piston Shuttle Valve | F4-132 |
| Flow Control Units | 4-16 |
| Actuating Cylinders (Actuators) | 4-16g |
| Check Valves | 4-16c |
| Control Valves | 4-16b |
| Hydraulic Fuses | 4-16k |
| Hydraulic Servos | 4-16i, F4-138 |
| Irreversible Valves | 4-16j, F4-139 |
| Maintenance of Hydraulic Flow Control Units | 4-161 |
| Priority Valves | 4-16e |
| Ratchet Valve | 4-16h |
| Selector Valves | 4-16a |
| Sequence Valves | 4-16d |
| Shuttle Valves | 4-16f |
| Fluid Contamination | 2-4 |
| Contamination Prevention | 2-4c |
| Detecting Fluid Contamination | 2-4a |
| System Flushing | 2-4b |
| Fluid Dispenser, Hydraulic | F3-6 |
| Fluid Filter Assembly | F4-96 |
| Fluid Filter (Clogged) | F4-98 |
| Fluid Filter (Normal Flow) | F4-97 |
| Fluid-Pressurized Reservoir (Pressurized) | F4-93 |
| Fluid-Pressurized Reservoir (Unpressurized) | F4-92 |
| Full Flow in Hydraulic Fuse | F4-141 |
| Fuse Assembly, Hydraulic | F4-140 |

G

| | |
|---|--------|
| Gasket Installation, MS Fitting | F4-19 |
| Gauge, Pressure | F4-114 |
| General Hydraulic Maintenance Practices | 4-1 |
| General Shop Rules (Hydraulic Shop) | 3-1 |
| Responsibility | 3-11a |
| Shop Housekeeping | 3-1b |
| Shop Safety | 3-1id |

INDEX - CONT

VOLUME 2

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

G - Continued

| | |
|---|--------|
| Shop Tools and Materials | 3-1c |
| Gravity Method for Brake Bleeding | F4-161 |

H

| | |
|--|--------|
| Hand Pump Test Circuit | F4-112 |
| Hand Pumps | 4-13c |
| Handling of Hydraulic Fluid in 55-Gallon Drums | 3-3 |
| Cleaning | 3-3b |
| Storage | 3-3a |
| Transporting Fluid to Aircraft | 3-3d |
| Withdrawing Fluid from Drum | 3-3c |
| Helicopter Rotor Brake Systems | 4-18d |
| High-Pressure Air Valve Cores | F4-174 |
| High-Pressure Hose Assemblies, Field Fabrication of | F4-41 |
| High-Pressure Teflon Hose, MIL-H-38360, Field Assembly of | F4-50 |
| High-Pressure Tubing, Repairing..... | F4-33 |
| Hose Assemblies, Flexible | 4-5 |
| Hose Assembly Length, Determining | F4-42 |
| Hose Clamp, In Installation of Flexible Hose | 4-61 |
| Hose Clamp Tightening, Fingertight-Plus Turns Method | T4-10 |
| Hose Clamp Tightening, Fingertight-Plus Turns Method, Beaded Tubing | T4-3 |
| Hose Clamp, Tightening, With Socket | F4-32 |
| Hose Connections to Engines, Installation of Flexible Hose | 4-6h |
| Hose Cutoff Factor, MIL-H-8788 or MIL-H-8790 Hose (in Inches) | T4-14 |
| Hose Cutoff Factors, MIL-H-38360 Hose (in Inches) | T4-27 |
| Hose End Fitting and Coupling Nut Installation Torque In Inch-Pounds | T4-34 |
| Hose Installation, Flexible Hose | 4-5b |
| Hose Line Installation Aids for All Types of Hoses | F4-57 |
| Hose Markings, and Installation of Flexible Hose | 4-6j |
| Hose, MIL-F-27272, Tetrafluoroethylene (in Inches) | T4-21 |
| Hose, MIL-H-38360, Tetrafluoroethylene (in Inches) | T4-27 |
| Hose Restrictions, Installation of Flexible Hose | 4-6d |
| Hydraulic Dampers | 4-19a |
| Hydraulic Filler and Bleeder Unit | 3-2a |
| Hydraulic Fluid (Fire Resistant), Conversion of Aircraft to | 4-21 |
| Hydraulic Fluid in Army Aircraft, Types | 2-3 |
| Hydraulic Fluid in 55-Gallon Drums, Handling of | 3-3 |
| Hydraulic Fluid MIL-H-5606 | 4-21a |
| Hydraulic Fluid MIL-H-83282 | 4-21b |
| Hydraulic Fuse Assembly | F4-140 |
| Hydraulic Fuse (Blocked Flow) | F4-142 |
| Hydraulic Fuse (Full Flow) | F4-141 |

INDEX - CONT

VOLUME 2

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

H - Continued

| | |
|---|---------------|
| Hydraulic Hose Testing Unit | 3-2d |
| Hydraulic Hose Testing Unit, Typical | F3-3 |
| Hydraulic Maintenance Practices, General | 4-1 |
| Hydraulic Motor | F4-113 |
| Hydraulic Motors | 4-13d |
| Hydraulic Packings and O-Rings | 4-7 |
| Elliptical Rings | 4-7b, F4-70 |
| O-Rings | 4-7a |
| V-Ring Packings | 4-7c |
| Hydraulic Reservoirs | 4-11 |
| Air Cylinders | 4-11 h |
| Baffles and Fins | 4-11c |
| Filter Element Bypass Valve | 4-11f |
| Filter Elements | 4-11 e |
| Finger Strainers | 4-11 d |
| Maintenance of Reservoirs | 4-111 |
| Standpipes | 4-11g |
| Theory of Operation | 4-11 b |
| Types of Hydraulic Reservoirs Used in Hydraulic Systems | 4-11 a |
| Hydraulic Servos | 4-161, F4-138 |
| Hydraulic System Filler and Bleeder, Typical | F3-1 |
| Hydraulic System Filters | 4-12 |
| Air Filters | 4-12e |
| Filter Elements | 4-12c |
| Servicing Filters | 4-12f |
| Theory of Operation | 4-12b |
| Two-Stage Fluid Filters | 4-12d |
| Uses of Filters In Hydraulic Systems | 4-12a |
| Hydraulic System, Open-Center (Valve Closed) | F4-143 |
| Hydraulic System, Open-Center (Valve Open) | F4-144 |
| Hydraulic Systems In Army Aircraft, Use of | 2-2 |
| Hydraulic Test Stand, Fixed | 3-2b |
| Hydraulic Test Stand, Portable, Gasoline Engine-Driven | 3-2c |
| Hydraulic Test Stand, Typical Gasoline Engine-Driven | F3-2 |

I

| | |
|--|-------------|
| Identification of Backup Rings | 4-8a |
| Identification of Flexible Hose | 4-5a |
| Identification of O-Rings | F4-63 |
| Identification Tags for Field Fabricated Hose Assemblies | 4-5g, F4-42 |
| Identification Tape, Printed-Symbol | F4-1 |
| In-Line Cam-Operated Selector Valve (Actuator Extending) | F4-123 |

INDEX - CONT

VOLUME 2

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| I - Continued | |
| In-Line Cam-Operated Selector Valve (Actuator Retracting) | F4-122 |
| Inspection | |
| of Quick Disconnect Coupling | 4-10b |
| of Swaged Joint | 4-9g |
| Inspection Ball Size Chart | T4-13 |
| Inspection Checking (of Swaging), Troubleshooting Guide for | T4-38 |
| Installation | |
| Hose | 4-6b |
| of Backup Rings | 4-8b |
| of Beaded Tubing | 4-2j |
| of Flared Tubing | 4-21i |
| of Flexible Hose | 4-6 |
| of Quick-Disconnect Couplings | 4-10a |
| Installation Aids, Hose Line, for all Types of Hose | F4-57 |
| Installation of Flexible Hose | 4-6 |
| Bends | 4-6c |
| Chafing | 4-6f |
| Hose Clamp | 4-6i |
| Hose Connections to Engines | 4-6h |
| Hose Installation | 4-6b |
| Hose Markings | 4-6j |
| Hose Restrictions | 4-6d |
| Lubrication | 4-6a |
| MS Flared Swivel Connections Torquing | 4-6k |
| Support | 4-6e |
| Temperature Protection | 4-6g |
| Installation of Leather Backup Rings | F4-77 |
| Installation of MS33514 Fitting End | F4-25 |
| Installation Procedures, Teflon Hose, Right and Wrong | F4-49 |
| Installation Torque Values MS Flared Swivel | F4-25 |
| Installation Torque Values MS Flared Swivel Nut Fittings (Reference AND100064) | T4-33 |
| Installed Low-Pressure Hose | F4-16 |
| Installing Teflon Backup Ring | F4-73 |
| Instructions | |
| for Assembly of High Pressure (3000 psi) Hose Assemblies MS28759 and MS28762 | 4-5e |
| for Assembly of Medium-Pressure, MS28741, and Low-Pressure, AN6270, Hose Assemblies | 4-5h |
| for Repair of Flexible Rubber Hose | 4-5d |
| Internal O-Ring Installation (Metallic Sleeve) | F4-68 |
| Internal O-Ring Installation (Paper Cover) | F4-67 |
| Internal O-Ring Removal (Pull-Type Extractor) | F4-61 |

INDEX - CONT

VOLUME 2

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

I - Continued

| | |
|--|---------------|
| Internal O-Ring Removal (Push-Type Extractor) | F4-63 |
| Internal O-Ring Removal (Wedge-Type Extractor) | F4-62 |
| Introduction | |
| Consumable Materials | 1-3 |
| Purpose | 1-1 |
| Scope | 1-2 |
| Irreversible Valves | 4-16j, F4-139 |

J

| | |
|--|------|
| Jamnut (AN924) Used on Fittings, Torque Values for | T4-8 |
|--|------|

K

| | |
|--|--------|
| Kellogg Stroke Reduction Pump Assembly..... | F4-109 |
| Kellogg Stroke Reduction Pump (Reduced Output) | F4-110 |
| Knife for Cutting Flexible Hose | F4-39 |

L

| | |
|---|---------------|
| Landing Gear System Using Mechanically Actuated Sequence Valves | F4-129 |
| Large Tubing, Beading | F4-12 |
| Liquid Spring, Tailwheel | F4-176 |
| Liquid Springs | 4-19c, F4-175 |
| Low-Pressure Hose, Installed | F4-16 |
| Low-Pressure Tubing, Repair of | F4-30 |
| Low-Pressure Tubing Repair, Tubing End Clearance for | F4-31 |
| Lubricant Selection, Packing and | T4-6 |
| Lubrication (during Installation of Flexible Hose) | 4-6a |
| Lubrication (of Hydraulic Systems) | 2-2e |

M

| | |
|---|--------|
| Main Rotor Assembly with Piston Dampers | F4-168 |
| Maintenance of Accumulators | 4-15c |
| Maintenance of Brake Systems | 4-18e |
| Maintenance of Power Pumps | 4-13b |
| Maintenance of Reservoirs | 4-111 |
| Maintenance of Shop Equipment | 3-2 |
| Hydraulic Filler and Bleeder Unit | 3-2a |
| Hydraulic Hose Testing Unit | 3-2d |

INDEX - CONT

VOLUME 2

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

M - Continued

| | |
|---|--------------|
| Hydraulic Test Stand, Fixed | 3-2b |
| Hydraulic Test Stand, Portable, Gasoline Engine-Driven | 3-2c |
| Master Gauge Unit | 3-2f |
| Tube Bending Machine, Hand-Operated | 3-2e |
| Marking MS Fittings | F4-23 |
| Marking, Tube End | F4-83 |
| Marking with Permaswage Marking Tool, D9862-S, M, and L | F4-82 |
| Master Cylinder, Compound | F4-149 |
| Master Cylinder, Power-Boost (Brake Applied) | F4-150 |
| Master Cylinder, Power-Boost (Brake Released) | F4-151 |
| Master Cylinder, Simple | F4-148 |
| Master Gauge Unit | 3-2f |
| Master Gauge Unit, Typical | F3-5 |
| Maximum Distance Between Supports for Fluid Tubing | T4-12 |
| Mechanical Advantage | 2-1e, F2-4 |
| Mechanical Advantage, Application of | F2-5 |
| Medium-and Low-Pressure Hose Assemblies, Assembly of | F4-45 |
| Medium-Pressure Teflon Hose Assembly Procedure | F4-48 |
| MIL-H-83282, Applications of | F4-43 |
| MIL-H-83282, Non-Applicability of | 4-21d, T4-44 |
| MIL-H-83282, Operating Temperature Limitations of | T4-45 |
| Minimum Bend Radii of Hose for Fuel Oil, and Coolant Systems | T4-32 |
| Motor, Hydraulic | F4-113 |
| Motors, Pumps and | 4-13 |
| MS Fitting and Components | F4-17 |
| MS Fitting Gasket Installation | F4-19 |
| MS Fittings, Marking | F4-23 |
| MS Flared Swivel Connectors Torquing, and Installation of Flexible Hose | 4-6k |
| MS Flareless Fittings | F4-18 |
| MS Turns and Torque Valves | F4-21 |
| MS21921 Coupling Nut, Torque Values for | T4-5 |
| MS33514 Fitting End, Installation of | F4-25 |

N

| | |
|---|---------------|
| Nipple Assembly Clearance | F4-47 |
| Nipple Assembly Surface | F4-46 |
| Non-Applicability of MIL-H-83282 | 4-21 d, T4-44 |
| Nonself-Sealing, Aromatic and Heat-Resistant Hose, MIL-H-6000 | F4-35 |
| Nonself-Sealing, Aromatic-Resistant Hose, MIL-H-5593 | F4-37 |
| Normal Flow in Differential Pressure Indicator | F4-99 |
| Normal Flow in Fluid Filter | F4-97 |

INDEX - CONT

VOLUME 2

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

N - Continued

| | |
|---|--------|
| Nose Landing Gear with Piston Damper | F4-164 |
| Nose Landing Gear with Vane Damper | F4-168 |
| Nut Installation Torque in Inch-Pounds, Hose End Fitting and Coupling | T4-34 |

O

| | |
|---|--------|
| O-Ring Identification | F4-59 |
| O-Ring Installation, External | F4-69 |
| O-Ring Installation, Internal (Metallic Sleeve) | F4-68 |
| O-Ring Installation, Internal (Paper Cover) | F4-69 |
| O-Ring, Removal of | F4-60 |
| O-Ring Removal, Dual Internal | F4-64 |
| O-Ring Removal, External (Spoon-Type Extractor) | F4-65 |
| O-Ring Removal, External (Wedge-Type Extractor) | F4-66 |
| O-Ring Removal, Internal (Pull-Type Extractor) | F4-61 |
| O-Ring Removal, Internal (Push-Type Extractor) | F4-63 |
| O-Ring Removal, Internal (Wedge-Type Extractor) | F4-62 |
| O-Rings | 4-7a |
| Open-Center Hydraulic System (Value Closed) | F4-143 |
| Open-Center Hydraulic System (Value Open) | F4-144 |
| Operating Pressure (psi) for MIL-H-7061, Proof Test and..... | T4-31 |
| Operating, Proof, and Burst Test Pressures for AN6270 Hose Assembly using MIL-H-5593 Low Pressure Hose | T4-19 |
| Operating, Proof, and Burst Test Pressures for MIL-H-83796 Medium Pressure Hose Assembly, Lightweight | T4-17 |
| Operating, Proof, and Burst Test Pressures for MIL-H-83797 Medium Pressure Hose | T4-18 |
| Operating, Proof, and Burst Test Pressures for MS28741 Medium Pressure Hose Assemblies, using Single Wire Braid Hose, Military Specification MIL-H-8794 | T4-16 |
| Operating, Proof, and Burst Test Pressures for MS28759 and MS28762 Hose Assemblies using MIL-H-8788 High Pressure Hose..... | T4-15 |
| Operating Temperature Limitations (of Hydraulic Fluid) | 4-21f |
| Operating Temperature Limitations of MIL-H-83282 | T4-45 |
| Orifice Check Valve | F4-128 |
| Oxygen System Tapered Pipe Thread | 4-3b |

P

| | |
|---------------------------------------|------|
| Packing and Lubricant Selection | T4-6 |
| Packings and O-Rings, Hydraulic | 4-7 |

INDEX - CONT

VOLUME 2

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| P - Continued | |
| Parking Brake Valve, Dual | F4-156 |
| Parking Brake Valve, Dual (Off) | F4-157 |
| Parking Brake Valve, Dual (On) | F4-158 |
| Pascal's Law | 2-1d, F2-3 |
| Permaswage Fittings, Typical Styles of | F4-78 |
| Permaswage Marking Tool, D9862-S, M, and L, Marking with | F4-82 |
| Permaswage Repair with D10000 Series Tooling-Tube Material and Maximum Operating Pressure Limitations (psi) | T4-35 |
| Petroleum-Base Fluid (Hydraulic) | 2-3b |
| Pipe Thread, Straight Thread and | F4-26 |
| Piston Damper | F4-162 |
| Piston Damper Cross Section | F4-163 |
| Piston Damper, Nose Landing Gear with | F4-164 |
| Piston Dampers, Main Rotor Assembly with | F4-165 |
| Piston-Type Pressure Switch | F4-115 |
| Plastic Protective Dust Cap | F4-55 |
| Plastic Protective Dust Cap (AN-SAE Friction) | F4-56 |
| Plastic Protective Dust Plug and Moisture Seal (AN-SAE Threaded) | F4-51 |
| Pneudraulic Systems, Types of | 4-17 |
| Closed-Center Hydraulic | 4-17b |
| Open-Center Hydraulic | 4-17a |
| Pneumatic System | 4-17c |
| Pneudraulics Theory and Basic Principles | 2-1 |
| Computation of Force, Area, and Pressure | 2-1b |
| Computation of Volume, Area, and Length of Stroke | 2-1c |
| Mechanical Advantage | 2-1e, F2-4 |
| Pascal's Law | 2-1d, F2-3 |
| Qualities of Hydraulic Fluid | 2-1 a |
| Use of Air in Hydraulic Systems | 2-1f |
| Pneumatic System | 4-17c |
| Power Brake Control Valve (Brake Applied) | F4-152 |
| Power Brake Control Valve (Brake Released) | F4-153 |
| Power Pumps | 4-13a |
| Power-Boost Master Cylinder (Brake Applied) | F4-150 |
| Power-Boost Master Cylinder (Brake Released) | F4-151 |
| Precautions for Hydraulic Fluid Selection and Contamination | 2-3d |
| for Repair of Tubing Assemblies | 4-4a |
| Pressure Gauge | F4-114 |
| Pressure Gauges | 4-14a |
| Pressure Reducing Valve | 4-14d |
| Pressure Relief Valves | 4-14c |
| Pressure Switch, Piston-Type | F4-115 |

INDEX - CONT

VOLUME XX

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

P - Continued

| | |
|--|--------|
| Pressure Switches | 4-14b |
| Pressure-Actuated Sequence Valve | F4-130 |
| Pressure-Reducing Valve | F4-117 |
| Pressures, Proof Test, High-Pressure Teflon Hose Assemblies | T4-30 |
| Pressures, Proof Test, Medium-Pressure Teflon Hose Assemblies | T4-23 |
| Printed-Symbol Identification Tape | F4-1 |
| Priority Valve | F4-131 |
| Procedures, for Use of Test Stands | 4-20b |
| Proof Test and Operating Pressure (psi) for MIL-H-7061 | T4-31 |
| Proof Test Pressures, High-Pressure Teflon Hose Assemblies | T4-28 |
| Proof Test Pressures, Medium-Pressure Teflon Hose Assemblies | T4-23 |
| Proof Test Torque Values MS Flared Swivel Nut Fittings (Reference AND10064) | T4-20 |
| Proof Testing of Flexible Hose Assemblies | 4-5f |
| Properly Burred Tube | F4-9 |
| Pump Assembly, Kellogg Stroke Reduction | F4-109 |
| Pump, Constant Volume, Bent-Axis | F4-101 |
| Pump, Constant Volume, Foot Valve | F4-104 |
| Pump, Constant Volume, (Piston Installation) | F4-102 |
| Pump, Constant Volume, (Piston Operation) | F4-103 |
| Pump, Hand, Double-Action | F4-111 |
| Pump, Hand, Test Circuit | F4-112 |
| Pump, Kellogg Stroke Reduction (Reduction Output) | F4-110 |
| Pump, Stratopower Effective Stroke (Full Flow) | F4-105 |
| Pump, Stratopower Effective Stroke (Zero Flow) | F4-106 |
| Pump, Vickers Stroke Reduction (Full Flow) | F4-108 |
| Pump, Vickers Stroke Reduction (Zero Flow) | F4-107 |
| Pumps and Motors | 4-13 |
| Hand Pumps | 4-13c |
| Hydraulic Motors | 4-13d |
| Maintenance of Power Pumps | 4-13b |
| Power Pumps | 4-13a |
| Purpose (of Manual) | 1-1 |

Q

| | |
|------------------------------------|-------|
| Qualities of Hydraulic Fluid | 2-1a |
| Quick-Disconnect Couplings | 4-10 |
| Inspection | 4-10b |
| Installation | 4-10a |

INDEX - CONT

VOLUME XX

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| R | |
| Rachet Valve | 4-16h |
| Rachet Valve (Moving) | F4-137 |
| Rachet Valve (Static) | F4-136 |
| Radial Cam-Operated Selector Valve | F4-124 |
| Recommended (Permaswage) Repair Methods, Failure Modes and | F4-79 |
| Regulating Pressure, Devices for | 4-14 |
| Relief Valve, System | F4-116 |
| Repair | |
| of High-Pressure Tubing Assemblies | 4-4c |
| of Low-Pressure Tubing Assemblies | 4-4b |
| of Tubing Assemblies | 4-4 |
| Repair of Low-Pressure Tubing | F4-30 |
| Repair of Tubing Assemblies | 4-4 |
| Precautions | 4-4a |
| Repair of High-Pressure Tubing Assemblies | 4-4c |
| Repair of Low-Pressure Tubing Assemblies | 4-4b |
| Template | 4-4d |
| Repairing High-Pressure Tubing | F4-33 |
| Replacement of Flexible Hose | 4-5c |
| Reservoir, Fluid-Pressurized (Pressurized) | F4-93 |
| Reservoir, Fluid-Pressurized (Unpressurized) | F4-92 |
| Reservoir with Baffles, Fins and Finger Strainer | F4-91 |
| Reservoir with Filter Elements | F4-94 |
| Reservoirs, Hydraulic | 4-11 |
| Responsibility (for Hydraulic Shop Rules) | 3-1a |
| Reversing Spiral of Teflon Backup Ring | F4-74 |
| Rings, Backup | 4-8 |
| Rotary-Type, Closed-Center Selector Valve | F4-120 |
| Rotor Blade Brake System | F4-159 |
| S | |
| Safety (in Use of Test Stands) | 4-20a |
| Scope (of Manual) | 1-2 |
| Selector Valve A Closed | F4-145 |
| Selector Valve B Open | F4-146 |
| Selector Valve C Open | F4-147 |
| Selector Valve, In-Line Cam-Operated (Actuator Extending) | F4-123 |
| Selector Valve, In-Line Cam-Operated (Actuator Retracting) | F4-122 |
| Selector Valve, Radial Cam-Operated | F4-124 |
| Selector Valve, Rotary-Type, Closed-Center | F4-120 |
| Selector Valve, Spool-Type, Open-Center (Closed) | F4-121 |

INDEX- CONT

VOLUME 2

Subject

Paragraph, Figure, Table Number

S - Continued

| | |
|--|--------|
| Selector Valves | 4-16a |
| Self-Sealing, Aromatic-Resisting, Hose MIL-H-7061 | F4-38 |
| Self-Sealing, Hose for Aromatic Fuel, MIL-H-7061 | 4-5k |
| Separable Fittings, Utilizing 0.150 Tube End Gap Tolerance on | F4-89 |
| Sequence Valve, Landing Gear System Using Mechanically Actuated | F4-129 |
| Sequence Valve, Pressure-Actuated | F4-130 |
| Sequence Valves | 4-16d |
| Servicing Filters | 4-12f |
| Shaped Fittings, Utilizing 0.300 Inch Tube End Gap Tolerance on | F4-92 |
| Shock Strut, Complex (Metering Pin) | F4-171 |
| Shock Strut, Complex (Plunger) | F4-172 |
| Shock Strut, Floating Pin | F4-173 |
| Shock Strut, Simple | F4-170 |
| Shock Struts | 4-19b |
| Shop Equipment, Maintenance | 3-2 |
| Shop Housekeeping (Hydraulic Shop) | 3-1b |
| Shop Rules, General (Hydraulic Shop) | 3-1 |
| Shop Safety (Hydraulic Shop) | 3-1c |
| Shop Tools and Materials (Hydraulic Shop) | 3-1d |
| Shuttle Valve, Floating-Piston | F4-132 |
| Shuttle Valves | 4-16f |
| Simple Check Valve | F4-127 |
| Simple Master Cylinder | F4-148 |
| Simple Shock Strut | F4-170 |
| Single Backup Ring Installation | F4-75 |
| Single Flared Tubing, Dimensions for | F4-7 |
| Single-Action Actuating Cylinder | F4-133 |
| Size (of Hydraulic Systems) | 2-2d |
| Solenoid-Actuated Control Valve (De-energized) | F4-126 |
| Solenoid-Actuated Control Valve (Energized) | F4-125 |
| Solid Color Band Identification | F4-2 |
| Spherical Accumulator | F4-119 |
| Spherical Air Cylinder | F4-95 |
| Spool-Type, Open-Center, Selector Valve (Closed) | F4-121 |
| Stabilizer Bar with Vane Dampers | F4-169 |
| Standard Union Fittings, Tube Insertion Limits when Using | F4-90 |
| Standard Union Fittings, Utilizing 0.300 Inch Tube End Gap Tolerance with | F4-87 |
| Standpipes | 4-11g |
| Steel Protective Dust Cap | F4-53 |
| Steel Protective Dust Plug and Moisture Seal | F4-52 |
| Storage of Hose and Hose Assemblies | 4-5b |
| Storage (55-Gallon Drums) | 3-3a |

INDEX- CONT

VOLUME 2

| Subject | Paragraph, Figure, Table Number |
|---------|---------------------------------------|
|---------|---------------------------------------|

S - Continued

| | |
|--|--------|
| Straight Pipe Thread | 4-3c |
| Straight Thread and Pipe Thread | F4-26 |
| Stratopower Effective Stroke Pump (Full Flow) | F4-105 |
| Stratopower Effective Stroke Pump (Zero Flow) | F4-106 |
| Stretching Teflon Backup Ring | F4-72 |
| Support Clamp Sizes (for Use with MIL-H-27267 Hose of Teflon) | T4-24 |
| Support Clamp Sizes (for Use with MIL-H-38360 Hose of Teflon) | T4-29 |
| Support, of Flexible Hose | 4-6e |
| Swage Tool Assembly Showing Lower Die Block Assembly and Position of Fitting Locator, Basic | F4-84 |
| Swaged Joint, Checking, with D9892 Inspection Gauge | F4-85 |
| Swaged Tubing Repairs | 4-9 |
| Application | 4-9a |
| Inspection of Swaged Joint | 4-9g |
| Swaging Operation | 4-9f |
| Technique | 4-9b |
| Tube Cutting | 4-9c |
| Tube Deburring | 4-9d |
| Tube End Preparation | 4-9e |
| Swaging, Fitting Dimensions After | T4-39 |
| Swaging Operation | 4-9f |
| Synthetic-Base Fluid MIL-H-83282 | 2-3c |
| System Flushing | 2-4b |
| System Relief Valve | F4-116 |
| Systems and Repairs, Tubing | 4-2 |

T

| | |
|---|--------|
| Tallwheel Liquid Spring | T4-176 |
| Technique, Swaged Tubing Repairs | 4-9b |
| Teflon Hose Assembly Procedure, Medium-Pressure | F4-48 |
| Teflon Hose Cutoff Failures (in Inches) | F4-23 |
| Teflon Hose, Field Disassembly of | F4-47 |
| Teflon Hose Installation Procedures, Right and Wrong | F4-49 |
| Temperature Protection and Installation of Flexible Hose | 4-6g |
| Template for Repair of Tubing Assemblies | 4-4d |
| Test Pressures, Operating, Proof, and Burst, for AN6270 Hose Assembly using MIL-H-5593 Low Pressure Hose | T4-19 |
| Test Pressures, Operating, Proof, and Burst, for MIL-H-83796 Medium Pressure Hose Assembly | T4-17 |
| Test Pressures, Operating, Proof, and Burst, for MIL-H-83797 Medium Pressure Hose | T4-18 |
| Test Pressures, Operating, Proof, and Burst, for MS28741 Medium | |

INDEX- CONT

VOLUME 2

Subject

Paragraph, Figure, Table Number

T - Continued

| | |
|---|--------|
| Test Pressures, Operating, Proof, and Burst, for MS28741 Medium Pressure Hose Assemblies, Using Single Wire Braid Hose, Military Specification MIL-H-8794 | T4-16 |
| Test Pressures, Operating, Proof, and Burst, for MS28759 and MS28762 Hose Assemblies | T4-15 |
| Test Stands, Use of | 4-20 |
| Tetrafluoroethylene Hose MIL-F-27272 (In Inches) | T4-21 |
| Tetrafluoroethylene Hose MIL-H-38360 (in Inches) | T4-26 |
| Theory and Basic Principles of Pneudraulics | 2-1 |
| Theory of Operation, Hydraulic Reservoirs | 4-11 b |
| Theory of Operation, Hydraulics System Filters | 4-12b |
| Tightening Hose Clamp with Socket | F4-32 |
| Tool, Flaring | F4-10 |
| Torque Values for AN924 Jamnut Used On Fittings | T4-8 |
| Torque Values for Boss Installation | T4-7 |
| Torque Values for MS21921 Coupling Nut | T4-5 |
| Torque Values, Hydraulic Tubing B-Nut (AN818) | T4-2 |
| Torque Values, Installation, MS Flared Swivel | T4-25 |
| Torque Values, MS Flared Swivel Nut Fittings (Reference AND10064), Installation | T4-33 |
| Torque Values, MS Flared Swivel Nut Fittings (Reference AND10064), Proof Test | T4-20 |
| Torque Values, MS Turns and | F4-21 |
| Transporting Fluid to Aircraft | 3-3d |
| Troubleshooting Actuators | T4-40 |
| Troubleshooting Guide for Inspection Checking (of Swaging) | T4-38 |
| Troubleshooting Wheel Brake Systems | T4-41 |
| Tube and Fitting Alignment | T4-13 |
| Tube Bend Data Drawing | F4-6 |
| Tube Bending Machine | F3-4 |
| Tube Bending Machine, Hand-Operated | 3-2e |
| Tube Bends, Acceptable and Unacceptable | F4-5 |
| Tube Cutter, Cutting Tube with..... | F4-3 |
| Tube Cutting | 4-9c |
| Tube Deburnng | 4-9d |
| Tube End Marking | F4-83 |
| Tube Insertion Band Location | T4-37 |
| Tube Insertion Limits when Using Standard Union Fittings | F4-90 |
| Tube Material and Maximum Operating Pressure Limitations (psi) for Permaswage Repair with D10000 Senes Tooling | T4-35 |
| Tube, Properly Burred | F4-9 |
| Tube Thickness and Burst Pressure, Determining | T4-11 |
| Tubing Alignment | F4-20 |

INDEX- CONT

VOLUME 2

| Subject | Paragraph, Figure, Table Number |
|---------|---------------------------------------|
|---------|---------------------------------------|

T- Continued

| | |
|---|-------|
| Tubing Assemblies, Repair of | 4-4 |
| Tubing Damage | 4-2c |
| Tubing End Clearance for Low-Pressure Tubing-Repair | F4-31 |
| Tube Fittings | F4-15 |
| Tubing Identification | 4-2b |
| Tubing Repairs, Swaged | 4-9 |
| Tubing Systems and Repairs | 4-2 |
| Beaded Tubing Joints | 4-2h |
| Bending Tubing..... | 4-2e |
| Cleaning Tubing | 4-2g |
| Cutting Tubing | 4-2d |
| Flaring Tubing | 4-2f |
| Installation of Beaded Tubing..... | 4-2j |
| Installation of Flared Tubing | 4-2i |
| Tubing Damage | 4-2c |
| Tubing Identification | 4-2b |
| Types..... | 4-2a |
| Tubing with Double Lap Flare | F4-11 |
| Tubing-to-Tubing Connections | F4-22 |
| Two-Stage Fluid Filters | 4-12d |
| Types of Accumulators | 4-15a |
| Types of Hydraulic Fluid Used in Army Aircraft | 2-3 |
| Petroleum-Base Fluid | 2-3b |
| Precautions | 2-3d |
| Synthetic-Base Fluid MIL-H-83282 | 2-3c |
| Vegetable-Base Fluid..... | 2-3a |
| Types of Hydraulic Reservoirs Used in Hydraulic Systems | 4-11a |
| Types of Pneudraulic Systems | 4-17 |
| Types of Tubing Systems and Repairs | 4-2a |
| Typical Gasoline Engine-Driven Hydraulic Test Stand | F3-2 |
| Typical Hydraulic Hose Testing Unit | F3-3 |
| Typical Hydraulic System Filler and Bleeder | F3-1 |
| Typical Master Gauge Unit | F3-5 |
| Typical Styles of Permaswage Fittings | F4-78 |

U

| | |
|--|------|
| Universal Fittings AN832, AN833, AN834 High Pressure | 4-3e |
| Universal Fittings AN832, AN833, AN834 Low Pressure | 4-3d |
| Use of Air in Hydraulic Systems | 2-1f |
| Use of Dust Plugs, Dust Caps, and Moisture Seals | 4-5l |
| Use of Test Stands | 4-20 |

INDEX- CONT

VOLUME 2

| Subject | Paragraph, Figure, Table Number |
|----------------|--|
|----------------|--|

U - Continued

| | |
|--|--------|
| Procedures | 4-20b |
| Safety | 4-20a |
| Uses of Filter in Hydraulic Systems | 4-12a |
| Uses of Hydraulic Systems in Army Aircraft | 2-2 |
| Ease of Installation | 2-2c |
| Ease of Operation | 2-2b |
| Efficiency | 2-2a |
| Lubrication | 2-2e |
| Size | 2-2d |
| Utilizing 0.150 Inch Tube End Gap Tolerance on Separable Fittings | F4-89 |
| Utilizing 0.300 Inch Tube End Gap Tolerance on Shaped Fittings | F4-88 |
| Utilizing 0.300 Inch Tube End Gap Tolerance with Standard Union Fittings | F4-87 |
| V-Ring Packings | 4-7c |
| V-Ring Packings in Vanous Positions of Assembly | F4-71 |
| Valve A, Closed | F4-145 |
| Valve B, Open | F4-146 |
| Valve C, Open | F4-147 |
| Valve, Pressure-Reducing | F4-117 |
| Valve, Priority | F4-131 |
| Valve, Ratchet (Moving) | F4-137 |
| Valve, Ratchet (Static) | F4-136 |
| Valve, Priority | F4-131 |
| Vane Damper | F4-166 |
| Vane Damper Cross Section | F4-167 |
| Vane, Dampers, Nose Landing Gear | F4-168 |
| Vane, Dampers, Stabilizer Bar | F4-169 |
| Vegetable-Base Fluid (Hydraulic) | 2-3a |
| Vickers Stroke Reduction Pump (Full Flow) | F4-108 |
| Vickers Stroke Reduction Pump (Zero Flow)..... | F4-107 |
| Volume, Length, and Area, Computing | F2-2 |

W

| | |
|--|-------|
| Wheel Brake Assemblies | 4-18b |
| Wheel Brake Systems | 4-18a |
| Wheel Brake Systems, Troubleshooting | T4-41 |
| Withdrawing Fluid from Drum | T3-3c |

INDEX- CONT

VOLUME 3

| Subject | Paragraph, Figure, Table Number |
|--|---------------------------------------|
| A | |
| Aeroquip Corporation Series 3700 and 3750 Quick Thread Couplings | 2-5h |
| Auxiliary (Booster) Fuel Pump | F2-4 |
| AVGAS Identification | T2-2 |
| B | |
| Ball Lock-Type Coupling | F2-19 |
| Bladder-Type Fuel Cells, Serviceable Limits | T2-6 |
| Bridging, Sealant | F2-12 |
| C | |
| Can and Drum Marking | F2-23 |
| Characteristics of Vaporization | F2-1 |
| Clamp Location for Tube Bends | F2-3 |
| Closed-Circuit Fuel Receiver Installation | F2-20 |
| Closed-Circuit Refueling Receptacles | 2-51 |
| Cold Weather Maintenance, Oil Systems | 3-61 |
| Consumable Materials | 1-3 |
| Contaminant Characteristics (of Fuel), Visual | T2-3 |
| Contamination of Fuels | 2-4 |
| Contamination Prevention | 2-4e |
| Microbiological Growths | 2-4c |
| Solids..... | 2-4b |
| Uses of Additives to Prevent Microbiological Growths | 2-4d |
| Water | 24a |
| Contamination Prevention (for Fuels) | 2-4e |
| Coupling | |
| Ball Lock -Type | F2-19 |
| Full Gnp PustuPull-TypeF | 2-17 |
| Inst-O-Matic Push/Pull Type | F2-16 |
| Quick-Threading/Indicating Type | F2-15 |
| Screw-Type | F2-14 |
| Straight Flow Balin Valve-Type | F2-18 |
| Covered Storage of Oils | 3-7a |
| D | |
| DA Form 1804 (Petroleum Sample) | F2-22 |
| Drain Containers (Fuel Systems), Safety Precautions and Procedures | 2-2e |
| Dry-Sump Lubrication System for Reciprocating Engines | F3-3 |
| Dry-Sump Lubrication System for Turbine Engines | F3-5 |

INDEX- CONT

VOLUME 3

| Subject | Paragraph, Figure, Table Number |
|---|---------------------------------------|
| E | |
| Engine Oils | |
| Reciprocating | T3-1 |
| Turbine | T3-2 |
| Engine-Driven Fuel Pump | F2-5 |
| F | |
| Fasteners..... | F2-9 |
| Fillet Seal Deflection | F2-13 |
| Filter, Oil | F3-6 |
| Float Switch Unit | F2-7 |
| Float Switches | 2-5e |
| Flushing Oil Systems | 3-6j |
| Fuel Cells and Tanks | 2-5f |
| Fuel Identification | 2-3 |
| Aviation Gas | 2-3b |
| Turbine Fuels | 2-3a |
| Fuel Lines | 2-5a |
| Fuel Lines and Drains, Safety Precautions and Procedures | 2-2a |
| Fuel Pump | |
| Auxiliary..... | F24 |
| Engine-Driven..... | F2-5 |
| Fuel Pumps | 2-5b |
| Fuel Receiver Installation (Closed-Circuit) | F2-20 |
| Fuel Strainers | 2-5d, F2-6 |
| Fuel Sumps | 2-5c |
| Fuel System Maintenance | 2-5 |
| Aeroquip Corporation Series 3700 and 3750 Quick Thread Couplings..... | 2-5h |
| Closed-Circuit Refueling Receptacles | 2-5i |
| Float Switches | 2-5e |
| Fuel Cells and Tanks | 2-5f |
| Fuel Lines | 2-5a |
| Fuel Pumps | 2-5b |
| Fuel Strainers | 2-5d |
| Fuel Sumps | 2-5c |
| Fuel System Troubleshooting | 2-5j |
| Testing Fuel Systems and Tanks/Cells for Leaks | 2-59g |
| Fuel System Schematic, Typical | F2-21 |
| Fuel System Troubleshooting | 2-5j |
| Fuel System Troubleshooting, Typical, Chart | T2-9 |
| Fuel Systems | |
| Contamination of Fuels | 2-4 |
| Fuel Identification | 2-3 |

INDEX- CONT

VOLUME 3

| Subject | Paragraph, Figure, Table Number |
|---------|---------------------------------------|
|---------|---------------------------------------|

F - Continued

| | |
|---|-------|
| Fuel System Maintenance | 2-5 |
| General | 2-1 |
| Handling and Storage of Fuels | 2-6 |
| Safety Precautions and Procedures | 2-2 |
| Fuel Tanks, Integral | F2-8 |
| Full Gnp Push/Pull-Type Coupling | F2-17 |

G

| | |
|--------------------------|-------|
| Gear-Type Oil Pump | F3-13 |
| General | |
| Fuel Systems | 2-1 |
| Oil Systems | 3-1 |

H

| | |
|--|------|
| Handling and Storage of Fuels | 2-6 |
| Marking..... | 2-6c |
| Receipt | 2-6a |
| Storage Practices | 2-6b |
| Handling and Storage of Oils | 3-7 |
| Covered Storage | 3-7a |
| Outside Storage | 3-7b |
| Heat Exchanger Cooler, Turbine Engine Fuel Oil | F3-1 |

I

| | |
|--|-------|
| Identification of AVGAS | T2-2 |
| Identification of Oils | 3-4 |
| Reciprocating Engines | 3-4a |
| Turbine Engines | 3-4b |
| Inspection Valves, Quick-Disconnect Coupling | T2-8 |
| Inst-O-matic Push/Pull-Type Coupling | F2-16 |
| Integral Fuel Tanks | F2-8 |

J

| | |
|---|------|
| Jet Fuel Used in Army Aircraft (MIL-T-5624), Critical Characteristics and Specification Requirements for | T2-1 |
|---|------|

INDEX- CONT

VOLUME 3

| Subject | Paragraph, Figure, Table Number |
|---|---------------------------------------|
| L | |
| Leak Path Examples, Long Leak | F2-10 |
| Leaks, Fastener | F2-9 |
| Long Leak Path Examples | F2-10 |
| Lubrication System for Reciprocating Engines | |
| Dry-Sump | F3-3 |
| Wet-Sump | F3-2 |
| Lubrication System for Turbine Engines | |
| Dry-Sump | F3-5 |
| Wet-Sump | F34 |
| M | |
| Magnetic Plugs and Chip Detectors | 3-6f |
| Main Oil Strainers | F3-8 |
| Marking, Can and Drum | F2-23 |
| Marking (Fuel Containers) | 2-6c |
| Microbiological Growths (Contaminating Fuels) | 2-4c |
| Micron Particle Size | F2-2 |
| Mixing Ratios (for Dyes) | T2-7 |
| Multiple Leak Paths (Single Leak Source) | F2-11 |
| O | |
| Oil Contamination | 3-5 |
| Prevention | 3-5c |
| Solids | 3-5b |
| Use of Brayco 599 3-5d | |
| Water | 3-5a |
| Oil Cooler, Reciprocating Engine | F3-10 |
| Oil Coolers, Maintenance | 3-6g |
| Oil Fitter | F3-6 |
| Oil Filter, Spacers and Screens Type | F3-7 |
| Oil Filters, Maintenance | 3-6c |
| Oil Jets, Maintenance | 3-61 |
| Oil Lines, Maintenance | 3-6b |
| Oil Pressure Relief Valves | F3-12 |
| Oil Pump | F3-13 |
| Oil Screen Types | F3-9 |
| Oil Screens, Maintenance | 3-6d |
| Oil Systems | |
| General | 3-1 |
| Handling and Storage of Oils | 3-7 |
| Identification of Oils | 3-4 |

INDEX- CONT

VOLUME 3

| Subject | Paragraph, Figure, Table Number |
|---------|---------------------------------------|
|---------|---------------------------------------|

O - Continued

| | |
|---|------|
| Oil Contamination | 3-5 |
| Oil Systems Maintenance | 3-6 |
| Preservation | 3-8 |
| Safety Precautions and Procedures | 3-2 |
| Types of Oil | 3-3 |
| Oil Systems Maintenance | 3-6 |
| Cold Weather Maintenance | 3-61 |
| Flushing Oil Systems | 3-6 |
| Magnetic Plugs and Chip Detectors | 3-6f |
| Oil Coolers | 3-6g |
| Oil Filters | 3-6c |
| Oil Jets | 3-6i |
| Oil Lines | 3-6b |
| Oil Screens | 3-6d |
| Oil Tanks | 3-6e |
| Pressure Devices | 3-6h |
| Prevention of Sludge Buildup | 3-6k |
| Types of Oil Systems | 3-6a |

P

| | |
|---|-------|
| Particle Size, Micron | F2-2 |
| Personal Precautions and Procedures, Fuel Systems | 2-2f |
| Petroleum Sample Form DA 1804 | F2-22 |
| Preservation of Oil Systems | 3-8 |
| Pressure Devices | 3-6h |
| Prevention (of Oil Contamination) | 3-5c |
| Prevention of Sludge Buildup | 3-6k |
| Purpose of Manual | 1-1 |

Q

| | |
|---|-------|
| Quick-Disconnect Coupling Inspection Valves | T2-8 |
| Quick Threading/Indicating Type Coupling | F2-15 |

R

| | |
|---|-------|
| Ratios (for Dye Mixing) | T2-7 |
| Receipt (of Fuel Containers) | 2-6a |
| Reciprocating Engine Oil Cooler | F3-10 |
| Reciprocating Engines, Identification of Oils for | 3-4a |
| Relief Valves, Oil Pressure | F3-12 |

INDEX- CONT

VOLUME 3

| Subject | Paragraph, Figure, Table Number |
|---|---------------------------------------|
| Safety Precautions and Procedures, Fuel Systems | 2-2 |
| Drain Containers | 2-2e |
| Fuel lines and Drains | 2-2a |
| Personal | 2-2f |
| Tool Boxes | 2-2c |
| Tools | 2-2b |
| Work Stands | 2-2d |
| Safety Precautions and Procedures, Oil Systems | 3-2 |
| Safety Precautions, Fuel Storage | T2-10 |
| Scope of Manual | 1-2 |
| Screen, Oil, Type | F3-9 |
| Screw-Type Coupling | F2-14 |
| Seal Deflection, Fillet | F2-13 |
| Sealant Bridging | F2-12 |
| Self Sealing Fuel Cells, Serviceable Limits | T2-5 |
| Serviceable Limits (Bladder-Type Fuel Cells) | T2-6 |
| Serviceable Limits (Self-Sealing Fuel Cells) | T2-5 |
| Single Leak Source, Multiple Leak Path | F2-11 |
| Solids (Contaminating Fuel) | 2-4b |
| Solids (Contaminating Oil) | 3-5b |
| Spacers and Screens Oil Filter | F3-7 |
| Spacing, Support Clamp | T2-4 |
| Storage Practices, Fuel | 2-6b |
| Straight Flow Ball Valve Type Coupling | F2-18 |
| Support Clamp Spacing | T2-4 |
| Surge Valve Example | F3-14 |

T

| | |
|--|-------|
| Testing Fuel Systems and Tanks/Cells for Leaks | 2-5g |
| Tool Box (Fuel Systems), Safety Precautions and Procedures | 2-2c |
| Tools (Fuel Systems), Safety Precautions and Procedures | 2-2b |
| Tube Bends, Clamp Location for | F2-3 |
| Turbine Engine Fuel Oil Heat Exchanger Cooler | F3-11 |
| Turbine Engine, Identification of Oils for | 3-4b |
| Turbine Engine Oil Use Temperature Chart | F3-1 |
| Turbine Engine Oils | T3-2 |
| Types of Oil Systems | 3-6a |
| Types of Oils | 3-3 |
| Typical Fuel System Schematic | F2-21 |
| Typical Fuel System Troubleshooting Chart | T2-9 |

INDEX- CONT

VOLUME 3

| Subject | Paragraph, Figure, Table Number |
|--|--|
| U | |
| Use of Brayco | 3-5d |
| Use Temperature Chart, Turbine Engine Oil | F3-1 |
| Uses of Additives to Prevent Microbiological Growth (in Fuels) | 2-4d |
| V | |
| Valve, Surge, Example of | F3-14 |
| Vaporization Characteristics, Fuel | F2-1 |
| Visual Contaminant Characteristics, Fuel | T2-3 |
| W | |
| Water (Contamination of Fuel) | 2-4a |
| Water (Contamination of Oil) | 3-5a |
| Wet-Sump Lubrication System for Reciprocating Engines | F3-2 |
| Wet-Sump Lubrication System for Turbine Engines | F3-4 |
| Work Stands (Fuel Systems), Safety Precautions and Procedures | 2-2d |

INDEX- CONT

VOLUME 4

| Subject | Paragraph, Figure, Table Number |
|--|---------------------------------------|
| A | |
| AC Meter | 2-6h |
| Airspeed Indicator | F4-11 |
| Test Tolerances | T4-1 |
| Alternating Current, Basic Principles and Theory for | 2-3 |
| Alternating Current, Cycle | F2-2 |
| Altimeter | 4-3g, F4-13 |
| Ammeter | 2-6d |
| Automatic Wire Marking Machines | F3-2 |
| B | |
| B-16 Master Sighting Compass Alignment Method | F4-23 |
| Basic Circuits | 2-5 |
| Compound | 2-5c, F2-7 |
| Parallel | 2-5b, F26 |
| Senes | 2-5a, F2-5 |
| Basic Principles and Theory for Alternating Current | 2-3 |
| Basic Principles and Theory for Direct Current | 2-2 |
| Bonds | 3-1 k |
| C | |
| Centigrade-Fahrenheit Conversion Chart | T4-13 |
| Circuit Breakers | 3-1 n |
| Circuit, Thermocouple | F3-13 |
| Circuits, Basic | 2-5 |
| Cleaning Apparatus, Mercury | F4-3 |
| Compass | |
| Alignment, B-16 Master Sighting Method | F4-23 |
| Correction Card | F4-20 |
| Rose | F4-21 |
| Components, of Electrical Systems | 3-4 |
| Compound Circuits | 2-5c, F2-7 |
| Conduits | 3-1j |
| Connectors | |
| Inspection of | 3-3b |
| Installation of (on Wires) | 3-3c |
| MS | F3-4 |
| Potting | F3-7 |
| Rectangular Shell | F3-6 |
| Subminiature | F3-5 |
| Consumable Materials | 1-3 |

INDEX- CONT

VOLUME 4

| Subject | Paragraph, Figure, Table Number |
|---------|---------------------------------------|
|---------|---------------------------------------|

C - Continued

| | |
|--|------------|
| Continuity Tester | 2-6b, F2-8 |
| Copper Wire Strippers | T3-1 |
| Correction Card, Compass | F4-20 |
| Counter Drum Pointer Altimeter | F4-13 |
| Friction Stop and Jump Error | T4-8 |
| Pressure Altitude Difference | T4-10 |
| Scale Error | T4-6 |
| Static Friction Error (Vibrator Inoperative) | T4-9 |
| Test Tolerances | T4-7 |
| Cycle of Alternating Current | F2-2 |

D

| | |
|--|------------|
| D'Arsonval Meter | 2-6c, F2-9 |
| DD Form 1613 (Pilot Compass Correction Card) | F4-22 |
| Dead Weight Testers | 4-2d |
| Direct Current Wave Form | F2-1 |
| Direct Current, Basic Principles and Theory for | 2-2 |
| Direct Reading Pressure Indicator | 4-3h |
| Tolerances | T4-11 |
| Dual Synchronous Rotor Tachometer Wiring Diagram (Grounded Two-Wire System) | F4-17 |
| Dual Synchronous Rotor Tachometer Wiring Diagram (Ungrounded Three-Wire System) | F4-16 |

E

| | |
|---|------------|
| Electrical Connectors and Common Plugs, Installation of | 3-3 |
| Electrical Liquid Indicating Systems and Indicators | 4-3q |
| Electrical Resistance Temperature Indicators | 4-3k |
| Electrical System Components | 3-4 |
| Built-In Test Equipment | 3-4j |
| Electronic Control Units | 3-4k |
| Generators..... | 3-4d |
| Ignition Systems | 3-4n |
| Inverters | 3-4g, F3-9 |
| Lighting Systems | 3-40 |
| Motors | 3-4l |
| Overvoltage Protection System | 34b |
| Parallel Generators | 3-4c |
| Relays | 34f |
| Starters | 3-4h |
| Storage Battery | 34e |

INDEX- CONT

VOLUME 4

| Subject | Paragraph, Figure, Table Number |
|---------|---------------------------------------|
|---------|---------------------------------------|

E - Continued

| | |
|---|------|
| Switches | 3-4i |
| Thermocouples | 3-4m |
| Voltage Regulators | 3-4a |
| Electrical System Troubleshooting | 3-2 |
| Electrodynamic Meters | 2-6i |
| Equipment, Measuring | 2-6 |
| Equipment Safety | |
| Electric Shop | 2-1c |
| Instrument Shop | 4-1c |

F

| | |
|--|-------|
| Fahrenheit-Centigrade Conversion Chart | T4-13 |
| Fire Safety | |
| Electric Shop | 2-1d |
| Instrument Shop | 4-1d |
| Frequency Meters | 2-6m |
| Friction Stop and Jump Error, Counter Drum Pointer Altimeter | T4-8 |
| Friction Test Tolerances, Three Pointer Altimeter | T44 |
| Fuse and Fuse Holders | 3-1h |

G

| | |
|---|-------|
| Gauge, Wire | F3-1 |
| General Shop Rules, Electric Shop | 2-1 |
| Equipment Safety | 2-1c |
| Fire Safety | 2-1d |
| Maintenance of Shop Equipment | 2-1e |
| Responsibility | 2-1a |
| Shop Housekeeping | 2-1b |
| General Shop Rules, Instrument Shop | 4-1 |
| Equipment Safety | 4-1c |
| Fire Safety | 4-1d |
| Responsibility | 4-1a |
| Shop Housekeeping | 4-1 b |

H

| | |
|---------------------------------|------|
| Hand Wire Marking Machine | F3-3 |
|---------------------------------|------|

INDEX- CONT

VOLUME 4

| Subject | Paragraph, Figure, Table Number |
|---|---------------------------------------|
| I | |
| Ignition System Troubleshooting Chart..... | T3-3 |
| Indicator, Airspeed | 4-3e, F4-11 |
| Indicator Tolerances | |
| Direct Reading Pressure Indicator | T4-11 |
| Remote Reading Pressure Indicator | T4-12 |
| Inspection of Installations of Wires and Cables | 3-1 |
| Inspection of Instrument Systems | 4-3a |
| Inspection Requirements for Installations of Wires and Cables | 3-1a |
| Inspection Requirements, Instruments and Instrument Systems | 4-3b |
| Installation Inspection of Wires and Cables | 3-1 |
| Bonds | 3-1 k |
| Circuit Breakers | 3-1 n |
| Conduits | 3- j |
| Fuses and Fuse Holders | 3-1 h |
| Inspection Requirements | 3-1a |
| Junctions | 3-1l |
| Kapton Wiring | 3-1o |
| Marking of Wires with Marking Machines | 3-1f |
| Replacement Criteria | 3-1 b |
| Splices | 3-11 |
| Terminals and Terminal Blocks | 3-1g |
| Toggle Switches | 3-1 m |
| Wire Identification | 3-1d |
| Wire Sizes | 3-1 c |
| Wire Stripping | 3-1e |
| Installation of Electrical Connectors and Common Plugs | 3-3 |
| Inspection of Connectors | 3-3b |
| Installation of Connectors on Wires | 3-3c |
| Types of Connectors | 3-3a |
| Instruments and Instrument System Maintenance | 4-3 |
| Airspeed Indicators | 4-3e |
| Altimeters | 4-3g, F4-13 |
| Direct Reading Pressure Indicators | 4-3h |
| Electrical Liquid Indicating Systems and Indicators | 4-3q |
| Electrical Resistance Temperature Indicators | 4-3k |
| Inspection of Instrument Systems | 4-3a |
| Inspection Requirements | 4-3b |
| Magnetic Compass | 4-3o, F4-19 |
| Outside Air Temperature Gauges | 4-3m |
| Pitot Static System | 4-3c, F4-7 |
| Pitot Static System Heater | 4-3d |
| Position Indicating Systems and Indicators | 4-3r |
| Remote Indicating Compass | 4-3p |

INDEX – CONT

VOLUME 4

Subject

Paragraph, Figure, Table Number

I – Continued

| | |
|--|-------------|
| Remote Reading Pressure Indicators | 4-3i |
| Repair and Replacements | 4-3s |
| Tachometer Systems | 4-3j |
| Thermocouple Temperature Indicators | 4-3l |
| Vacuum System and Instrument Testing | 4-3n |
| Vertical Speed Indicators | 4-3f, F4-12 |
| Inverter | F3-9 |

J

| | |
|----------------------------|------|
| Jetcal System Tester | 4-2f |
| Junctions | 3-1l |

K

| | |
|---------------------|------|
| Kapton Wiring | 3-1o |
|---------------------|------|

L

| | |
|---|------|
| Leak Test Connections | |
| Pitot | F4-8 |
| Static | F4-9 |
| Lighting System Troubleshooting Chart | T3-4 |

M

| | |
|---|-------------|
| Magnetic Compass | 4-3o, F4-19 |
| Maintenance of Instruments and Instrument Systems | 4-3 |
| Maintenance of Shop Equipment, Electrical Shop | 2-1e |
| Maintenance of Shop Equipment, Instrument Shop | 4-2 |
| Jetcal System Tester | 4-2f, F4-6 |
| Manometer | 4-2a, F4-1 |
| Pitot Static System Tester | 4-2e |
| Scorsby Base | 4-2d, F4-5 |
| Turntable Instrument Tester | 4-2c, F4-4 |
| Vacuum Chambers | 4-2b |
| Manometer | 4-2a, F4-1 |
| Manometer Reading Level | F4-2 |
| Marking of Wires with Marking Machine | 3-1f |

M – Continued

| | |
|----------------------------------|------------|
| Materials, Consumable | 1-3 |
| Measuring Equipment | 2-6 |
| Ammeter | 2-6d |
| Continuity Tester | 2-6b |
| D'Arsonval Meter | 2-6c |
| Electrodynamometer | 2-6h |
| Frequency Meters | 2-6k |
| Meter Safety Precautions | 2-6l |
| Multimeter | 2-6g |
| Ohmmeter | 2-6f |
| Rectifier Meter | 2-6i |
| Test Lights | 2-6a |
| Voltmeter | 2-6e |
| Wattmeter | 2-6j |
| Mercury Cleaning Apparatus | F4-3 |
| Meter, D'Arsonval | 2-6c, F2-9 |
| Meter Safety Precautions | 2-6l |
| Microswitch | F3-11 |
| MS Connectors | F3-4 |
| Multimeter | 2-6g |

O

| | |
|---|------|
| Ohmmeter | 2-6f |
| Operational Check (of Electrical Systems) | 3-2a |
| Outside Air Temperature Gauges | 4-3m |

P

| | |
|--|------------|
| Parallel Circuits | 2-5b, F2-6 |
| Pilot Compass Correction Cards, DD Form 1613 | F4-22 |
| Pitot | |
| Leak Test Connections | F4-8 |
| Static System | 4-3c, F4-7 |
| Static System Heater | 4-3d |
| Static System Tester | 4-2e |
| Tube | F4-10 |
| Position Indicating Systems and Indicators | 4-3r |
| Potting Connectors | F3-7 |
| Precautions (for Troubleshooting Electrical Systems) | 3-2b |

INDEX - CONT

VOLUME 4

| Subject | Paragraph Figure, Table Number |
|----------------|---|
|----------------|---|

P - Continued

| | |
|--------------------------------------|-------|
| Pressure Altitude Difference | |
| Counter Drum Pointer Altimeter | T4-10 |
| Three Pointer Altimeter | T4-5 |
| Purpose (of Manual) | 1-1 |

R

| | |
|---|-------|
| Reading Level, Manometer | F4-2 |
| Recommended Sizes of Marking Type | T3-2 |
| Rectangular Shell Connectors | F3-6 |
| Rectifier Meter | 2-6j |
| Relays, Typical | F3-8 |
| Remote Indicating Compass | 4-3p |
| Wiring Diagram | F4-24 |
| Remote Reading Pressure Indicator | 4-3i |
| Tolerances | T4-12 |
| Repair and Replacements, Instruments and Instrument Systems | 4-3s |
| Replacement Criteria for Wires and Cables | 3-1b |
| Responsiblty | |
| for Electric Shop Rules | 2-1a |
| for Instrument Shop Rules | 4-1a |
| Rose, Compass | F4-21 |
| Rotary-Selector Switch..... | F3-12 |

S

| | |
|--|------------|
| Scale Error | |
| Counter Drum Pointer Altimeter | T4-6 |
| Three Pointer Altimeter | T4-3 |
| Schematic, of Typical Electrical System | F2-4 |
| Scope (of Manual) | 1-2 |
| Scorsby Base | 4-2g, F4-5 |
| Series Circuits | 2-5a, F2-5 |
| Shop Housekeeping | |
| Electrical Shop | 2-1b |
| Instrument Shop | 4-1b |
| Sizes of Marking Type, Recommended | T3-2 |
| Splices | 3-11 |
| Static Friction Error (Vibrator Inoperative), Counter Drum Pointer Altimeter | T4-9 |
| Subminiature Connectors | F3-5 |
| Switch | |
| Rotary-Selector | F3-12 |
| Toggle | F3-10 |

INDEX - CONT

VOLUME 4

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

S - Continued

| | |
|---|-------|
| Symbols, Charts, and Schematics for Wiring Diagrams | 2-4 |
| Symbols, Wiring Diagram | F2-3 |
| Synchronous Rotor Tachometer Wiring Diagram (Grounded Two-Wire System) | F4-15 |
| Synchronous Rotor Tachometer Wiring Diagram (Ungrounded Three-Wire System) | F4-14 |

T

| | |
|---|------------|
| Tachometer Systems | 4-3j |
| Tachometer Wiring Diagram | |
| Dual Synchronous Rotor (Grounded Two-Wire System) | F4-17 |
| Dual Synchronous Rotor (Ungrounded Three-Wire System) | F4-16 |
| Synchronous Rotor (Grounded Two-Wire System) | F4-15 |
| Synchronous Rotor (Ungrounded Three-Wire System)..... | F4-14 |
| Terminals and Terminal Blocks | 3-1g |
| Test Lights | 2-6a |
| Test Tolerances | |
| Airspeed Indicator | T4-1 |
| Counter Drum Pointer Altimeter | T4-7 |
| Three Pointer Altimeter | T4-3 |
| Tester, Continuity | 2-6b, F2-8 |
| Thermocouple Circuit | F3-13 |
| Thermocouple Temperature Indicators | 4-31 |
| Three Pointer Altimeter | F4-13 |
| Friction Test Tolerances | T4-4 |
| Pressure Attitude Difference | T4-5 |
| Scale Error | T4-2 |
| Test Tolerances | T4-3 |
| Toggle Switch | F3-10 |
| Toggle Switches | 3-1m |
| Troubleshooting Electrical Systems | 3-2 |
| Operational Check | 3-2a |
| Precautions | 3-2b |
| Tube, Pitot | F4-10 |
| Turntable Instrument Tester | 4-2f, F4-4 |
| Typical Electrical System Schematic | F2-4 |
| Typical Ignition System Troubleshooting Chart | T3-3 |
| Typical Lighting System Troubleshooting Chart | T3-4 |
| Typical Relays | F3-8 |

INDEX - CONT

VOLUME 4

| Subject | Paragraph Figure, Table Number |
|----------------|---|
|----------------|---|

V

| | |
|--|-------------|
| Vacuum Chambers | 4-2b |
| Vacuum System and Instrument Testing | 4-3n |
| Varmeter | 2-6l |
| Vertical System Indicators | 4-3f, F4-12 |
| Voltmeter | 2-6e |

W

| | |
|--|-------|
| Wattmeter | 2-6k |
| Wave Form, of Direct Current | F2-1 |
| Wire Gauge | F3-1 |
| Wire Identification | 3-1d |
| Wire Marking Machines | |
| Automatic | F3-2 |
| Hand F3-3 | |
| Wire Sizes | 3-1c |
| Wire Strippers, for Copper Wire | T3-1 |
| Wire Stripping | 3-1e |
| Wiring Diagram, Remote Indicating Compass | F4-24 |
| Wiring Diagram Symbols, Charts, and Schematics | F2-3 |
| Wiring Diagram Symbols, Charts, and Schematics | 2-4 |

INDEX - CONT

VOLUME 5

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| A | |
| Aerodynamic Balancing | 2-13b |
| Alignment, Rotor Blade | 3-14 |
| Angle of Bend, Measuring | F2-6 |
| Anti-Icing | 2-1 b |
| Anti-Icing System, Typical | F2-12 |
| B | |
| Balance (of Tall Rotor Blades) | 3-9c |
| Balance Check, Three-Blade | F2-8 |
| Balance Check, Two-Blade | F2-7 |
| Balance, Blade | 3-10 |
| Balancing, Propeller | 2-13 |
| Bends and Twists | 2-12c |
| Blade Balance | 3-10 |
| General | 3-10a |
| Mass Balance Weights (Bars) | 3-10b |
| Spanwise Balance Weights | 3-10c |
| Tracking Weights..... | 3-10d |
| Trim Tabs | 3-10e |
| Blade Classification Data (Main Rotor Blades) | 3-7d |
| Blade Construction (Main Rotor Blades) | 3-7c |
| Blade Flapping Action (Vertical Plane) | F3-7 |
| Blade Leading and Lagging (Horizontal Plane) | F3-8 |
| Blade Tracking | 2-13d |
| Blade Tracking, Electronic, Equipment | F3-12 |
| Blade Tracking, Reflector | F3-13 |
| Blade, Rotor, Repair | 3-12 |
| Blade, Rotor, Tracking | 3-17, F3-11 |
| C | |
| Classification, Propeller | 2-5 |
| Cleaning (of Rotors) | 3-11b |
| Cleaning, Powertrain Components of | 4-5 |
| Collective Pitch Control | 3-5b, F3-5 |
| Components, Drive | 4-4 |
| Configurations, Helicopter | 3-4 |
| Construction (of Tail Rotor Blades) | 3-9b |
| Consumable Materials | 1-3 |

INDEX - CONT

VOLUME 5

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

C - Continued

| | |
|------------------------------------|------------|
| Control System, Helicopter | F3-1 |
| Controllable Pitch Propeller | 2-6b |
| Cyclic Pitch Control | 3-5a, F3-4 |

D

| | |
|---------------------------------|-----------|
| Damaged Square Tip Repair | F2-5 |
| Damaged Tip Repair | F2-4 |
| Defects, Propeller | 2-9, T2-2 |
| Deicing | 2-18c |
| Description, Propeller | 2-6 |
| Drive Components | 4-4 |
| Clutches | 4-4b |
| Drive Shafting | 4-4f |
| Engine Cooling Fans | 4-4d |
| Freewheeling Units | 4-4c |
| Gearboxes | 4-4a |
| Rotor Brakes | 4-4e |
| Drive Shafting | 4-41, 4-5 |
| Dynamic Balancing | 2-13 |

E

| | |
|--|-----------|
| Efficiency, Engine | 2-8 |
| Efficiency, Propeller | 2-7 |
| Electrical Deicing System, Typical | F2-1 |
| Electronic Blade Tracker | 3-17b |
| Electronic Blade Tracking Equipment..... | F3-12 |
| Engine Cooling Fans | 4-4d, 4-5 |
| Engine Efficiency | 2-8 |
| Mechanical Efficiency | 2-81 |
| Thermal Efficiency | 2-80 |
| Volumetric Efficiency | 2-8c |
| Extremely Low Frequency Vibration | 3-16 |

F

| | |
|-----------------------------------|-------|
| Feathering Propeller | 2-6 |
| Fiberglass Blade Repair | 3-12b |
| Flight Controls, Helicopter | 3-5 |

INDEX - CONT

VOLUME 5

Subject

Paragraph Figure, Table Number

F - Continued

| | |
|---|-----------|
| Fixed - Pitch Propeller | 2-6a |
| Flag and Pole | 3-17a |
| Flapping Action, Blade (Vertical Plane) | F3-7 |
| Freewheeling Units | 4-4c, 4-5 |
| Fully Articulated Rotor | 3-6c |
| Fully Articulated Rotor Head | F3-6 |

G

| | |
|--|-------------|
| Gearboxes | 4-4a, 4-5a |
| General (Blade Balance) | 3-10a |
| General (Tall Rotor Hubs) | 3-8a |
| General Shop Rules | 2-2, 3-2 |
| | 4-2 |
| Responsibility | 2-2a, 3-2a |
| | 4-2a |
| Shop Housekeeping | 2-2b, 3-2b, |
| | 4-2b |
| Shop Safety | 2-2c, 3-2c, |
| | 4-2c |
| Shop Tools and Materials | 2-2d, 3-2d, |
| | 4-2d |
| General, Powertrain Maintenance Practices and Procedures | 4-1 |
| General, Propeller Maintenance Practices and Procedures | 2-1 |
| General, Rotor Maintenance Practices and Procedures | 3-1 |
| Governed Propellers, Rigging | 2-16 |
| Governor, Woodward | F2-10 |
| Governors, Propellers | 2-15 |

H

| | |
|---|------------|
| Hartzell Constant-Speed Propeller | F2-2, 2-6c |
| Hartzell Pitch Change Mechanism | F2-1 |
| Helicopter Configurations | 3-4 |
| Single Rotor..... | 3-4a |
| Tandem Rotor | 3-4b |
| Helicopter Control System | F3-1 |
| Helicopter Flight Controls | 3-5 |
| Collective Pitch Control | 3-b |
| Cyclic Pitch Control | 3-5a |
| Swashplate..... | 3-5c |

INDEX - CONT

VOLUME 5

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

H - Continued

| | |
|---------------------------------------|-------|
| Throttle Control | 3-2d |
| Torque Control | 3-2e |
| Helicopter Vibrations | 3-16 |
| Extreme Low Frequency Vibration | 3-16a |
| Low Frequency Vibration | 3-16b |
| Medium Frequency Vibration | 3-16c |
| High Frequency Vibration | 3-16d |

I

| | |
|---------------------------------------|-------|
| Icing, Propeller | 2-18 |
| Icing Types | 2-18a |
| Inspection (of Rotors) | 3-11c |
| Insallation (of Governors) | 2-16b |
| Installation, Propeller | 2-14 |
| Integrated Oil Control Assembly | 2-15f |

L

| | |
|-------------------------------|-------|
| Low Frequency Vibration | 3-16b |
|-------------------------------|-------|

M

| | |
|---|-------|
| Main Rotor Assemblies | 3-6 |
| Fully Articulated Rotor | 3-6c |
| Rigid Rotor | 3-6a |
| Semi-Rigid Rotor | 3-6b |
| Main Rotor Blade Terms | T3-1 |
| Main Rotor Blades | 3-7 |
| Blade Classification Data | 3-7d |
| Blade Construction | 3-7c |
| Nomenclature | 3-7b |
| Types | 3-7a |
| Main Rotor Hub and Blade Assembly | F3-10 |
| Main Rotor Hub and Blade Removal | F3-9 |
| Main Rotor Painting | 3-13a |
| Mass Balance Weights (Bars) | 3-10b |
| Materials, Consumable | 1-3 |
| Measuring Angle of Bend | F2-6 |
| Mechanical Efficiency | 2-8a |
| Medium Frequency Vibration | 3-16c |

INDEX - CONT

VOLUME 5

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

M - Continued

| | |
|---|-------|
| Metal Blade Repair | 3-12a |
| Metal Propellers (Preservation and Storage) | 2-19b |
| Minor Defects (in Propellers) | 2-12a |
| Model Designation (Propellers Governors) | 2-15b |
| Model Number, Propeller | T2-1 |

N

| | |
|--------------------------------------|------|
| Nomenclature (for Main Blades) | 3-7b |
|--------------------------------------|------|

O

| | |
|---------------------------------------|-------|
| Oil Control Plugging | 2-16a |
| Oil Coolers | 4-5g |
| Oil Filters | 4-5c |
| Oil Lines | 4-5b |
| Oil Pumps | 4-5f |
| Oil Screens | 4-5d |
| Operation Checks (of Governors) | 2-16d |

P

| | |
|---|------------|
| Painting, Rotor Blade | 3-13 |
| Pitch Change Mechanism, Hartzell | F2-1 |
| Pitch Control, Collective | F3-5 |
| Pitch Control, Cyclic | F3-4 |
| Powertrain | 4-3 |
| Single Rotor Powertrain | 4-3a |
| Tandem Rotor Powertrain | 4-3b |
| Powertrain Maintenance Practices and Procedures | 4-1 |
| Powertrain, Single Rotor | 4-3a, F4 |
| Powertrain, Tandem Rotor | 4-3b, F4-2 |
| Preservation and Storage, Propeller | 2-19 |
| Preservation and Storage, Rotor Blade | 3-18 |
| Pnniciples of Operation and Design of Rotor Systems | 3-3 |
| Procedures, Troubleshooting (Propeller System) | 2-10 |
| Procedures, Troubleshooting (Rotor Systems) | 3-15 |
| Propeller Balancing | 2-13 |
| Aerodynamic Balancing | 2-13b |
| Blade Tracking | 2-13d |
| Dynamic Balancing | 2-13c |

INDEX - CONT

VOLUME 5

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| P - Continued | |
| Static Balancing | 2-13a |
| Propeller Classification | 2-5 |
| Pusher Propeller | 2-5b |
| Tractor Propeller | 2-5a |
| Propeller Cleaning | 2-11b |
| Propeller defects | 2-9, T2-2 |
| Propeller Description | 2-6 |
| Controllable-Pitch Propeller | 2-6b |
| Feathering Propeller | 2-6e |
| Fixed-Pitch Propeller | 2-6a |
| Hartzell Constant-Speed Propeller | 2-6c |
| Reverse-Pitch Propeller | 2-6f |
| Turboprop Propeller | 2-6d |
| Propeller Efficiency | 2-7 |
| Propeller Governors | 2-15 |
| Integrated Oil Control Assembly | 2-15f |
| Model Description | 2-15b |
| Principles of Operation | 2-15a |
| Single Capacity Governors | 2-15c |
| Turbo Prop Overspeed Governors | 2-15e |
| Turbo Prop Governors | 2-15d |
| Propeller Icing | 2-18 |
| Anti-Icing | 2-18b |
| Deicing | 2-18c |
| Icing Types | 2-18a |
| Propeller Inspection | 2-11c |
| Propeller Installation | 2-14 |
| Propeller Maintenance Practices and Procedures | 2-1 |
| Propeller Model and Blade Designation | 2-4 |
| Propeller Model Number | T2-1 |
| Propeller Preservation and Storage | 2-19 |
| Metal Propellers | 2-19b |
| Wood Propellers | 2-19a |
| Propeller Removal | 2-11a |
| Propeller Removal, Cleaning and Inspection | 2-11 |
| Propeller Cleaning | 2-11b |
| Propeller Inspection | 2-11c |
| Propeller Removal | 2-11a |
| Propeller Repair | 2-12 |
| Bends and Twist | 2-12c |
| Minor Defects | 2-12a |
| Tip Damage | 2-12b |

INDEX - CONT

VOLUME 5

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

P - Continued

| | |
|-------------------------------------|-------|
| Propeller RPM Adjusting Screw | F2-11 |
| Propeller Theory | 2-3 |
| Propeller Tracking | F2-9 |
| Purpose (of Manual)..... | 1-1 |

R

| | |
|---|-------------|
| Refinishing (Rotor Blades) | 3-13d |
| Reflector Blade Tracking | F3-13 |
| Removal (of Rotors) | 3-11a |
| Removal, Main Rotor Hub and Blade | F3-9 |
| Repair of Surface Defects (Propeller) | F2-3 |
| Repair, Propeller | 2-12 |
| Responsibility (for General Shop Rules) | 2-2a, 3-2a |
| | 4-2a |
| Reverse-Pitch Propeller | 2-6f |
| Rigging (of Governors)..... | 2-16c |
| Rogging Governed Propellers | 2-16 |
| Installation | 2-16b |
| Oil Control Plugging | 2-16a |
| Operation Checks | 2-16d |
| Rigging | 2-16c |
| Rigid Rotor | 3-6a |
| Rotor Assemblies, Main | 3-6 |
| Rotor Blade Alignment | 3-14 |
| String Method | 3-14b |
| Telescopic Method | 3-14a |
| Rotor Blade Painting | 3-13 |
| Main Rotor Painting | 3-13a |
| Refinishing | 3-13d |
| Spot Painting | 3-13c |
| Tail Rotor Painting | 3-13b |
| Rotor Blade Preservation and Storage | 3-18 |
| Rotor Blade Repair | 3-12 |
| Fiberglass Blade Repair | 3-12b |
| Metal Blade Repair | 3-12a |
| Rotor Blade Tracking | 3-17, F3-11 |
| Electronic Blade Tracker | 3-17b |
| Flag and Pole | 3-17a |
| Tall Rotor Tracking | 3-17c |
| Rotor Brakes | 4-4e, 4-5k |

INDEX - CONT

VOLUME 5

| Subject | Paragraph Figure, Table Number |
|----------------|---|
|----------------|---|

R - Continued

| | |
|---|-------|
| Rotor Hub, Main, and Blade Assembly | F3-10 |
| Rotor Maintenance Practices and Procedures, General | 3-1 |
| Rotor Removal, Cleaning, and Inspection | 3-11 |
| Cleaning | 3-11b |
| Inspection | 3-11c |
| Removal | 3-11a |
| Rotor Systems, Principles of Operation and Design Features of | 3-3 |
| Rotor, Fully Articulated, Head | F3-6 |
| Rotor, Main, Blades..... | 3-7 |
| Rotor, Single, Configuration | F3-2 |
| Rotor, Tail, Blades | 3-9 |
| Rotor, Tail, Hubs | 3-8 |
| Rotor, Tandem, Configuration | F3-3 |
| RPM Adjusting Screw Propeller | F2-11 |

S

| | |
|--|------------|
| Scope (of Manual) | 1-2 |
| Semi-Rigid Rotor | 3-6b |
| Shop Housekeeping | 2-2b, 3-2b |
| | 4-2b |
| Shop Rules, General..... | 2-2, 3-2 |
| | 4-2 |
| Shop Safety | 2-2c, 3-2c |
| | 4-2c |
| Shop Tools and Materials | 2-2d, 3-2d |
| | 4-2 |
| Single Capacity Governors | 2-15c |
| Single Rotor | 3-4a |
| Single Rotor Configuration | 3-10c |
| Spanwise Balance Weights | 3-13c |
| Spot Painting (Rotors) | 3-13c |
| Square Tip, Damaged, Repair | F2-5 |
| Static Balancing | 2-13a |
| String Method | 3-14b |
| Surface Defects (Propeller), Repair of | F2-3 |
| Swashplate | 3-5c |

INDEX - CONT

VOLUME 5

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| T | |
| Tail Rotor Blades | 3-9 |
| Balance | 3-9c |
| Construction | 3-9b |
| Trammeling | 3-9d |
| Types | 3-9a |
| Tail Rotor Hubs | 3-8 |
| General | 3-8a |
| Types | 3-8b |
| Tail Rotor Painting | 3-13b |
| Tall Rotor Tracking | 3-17c, F3-14 |
| Tandem Rotor | 3-4b |
| Tandem Rotor Configuration | F3-3 |
| Telescopic Method | 3-14a |
| Terms, Main Rotor Blade | T3-1 |
| Theory, Propeller | 2-3 |
| Thermal Efficiency | 2-8b |
| Three-Blade Balance Check | F2-8 |
| throttle Control | 3-5d |
| Tip Damage | 2-12b |
| Tip, Damaged, Repair | F2-4 |
| Torque Control | 3-5e |
| Tracking Weights | 3-10d |
| Tracking, Propeller | F2-9 |
| Tracking, Tail Rotor | F3-14 |
| Tractor Propeller | 2-5a |
| Trammeling (of Tail Rotor Blades) | 3-9d |
| Trim Tabs | 3-10e |
| Troubleshooting Procedures (Propeller System) | 2-10 |
| Troubleshooting Procedures (Rotor Systems) | 3-15, T3-2 |
| Troubleshooting Procedures for Hamilton Standard 53C51-23 | T2-3 |
| Troubleshooting Procedures for Hartzell HC93Z20-2C Propeller | T2-5 |
| Troubleshooting Procedures for Hartzell HCB3TN-3 Propeller | T2-5 |
| Turboprop Overspeed Governors | 2-15e |
| Turboprop Governors | 2-15d |
| Turboprop Propeller | 2-6d |
| Two-Blade Balance Check | F2-7 |
| Types (of Main Rotor Blades) | 3-7a |
| Types (of Tail Rotor Blades) | 3-9a |
| Types (of Tail Rotor Hubs) | 3-8b |
| Typical Anti-Icing System | F2-12 |
| Typical Electrical Deicing System | F2-13 |

INDEX - CONT

VOLUME 5

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

V

| | |
|------------------------------|------|
| Valves | 4-5e |
| Vibrations, Helicopter | 3-16 |
| Volumetric Efficiency | 2-8c |

W

| | |
|--|-------|
| Wood Propellers (Preservation and Storage) | 2-19a |
| Wood Propellers | 2-17 |
| Inspection Requirements | 2-17a |
| Refinishing | 2-17d |
| Repair | 2-17c |
| Replacement Criteria | 2-17b |
| Woodward Governor | F2-10 |

INDEX – CONT

VOLUME 6

Subject

Paragraph, Figure, Table Number

A

| | |
|--|-------------|
| Acrylic Monomer and Polymer Base Adhesive, MIL-A-8576, Type II, Non-Solvent..... | 6-2c |
| Acrylic Monomer and Polymer Base Adhesive, MIL-A-8576, Type II, Non-Solvent, Shelf life | T6-3 |
| Acrylic Monomer and Polymer Base Adhesive, MIL-A-8576, Type I, Solvent Type..... | 6-2b |
| Acrylic Monomer and Polymer Base Adhesive, MIL-A-8576, Type I, Solvent Type..... | T6-1 |
| Adhesive and Cements | 6-2 |
| Acrylic Monomer Base Adhesive, MIL-A-8576, Type I, Solvent Type | 6-2c |
| Cement Primer | 6-21 |
| Cement Types | 6-2a |
| Chemigum Coating Cement..... | 6-2d |
| Colored Cement | 6-2e |
| Composite Adhesives | 6-2m |
| Deicer Repair Cement..... | 6-2k |
| Deicer Shoe Electrical Conducting Neoprene Surface Coat Cement..... | 6-2f |
| General Purpose Synthetic Rubber Base Cement MIL-Spec MMM-1617 | 6-2g |
| Natural Base Rubber Adhesive, MIL-Spec MMM-A-139, Class 3 | 6-2i |
| Neoprene Base Synthetic Rubber Cement..... | 6-2j |
| Non-Hardening Distic Brand Cement..... | 6-2h |
| Other Adhesives..... | 6-2n |
| Adhesives and Cements, Specific Gravity Ranges | T6-2 |
| Adhesives, Sealants, and Cements, General | 6-1 |
| Curing..... | 6-1d |
| Mixing | 6-1c |
| Precautionary Measures | 6-1a |
| Preparation of Surface | 6-1b |
| Airframe Castle Nuts | F2-22 |
| Airframe Plain Nuts | 2-3j, F2-28 |
| Alloys | |
| Magnesium..... | 4-3 |
| Steel | 4-5,T4-11 |
| Titanium | 4-4 |
| Aluminum Alloy Designation Conversions (Old To New)..... | T4-2 |
| Aluminum Alloy Temper Designations | T4-3 |
| Aluminum Alloy Types..... | T4-6 |
| Aluminum Alloys..... | 4-2 |
| Handling | 4-2b |
| Identification | 4-2a |
| Storage..... | 4-2c |
| Aluminum Alloys, Designation for Alloy Groups..... | T4-1 |
| Aluminum Bolts | 2-2n |
| Anaerobic Adhesive MIL-R-46082 | 6-31 |
| Anchor Nuts, Floating..... | F2-17 |
| Application Time (Room Temperature), Sealing Compound PR-1826 B1/2 | T6-4 |

INDEX - CONT

VOLUME 6

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

A - Continued

| | |
|--|-------|
| Assemblies, Channel | F2-19 |
| Authority for Substitutions and Interchangeability of Material (Air Items) | 1-3 |
| AVSCOM, Responsibilities of | 1-5 |

B

| | |
|--|------------|
| Blind Rivets | 2-8 |
| Bolt and Screw Markings | T2-1 |
| Bolt Diameter by Part Number | T2-2 |
| Bolt, Drilled Head | F2-3 |
| Bolt Head Identification | 2-2d |
| Bolt Hole Location by Letter | T2-4 |
| Bolt Identification, Hexagon Head | F2-2 |
| Bolt Length by Dash Number | T2-5 |
| Bolt Material by Letter Preceding Dash Number | T2-3 |
| Bolt Substitution, Huck and Hi-Lok | T2-6 |
| Bolt-End Description | F2-1 |
| Bolted Joint with Oversize Hole | F2-13 |
| Bolts | 2-2 |
| Aluminum Bolts | 2-2n |
| Bolt Head Identification | 2-2d |
| Clevis Bolts | 2-2j, F2-7 |
| Close Tolerance Bolts | 2-2g |
| Drilled Head Bolts | 2-2f |
| External Wrenching Bolts | 2-21, F2-6 |
| Eye Bolts | 2-2k, F2-8 |
| Fitting Structural Bolts | 2-2q |
| Hexagon Head Bolts | 2-2e |
| Huck Bolts (Lockbolt) | 2-2p |
| Installation and End Description | 2-2b |
| Internal Wrenching Bolts | 2-2h, F2-5 |
| Jo-Bolts | 2-2o |
| Locking or Safetying | 2-2c |
| Self-Locking Bolts | 2-21, F2-9 |
| Substitutions for Huck, Hi-Lock, and NAS Bolts | 2-2r |
| Substitutions for Jo-Bolts and V-Bolts | 2-2s, T2-7 |
| Tee-Head Bolts | 2-2m |

C

| | |
|------------------------|-------------|
| Camloc Fasteners | 2-9b, F2-61 |
| Castellated Nuts | 2-3b |

INDEX - CONT

VOLUME 6

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| C - Continued | |
| Castle Nut, Airframe | F2-22 |
| Castle Nut, Shear | F2-23 |
| Cells, Fuel and Oil | 3-4 |
| Cement Primer | 6-21 |
| Cement Types | 6-2a |
| Cements and Adhesives | 6-2 |
| Changes to Department of Army Publications, Recommended | 1-6 |
| Channel Assemblies | F2-19 |
| Characteristics of Catalyst Cured Sealants | 6-3c |
| Characteristics of Drying Sealants | 6-3b |
| Characteristics of Pliable Sealants | 6-3a |
| Checknut, Plain | F2-24 |
| Checknuts | 2-3c |
| Chemigum Coating Cement | 6-2d |
| Cherrylock Rivets | F2-56 |
| CherryMAX Rivets..... | F2-55 |
| Cross Reference (Part Number/Military Standard Part Number, CherryMAX Rivets | T2-11 |
| Clamp Identification | 2-6a |
| Clamp, Loop-Type Bonding | F2-42 |
| Clamp, Loop-Type Support | F2-45 |
| Clamp Types | 2-6b |
| Clamps | 2-6 |
| Clamp Identification | 2-6a |
| Clamp Types | 2-6b |
| Clamps, Hose | F2-43 |
| Clamps, Tube | F2-44 |
| Clevis Bolts | 2-2j, F2-7 |
| Clevis Pins | 2-7a, F2-46 |
| Close Tolerance Bolt, Countersunk | F2-4 |
| Close Tolerance Bolts | 2-2g |
| Coding, Color | T3-1 |
| Color Code (for Aluminum Alloys) | T4-4 |
| Color Coding | T3-1 |
| Colored Cements | 6-2e |
| Common Solid Shank Rivets | 2-8a |
| Composite Adhesives | 6-2m |
| Considerations to be Taken Before Torquing | 2-18b |
| Consumable Items | 7-2 |
| Consumable Items List | 7-3 |
| Consumable Items Part 1 | 7-3a |
| Consumable Items Part 2 | 7-3b |
| Consumable Materials | 1-7 |
| Cord Identification | 3-5a |
| Cord Inspection..... | 3-5b |

INDEX - CONT

VOLUME 6

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

C - Continued

| | |
|--|--------------|
| Cord Storage | 3-5d |
| Cord Testing | 3-5c |
| Cord, Test Loads | T3-2 |
| Corrosion Resistance (of Rivets) | 2-8d |
| Cotter Pin Installation | 2-17a, F2-77 |
| Cotter Pins | 2-7g, F2-52 |
| Countersunk Close Tolerance Bolt | F2-4 |
| Countersunk Washer | F2-34 |
| Cross Reference of Old and New Color Code (for Aluminum Alloys) | T4-5 |
| Cross Reference (Part Number/Military Standard Part Number) CherryMAX Rivets | T2-11 |
| Cure Time (Room Temperature), Sealing Compound MIL-S-8802 | T6-4 |
| Curing (of Adhesives, Sealants, and Cements) | 6-1d |

D

| | |
|--|-------------|
| Deicer Repair Cement..... | 6-21 |
| Deicer Shoe Electrical Conducting Neoprene Surface Coat Cement | 6-2f |
| Description of Bolt-Ends | F2-1 |
| Designation Conversions (Old to New), Aluminum Alloy | T4-2 |
| Designation for (Aluminum) Alloy Groups | T4-1 |
| Diameter by Part Number, Bolt | T2-2 |
| Dill Lok-Skru | 2-9c, F2-62 |
| Drilled Head Bolts | 2-2f, F2-3 |
| Dzus Fasteners | 2-9a, F2-60 |

E

| | |
|--|------------|
| Electrical Screws | 2-5f |
| Engine Self-Locking Nut | F2-20 |
| Example of Color Marking (for Aluminum Alloys) | F4-1 |
| External Wrenching Bolts | 2-2i, F2-6 |
| Eye Bolts | 2-2k, F2-8 |

F

| | |
|--------------------------|-------------|
| Fastener, Lockring | 2-15 |
| Fasteners | 2-9 |
| Camloc | 2-9b, F2-61 |
| Dill Lok-Skru | 2-9c, F2-62 |
| Dzus Fasteners | 2-9a, F2-60 |
| Interlocking Slide | 2-9e, T2-12 |
| Snap and Curtain | 2-9d |

INDEX - CONT

VOLUME 6

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

F - Continued

| | |
|--|-------------|
| Fillister Head Screws | F2-39 |
| Fitting Identification | 2-16a |
| Fitting Structural Bolts | 2-2q |
| Fittings | 2-16, T2-18 |
| Fitting Identification | 2-16a |
| Special Fitting Types | 2-16b |
| Fitting Material Code | T2-17 |
| Fittings, Typical | F2-76 |
| Flat-Head Screws | F2-37 |
| Floating Anchor Nuts | F2-17 |
| Flush Head Jo-Bolt | F2-10 |
| Forming Titanium and Titanium Alloys | 4-5a |
| Fuel and Oil Cells | 34 |
| Fuel Cell Identifications | 3-4a |
| Fuel Cell Storage | 3-4b |
| Oil Cell Identification | 3-4c |
| Oil Cell Storage | 3-4d |
| Fuel Cell Identification | 3-4a |
| Fuel Cell Storage | 3-4b |

G

| | |
|--|------|
| Gasket and Packing Identification | 3-6b |
| Gasket and Packing Types | 3-6a |
| Gasket and Packings | 3-6 |
| Gasket and Packing Identification | 3-6b |
| Gasket and Packing Types | 3-6a |
| Storage | 3-6c |
| General | |
| Adhesive Sealants, and Cements | 6-1 |
| Consumable Materials | 7-1 |
| Hardware | 2-1 |
| Metals | 4-1 |
| Phenolic and Plastic Materials | 5-1 |
| Rubber Materials | 3-1 |
| General Purpose Synthetic Rubber Base Cement MIL-Spec MMM-A-1617 | 6-2g |
| General Usage (of Rivets) | 2-8c |
| Gnp Length (for Bolts) | 2-2a |

INDEX - CONT

VOLUME 6

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

H

| | |
|---|-------------|
| Handling of Aluminum Alloys | 4-2b |
| Hardware General | 2-1 |
| Heat Treatment of Rivets | 2-8f |
| Helical Insert and Tools Data | T2-15 |
| Helical Insert National Fine Thread Sizes | T2-14 |
| Helical Insert Part Numbers | T2-13 |
| Helical Thread Inserts | 2-11 |
| Insert Tolerance | 2-11c |
| Inspection Criteria for Helical Springs | 2-11d |
| Installation of Helical Insert | 2-11e |
| Installation of Spark Plug Helical Insert | 2-11h |
| Installation of Twinert | 2-11i |
| Oversize Insert and Twinert Kits | 2-11k |
| Removal of Helical Insert | 2-11f |
| Removal of Twinert | 2-11j |
| Types | 2-11a |
| Hexagon Head Bolt Identification | F2-11 |
| Hexagon Head Bolts | 2-2e |
| Hi-Shear Rivets | 2-8h, F2-54 |
| High Tensile Washer | F2-33 |
| Hinge Pins | 2-7f |
| Hole Location by Letter, Bolt | T2-4 |
| Hose Clamp | F2-43 |
| Huck and Hi-Lock Bolt Substitution | 12-6 |
| Huck Bolts (Lockbolt) | 2-2p |
| Huck Rivet | F2-57 |

Identification

| | |
|---|------------|
| of Aluminum Alloys | 4-2a |
| of Hose | F3-1 |
| of Magnesium Alloys | 4-3a, T4-7 |
| of Nuts | 2-31 |
| of Phenolic Compositions | 5-2a |
| of Plastic Materials | 5-3a, T5-1 |
| of Rubber Materials | T3-3 |
| of Steel | T4-10 |
| of Steel Alloys | 4-4a |
| of Steels, SAE Numbers Used in | T4-8 |
| of Tie Rods | 2-13a |
| of Titanium and Titanium Alloys | 4-5c |
| Insert Tolerance (for Helical Inserts) | 2-11c |
| Inspection Criteria for Helical Springs | 2-11d |

INDEX - CONT

VOLUME 6

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

I - Continued

| | |
|--|--------------|
| Inspection of Rubber Materials | 3-1b |
| Inspection of Titanium and Titanium Alloys | 4-5b |
| Installation Data, Spacer | F2-69 |
| Installation of Helical Insert | 2-11e |
| Installation of Spark Plug Helical Insert | 2-11h |
| Installation of Twinert | 2-11i, F2-66 |
| Installation, Stud | F2-65 |
| Installation, Stud and Grommet | F2-59 |
| Installing New Stud | 2-10b |
| Interlocking Slide Fasteners | 2-9e, T2-12 |
| Internal Wrenching Bolts | 2-2h, F2-5 |
| Internal Wrenching Nuts | 2-3h |

J

| | |
|--|-------------|
| Jamnuts | 2-3d |
| Jo-and V-Bolts Substitution | 22-2s, T2-7 |
| Jo-Bolts | 2-20 |
| Flush Head | F2-10 |
| Hexagon Head | F2-11 |
| Millable Head | F2-12 |
| Joint with Oversize Hole, Bolted | F2-13 |

L

| | |
|--|-------------|
| Length by Dash Number, Bolt | T2-5 |
| Length Measurement (of Screws) | 2-5b |
| Light Hexagon Nuts | 2-3e, F2-25 |
| Locking of Safetying Bolts | 2-2b |
| Lockpins | 2-7e, F2-51 |
| Lockring | F2-74 |
| Lockring Fastener | 2-15 |
| Lockring Principle | F2-75 |
| Lockwasher, Spit | F2-30 |
| Lockwashers | 2-46 |
| Lockwashers, Teeth-Type | F2-31 |
| Lockwire Installation | 2-17b |
| Lockwiring Oil Caps, Drain Cocks, and Valves | F2-79 |
| Lockwiring Screws, Nuts, and Bolts | F2-78 |
| Lockwiring, Speed Rig | F2-81 |
| Lockwiring Turnbuckles | 2-17f |
| Loop-Type Bonding Clamp | F2-42 |
| Loop-Type Support Clamp | F2-45 |

INDEX - CONT

VOLUME 6

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

M

| | |
|--|------------|
| Machine Screws | F2-38 |
| Magnesium Alloys | 4-3 |
| Identification | 4-3a, T4-7 |
| Storage..... | 4-3c |
| Testing. | 4-3b |
| Maintenance Activities, Responsibility of | 1-4 |
| Marking Steel Alloys | 4-4b |
| Marking Titanium Alloys | 4-5d |
| Markings, Bolt and Screw | T2-1 |
| Material, by Letter Preceding Dash Number, Bolt | T2-3 |
| Materials, Consumable | 1-7 |
| Materials Used in Fabrication (of Rivets) | 7-1 |
| Metals, General | 4-1 |
| Millable Hexagon Head Jo-Bolt | F2-12 |
| Minimum Breakaway Torque for Used All-Metallic and Nonmetallic Self-Locking Nuts | T2-8 |
| Mixing (Adhesives, Sealants, and Cements) | 6-1 c |

N

| | |
|--|-------------|
| National Fine Thread Sizes (for Helical Inserts) | T2-14 |
| Natural Rubber Adhesive, MIL-Spec MMM-A-139, Class 3 | 6-2i |
| Neoprene Base Synthetic Rubber Cement | 6-2j |
| Non-Hardening Distic Brand Cement | 6-2h |
| Numbering System, CherryMAX Rivets | T2-10 |
| Nut Installation Limits, Self-Locking | F2-21 |
| Nuts | 2-3 |
| Airframe Plain Nuts | 2-3j, F2-28 |
| Castellated Nuts | 2-3b |
| Checknuts..... | 2-3c |
| Identification of Nuts | 2-3i |
| Internal Wrenching Nuts | 2-3h |
| Jamnuts..... | 2-3d |
| Light Hexagon Nuts | 2-3e, F2-25 |
| Self-Locking Nuts | 2-3a |
| Sheet Spring Nuts | 2-3g, F2-27 |
| Wingnuts | 2-3f, F2-26 |

O

| | |
|---|-------|
| Oil Caps, Drain Cocks, and Valves, Lockwiring of | F2-79 |
| Oil Cell Identification | 3-4c |
| Oil Cell Storage..... | 3-4d |
| Old and New Color Code (for Aluminum Alloys), Cross Reference | T4-5 |

INDEX - CONT

VOLUME 6

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

O - Continued

| | |
|---|-------|
| Other Adhesives | 6-2 n |
| Oversize Insert and Twininsert Kits | 2-11k |

P

| | |
|---|--------------|
| Packings, Gaskets and | 3-6 |
| Part Number Breakdown, Spacer | F2-68 |
| Part Numbers, Helical Insert | T2-13 |
| Phenolic and Plastic Materials, General | 5-1 |
| Phenolic Compositions | 5-2 |
| Identification | 5-2a |
| Storage | 5-2c |
| Usage | 5-2b |
| Pin, Threaded Taper | F2-48 |
| Pins | 2-7 |
| Clevis Pins | 2-7a, F2-46 |
| Cotter Pins | 2-7g, F2-52 |
| Hinge Pins | 2-7f |
| Lockpins | 2-7e, F2-51 |
| Safety Retaining Pins | 2-7c, F2-49 |
| Spring Pins | 2-7d, F2-50 |
| Taper Pins | 2-7b |
| Pins, Plain Taper | F2-47 |
| Plain Washers | 2-4a, F2-29 |
| Plastic Materials | 5-3 |
| Identification | 5-3a, T5-1 |
| Storage | 5-3c |
| Types | 5-3b |
| Plate Nut, Self-Locking | F2-16 |
| Practices for Installation of Cotter Pins and Lockwire | 2-17 |
| Cotter Pin Installation | 2-17a, F2-77 |
| Double-Twist Method | 2-17c |
| Lockwire Installation | 2-17b |
| Lockwiring Turnbuckles | 2-17f |
| Rod End Safetying (Key Type NAS 559) | 2-17h, F2-82 |
| Safetying Emergency Devices | 2-17e |
| Securing Electrical and Electronic Connectors | 2-17i |
| Single-Wire Method | 2-17d |
| Speed Rig Safetying | 2-17g |
| Precautionary Measures (for Adhesives, Sealants, and Cements) | 6-1a |
| Preload Indicating Washers | F2-35 |
| Preparation of Surface (for Adhesives, Sealants, and Cements) | 6-1b |
| Principle of Lockring | F2-75 |
| Purpose (of Manual) | 1-1 |

INDEX - CONT

VOLUME 6

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| R | |
| Recommended Changes to Department of the Army Publications | 1-6 |
| Recommended Torque Values | 2-18c |
| Recommended Torque Values, Nut | T2-9 |
| Removal of Bent, Damaged, or Broken Studs | 2-10a |
| Removal of Helical Insert | 2-11f |
| Removal of Twinert | 2-11j |
| Removal, Stud | F2-64 |
| Repair of Damaged Spark Plug Threads | 2-11g |
| Responsibilities | |
| of AVSCOM | 1-5 |
| of Maintenance Activities | 1-4 |
| Rivet, Cherry MAX | F2-55 |
| Rivet, Huck | F2-57 |
| Rivets | 2-8, F2-53 |
| Blind Rivets | 2-8i |
| Common Solid Shank Rivets | 2-8a |
| Corrosion Resistance | 2-8d |
| General Usage | 2-8c |
| Heat Treatment | 2-8f |
| Hi-Shear Rivets | 2-8h, F2-54 |
| Materials Used in Fabrication | 2-8b |
| Rivnuts | 2-8j |
| Strength | 2-8e |
| Rivets, Cherrylock | F2-56 |
| Rivnut Types | F2-58 |
| Rivnuts | 2-8j |
| Rod End Safetying (Key Type NAS 559) | 2-17h, F2-82 |
| Rubber Materials | |
| General | 3-1 |
| Identification | T3-3 |
| Inspection | 3-1b |
| Storage | 3-1a |
| S | |
| SAE Numbers Used in Identification of Steels | T4-8 |
| Safety Retaining Pins | 2-7c, F2-49 |
| Safetying Emergency Devices | 2-17e |
| Scope (of Manual) | 1-2 |
| Screw Heads | 2-5a |
| Screws | 2-5 |
| Electrical Screws | 2-5f |
| Length Measurement | 2-5b |

INDEX – CONT

VOLUME 6

Subject

Paragraph, Figure, Table Number

S – Continued

| | |
|--|-------------|
| Machines Screws | 2-5d,F2-38 |
| Screw Heads | 2-5e,F2-40 |
| Self-Tapping Screws | 2-5e,F2-36 |
| Structural Screws | 4-3l |
| Screws, Fillister Head | F2-39 |
| Screws, Flat-Head | F2-37 |
| Screws, Nuts, and Bolts, Lockwiring of | F2-78 |
| Screws, Round-Head Machine | F2-41 |
| Sealants | 6-3 |
| Anaerobic Adhesive MIL-R-46082 | 6-3i |
| Characteristics of Catalyst Cured Sealants | 6-3c |
| Characteristics of Drying Sealants | 6-3b |
| Characteristics of Pliable Sealants | 6-3a |
| Sealing Compound, MIL-S-7126 | 6-3f |
| Sealing Compound, MIL-S-8784 | 6-3r |
| Sealing Compound, PR-1826 B1/2 | 6-3r |
| Semi-Solid Synthetic Rubber Sealant for Engine Firewalls | 6-3l |
| Semi-Solid Synthetic Rubber Sealant, MIL-A-7126, for Hot-Air Ducts | 6-3g |
| Sealing Compound, MIL-S-7126 | 6-3f |
| Sealing Compound, MIL-S-8784 | 6-3d |
| Sealing Compound, PR-1826 B1/2 | 6-3e |
| Application Time (Room Temperature) | T6-4 |
| Cure Time (Room Temperature) | T6-5 |
| Securing Electrical and Electronic Connectors | 2-17i |
| Selection of Helical Inserts | 2-11b |
| Self-Locking Bolts | 2-21, F2-9 |
| Self-Locking Engine Nut | F2-20 |
| Self-Locking Nut Installation Limits | F2-21 |
| Self-Locking Nuts | 2-3a |
| Self-Locking Plain Nut | F2-15 |
| Self-Locking Plate Nut | F2-16 |
| Self-Locking Thin Nut | F2-14 |
| Self-Tapping Screws | 2-5e,F2-40 |
| Semi-Solid Rubber Sealant, for Engine Firewalls | 6-3h |
| Semi-Solid Rubber Sealant, Mil-A-7126, for Hot-Air Ducts | 6-3g |
| Shear Castle Nut | F2-23 |
| Sheet Spring Nuts | 2-3g, F2-27 |
| Shelf Life (of Adhesive, Acrylic Monomer and Polymer Base Adhesive, MIL-A-8576, Type II, Non-Solvent) | T6-3 |
| Shelf Life (of Adhesive, Acrylic Monomer and Polymer Base Adhesive, MIL-A-8576, Type I, Solvent Type) | T6-1 |
| Shock Absorber and Elastic Exerciser Cords | 3-5 |
| Cord Identification | 3-5a |
| Cord Inspection | 3-5b |

INDEX - CONT

VOLUME 6

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| S - Continued | |
| Cord Storage | 3-5d |
| Cord Testing | 3-5c |
| Single-Wire Method | 2-17d |
| Snap and Curtain Fasteners | 2-9d |
| Spacer Identification | 2-12a |
| Spacer Installation | 2-12b |
| Spacer Installation Data | F2-69 |
| Spacer Part Number Breakdown | F2-68 |
| Special Fitting Types | 2-16b |
| Special Washers | 2-4c |
| Specific Gravity Ranges (for Adhesives and Cements) | T6-2 |
| Speed Rig Lockwiring | F2-81 |
| Speed Rig Safetying | 2-17g |
| Split Lockwasher | F2-30 |
| Spring Pins | 2-7d, F2-50 |
| Steel Alloys | 4-4 |
| Identification | 4-4a |
| Marking | 4-4b |
| Steel, Identification of | T4-10 |
| Storage | |
| of Aluminum Alloys | 4-2c |
| of Gaskets and Packing | 3-6c |
| of Magnesium Alloys | 4-3c |
| of Phenolic Compositions | 5-2c |
| of Plastic Materials | 5-3c |
| of Rubber Materials | 3-1a |
| Strength (of Rivets) | 2-8e |
| Structural Screws | 2-5c, F2-36 |
| Stud and Grommet Installation | F2-59 |
| Stud Installation | F2-65 |
| Stud Removal | F2-64 |
| Stud Types | F2-63 |
| Studs | 2-10 |
| Installing New Stud | 2-10b |
| Removal of Bent, Damaged, or Broken Studs | 2-10a |
| Styles of Plate Nuts | F2-18 |
| Substitution and Interchangeability of Material (Air Items), Authority for | 1-3 |
| Substitution and Interchangeability (of Rivets) | 2-8g |
| Substitutions for Huck, Hi-Lok, and NAS Bolts | 2-2r |
| Substitutions for Jo-Bolts, and V-Bolts | 2-2s, T2-7 |

INDEX - CONT

VOLUME 6

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| T | |
| Taper Pin Washer | F2-32 |
| Taper Pins | 2-7b |
| Tee-Head Bolts | 2-2m |
| Teeth-Type Lockwashers | F2-31 |
| Temper Designations (of Aluminum Alloys) | T3-3 |
| Terminals, Turnbuckle | F2-72 |
| Test Loads (of Cords)..... | T3-2 |
| Testing of Magnesium Alloys | 4-3b |
| Thin Nut, Self-Locking | F2-14 |
| Threaded Taper Pins | F2-48 |
| Tie Rod Terminal Fittings | 2-13b, F2-71 |
| Tie Rods | 2-13 |
| Identification | 2-13a |
| Tie Rod Terminal Fitting | 2-13b, F2-71 |
| Tire Identification | 3-2a |
| Tire Storage | 3-2b |
| Tires | 3-2 |
| Tire Identification | 3-2a |
| Tire Storage | 3-2b |
| Titanium and Titanium Alloys | 4-5, T4-11 |
| Forming | 4-5a |
| Identification | 4-5c |
| Inspection | 4-5b |
| Marking | 4-5d |
| Tools Data, Helical Insert and | T2-15 |
| Tools Data, Metri-Thread Insert and | T2-16 |
| Tools Data, Twinert and | T2-17 |
| Torque | 2-18 |
| Considerations to be Taken Before Torquing | 2-18b |
| Recommended Torque Values | 2-18c |
| Torque Definitions | 2-18a |
| Torque Definitions | 2-18a |
| Torque for Used All-Metallic and Nonmetallic Self-Locking Nuts, Minimum Breakaway | T2-8 |
| Torque Values, Nut, Recommended | T2-9 |
| Tube Clamps..... | F2-44 |
| Tube Identification | 3-3a |
| Tube Storage | 3-3b |
| Tubes | 3-3 |
| Tube Identification | 3-3a |
| Tube Storage | 3-3b |
| Turnbuckle Assemblies, Typical | F2-80 |
| Turnbuckle Inspection | 2-14b |
| Turnbuckle Installation | 2-14a |

INDEX - CONT

VOLUME 6

Subject

Paragraph Figure, Table Number

T - Continued

| | |
|-------------------------------------|-------|
| Turnbuckle Terminals | F2-72 |
| Turnbuckles | 2-14 |
| Turnbuckle Inspection | 2-14b |
| Turnbuckle Installation | 2-14a |
| Twinsert and Tools Data | T2-16 |
| Twinsert Installation | F2-66 |
| Types of Aluminum Alloys | T4-6 |
| Types of Helical Inserts | 2-11a |
| Types of Plastic Materials | 5-3b |
| Types of Rivnuts | F2-58 |
| Typical Fittings | F2-76 |
| Typical Turnbuckle Assemblies | F2-80 |

U

| | |
|--|------|
| Usage (of Phenolic Compositions) | 5-2b |
|--|------|

W

| | |
|-----------------------------------|-------------|
| Washer, Countersunk | F2-34 |
| Washer, High Tensile | F2-33 |
| Washer, Taper Pin | F2-32 |
| Washers | 2-4 |
| Lockwashers | 2-4b |
| Plainwashers | 2-4a, F2-29 |
| Special Washers | 2-4c |
| Washers, Preload Indicating | F2-35 |
| Wingnuts | 2-3f, F2-26 |

INDEX - CONT

VOLUME 7

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| A | |
| Advantages (of Radiography) | 5-3 |
| Advantages (of Ultrasonic Inspection) | 6-2 |
| Amperage (Circular Magnetization) | 4-9b |
| Amperage (Longitudinal Magnetization) | 4-10b |
| Angle Beam Method | 6-9b |
| Application, Field. | 7-4 |
| Application of Cleaner | 3-14b |
| Application of Developer | 3-14e |
| Applications (of Longitudinal Magnetization) | 4-10c |
| Applications (of Radiography) | 5-5 |
| Applying Transparent Tape | 4-12b |
| Availability of Penetrants | 3-8b |
| B | |
| Basic Principles of Penetrant Inspection | 3-3 |
| Basic Terminology (of Magnetism) | 4-3 |
| Ferromagnetic Metals | 4-3a |
| Leakage Field | 4-3b |
| Magnetic Substances | 4-3d |
| Magnetic Flux | 4-3e |
| Magnetism..... | 4-3c |
| Permeability | 4-3f |
| Residual Magnetism | 4-3g |
| Retentivity | 4-3h |
| Basic Testing Methods (Ultrasonics) | 6-4 |
| Beam Divergence | 6-7c |
| Best Access to Object | 5-6f |
| Black Light | 3-11d |
| C | |
| Calibration of Ultrasonic Equipment | 6-10 |
| Capabilities and Limitations (Magnetic Particle Inspection) | 4-5 |
| Changing Magnitude of Current | 7-5c |
| Characteristics, Transmission | 6-7 |
| Circular Magnetization | 4-9 |
| Amperage | 4-9b |
| Technique | 4-9a |
| Compatibility | 3-8a |
| Conditions Not Requiring Demagnetization | 4-13b |
| Consumable Materials | 1-3 |
| Continuous Method..... | 4-8b |

INDEX - CONT

VOLUME 7

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

C - Continued

| | |
|--|------|
| Couplants | 6-8d |
| Current and Particle Application | 4-8 |
| Continuous Method | 4-8b |
| Field Direction | 4-8c |
| Field Measurement | 4-8d |
| Residual Method | 4-8a |
| Sensitivity Level | 4-8e |
| Currents, Eddy | 7-3 |

D

| | |
|--|-----------|
| Data, Use of | 2-6 |
| Defects, Honeycomb, Fiberglass, and Composite | T2-2 |
| Definitions (Magnetic Particle Inspection Terms) | 4-11a |
| Degree of Sensitivity | 5-6d |
| Demagnetization | 4-13 |
| Conditions Not Requiring Demagnetization | 4-13b |
| Limits of Demagnetization | 4-13d |
| Reasons for Demagnetization | 4-13a |
| Techniques for Demagnetization | 4-13a |
| Destructive Tests | 2-4a |
| Detection Standards (Radiation) | T5-1 |
| Detection, Flaw | 2-7, T2-1 |
| Developer Application | 3-10j |
| Developer Draining | 3-10k |
| Developer Dwell Time | 3-10l |
| Disadvantages (of Radiography) | 5-4 |
| Disadvantages (of Ultrasonic Inspection) | 6-3 |
| Draining | 3-10e |
| Dry Particle Indications | 4-12c |
| Drying | 3-10c |

E

| | |
|--|-------|
| Eddy Current Inspection, Uses of | T7-1 |
| Eddy Current Test Set Model ED-520 | 7-5 |
| Changing Magnitude of Current | 7-5c |
| Needle Defections | 7-5d |
| Operation | 7-5a |
| Testing Procedure | 7-5b |
| Eddy Currents | 7-3 |
| Electrical Precautions | 5-11d |
| Electromagnetic Inspections, General | 7-1 |

INDEX - CONT

VOLUME 7

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

E - Continued

| | |
|--|--------|
| Emulsifier Application | 3-10g |
| Emulsifier Draining..... | 3-10h |
| Emulsifier Dwell Time | 3-10i |
| Equipment (Longitudinal Magnetization) | 4-10d |
| Evaluate Discontinuity | 3-14g |
| Exposure | 5-8a |
| Exposure and Processing, Film | 5-8 |
| Exposure Limits | 5-11 b |

F

| | |
|---|----------|
| Ferromagnetic Metals | 4-3a |
| Field Application | 7-4 |
| Field Direction | 4-8c |
| Field Measurement | 4-8d |
| Filing Radiographs | 5-10 |
| Film Exposure and Processing | 5-8 |
| Exposure | 5-8a |
| Processing | 5-8b |
| Film Placement | 5-6b |
| Film Processing, Manual | F5-1 |
| Fixing Indications with Lacquer | 4-12a |
| Flaw Detection | 2-7, T21 |
| Fluorescent Indications | 4-12e |
| Fluorescent Penetrant Inspection, Specific Procedures for | 3-11 |
| Fluorescent Penetrant Processes..... | 3-13 |
| Fluoroscopy | 5-7a |
| Fundamentals of Magnetic Particle Inspection | 4-4 |

G

| | |
|---|------|
| General (Inspection Techniques) | 5-6a |
| General Penetrant Inspections | 3-1 |
| General Procedures for Penetrant Inspection | 3-6 |
| General Shop Rules | 2-2 |
| Maintenance of Shop Equipment | 2-2e |
| Responsibility | 2-2a |
| Shop Housekeeping | 2-2b |
| Shop Safety | 2-2c |
| Shop Tools and Materials | 2-2d |
| General, Electromagnetic Inspections | 7-1 |
| General, Magnetic Particle Inspections | 4-1 |
| General, Nondestructive Inspection | 2-1 |

INDEX - CONT

VOLUME 7

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

G - Continued

| | |
|--|-------|
| General, Radiography | 5-1 |
| General (Radiography Safety and Equipment) | 5-11a |
| General (Ultrasonic Inspection Equipment) | 6-8a |
| General, Ultrasonic Inspections | 6-1 |

H

| | |
|--|------|
| Honeycomb, Fiberglass, and Composite Defects | T2-2 |
|--|------|

I

| | |
|--|-----------|
| Importance of Skilled Operators | 3-5 |
| Indicators, Magnetic Particle | 4-11 |
| Inspection (Penetrant) | 3-12a |
| Inspection and Interpretation | 3-12 |
| Inspection | 3-12a |
| Interpretation | 3-12b |
| Inspection Conditions | 3-11a |
| Inspection of Bar Stock | 6-9f |
| Inspection of Metal Plates and Sheets | 6-9e |
| Inspection of the Part | 3-14f |
| Inspection of Tubes and Pipes | 6-9g |
| Inspection Preparation | 4-6 |
| Inspection Process, Selection of | 3-9 |
| Inspection Techniques | 5-6 |
| Best Access to Object | 5-6f |
| Degree of Sensitivity | 5-6d |
| Film Placement | 5-6b |
| General | 5-6a |
| Source-to-Film Distance | 5-6c |
| Thickness Measurement | 5-6e |
| Inspection, Penetrant, Types and Methods | T3-2 |
| Inspection, Ultrasonic, Equipment | 6-8 |
| Inspection, Ultrasonic, Techniques | 6-9 |
| Inspections, Types of | 2-4 |
| Interpretation and Inspection | 3-12 |
| Interpretation (Penetrant Inspection) | 3-12b |
| Interpretation (Radiographic) | 5-9, 5-9a |

INDEX - CONT

VOLUME 7

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| L | |
| Lamb Waves | 6-6d |
| Leakage Field | 4-3b |
| Lighting and Facilities | 3-11c |
| Limitations (Penetrant Inspection) | 3-4 |
| Limitations and Capabilities (Magnetic Particle Inspection) | 4-5 |
| Limits of Demagnetization | 4-13d |
| Longitudinal Magnetization | 4-10 |
| Amperage..... | 4-10b |
| Applications | 4-10c |
| Equipment | 4-10d |
| Technique | 4-10a |
| Longitudinal Waves..... | 6-6a |
| M | |
| Magnetic Flux | 4-3e |
| Magnetic Particle Indicators | 4-11 |
| Definitions | 4-11a |
| Steps of Inspection | 4-11b |
| Magnetic Particle Inspection, Fundamentals of | 4-4 |
| Magnetic Particle Inspections, General | 4-1 |
| Magnetic Substances | 4-3d |
| Magnetism | 4-3c |
| Magnetism, Theory of | 4-2 |
| Magnetization, Circular | 4-9 |
| Magnetization, Longitudinal | 4-10 |
| Maintenance of Shop Equipment | 2-2e |
| Manual Film Processing | F5-1 |
| Materials, Consumable | 1-3 |
| Methods of Application (Magnetic Particles) | 4-7b |
| Methods of Application, Particles and | 4-7 |
| Methods of Recording Indications (Magnetic Particle Inspection) | 4-12 |
| Applying Transparent Tape | 4-12b |
| Dry Particle Indications | 4-12c |
| Fixing Indications with Lacquer | 4-12a |
| Fluorescent Indications | 4-12e |
| Photographing Indications | 4-12f |
| Wet Particle Indications | 4-12d |
| Minimum Penetration Time For Penetrants | T3-1 |
| Misinterpretation (Radiographic) | 5-9b |
| Modes of Vibration | 6-6 |
| Lamb Waves | 6-6d |

INDEX - CONT

VOLUME 7

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

M - Continued

| | |
|--------------------------|------|
| Longitudinal Waves | 6-6a |
| Rayleigh Waves | 6-6c |
| Transverse Waves | 6-6b |

N

| | |
|--|------|
| Nature of Sound Waves | 6-5 |
| NDI Shop Requirements | 2-3 |
| Need for Both Types of Tests | 2-4c |
| Needle Deflections | 7-5d |
| Nondestructive Inspection, General | 2-1 |
| Nondestructive Tests | 2-4b |

O

| | |
|---|------|
| Operation (Eddy Current Test Set) | 7-5a |
| Operative Precautions | 3-7b |

P

| | |
|--|-------|
| Particle Application, Current and | 4-8 |
| Particles | 4-7a |
| Particles and Methods of Application | 4-7 |
| Methods of Application | 4-7b |
| Particles | 4-7a |
| Penetrant Application | 3-10d |
| Penetrant Application (Type I, Method C) | 3-14c |
| Penetrant Inspection, Basic Principles of | 3-3 |
| Penetrant Inspection, General Procedures for | 3-6 |
| Penetrant Inspection, Type I, Method C | 3-14 |
| Penetrant Inspection Types and Methods | T3-2 |
| Penetrant Inspections, General | 3-1 |
| Penetrant Inspections, Precautions in | 3-7 |
| Penetrants, Minimum Penetration Time for | T3-1 |
| Penetrants, Quality Control of | 3-8 |
| Penetration Times | 3-10f |
| Permeability | 4-3f |
| Personnel Requirements | 2-5 |
| Photographing Indications | 4-12f |
| Portable X-Ray Units | 5-7b |
| Pre-operative Precautions | 3-7a |
| Precautions in Penetrant Inspections | 3-7 |

INDEX - CONT

VOLUME 7

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

P - Continued

| | |
|---|--------|
| Operative Precautions | 3-7b |
| Pre-operative Precautions | 3-7a |
| Safety Precautions | 3-7d |
| Temperature Limitations | 3-7c |
| Precleaning | 3-10b |
| Precleaning Process (for Type C Penetrant) | 3-14a |
| Preparation, Inspection | 4-6 |
| Pretesting | 3-10a |
| Pretesting, Precleaning, Drying, Application, and Removal | 3-10 |
| Developer Application | 3-10j |
| Developer Draining | 3-10k |
| Developer Dwell Time | 3-10l |
| Draining | 3-10e |
| Drying | 3-10c |
| Emulsifier Application | 3-109g |
| Emulsifier Draining | 3-10h |
| Emulsifier Dwell Time | 3-10i |
| Penetrant Application | 3-10d |
| Penetration Times | 3-10f |
| Precleaning | 3-10b |
| Pretesting | 3-10a |
| Removal Methods | 3-10m |
| Processing | 5-8b |
| Purpose (of Electromagnetic Inspections) | 7-2 |
| Purpose (of Manual) | 1-1 |
| Purpose (of Penetrant Inspections) | 3-2 |
| Purpose (of Radiography) | 5-2 |

Q

| | |
|-------------------------------------|------|
| Quality Control of Penetrants | 3-8 |
| Availability | 3-8b |
| Compatibility | 3-8a |

INDEX - CONT

VOLUME 7

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

R

| | |
|--|-------|
| Radiation Detection Standards | T5-1 |
| Radiation Detectors | 5-11c |
| Radiographic Interpretation | 5-9 |
| Interpretation | 5-9a |
| Misinterpretation | 5-9b |
| Radiographs, Filing | 5-10 |
| Radiography, General | 5-1 |
| Radiography Safety Precautions and Equipment..... | 5-11 |
| Electrical Precautions | 5-11d |
| Exposure Limits | 5-11b |
| General | 5-11a |
| Radiation Detectors | 5-11c |
| Rayleigh Waves | 6-6c |
| Reasons for Demagnetization | 4-13a |
| Recording Indications, Methods of (Magnetic Particle Inspection) | 4-12 |
| Reflection..... | 6-7a |
| Refraction and Mode Conversion | 6-7b |
| Relative Response of Survey Meters | T5-2 |
| Removal of Developer | 3-14h |
| Removal of Excess Penetrant | 3-14d |
| Removal Methods (Penetrants)..... | 3-10m |
| Requirements, Personnel | 2-5 |
| Residual Magnetism | 4-3g |
| Residual Method | 4-8a |
| Responsibility (for Shop Rules) | 2-2a |
| Retentivity | 4-3h |

S

| | |
|--|------|
| Safety Precautions | 3-7d |
| Safety Precautions and Equipment | 5-10 |
| Scope (of Manual) | 1-2 |
| Search Units | 6-8b |
| Selection of Inspection Process | 3-9 |
| Sensitivity Level | 4-8e |
| Shop Housekeeping | 2-2b |
| Shop Requirements, NDI | 2-3 |
| Shop Rules, General | 2-2 |
| Shop Safety | 2-2c |
| Shop Tools and Materials..... | 2-2d |
| Skilled Operators, Importance of | 3-5 |
| Sound Waves, Nature of | 6-5 |
| Source-to-Film Distance | 5-6c |
| Special Techniques (Radiography) | 5-7 |

INDEX - CONT

VOLUME 7

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

S - Continued

| | |
|--|-------------|
| Fluoroscopy | 5-7a |
| Portable X-Ray Units | 5-7b |
| Specific Procedures for Fluorescent Penetrant Inspection | 3-11 |
| Black Light..... | 3-11d |
| Inspection Conditions | 3-11a |
| Lighting and Facilities | 3-11c |
| Surface Preparation | 3-11b |
| Steps of Inspection (Magnetic Particle Inspection) | 4-11b |
| Straight Beam Method | 6-9a |
| Surface Preparation | 3-11b, 6-9d |
| Surface Wave Method | 6-9c |
| Survey Meters, Relative Response of | T5-2 |

T

| | |
|---|-------|
| Technique (of Circular Magnetization) | 4-9a |
| Technique (of Longitudinal Magnetization) | 4-10a |
| Techniques for Demagnetization | 4-13c |
| Techniques, Inspection | 5-6 |
| Techniques, Special (Radiography) | 5-7 |
| Temperature Limitations | 3-7c |
| Terminology, Basic (of Magnetism) | 4-3 |
| Test Set, Eddy Current, Model ED-520 | 7-5 |
| Testing Methods, Basic (Ultrasonics) | 6-4 |
| Testing Procedure (Eddy Current) | 7-5b |
| Theory of Magnetism | 4-2 |
| Thickness Measurement | 5-7e |
| Transducers | 6-8c |
| Transmission Characteristics | 6-7 |
| Beam Divergence | 6-7c |
| Reflection | 6-7a |
| Refraction and Mode Conversion | 6-7b |
| Transverse Waves | 6-6b |
| Type I, Method C Penetrant Inspection | 3-14 |
| Application of Cleaner | 3-14b |
| Application of Developer | 3-14e |
| Evaluate Discontinuity | 3-14g |
| Inspection of the Part | 3-14f |
| Penetrant Application | 3-14c |
| Precleaning Process | 3-14a |
| Removal of Developer | 3-14h |
| Removal of Excess Penetration | 3-14d |

INDEX - CONT

VOLUME 7

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

T - Continued

| | |
|--|------|
| Types of Fluorescent Penetrant Processes | 3-13 |
| Types of Inspections | 2-4 |
| Destructive Tests | 2-4a |
| Need for Both Types of Tests | 2-4c |
| Nondestructive Tests | 2-4b |

U

| | |
|---|------|
| Ultrasonic Equipment, Calibration of | 6-10 |
| Ultrasonic Inspection Equipment | 6-8 |
| General | 6-8a |
| Search Units | 6-8b |
| Transducers..... | 6-8c |
| Ultrasonic Inspection Techniques | 6-9 |
| Angle Beam Method | 6-9b |
| Inspection of Bar Stock..... | 6-9f |
| Inspection of Metal Plates and Sheets | 6-9e |
| Inspection of Tubes and Pipes | 6-9g |
| Straight Beam Method | 6-9a |
| Surface Preparation | 6-9d |
| Surface Wave Method | 6-9c |
| Ultrasonic Inspections, General | 6-1 |
| Use of Data | 2-6 |
| Uses of Eddy Current Inspection | T7-1 |

V

| | |
|---------------------------|-----|
| Vibration, Modes of | 6-6 |
|---------------------------|-----|

W

| | |
|--------------------------------|-------|
| Wet Particle Indications | 4-12d |
|--------------------------------|-------|

INDEX - CONT

VOLUME 8

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| A | |
| Aluminum Alloys, Typical Machine Setting for Spot Welding | T3-4 |
| Aluminum Arc Welding | 3-5d |
| Aluminum Gas Welding | 3-5c |
| Aluminum Spot Welding | 3-5e |
| Aluminum Welding | 3-5 |
| Arc Welding | 3-5d |
| Cleaning | 3-5b |
| Gas Welding | 3-5c |
| Spot Welding | 3-5e |
| Types of Alloys | 3-5a |
| Arc Welding Defects, Causes, and Remedies | T3-3 |
| Arc Welding Magnesium | T3-6 |
| B | |
| Bandsaws | |
| Care and Use | 2-4b |
| Cutoff-Type | F2-3 |
| Vertical-Contour Type | F2-2 |
| Bearing Roll Staking | 2-6e |
| Brazing | 3-9a |
| Brazing and Silver Soldering | 3-9 |
| Brazing | 3-9a |
| Post Brazing and Silver Soldering Cleaning | 3-9c |
| Silver Soldering | 3-9b |
| Brush Method of Starting Electric Arc | F3-5 |
| C | |
| Care and Use of Equipment | 2-4 |
| Bandsaws | 2-4b |
| Drilling Machines | 2-4a |
| Grinders | 2-4f |
| Lathes | 2-4c |
| Milling Machines | 2-4d |
| Shapers | 2-4e |
| Cleaning | |
| Aluminum Welding | 3-5b |
| Magnesium Welding | 3-6a |
| Consumable Materials | 1-3 |
| Corrosion-Resistant Steel and Nickel Chromium Alloy Welding | 3-7 |

INDEX - CONT

VOLUME 8

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

C - Continued

| | |
|---|------|
| Arc Welding | 3-7d |
| Distinguishing Corrosion-Resistant Steels and Nickel-Base Alloys | 3-7a |
| Gas Welding | 3-7c |
| Special Welding Considerations | 3-7b |
| Spot Welding | 3-7e |
| Welding Stresses and Distortion | 3-7f |
| Corrosion-Resistant Steel Arc Welding | 3-7d |
| Corrosion-Resistant Steel Gas Welding | 3-7c |
| Corrosion-Resistant Steel Spot Welding | 3-7e |
| Corrosion-Resistant Steels and Nickel Alloys, Relation Between Sheet Thickness and Current Required for Metallic Arc Welding of | T3-8 |
| Corrosion-Resistant Steels and Nickel-Base Alloys, Relation Between Sheet Thickness and Current Required for Inert-Arc Welding of | T3-9 |
| Counterboring and Spotfacing | 2-6c |
| Cut-off Type Bandsaw | F2-3 |

D

| | |
|--|------|
| Distinguishing Corrosion-Resistant Steels and Nickel-Base Alloys | 3-7a |
| Drill Press | F2-1 |
| Drilling Machines | |
| Care and Use | 2-4a |
| Safety Precautions | 2-3a |
| Special Operations on | 2-6 |

E

| | |
|--------------------------------------|-------------|
| Electric Arc Welding Equipment | 3-3b |
| Electric Arc Welding Equipment | F3-2 |
| Electrodes | 3-4a , T3-1 |
| Equipment Safety | 2-2c |

F

| | |
|---------------------------|------|
| Fire Safety | 2-2d |
| Flames, Gas Welding | F3-4 |
| Fluxes | 3-4c |

INDEX - CONT

VOLUME 8

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| G | |
| Gas Welding | 3-3a |
| Gas Welding Equipment | F3-1 |
| Gas Welding Equipment, Guide to Regulation of | T3-5 |
| Gas Welding Flames..... | F3-4 |
| General | |
| Machine Shop Practices | 2-1 |
| Weld Shop Practices | 3-1 |
| General Layout Practices | 2-5a |
| Grinder..... | F2-7 |
| Grinder Wheel Installation | F2-8 |
| Grinding Machines | |
| Care and Use..... | 2-4f |
| Safety Precautions..... | 2-3b |
| Wheel Installation | F2-8 |
| Guide to Regulation of Gas Welding Equipment | T3-5 |
| I | |
| Inert-Arc Welding of Corrosion-Resistant Steels and Nickel- Base Alloys, Relation Between Sheet Thickness and Current Required for..... | T3-9 |
| Introduction | |
| Consumable Materials | 1-3 |
| Purpose..... | 1-1 |
| Scope | 1-2 |
| L | |
| Lapping..... | 2-6d |
| Lathes..... | F2-4 |
| Care and Use..... | 2-4c |
| Safety Precautions..... | 2-3c |
| Laying Out and Mounting Work | 2-5 |
| General Layout Practices..... | 2-5a |
| Mounting..... | 2-5b |
| M | |
| Machine Safety Precautions..... | 2-3 |
| Drilling Machines | 2-3a |
| Grinding Machines..... | 2-3b |
| Lathes..... | 2-3c |
| Milling Machines | 2-3d |

INDEX - CONT

VOLUME 8

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

M - Continued

| | |
|--|------|
| Miscellaneous Machine Tools | 2-3f |
| Portable Machine Tools | 2-39 |
| Shapers and Planers..... | 2-3e |
| Machine Settings for Arc Welding Magnesium | T3-6 |
| Machine Shop Practices | |
| Care and Use of Equipment..... | 2-4 |
| General | 2-1 |
| Laying Out and Mounting Work..... | 2-5 |
| Machine Safety Precautions | 2-3 |
| Shop Rules..... | 2-2 |
| Special Operations on Drilling Machines..... | 2-6 |
| Magnesium Arc Welding | 3-6c |
| Magnesium Gas Welding | 3-6b |
| Magnesium Spot Welding | 3-6d |
| Magnesium Welding | 3-6 |
| Arc Welding | 3-6c |
| Cleaning | 3-6a |
| Gas Welding..... | 3-6b |
| Spot Welding | 3-6d |
| Metallic Arc Welding of Corrosion-Resistant Steels and Nickel Alloys, Relation Between Sheet Thickness and Current Required for | T3-8 |
| Milling Machines | |
| Care and Use..... | 2-4d |
| Safety Precautions..... | 2-3d |
| Miscellaneous Machine Tools, Safety Precautions..... | 2-3f |
| Mounting Work | 2-5b |

P

| | |
|--|------|
| Portable Machine Tools, Safety Precautions | 2-3g |
| Post Brazing and Silver Soldering Cleaning | 3-9c |
| Purpose of Manual..... | 1-1 |

R

| | |
|---|------|
| Reaming | 2-6a |
| Relation Between Sheet Thickness and Current Required for Inert-Arc Welding of Corrosion-Resistant Steels and Nickel-Base Alloys..... | T3-9 |
| Relation Between Sheet Thickness and Current Required for Metallic Arc Welding of Corrosion-Resistant Steels and Nickel Alloys | T3-8 |

INDEX - CONT

VOLUME 8

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

R - Continued

| | |
|--------------------------------|------|
| Responsibility | |
| Machine Shop Rules, for..... | 2-2a |
| Welding Shop Rules, for | 3-2a |
| Rod Information, Welding | T3-2 |

S

| | |
|--|------|
| Safety, Welding Shop | 3-2c |
| Schematic, Welding Equipment | F3-3 |
| Scope of Manual | 1-2 |
| Shaper | F2-6 |
| Shapers and Planers, Safety Precautions..... | 2-3e |
| Shapers, Care and Use..... | 2-4e |
| Shop Housekeeping | |
| Machine Shop..... | 2-2b |
| Welding Shop | 3-2b |
| Shop Rules, Machine Shop..... | 2-2 |
| Equipment Safety | 2-2c |
| Fire Safety | 2-2d |
| Responsibility | 2-2a |
| Shop Housekeeping..... | 2-2b |
| Shop Rules, Welding Shop | 3-2 |
| Responsibility | 3-2a |
| Safety | 3-2c |
| Shop Housekeeping..... | 3-2b |
| Silver Soldering..... | 3-9b |
| Special Operations on Drilling Machines | 2-6 |
| Bear Roll Staking..... | 2-6e |
| Counterboring and Spotfacing..... | 2-6c |
| Lapping..... | 2-6d |
| Reaming | 2-6b |
| Tapping | 2-6a |
| Special Welding Considerations, Corrosion-Resistant Steel and Nickel | |
| Chromium Alloy Welding | 3-7b |
| Starting Electric Arc, Brush Method..... | F3-5 |
| Stress Relieving Treatment | T3-7 |

T

| | |
|-----------------------------------|------|
| Tapping..... | 2-6a |
| Treatment, Stress Relieving | T3-7 |
| Types of Alloys, Aluminum | 3-5a |

INDEX - CONT

VOLUME 8

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

T - Continued

| | |
|--|------|
| Types of Welding | 3-3 |
| Electric Arc Welding | 3-3b |
| Gas Welding..... | 3-3a |
| Spot Welding..... | 3-3c |
| Typical Machine Setting for Spot Welding Aluminum Alloys | T3-4 |

V

| | |
|-------------------------------|------|
| Vertical-Contour Bandsaw..... | F2-2 |
|-------------------------------|------|

W

| | |
|--|------|
| Welding Equipment | |
| Electric Arc | F3-2 |
| Gas..... | F3-1 |
| Schematic | F3-3 |
| Welding, Arc; Defects, Causes, and Remedies | T3-3 |
| Welding Materials | 3-4 |
| Electrodes | 3-4a |
| Fluxes..... | 3-4c |
| Welding Rods | 3-4b |
| Welding on Aircraft | 3-8 |
| Welding Rod Information | T3-2 |
| Welding Rods | 3-4b |
| Welding Shop Practices | |
| Aluminum Welding | 3-5 |
| Brazing and Silver Soldering..... | 3-9 |
| Corrosion-Resistant Steel and Nickel Chromium Alloy Welding | 3-7 |
| General | 3-1 |
| Magnesium Welding | 3-6 |
| Shop Rules..... | 3-2 |
| Types of Welding..... | 3-3 |
| Welding Materials..... | 3-4 |
| Welding on Aircraft | 3-8 |
| Welding Stresses and Distortion, Corrosion-Resistant Steels and Nickel Chromium Alloy Welding | 3-7f |

INDEX - CONT

VOLUME 9

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

A

| | |
|---|-------|
| Accuracy Limits, Torque Tool | T8-1 |
| Action of Preload Indicating Washers | F8-30 |
| Adjustable Hook Spanner Wrench | F4-39 |
| Adjustable Reamer | F4-92 |
| Adjustable Wrench | F4-25 |
| Adjusting the Snap Gauge | F3-65 |
| Adjustment of Spray Pattern | F5-4 |
| Air Blow Cleaning Gun | F5-13 |
| Air Compressors, Typical | F9-14 |
| Aircraft Landing Gear Jack | F9-10 |
| Aircraft Pre-Heater | F9-15 |
| Alternate Method for Tightening to 15 Degree Wrench Arc | F8-25 |
| Angle Extension Torque Wrench Attachment | F8-20 |
| Angle, Checking | F3-19 |
| Application of Blade Pitch for Certain Materials | F4-98 |
| Application of Force, Improper | F8-19 |
| Applying Paint at an Angle, Effect of | F5-6 |
| Army Aviation, Types of Tools Used in | 2-2 |
| Attachment - Offset Reverse Extension, Torque Wrench | F8-17 |
| Audible-Indicating Torque Wrench | F8-4 |
| Automatic Center Punch | F4-60 |
| Awl 4-6, F4-48 | |
| Awl, Scribing with an | F4-49 |

B

| | |
|---------------------------------------|-------------|
| Ball Peen Hammer | F4-1 |
| Beading Large Tubing | F4-124 |
| Bench Vise | 4-8a, F4-53 |
| Bench Vise, Using a | 4-54 |
| Bender, Tube | F4-117 |
| Bending Tube Tool | 4-123 |
| Bending Tube | F4-118 |
| Bevel Protractor | F3-12 |
| Bits, Drill | 4-13 |
| Blade Set, Hacksaw | F4-97 |
| Bobs, Plumb | 3-3, F3-6 |
| Body Hammer | F4-2 |
| Box-End Wrench Offset | F4-23 |
| Box-End Wrenches | F4-22 |
| Boxes, Tool | 2-9 |
| Boxes, Typical Tool | F2-1 |
| Breast Drill | F4-80 |
| Brown and Sharpe Tapered Reamer | F4-94 |

INDEX - CONT

VOLUME 9

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| C | |
| Cable Rigging Tension Chart, Typical | F7-7 |
| Cable Tensionmeter | 7-3 |
| Calibration, Repair and..... | 8-8 |
| Calipers..... | 3-8 |
| Slide | F3-28 |
| Vernier..... | F3-29 |
| Calipers, Hermaphrodite | F3-27 |
| Calipers, Simple..... | F3-24 |
| Calipers, Spring-Joint..... | F3-25 |
| Calipers, Transfer..... | F3-26 |
| Care of Torque Tools | 8-6 |
| Carpenters Square..... | F3-10 |
| Carriage Clamp..... | F4-55 |
| Carriage Clamp, Using..... | F4-56 |
| Center Head, Setting the..... | F3-14 |
| Center Punch..... | F4-50 |
| Center Punch for Drilling | F4-84 |
| Check and Chuck Key, Three-Jaw..... | F6-3 |
| Checkered Flags, Reflectorizing and..... | 9-4 |
| Checking Angle..... | F3-19 |
| Checking Diameters, Snap Gauge for | F3-64 |
| Checking Dimension Between Surfaces, Snap Gauge for | F3-62 |
| Checking Flat or Cylindrical Work, Snap Gauge for | F3-63 |
| Checking Propeller Shaft Run Out..... | F3-76 |
| Chisels..... | F4-57 |
| Chisels, Cold..... | 4-9 |
| Clamp, Carriage..... | F4-55 |
| Clamping Devices | 4-8 |
| Bench Vise | F4-53 |
| Cleaner, File | F4-79 |
| Cleaning Gun, Air Blow | F5-13 |
| Cleaning Guns | 5-5 |
| Cleaning Solvent Gun | F5-12 |
| Cold Chisels..... | 4-9 |
| Combination Flaring Tools | F4-120 |
| Combination Square | F3-11 |
| Combination Wrench | F4-24 |
| Common Screwdriver..... | F4-13 |
| Concentric Torque Wrench Attachments..... | F8-15 |
| Consumable Materials..... | 1-3 |
| Control Surface Angle, Measuring at Full Throw..... | F7-3 |
| Conversion of Tensiometer Reading in Pounds..... | F7-6 |
| Correct and Incorrect Stroke Technique | F5-5 |

INDEX - CONT

VOLUME 9

Subject

Paragraph Figure, Table Number

C - Continued

| | |
|---|------------|
| Correct Drill Sizes for Tapping | F4-102 |
| Correct GO Dimension for Cylindrical Part | F3-68 |
| Correct NO-GO Dimension for Cylindrical Part..... | F3-69 |
| Cotter Pin Extractor..... | 7-7, F7-11 |
| Cranes and Hoists, Typical..... | F9-18 |
| Crossfiling | F4-76 |
| Crowfoot Wrench | F7-20 |
| Crowfoot Wrench, Using a | F7-21 |
| Crowfoot Wrenches..... | 7-15 |
| Curved Tooth File | F4-74 |
| Cutters, Pipe | F4-114 |
| Cutters, Tube | F4-115 |
| Cutting Edge and Heel Angles, Usual..... | F4-86 |
| Cutting Edge, Hand Grinding of..... | F4-87 |
| Cutting Edge, Hand Grinding of Heel to..... | F4-88 |
| Cutting, Flush..... | F4-113 |
| Cutting Tube with Tube Cutter..... | 4-23 |
| Cutting Wire | F4-112 |
| Cylinder, Locating Diameter of | F3-15 |
| Cylinder, Marking Diameter of | F3-16 |
| Cylindrical Part, Correct GO Dimension for | F3-68 |
| Cylindrical Part, Correct NO-GO Dimension for | F3-69 |
| Cylindrical Part, Placing Snap Gauge on..... | F3-67 |

D

| | |
|---|-------|
| Deflecting Beam Torque Wrench | F8-2 |
| Deicer Boot Pliers | 7-12 |
| Deicer Boot Pliers, Using | F7-19 |
| Deicer Boot Roller | 7-14 |
| Depth Gauge, Micromete | F3-48 |
| Depth Gauge, Rule | F3-47 |
| Depth Gauge, Vernier | F3-49 |
| Depth Gauges..... | 3-11 |
| Depth Micrometer | F3-36 |
| Description | |
| Leather Punch..... | 7-13 |
| Determining Correct Torque Value | 8-4 |
| Determining Depth with the Square Head..... | F3-20 |

INDEX - CONT

VOLUME 9

Subject

Paragraph
Figure, Table
Number

D - Continued

| | |
|--|--------|
| Diagonal Cutting Pliers..... | F4-42 |
| Dial Indicator Installed on Propeller Shaft..... | F3-75 |
| Dial Indicators | 3-20 |
| Dies | F4-104 |
| Dies, Taps and..... | 4-18 |
| Diestock..... | F4-105 |
| Divider, Spring | F3-21 |
| Divider, Wing | F3-22 |
| Dividers..... | 3-7 |
| Dividers, Scribing a Circle with | F3-23 |
| Double Cutting Shears | 4-21 |
| Double-Flaring Tool..... | F4-122 |
| Drawfiling..... | F4-78 |
| Dressing a Grinding Wheel | F6-6 |
| Drill Bit, Machine Grinding a | F4-85 |
| Drill Bit, Typical | F4-83 |
| Drill Bits | 4-13 |
| Drill Grinding Gauge, Using..... | F4-89 |
| Drill Jaws, V-Grooves in | F4-82 |
| Drill Sizes..... | T4-2 |
| Drill, Breast | F4-80 |
| Drill, Hand | F4-81 |
| Drill, Pneumatic..... | 5-7 |
| Drilling, Center Punch for | F4-84 |
| Drills, Electric | 6-3 |
| Drills, Hand | 4-12 |
| Drills, Pneumatic | F5-15 |
| Drive Punch | F4-61 |

INDEX - CONT

VOLUME 9

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| E | |
| Effect of Applying Paint at an Angle | F5-6 |
| Electric Drills | 6-3, F6-2 |
| Electric Grinders | 6-4 |
| Engine Maintenance Stand | F9-3 |
| Engine Trailer | F9-12 |
| Equipment, Lubricating | F9-20 |
| Extension Rods for Inside and Depth Micrometers | F3-37 |
| Extension, Proper Application of Force When Using | F8-18 |
| Extractor, Cotter Pin | 7-7, F7-11 |
| Extractor, Tap | F4-109 |
| Extractors, Spiral Screw | F4-108 |
| Extractors, Straight Screw | F4-107 |
| F | |
| Face Pin Spanner Wrench | F4-38 |
| Faulty Patterns and Suggested Corrections | F5-10 |
| File Cleaner | F4-79 |
| File Handle, Use of | F4-75 |
| File Nomenclature | F4-65 |
| File Teeth Spacing and Fineness | F4-67 |
| File Teeth, Single- and Double-Cut | F4-66 |
| File, Curved Tooth | F4-74 |
| File, Flat | F4-70 |
| File, Half-Round | F4-73 |
| File, Mil | F4-69 |
| File, Round | F4-72 |
| File, Square | F4-71 |
| File, Triangular | F4-68 |
| Files | 4-11 |
| Filing for a Flat Surface | F4-77 |
| Fillet and Radius Gauges | F3-73, 3-19 |
| Fillet and Radius Gauges, Using | F3-74 |
| Fingers, Mechanical | 7-8, F7-12 |
| Fishing Tool, Valve Stem | 7-5, F7-9 |
| Flanged Ring Gauge | F3-56 |
| Flares, Single and Double | F4-119 |
| Flaring Tools | 4-25 |

INDEX - CONT

VOLUME 9

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

F - Continued

| | |
|---|--------|
| Flat File..... | F4-70 |
| Flat Parts, Gauging..... | F3-66 |
| Flat Surface, Filing for a..... | F4-77 |
| Flat-Nose Pliers..... | F444 |
| Flush Cutting..... | F4-113 |
| Flushing Paint Gun with Thinner or Solvent (Cup)..... | F5-7 |
| Flushing Paint Gun with Thinner or Solvent (Pressure Tank or Gravity Bucket)..... | F5-8 |

G

| | |
|--|-------------|
| Gauge Tolerances, Ring..... | T3-1 |
| Gauge Tolerances, Snap..... | T3-2 |
| Gauge Types, Ring..... | F3-57 |
| Gauge, Flanged Ring..... | F3-56 |
| Gauge, Plug..... | 3-14 |
| Gauge, Surface..... | F3-45, 3-10 |
| Gauge Thread..... | F3-52 |
| Gauges, Ring..... | F3-55, 3-15 |
| Gauges, Snap..... | F3-59, 3-16 |
| Gauges, Thread..... | 3-13 |
| Gauging Flat Parts..... | F3-66 |
| General | |
| Electrical Power Tools..... | 6-1 |
| General Maintenance Tools..... | 4-1 |
| Ground Support Equipment..... | 9-1 |
| Measuring Tools..... | 3-1 |
| Special Aircraft Tools..... | 7-1 |
| Storage of Ground Support Equipment..... | 9-6 |
| Tool Procedures and Practices..... | 2-1 |
| Torque Tools and Torque Principles and Procedures..... | 8-1 |
| Use Torque Multiplier..... | F8-21 |
| General, Ground Support Equipment..... | 9-1 |
| Grinder, Pneumatic..... | 5-8 |
| Grinders..... | F6-4 |
| Grinding Wheel Installation..... | F6-5 |
| Grinding Wheel, Dressing a..... | F6-6 |
| Grinding, Screwdriver Tip..... | F4-19 |
| GSE - Three Color Camouflage Pattern..... | T9-1 |
| Guns, Paint..... | 5-3 |

INDEX - CONT

VOLUME 9

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| H | |
| Hacksaw Blade Set..... | F4-97 |
| Hacksaw Blade, Installing a..... | F4-99 |
| Hacksaw, Proper Way to Hold a..... | F4-100 |
| Hacksaws..... | 4-17, F4-96 |
| Half-Pound File..... | F4-73 |
| Hammer Face Substances, Soft-Faced..... | T4-1 |
| Hammer, Ball Peen..... | F4-1 |
| Hammer, Body..... | F4-2 |
| Hammer, Lead or Copper..... | F4-5 |
| Hammer, Riveting..... | F4-3 |
| Hammer, Setting..... | F4-4 |
| Hammer, Soft-Faced..... | F4-6 |
| Hammers and Mallets..... | 4-2 |
| Hand Drill..... | F4-81 |
| Hand Drills..... | 4-12 |
| Hand Grinding of Cutting Edge..... | F4-87 |
| Hand Grinding of Heel to Cutting Edge..... | F4-88 |
| Hand Seamer and Groover..... | 4-27 |
| Handle and Wedges, New..... | F4-11 |
| Handle, Hinged..... | F4-29 |
| Handle, Ratchet..... | F4-27 |
| Handle, Removing Broken..... | F4-10 |
| Handle, Sliding T-Bar..... | F4-28 |
| Handle, Speed..... | F4-30 |
| Heel Angle, Measuring..... | F4-90 |
| Height Gauge, Typical..... | F3-51 |
| Height Gauges..... | 3-12 |
| Typical..... | F3-51 |
| Hermaphrodite Calipers..... | F3-27 |
| Hexagonal Setscrew Wrench (Allen Wrench)..... | F4-31 |
| Hinged Handle..... | F4-29 |
| Hole Gauges, Small..... | 3-22, F3-79 |
| Hollow Punch..... | F4-64 |
| Hook Spanner Wrench..... | F4-36 |
| Hub Nut Torque Multiplier..... | F8-22 |

INDEX - CONT

VOLUME 9

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| I | |
| Identification of Parts of Reamers | F4-91 |
| Improper Application of Force | F8-19 |
| Individual Flaring Tool | F4-121 |
| Inside Micrometer | F3-35 |
| Installation of Preload Washer on a Bolt..... | F8-32 |
| Installation of Preload Washers on a Stud..... | F8-31 |
| Installing a Hacksaw Blade..... | F4-99 |
| Installing Protractor Head on Rule..... | F3-17 |
| Installing Wooden Wedge | F4-12 |
| J | |
| Jack Hydraulic Schematic Diagram | F9-6 |
| Jack, 3-Ton, Tripod | F9-9 |
| Jack, 5-Ton, Tripod | F9-8 |
| Jack, 10-Ton, Self-Contained | F9-11 |
| Jack, 12-Ton, Tripod | F9-7 |
| Jack, Aircraft Landing Gear..... | F9-10 |
| Jobber's (Machine) Reamer | F4-93 |
| K | |
| Knife, Putty | F4-52 |
| Knife, Utility | F4-50 |
| Knives..... | 4-7 |
| Knives, Pocket | F4-51 |
| L | |
| Laying Out Angle | F3-24 |
| Lead or Copper Hammer..... | F4-5 |
| Leather Punch..... | 7-13 |
| Level Condition | F3-5 |
| Level | |
| Machinist's Level | F3-2 |
| Master Precision Level | F3-1 |
| Mechanic's Level | F3-4 |
| Striding Level | F3-3 |
| Levels | 3-2 |
| Locating Diameter of Cylinder | F3-15 |
| Lockwire Pliers..... | 7-11, F7-16 |

INDEX - CONT

VOLUME 9

Subject

Paragraph Figure, Table Number

L - Continued

| | |
|---|-------|
| Long-Nose Pliers..... | F4-43 |
| Loosening Protractor Adjustment Screws..... | F3-18 |
| Lubricants for Tapping and Die-Cutting Threads..... | T4-3 |
| Lubricating Equipment | F9-20 |

M

| | |
|--|-------------|
| Machine Grinding a Drill Bit..... | F4-85 |
| Magnet, Telescoping..... | 7-9, F7-14 |
| Maintenance Platform, Type B-1 | F9-1 |
| Maintenance Stand, Type B-4A..... | F9-2 |
| Maintenance Stand, Engine | F9-3 |
| Mallet, Rawhide | F4-7 |
| Mallet, Rubber..... | F4-8 |
| Mallet, Tinner's..... | F4-9 |
| Mallets, Hammers and | 4-2 |
| Marking..... | 9-5 |
| Marking a Square Line | F3-13 |
| Marking Diameter of Cylinder | F3-16 |
| Master Precision Level..... | F3-1 |
| Materials, Consumable..... | 1-3 |
| Measuring Control Surface Angle at Full Throw..... | F7-3 |
| Measuring Heel Angle..... | F4-90 |
| Measuring Hole with a Small Hole Gauge | F3-80 |
| Measuring Hole with Telescoping Gauge..... | F3-78 |
| Measuring Sheet Metal and Wire | F3-72 |
| Mechanic's Level..... | F3-4 |
| Mechanical Fingers..... | 7-8, F7-12 |
| Mechanist's Scribes | F3-7 |
| Micrometer Depth Gauge | F3-48 |
| Micrometer with Extension Rod, Using Inside..... | F3-40 |
| Micrometer, Reading a Vernier..... | F3-43 |
| Micrometers | 3-9 |
| Depth..... | F3-36 |
| Extension Rods for Inside and Depth..... | F3-37 |
| Inside..... | F3-35 |
| Outside..... | F3-34 |
| Parts of a Micrometer | F3-41 |
| Reading a Measurement on a Micrometer | F3-42 |
| Reading a Metric Micrometer | 3-9f, F3-44 |
| Using Inside..... | F3-38 |
| Using Outside | F3-39 |

INDEX - CONT

VOLUME 9

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

M - Continued

| | |
|-------------------------------------|-------|
| Mill File | F4-69 |
| Mixing, Painting Requirements | 9-3 |
| Multipliers, Torque | 8-9 |

N

| | |
|--|--------------|
| New Handle and Wedges | F4-11 |
| Nippers and Pincers | F4-111, 4-22 |
| Nitrogen Servicing Unit | F9-17 |
| Nomenclature, File | F4-65 |
| Nonconcentric Attachments to Torque Wrench | F8-16 |
| Nozzle Position to Produce Vertical Fan | F5-3 |

O

| | |
|--|-------|
| Offset Screwdriver | F4-15 |
| Oil Spray Gun | F5-11 |
| Oil Spray Guns | 5-4 |
| Open-End Wrench | F4-20 |
| Open-End Wrench Jaw Offset | F4-21 |
| Operation and Use, Torque Wrench | 8-5 |
| Operation of Vernier Calipers | F3-31 |
| Outside Micrometer | F3-34 |
| Oxygen Servicing Unit | F9-24 |

P

| | |
|--|--------------|
| Paint Gun with Thinner or Solvent (Cup), Flushing | F5-7 |
| Paint Gun with Thinner or Solvent (Pressure Tank or Gravity Bucket), Flushing | F5-8 |
| Paint Gun, Soaking | F5-9 |
| Paint Gun, Typical | F5-1 |
| Paint Guns | 5-3 |
| Painting Requirements | 9-3 |
| Parts of a Micrometer | F3-41 |
| Pattern, Spray | F5-2 |
| Phillips Screwdriver | F4-14 |
| Pickler, Pre-Oiler and | F9-19 |
| Pin Punch | F4-62 |
| Pin Spanner Wrench | F4-37 |
| Pinchers, Nippers and | 4-22, F4-111 |

INDEX - CONT

VOLUME 9

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| P - Continued | |
| Pipe and Tube Cutters | 4-23 |
| Pipe Cutters | F4-114 |
| Placing Snap Gauge on Cylindrical Part..... | F3-67 |
| Pliers | 4-5 |
| Deicer Boot..... | 7-12 |
| Lockwire | 7-11, F7-16 |
| Pliers, Diagonal Cutting..... | F4-42 |
| Pliers, Flat Nose..... | F4-44 |
| Pliers, Long-Nose..... | F4-43 |
| Pliers, Retaining Ring..... | F4-40 |
| Pliers, Round-Nose | F4-45 |
| Pliers, Slip-Joint..... | F4-41 |
| Pliers, Vise-Grip | F4-47 |
| Pliers, Water Pump | F4-46 |
| Plug Gauges | F3-54, 3-14 |
| Plug, Three-Prong Grounded | F6-1 |
| Plumb Bobs | 3-3, F3-6 |
| Plumb Bobs, Polished Brass | F3-6 |
| Plumb Bobs, Solid Steel..... | F3-6 |
| Pneumatic Drill..... | 5-7 |
| Pneumatic Drills | F5-15 |
| Pneumatic Grinder | 5-8, F5-16 |
| Pneumatic Hammer | 5-9, F5-17 |
| Pneumatic Tools | 5-1 |
| Pneumatic Vacuum Cleaner..... | 5-6, F5-14 |
| Pocket Knives | F4-51 |
| Polished Brass Plumb Bobs | F3-6 |
| Portable Power Supply..... | F9-23 |
| Power Application of Force When Using Extension | F8-18 |
| Power Supply, Portable..... | F9-23 |
| Power Wrench Torque Multiplier | F8-23 |
| Practices and Procedures, Safety..... | 9-2 |
| Practices, Shop..... | 2-8 |
| Pre-Oiler and Pickler..... | F9-19 |
| Precautions, Safety | 5-2 |
| Preload Indicating Washers..... | F8-29 |
| Preload Indicating Washers, Torque Procedures Without a Torque Wrench..... | 8-11 |
| Preset Torque Screwdriver..... | F8-1 |
| Prick Punch..... | F4-58 |
| Progressive Snap Gauge | F3-61 |
| Propeller Shaft Runout, Checking | F3-76 |
| Propeller Shaft, Dial Indicator Installed on..... | F3-75 |
| Proper Fit of Screwdrivers..... | F4-17 |

INDEX - CONT

VOLUME 9

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

P- Continued

| | |
|--|-----------|
| Proper Procedure for Pulling Adjustable Wrenches | F4-35 |
| Proper Way to Hold a Hacksaw..... | F4-100 |
| Protractor..... | 7-2, F7-1 |
| Protractor Adjustment Screws, Loosening..... | F3-18 |
| Protractor Head on Rule, Installing..... | F3-17 |
| Protractor, Bevel | F3-12 |
| Protractor, Setting, with Flight Control Surface in Neutral Position | F7-2 |
| Punch, Automatic Center | F4-60 |
| Punch, Center | F4-59 |
| Punch, Drive | F4-61 |
| Punch, Hollow..... | F4-64 |
| Punch, Leather..... | 7-13 |
| Punch, Pin | F4-62 |
| Punch, Prick..... | F4-58 |
| Punch, Transfer | F4-63 |
| Punches..... | 4-10 |
| Purpose | |
| of Manual | 1-1 |
| Putty Knife | F4-52 |
| Tools on Army Aircraft | 2-5 |

R

| | |
|--|-------|
| Radius Gauges, Fillet and..... | 3-19 |
| Ratchet Handle | F4-27 |
| Ratchet Screwdrivers | F4-16 |
| Rawhide Mallet | F4-7 |
| Reading a Measurement on a Micrometer..... | F3-42 |
| Reading a Measurement on a Vernier Caliper | F3-32 |
| Reading a Metric Caliper..... | F3-33 |
| Reading a Metric Micrometer | F3-44 |
| Reading a Vernier Micrometer..... | F3-43 |
| Reamer, Adjustable..... | F4-92 |
| Reamer, Brown and Sharpe Tapered..... | F4-94 |
| Reamer, Jobber's (Machine) | F4-93 |
| Reamer, Repairman's Hand..... | F4-95 |
| Reamers | 4-14 |
| Reamers, Identification of Parts of | F4-91 |
| Recommended Torque Values..... | T8-2 |
| Reflectorizing and Checkered Flags..... | 9-4 |
| Removing Broken Handle | F4-10 |

INDEX - CONT

VOLUME 9

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

R - Continued

| | |
|---------------------------------|------------|
| Repair | |
| and Calibration | 8-8 |
| Tool, Valve | 7-6, F7-10 |
| Rigid Frame Torque Wrench | F8-3 |
| Ring Gauge Types | F3-57 |
| Ring Gauges | 3-15 |
| Tolerances | T3-1 |
| Ring Gauges, Using | F3-58 |
| Riveting Hammer | F4-3 |
| Roller, Deicer Boot | 7-14 |
| Round File | F4-72 |
| Round-Nose Pliers | F4-45 |
| Rubber Mallet | F4-8 |
| Rule Depth Gauge | F3-47 |
| Rule, Typical | F3-9 |
| Rules, Tapes and | 3-5 |

S

| | |
|---|-------|
| Safety | |
| Electrical Power Tools | 6-2 |
| Precautions | 5-2 |
| Tool | 2-7 |
| Safety Practices and Procedures | 9-2 |
| Schematic Diagram, Jack Hydraulic | F9-6 |
| Scope of Manual | 1-2 |
| Screwdriver Tip Grinding | F4-19 |
| Screwdriver, Offset | F4-15 |
| Screwdriver, Phillips | F4-14 |
| Screwdriver, Preset Torque | F8-1 |
| Screwdrivers | 4-3 |
| Screwdrivers, Common | F4-13 |
| Screwdrivers, Proper Fit of | F4-17 |
| Screwdrivers, Ratchet | F4-16 |
| Scribers | 3-4 |
| Scribers, Mechanist's | F3-7 |
| Scribing a Circle with Dividers | F3-23 |
| Scribing with an Awl | F4-49 |
| Selection, Torque Wrench | 8-3 |
| Self-Contained Jack, 10-Ton | F9-11 |
| Servicing Unit, Nitrogen | F9-17 |
| Servicing Unit, Oxygen | F9-24 |

INDEX - CONT

VOLUME 9

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

S - Continued

| | |
|--|--------------|
| Setscrew Wrench (Allen Wrench) Hexagonal | F4-31 |
| Setting Hammer | F4-4 |
| Setting Height on a Surface Gauge | 3-10c, F3-46 |
| Setting Protractor with Flight Control Surface in Neutral Position | F7-2 |
| Setting the Center Head..... | F3-14 |
| Shears and Double Flares..... | F4-119 |
| Shears, Double Cutting | 4-21 |
| Sheet Metal and Wire Gauge | F3-72, 3-18 |
| Sheet Metal and Wire, Measuring | F3-72 |
| Shop Practices..... | 2-8 |
| Simple Calipers..... | F3-24 |
| Single- and Double-Cut File Teeth | F4-66 |
| Sizes, Drill..... | T4-2 |
| Slide Caliper | F3-28 |
| Sliding T-Bar Handle..... | F4-28 |
| Slip-Joint Pliers | F4-41 |
| Small Hole Gauge, Measuring Hole with a | F3-80 |
| Small Hole Gauges | F3-79, 3-22 |
| Snap Gauge for Checking Diameters..... | F3-64 |
| Snap Gauge for Checking Dimension Between Surfaces | F3-62 |
| Snap Gauge for Checking Flat or Cylindrical Work..... | F3-63 |
| Snap Gauge, Adjusting the..... | F3-65 |
| Snap Gauge, Progressive | F3-61 |
| Snap Gauge, Solid Nonadjustable..... | F3-60 |
| Snap Gauges..... | F3-59, 3-16 |
| Tolerances..... | T3-2 |
| Soaking a Paint Gun | F5-9 |
| Sockets..... | F4-26 |
| Soft-Faced Hammer..... | F4-6 |
| Soft-Faced Hammer Face Substances..... | T4-1 |
| Soldering Tools..... | F7-22, 7-16 |
| Solid Nonadjustable Snap Gauge..... | F3-60 |
| Solid Steel Plumb Bobs..... | F3-6 |
| Solvent, Cleaning Gun | F5-12 |
| Spacing and Fineness, File Teeth | F4-67 |
| Special Aircraft Tools, General..... | 7-1 |
| Speed Handle | F4-30 |
| SPEM Stand | F9-4 |
| Spiral Screw Extractors..... | F4-108 |
| Spray Gun, Oil | F5-11 |
| Spray Guns, Oil..... | 5-4 |
| Spray Pattern..... | F5-2 |
| Spray Pattern, Adjustment of | F5-4 |

INDEX - CONT

VOLUME 9

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

S - Continued

| | |
|---|--------|
| Spring Divider | F3-21 |
| Spring-Joint Calipers..... | F3-25 |
| Square | |
| Carpenter's..... | F3-10 |
| Combination | F3-11 |
| Square File | F4-71 |
| Square Head, Determining Depth with the..... | F3-20 |
| Square Line, Marking a | F3-13 |
| Squares | 3-6 |
| Stand, SPEM | F9-4 |
| Stand, Type D5B Hydraulic Test | F9-5 |
| Storage of Ground Support Equipment..... | 9-6 |
| Straight Screw Extractor..... | F4-107 |
| Striding Level | F3-3 |
| Stroke Technique, Correct and Incorrect..... | F5-5 |
| Suggested Corrections, Faulty Pattern and | F5-10 |
| Surface Gauge..... | 3-10 |
| Setting Height on a | F3-46 |

T

| | |
|--|-------------|
| Tap Extractor | F4-109 |
| Tap Extractor, Use of | F4-110 |
| Tap Wrenches..... | F4-103 |
| Tapes and Rules | 3-5 |
| Tapes, Typical..... | F3-8 |
| Tapping and Die-Cutting Threads, Lubricants for..... | T4-3 |
| Tapping, Correct Drill Sizes for | F4-102 |
| Taps and Dies..... | 4-18 |
| Taps | F4-101 |
| Telescoping Gauge, Measuring Hole with..... | F3-78 |
| Telescoping Gauges | 3-21, F3-77 |

INDEX - CONT

VOLUME 8

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

T - Continued

| | |
|---|--------------|
| Telescoping Magnet..... | 7-9, F7-14 |
| Tensiometer..... | F7-4 |
| Tensiometer Reading in Pounds, Conversion of..... | F7-6 |
| Tensiometer, Cable..... | 7-3 |
| Tensiometer, Using a..... | F7-5 |
| Testing of Torque Tools | 8-7 |
| Thickness Gauge | 3-17, F3-70 |
| Thread Chasers..... | 4-19, F4-106 |
| Thread Gauge..... | F3-52 |
| Thread Gauges | 3-13 |
| Three-Jaw Chuck and Chuck Key..... | F6-3 |
| Three-Prong Grounded Plug..... | F6-1 |
| Tightening Preload Washers | F8-33 |
| Tightening to 15-Degree Wrench Arc | F8-24 |
| Tightening to 30-Degree Wrench Arc | F8-27 |
| Tightening to 60- or 120-Degree Wrench Arc | F8-26 |
| Tightening to 90- or 180-Degree Wrench Arc | F8-28 |
| Tinner's Mallet..... | F4-9 |
| Tolerances | |
| Ring Gauges..... | 3-15, T3-1 |
| Snap Gauges..... | T3-2 |
| Tool Boxes..... | 2-9 |
| Tool Care | 2-3 |
| Tool Safety | 2-7 |
| Tool Selection | 24 |
| Tool Selection | 10-2f |
| Tool Use | 2-6 |
| Tool, Double Flaring..... | F4-122 |
| Tool, Individual Flaring Tool | F4-121 |
| Tool, Tube Bending..... | 4-26 |
| Tools, Combination Flaring | F4-120 |
| Tools, Flaring | 4-25 |
| Tools, Pneumatic | 5-1 |
| Tools, Soldering..... | F7-22, 7-16 |
| Torque Multiplier Power Wrench | 8-10, F8-23 |
| Torque Multiplier, General Use..... | F8-21 |
| Torque Multiplier, Hub Nut | F8-22 |
| Torque Multipliers | 8-9 |
| Torque Procedures Without a Torque Wrench | 8-11 |
| Torque Tool Accuracy Limits..... | T8-1 |
| Torque Tools, Care of | 8-6 |

INDEX - CONT

VOLUME 9

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| T - Continued | |
| Torque Tools, Testing of | 8-7 |
| Torque Tools, Types of | 8-2 |
| Torque Value, Determining Correct | 8-4 |
| Torque Values, Recommended | T8-2 |
| Torque Wrench Attachment - Offset Reverse Extension | F8-17 |
| Torque Wrench Attachment, Angle Extension | F8-20 |
| Torque Wrench Attachments, Concentric | F8-15 |
| Torque Wrench Operation and Use | 8-5 |
| Torque Wrench Selection | 8-3 |
| Torque Wrench - Deflecting Beam with Indicating Dial (Direct Reading with Audible Signal), Type I, Class 2, Style B | F8-8 |
| Torque Wrench - Deflecting Beam with Indicator Plate (Direct Reading with Feel Impulse and Audible Signal), Type I, Class 1, Style B | F8-6 |
| Torque Wrench - Deflecting Beam with Indicator Plate (Direct Reading), Type I, Class 1, Style A | F8-5 |
| Torque Wrench - Rigid Case with Indicator Dial (Direct Reading) Type II, Style A | F8-9 |
| Torque Wrench - Rigid Case with Indicator Dial, Presetting Torque Dial (Direct Reading with Audible Signal), Type II, Style B | F8-10 |
| Torque Wrench - Rigid Case with Presetting Dial (Direct Reading with Flashlight Signal), Type II, Style C | F8-11 |
| Torque Wrench - Rigid Case, Micrometer-Style Torque Presetting, Audible Signal, Plain Head Type III, Class 1 | F8-12 |
| Torque Wrench - Rigid Case, Micrometer-Style Torque Presetting, Audible Signal, Ratchet Reversible Head, Type III, Class 2 | F8-13 |
| Torque Wrench - Rigid Case, Preset Torque, Audible Signal, Type V | F8-14 |
| Torque Wrench, Audible-Indicating | F8-4 |
| Torque Wrench, Deflecting Beam | F8-2 |
| Torque Wrench, Nonconcentric Attachments to | F8-16 |
| Torque Wrench, Rigid Frame | F8-3 |
| Torque Wrenches - Deflecting Beam with Indicating Dial (Direct Reading), Type I, Class 2, Style A | F8-7 |

INDEX - CONT

VOLUME 9

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

T - Continued

| | |
|---|--------------|
| Tow Vehicle, Type MB-4 | F9-21 |
| Towbar..... | F9-16 |
| Trailer, Engine | F9-12 |
| Trammel | F3-30 |
| Transfer Calipers..... | F3-26 |
| Transfer Punch | F4-63 |
| Triangular File..... | F4-68 |
| Tripod Jack, 3-Ton | F9-9 |
| Tripod Jack, 5-Ton | F9-8 |
| Tripod Jack, 12-Ton | F9-7 |
| Tube Beading Tool..... | 4-26, F4-123 |
| Tube Bender | F4-117 |
| Tube Benders..... | 4-24 |
| Tube Cutter, Cutting Tube..... | F4-116 |
| Tube Cutters | F4-115 |
| Tube Cutters, Pipe and | 4-23 |
| Tube, Bending..... | F4-118 |
| Tubing, Beading Large..... | F4-124 |
| Turnbuckle Wrench..... | 7-4, F7-8 |
| Type I, Class 1, Style A Torque Wrench - Deflecting Beam with Indicator Plate (Direct Reading) | F8-5 |
| Type I, Class 1, Style B Torque Wrench - Deflecting Beam with Indicator Plate (Direct Reading and Feel Impulse and Audible Signal) | F8-6 |
| Type I, Class 2, Style A Torque Wrenches - Deflecting Beam with Indicating Dial (Direct Reading) | F8-7 |
| Type I, Class 2, Style B Torque Wrench - Deflecting Beam with Indicating Dial (Direct Reading with Audible Signal) | F8-8 |
| Type II Style A Torque Wrench - Rigid Case with Indicator Dial (Direct Reading) | F8-9 |
| Type II, Style B Torque Wrench - Rigid Case with Indicator Dial, Presetting Torque Dial (Direct Reading with Audible Signal)..... | F8-10 |
| Type II, Style C Torque Wrench - Rigid Case with Presetting Dial (Direct Reading with Flashlight Signal)..... | F8-11 |
| Type III, Class 1 Torque Wrench Rigid Case, Micrometer-Style Torque Presetting, Audible Signal, Plain Head..... | F8-12 |
| Type III, Class 2 Torque Wrench - Rigid Case, Micrometer-Style Torque Presetting, Audible Signal, Ratchet Reversible Head..... | F8-13 |
| Type B-1 Maintenance Platform | F9-1 |
| Type B-4A, Maintenance Stand..... | F9-2 |
| Type D5B Hydraulic Test Stand | F9-5 |

INDEX - CONT

VOLUME 9

Subject

Paragraph Figure, Table Number

T - Continued

| | |
|--|-------|
| Type MB-4 Tow Vehicle | F9-21 |
| Type V Torque Wrench - Rigid Case, Preset Torque, Audible Signal | F8-14 |
| Types of Ground Support Equipment | 9-9 |
| Types of Tools Used in Army Aviation | 2-2 |
| Types of Torque Tools | 8-2 |
| Typical Air Compressors | F9-14 |
| Typical Aircraft Pre-Heater | F9-15 |
| Typical Cable Rigging Tension Chart | F7-7 |
| Typical Cranes and Hoists..... | F9-18 |
| Typical Drill Bit | F4-83 |
| Typical Height Gauge..... | F3-51 |
| Typical Paint Gun..... | F5-1 |
| Typical Rule | F3-9 |
| Typical Tapes..... | F3-8 |
| Typical Tool Boxes..... | F2-1 |

U

| | |
|---|--------|
| Use of Tap Extractor | F4-110 |
| Using a Bench Vise..... | F4-54 |
| Using a Crowfoot Wrench | F7-21 |
| Using a File Handle..... | F4-75 |
| Using a Tensiometer | F7-5 |
| Using a Thickness Gauge..... | F3-71 |
| Using a Vernier Depth Gauge..... | F3-50 |
| Using Carnage Clamp..... | F4-56 |
| Using Deicer Boot Pliers | F7-17 |
| Using Deicer Boot Roller..... | F7-19 |
| Using Drill Grinding Gauge..... | F4-89 |
| Using Fillet and Radius Gauges | F3-74 |
| Using Inside Micrometer..... | F3-38 |
| Using Inside Micrometer with Extension Rod..... | F3-40 |
| Using Leather Punch..... | F7-18 |
| Using Offset Screwdriver | F4-18 |
| Using Outside Micrometer..... | F3-39 |
| Using Ring Gauges | F3-58 |
| Using Thread Gauges | F3-53 |
| Usual Cutting Edge and Heel Angles..... | F4-86 |

INDEX - CONT

VOLUME 9

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

V

| | |
|--|------------|
| V-Grooves in Drill Jaws..... | F4-82 |
| Vacuum Cleaner, Pneumatic..... | 5-6 |
| Valve Repair Tool | 7-6, F7-10 |
| Valve Stem Fishing Tool | 7-5, F7-9 |
| Vernier Caliper..... | F3-29 |
| Vernier Caliper, Operation of..... | F3-31 |
| Vernier Caliper, Reading a Measurement on a..... | F3-32 |
| Vernier Depth Gauge | F3-49 |
| Vernier Depth Gauge, Using a..... | F3-50 |
| Vertical Fan, Nozzle Position to Produce..... | F5-3 |
| Vise, Bench..... | F4-53 |
| Vise-Grip Pliers | F4-47 |

W

| | |
|---|-------------|
| Washer on a Bolt, Installation of Preload..... | F8-32 |
| Washers on a Stud, Installation of Preload..... | F8-31 |
| Washers, Action of Preload Indicating | F8-30 |
| Washers, Preload Indicating..... | F8-29 |
| Washers, Tightening Preload | F8-33 |
| Water Pump Pliers | F4-46 |
| Wedge, Installing Wooden | F4-12 |
| Wing Divider | F3-22 |
| Wire Gauge, Sheet Metal and | 3-18, F3-72 |
| Wire, Cutting | F4-112 |
| Wrench Arc, Alternate Method for Tightening to 15 Degree..... | F8-25 |
| Wrench Arc, Tightening to 15-Degree | F8-24 |
| Wrench Arc, Tightening to 30-Degree | F8-27 |
| Wrench Arc, Tightening to 60- or 120-Degree | F8-26 |
| Wrench Arc, Tightening to 90- or 180-Degree | F8-28 |
| Wrench Jaw Offset, Open-End..... | F4-21 |
| Wrench, Adjustable..... | F4-25 |

INDEX - CONT

VOLUME 9

Subject

**Paragraph
Figure, Table
Number**

W - Continued

| | |
|---|-----------|
| Wrench, Adjustable Hook Spanner..... | F4-39 |
| Wrench, Combination | F4-24 |
| Wrench, Crowfoot | F7-20 |
| Wrench, Face Pin Spanner | F4-38 |
| Wrench, Hook Spanner..... | F4-36 |
| Wrench, Open-End | F4-20 |
| Wrench, Pin Spanner | F4-37 |
| Wrench, Torque Multiplier Power | 8-10 |
| Wrench, Turnbuckle | 7-4, F7-8 |
| Wrench, Use of Box-End..... | F4-33 |
| Wrench, Use of Open-End | F4-32 |
| Wrench, Use of Socket | F4-34 |
| Wrenches..... | 4-4 |
| Wrenches, Box-End | F4-22 |
| Wrenches, Crowfoot..... | 7-20 |
| Wrenches, Proper Procedure for Pulling Adjustable | F4-35 |
| Wrenches, Tap..... | F4-103 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| A | |
| Abrasion Resistance..... | 5-2l |
| Acceptability Limits, Rivet | F7-22 |
| Acceptable Spotweld Spacing..... | 12-6a |
| Access Door, Flush..... | F8-8 |
| Acrylic Plastic, Minimum Annealing Time | T10-4 |
| Acrylic Plastics, Drill for..... | F10-3 |
| Acrylic Plastics, Oven Temperatures for..... | T10-1 |
| Addition of Weights | 11-4c |
| Adhesives and Resins..... | 9-4 |
| Application..... | 9-4e |
| Combination or Two-Step Adhesives..... | 9-4b |
| High-Temperature Setting Adhesives..... | 9-4a |
| Room Temperature Setting Adhesives..... | 9-4c |
| Storage..... | 9-4d |
| After Deburring..... | F7-50 |
| Aging Time and Temperature (Aluminum Alloys) | 5-7f |
| Aircraft Mating Jig | F8-1 |
| Aircraft Metals, Shaping | 6-2 |
| Aircraft Plastics, General..... | 10-1 |
| Aircraft Structures, General..... | 4-1 |
| Airframe Sheet Metal Repair, General..... | 8-1 |
| Airframe Sheet Metal, Basic Principles of Repair | 8-2 |
| Airplane Structural Parts | F4-5 |
| Airplanes (Fuselage)..... | 4-2b |
| Alclad Alloys, Reheat Treatment of | T5-12 |
| Alclad Construction | F5-8 |
| Allowable Percentage of Defective Spotwelds..... | 12-6b |
| Allowance, Bend, 90-Degree Bend..... | F6-3 |
| Allowance, Bend, Table..... | T6-1 |
| Alloy Characteristics and Uses (Aluminum) | 5-7b |
| Alloying | 5-4a |
| Alloying Elements (for Steel) | 5-6b |
| Alloying Elements, Major..... | T5-5 |
| Alloys, Aluminum | 5-7 |
| Alloys, Copper..... | 5-10 |
| Alloys, Magnesium..... | 5-8 |
| Alloys, Metals and..... | 5-4 |
| Alloys, Titanium | 5-9 |
| Alternate Transparent Plastic Plug Repair..... | 10-13b |
| Aluminum Alloy Designations and Conversions to 4 Digit System | T5-6 |
| Aluminum Alloy Facing Material | 9-3a |
| Aluminum Alloy Rivets, Single Shear, Strength of | T7-2 |
| Aluminum Alloy Sheet Substitution..... | 5-7i |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|----------------|---|
|----------------|---|

A - Continued

| | |
|--|-------------|
| Aluminum Alloy, Hardness Conversion for | F5-16 |
| Aluminum and Aluminum Alloys | 5-7 |
| Aging Time and Temperature | 5-7f |
| Alloy Characteristics and Uses..... | 5-7b |
| Aluminum Alloy Sheet Substitution | 5-7i |
| Corrosion Resistance..... | 5-7c |
| Heat-Treatment Methods..... | 5-7e |
| Heat-Treating Procedures..... | 5-7g |
| Identification | 5-7a |
| Insulation of Dissimilar Metals | 5-7h |
| Material Substitution | 5-7j |
| Shop Working Practice | 5-7d |
| Aluminum, Bare, Sheet, Plate, Extrusions, and Forgings, Rockwell Hardness Values for | T5-21 |
| Aluminum Identification Marking Example | F5-7 |
| Aluminum Lockbolt Rivet Gun, Pull- and Blind-Type | F7-73 |
| Aluminum Sheet and Plate, 0.050 Inch Minimum, Rockwell Hardness Values for..... | T5-20 |
| Aluminum, Model B, Hardness Range..... | F5-13 |
| Aluminum-Alloy Sheet Substitution | T5-14 |
| Annealing..... | 10-10c |
| Application (of Adhesives and Resins) | 9-4e |
| Approved Edge Attachment for Laminated Enclosure..... | F10-19 |
| Approved Edge Attachment for Monolithic Enclosure | F10-18 |
| Ashing..... | 10-14b |
| Assembling (Joined Plastics)..... | 10-9h |
| Assembly Tools, Cherry | F7-45 |
| Assembly, Empennage | F4-14 |
| Automatic Center Punch | F3-18 |
| Aviation Snips | 3-4f, F3-12 |

B

| | |
|--|-------------|
| Balance Considerations, Surface..... | 11-2 |
| Balanced and Unbalanced Conditions..... | F11-4 |
| Balancing Jig, Field-Expedient | F11-6 |
| Balancing Principles..... | 11-3 |
| Effects of Moments..... | 11-3a |
| Effects of Weight and Distance | 11-3b |
| Band Saw..... | 3-5d |
| Band Saw, Contour..... | F3-27 |
| Bandsaw Widths for Various Radii of Cuts (of Plastic)..... | T10-3 |
| Bar Folding Machine | 3-6a, F3-31 |
| Bars, Bucking..... | F7-6 |
| Basic Part Numbers, Jo-Bolt | F7-81 |
| Basic Principles of Repair (of Airframe Sheet Metal) | 8-2 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| B - Continued | |
| Maintaining Original Contour | 8-2b |
| Maintaining Original Strength..... | 8-2a |
| Minimizing Weight | 8-2c |
| Beaded Skin, Patch Repairs to..... | F8-57 |
| Beads, Crimps, Relief Holes, and Riveted Angles, Nose Rib Using..... | F6-22 |
| Bearing Strength (Pounds)..... | T7-3 |
| Bench Grinder..... | F3-30 |
| Bench Shears..... | 3-4e, F3-11 |
| Bend Allowance | 6-3b |
| Bend Allowance Table..... | T6-1 |
| Bend Allowance, 90-Degree Bend..... | F6-3 |
| Bending..... | 5-3e, F5-5 |
| Bending Sheet | 6-3 |
| Bend Allowance..... | 6-3b |
| Brake or Sight Line | 6-3d |
| Duplicating Patterns..... | 6-3g |
| Flat Pattern Layout | 6-3e |
| Locating Brake or Sight Line..... | 6-3f |
| Radius of Bend..... | 6-3a |
| Setback | 6-3c |
| Blanket and Seals | 9-9e |
| Blind-Type Lockbolt Numbering System..... | T7-24 |
| Blind-Type Lockbolt, Installation..... | F7-77 |
| Blind-Type Lockbolts, Drilling Procedures for | T7-30 |
| Blind-Type Lockbolts, Grip Range for..... | T7-27 |
| Block, Bumping | F6-26 |
| Blocks, Forming | F3-23 |
| Bolt and Rivet Mounting (on Transparent Plastics) | 10-16c |
| Bolt Installation, Typical (in Transparent Plastic) | F10-17 |
| Bonded Former Assemblies | 9-6p |
| Bonded Former Repair (Cap)..... | F9-13 |
| Bonded Former Repair (Web) | F9-14 |
| Bonded Magnesium Panel Repair | F9-3 |
| Bonded Magnesium Panels..... | 9-6d |
| Bonded Stiffeners | 9-6c |
| Bonding Procedures..... | 10-11 |
| Bonding Procedures for Acrylic Plastic MIL-P-5425 | 10-11a |
| Bonding Procedures for Acrylic Plastic MIL-P-8184 | 10-11b |
| Bonding Procedures for Acrylic Plastic MIL-P-5425..... | 10-11a |
| Bonding Procedures for Acrylic Plastic MIL-P-8184..... | 10-11b |
| Bowed Steel Tubes, Straightening..... | F8-64 |
| Box Beam Wing Construction | F4-10 |
| Brake Line, Locating, in the Brake..... | F6-11 |
| Brake or Sight Line..... | 6-3d, F6-5 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

B - Continued

| | |
|--|-------|
| Brake or Sight Line of Flange, Locating..... | F6-10 |
| Brake, Cornice | F3-32 |
| Brass and Mild Steel, Hardness Conversion for..... | F5-15 |
| Bucking Bar Weights, Recommended | T7-6 |
| Bucking Bars..... | F7-6 |
| Buckles, Working Out | F6-17 |
| Bulkhead and Skin Repair..... | F8-28 |
| Bulkhead Flanged Member Repairs | F8-26 |
| Bulkhead Installation..... | F4-18 |
| Bulkhead Repair..... | 8-9i |
| Bulkheads, Frames, and Formers..... | 4-8a |
| Bumping | 6-4a |
| Bumping Block..... | F6-26 |
| Bumping, Sandbag..... | F6-29 |
| Burning (of Plastics)..... | 10-4b |
| Burrs After Drilling..... | F7-49 |

C

| | |
|--|--------|
| Cabin and Tail Cone Sections..... | F4-4 |
| Calculation Method (of Balancing)..... | F11-8 |
| Camlock Fastener | F7-107 |
| Camlock Fasteners | 7-15b |
| Camlock Punch, Use of..... | F7-109 |
| Camlock Stud Installation..... | F7-112 |
| Capacity, Tool, Chart (for Rivets) | T7-14 |
| Catcher Bag, Stem 670A20..... | F7-44 |
| Cemented Assemblies, Jigs for Holding | F10-9 |
| Cemented Joint, Effect of Heat Treating on a | F10-10 |
| Cemented Plastic Joint | F 10-4 |
| Cementing Procedures..... | 10-9 |
| Assembling..... | 10-9h |
| Direct Application Method | 10-9d |
| Fitting | 10-9e |
| Glue Method..... | 10-9c |
| Jigs..... | 10-9i |
| Masking..... | 10-9f |
| Soak Method | 10-9b |
| Soaking | 10-9g |
| Type of Cement..... | 10-9a |
| Center Punch..... | F3-17 |
| Center Punch for Drilling | F7-15 |
| Center Punch, Automatic | F3-18 |
| Centering Inner Sleeve in Steel Tube..... | F8-68 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| C - Continued | |
| Chamfered Flanging Block | F6-32 |
| Channel Repair by Insertion | F8-30 |
| Channel Repair by Patching | F8-29 |
| Channel, Sample | F6-6 |
| Characteristics (of Aircraft Plastics) | 10-2 |
| Characteristics (of Titanium Alloys) | 5-9b |
| Chart, Setback - K | T6-2 |
| Chem-Milled Skin Repair | 8-6k, F8-2 |
| Chem-Milling | 6-2b |
| Chemical Composition (Copper Alloys) by Trade Name | T5-16 |
| Chemical Reaction (of Plastics) | 10-4e |
| Cherry Assembly Tools | F7-45 |
| Cherry Grip Gauge 269C3, Use of | F7-36 |
| CherryMAX Blind Heads, Typical | F7-53 |
| CherryMAX Cross Reference (Part Number/Military Standard Part Number) | T7-9 |
| CherryMAX Drilling Dimensions | T7-15 |
| CherryMAX Inspection | 7-8e |
| CherryMAX Installation | 7-8d |
| CherryMAX Part Number Breakdown | T7-10 |
| CherryMAX Removal | 7-8g |
| CherryMAX Removal | F7-55 |
| CherryMAX Rivet | F7-31 |
| CherryMAX Rivets | 7-8 |
| CherryMAX Inspection | 7-8e |
| CherryMAX Installation | 7-8d |
| CherryMAX Removal | 7-8g |
| CherryMAX Tooling | 7-8c |
| CherryMAX Troubleshooting | 7-8f |
| Identification | 7-8a |
| Selection | 7-8b |
| CherryMAX Rivet Shaving | F7-51 |
| CherryMAX Sleeve Stretch Marks | F7-54 |
| CherryMAX Stem and Collar Flushness | F7-52 |
| CherryMAX Tooling | 7-8c |
| CherryMAX Troubleshooting | 7-8f, T7-17 |
| CherryMAX, Countersinking Dimensions for | F7-46 |
| Circle Snips | 3-4h, F3-14 |
| Circular Damage Repair for Lightly Stressed Areas | F8-46 |
| Circular Damage Repair in Heavily Stressed Area | F8-51 |
| Circular External Repair | 8-8b, F8-11 |
| Clamp Pliers | F3-9 |
| Classification of Damage (to Sandwich Construction) | 9-5 |
| Coin-Tapping Technique | 9-5a |
| Dents | 9-5e |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

C - Continued

| | |
|--|---------|
| Double Skin Damage..... | 9-5h |
| Large Single Skin Damage | 9-5g |
| Missing Core..... | 9-5b |
| Scotchply Edge Member and Corfil Edge Filler Damage..... | 9-5i |
| Skin Core Voids..... | 9-5c |
| Skin Doubler Voids | 9-5d |
| Small Single Skin Damage | 9-5f |
| Unbonding and Ply Separation..... | 9-5j |
| Class I Damage (of Fiber Laminate)..... | F9-19 |
| Class I Repair (of Radomes) | 9-9i |
| Class II Damage (of Fiber Laminate)..... | F9-20 |
| Class II or Class III Repair to Plastic with Fluted Core..... | 9-9m |
| Class II or Class III Repair to Plastic with Foamed-In Core..... | 9-9l |
| Class II Repair (of Radomes) | 9-9j |
| Class II Repair (of Radomes), Typical Scarf Method for | F9-26 |
| Class III Damage (of Fiber Laminate)..... | F9-21 |
| Class III Repair (of Radomes) | 9-9k |
| Classes of Repair (of Fiber Laminate) | 9-9c |
| Classification of Damage (Impregnated Glass Cloth Parts) | 9-8a |
| Classification, of Damage (Airframe Sheet Metal Repair) | 8-5 |
| Cleaning (of Glass Windshields) | 10-17b |
| Cleaning (Plastic Enclosures)..... | 10-15a |
| Cleanliness of Repair Area..... | 9-6a |
| Cleco Fastener..... | F3-7 |
| Cleco Fasteners Pliers | F3-8 |
| Codes, Color (for Aluminum) | T5-7 |
| Coin Dimpling | F7-10 |
| Coin-Tapping Technique | 9-5a |
| Cold Climate Precautions | 10-1 5e |
| Cold Forming (of Plastics) | 10-7a |
| Cold-Working | 5-5c |
| Collar Numbering System, Lockbolt | T7-25 |
| Color Codes (for Aluminum) | T5-7 |
| Combination or Two-Step Adhesives..... | 9-4b |
| Commonly Used Alloys (Magnesium)..... | 5-8b |
| Completed Double Face Patch Repair | F9-27 |
| Compression..... | F5-2 |
| Compressive Strength..... | 5-2c |
| Concave Flange, Forming a | F6-24 |
| Conductivity | 5-2m |
| Construction (Sandwich) | 9-1a |
| Construction Materials (Fuselage)..... | 4-2c |
| Construction, Alclad | F5-8 |
| Construction, Monocoque..... | F4-1 |

INDEX - CONT

VOLUME 10

Subject

Paragraph Figure, Table Number

C - Continued

| | |
|--|-------------|
| Construction, Rib..... | F4-13 |
| Construction, Semi-Monocoque | F4-2 |
| Construction, Spar | F4-12 |
| Consumable Materials..... | 1-3 |
| Contour Band Saw | F3-27 |
| Contraction and Expansion Allowances (for Transparent Plastics)..... | T10-5 |
| Control Surface, Establishing Neutral Position of..... | F11-7 |
| Control Surfaces, Flight..... | 4-7, F4-16 |
| Control Surface Static Balance..... | F11-1 |
| Conversions to 4 Digit System, Aluminum Alloy Designations and | T5-6 |
| Convex Flange, Forming a | F6-25 |
| Copper and Copper Alloys..... | 5-10 |
| Identification | 5-10a |
| Major Alloying Elements | 5-10b |
| Copper, Model BB-75, Hardness Range..... | F5-14 |
| Core Materials..... | 9-2 |
| Foamed-In-Place Core Materials | 9-2c |
| Foamed or Cellular Core Materials | 9-2b |
| Honeycomb Core Materials..... | 9-2d |
| Natural Core Materials..... | 9-2a |
| Cornice Brake | 3-6b, F3-32 |
| Correcting Oval Shaped Steel Tubing Distortion | F8-63 |
| Correctly and Incorrectly Driven Rivets | 7-5a, F7-20 |
| Corrosion | 8-3a |
| Corrosion Resistance (of Aluminum Alloys)..... | 5-7c |
| Corrosion Resistance..... | 5-2k |
| Corrosion Treatment | 8-6h |
| Countersink, Standard..... | F7-7 |
| Countersink, Stop..... | F7-8 |
| Countersinking Dimensions (100 Degrees) for CherryMAX..... | F7-46 |
| Countersinking | F7-17 |
| Countersinking Practices..... | F7-18 |
| Countersinking, Incorrect..... | F7-47 |
| Countersinks | 3-4i, F3-15 |
| Countersinks for Shaving, Recommended..... | T7-16 |
| Countersunk Head Nominal Diameter CherryMAX Rivet..... | F7-32 |
| Countersunk Head Oversize Diameter, CherryMAX Rivet | F7-34 |
| Countersunk Head Rivet, Removal of | F7-24 |
| Countersunk-Head Rivet Removal | 7-6b |
| Crack or Scratch Repair | F9-5 |
| Crack Repair for Lightly Stressed Areas..... | F8-47 |
| Cracking, Rivet Head | F7-21 |
| Cracks (in Plastics) | 10-12d |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

C - Continued

| | |
|---|------------|
| Crazing | 10-12c |
| Crimping | 64b, F6-12 |
| Crimps and Beads, Nose Rib with | F6-21 |
| Cross Reference of Old and New Color Code (for Aluminum) | T5-8 |
| Cross Reference, Old Color Code (Steel)..... | T5-3 |
| Cross Reference, CherryMAX (Part Number/Military Standard Part Number)..... | T7-9 |
| Curing and Heat Treatment (of Plastics)..... | 10-10 |
| Annealing | 10-10c |
| Further Treatment..... | 10-10b |
| Temperature..... | 10-10a |
| Curved Formed or Extruded Angles | 6-5b |
| Cushion Thickness..... | F10-8 |
| Cushion, Formation of, on Acrylic Plastic by Immersion in Cement | F10-5 |
| Cutout Repair, Rectangular Damage (Lightly Stressed)..... | F8-44 |
| Cutting Acrylic Plastic Sheets, Types of Circular Saw Blades for..... | T10-2 |
| Cutting Techniques (for Plastics)..... | 10-8 |
| Drilling | 10-8f |
| General Precautions..... | 10-8a |
| Layout | 10-8b |
| Routers..... | 10-8d |
| Saws..... | 10-8c |
| Scribing and Sanding..... | 10-8e |

D

| | |
|---|-------|
| Damage (to Sandwich Construction), Classification of..... | 9-5 |
| Damage Classification | 8-5 |
| Damage Repairable by Insertion..... | 8-5c |
| Damage Repairable by Patching..... | 8-5b |
| Damage Requiring Replacement of Parts | 8-5d |
| Negligible Damage | 8-5a |
| Damage Evaluation..... | 8-6b |
| Damage Inspection | 8-4 |
| Damage Near Existing Structure (Lightly Stressed), Repair of..... | F8-45 |
| Damage Removal | 8-6c |
| Damage Repair (Impregnated Glass Cloth Parts)..... | 9-8b |
| Damage Repair Near Adjacent Member in Heavily Stressed Area..... | F8-52 |
| Damage Repair Near Existing Structure in Heavily Stressed Areas..... | F8-49 |
| Damage Repair Near Primary Horizontal Member in Heavily Stressed Area | F8-50 |
| Damage Repairable by Insertion | 8-5c |
| Damage Repairable by Patching..... | 8-5b |
| Damage Requiring Replacement of Parts..... | 8-5d |
| Damage, Class I (of Fiber Laminate)..... | F9-19 |
| Damage, Class II (of Fiber Laminate)..... | F9-20 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| D - Continued | |
| Damage, Class III (of Fiber Laminate) | F9-21 |
| Damaged Face Plies, Removal of, by Scarf Method | F9-25 |
| Damaged Honeycomb Skin..... | F9-1 |
| Damaged Swage in Aileron and Flap Skin, Patch Repair to..... | F8-58 |
| Deburring, After..... | F7-50 |
| Deep Scratches, Sanding..... | F10-11 |
| Delamination and Discoloration..... | 10-12e |
| Dent at a Steel Tube Cluster Joint, Reinforcing a | F8-65 |
| Dent or Crack, Sharp, in Length of Steel Tubing, Repair of | F8-66 |
| Dents (in Sandwich Construction)..... | 9-5e |
| Dents and Creases, Repair of..... | F8-32 |
| Design (Sandwich Construction)..... | 9-1 b |
| Determining Rivnut Grip Length | F7-57 |
| Die, Jogging | F6-30 |
| Dimensions, Drill Bit | F7-16 |
| Dimpling and Reaming | F7-48 |
| Dimpling..... | F7-9 |
| Dimpling, Coin | F7-10 |
| Direct Application Method (Cementing) | 10-9d |
| Double Face Patch Repair, Completed | F9-27 |
| Double Row of Rivets, Rivet Spacing for Repair with | F8-42 |
| Double Skin Damage | 9-5h |
| Double Skin Repair (Flush) | F9-10 |
| Double Skin Repair (Nonflush) | F9-11 |
| Drill Angle for Stainless Steel | F6-1 |
| Drill Bit Dimensions..... | F7-16 |
| Drill for Acrylic Plastics | F10-3 |
| Drill Press | F3-29 |
| Drill Sizes for Various Diameter Rivets..... | T7-4 |
| Drill Sizes, Hole and, for Self-Plugging (Friction Lock) Rivets | T7-8 |
| Drilling (for Olympic Blind Rivets) | 7-11d |
| Drilling (Plastics) | 10-8f |
| Drilling Dimensions, CherryMAX | T7-15 |
| Drilling Material | F7-68 |
| Drilling Procedures for Blind-Type Lockbolts | T7-30 |
| Drilling Procedures for Pull- and Stump-Type Lockbolts | T7-29 |
| Drilling Spotwelds..... | 12-2 |
| Drilling, Burrs After | F7-49 |
| Drilling, Center Punch for | F7-15 |
| Drills and Drill Presses | 3-5e |
| Drive Punch | F3-19 |
| Driving Hi-Shear Rivet | F7-63 |
| Ductility | 5-2f |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

D - Continued

| | |
|---|--------|
| Duplicating Patterns | 6-3g |
| Dynamic Balance | 11-2b |
| Dzus Fastener (Stud, Grommet, and Receptacle) | F7-95 |
| Dzus Fastener (Stud, Grommet, and Receptacle), Installation Tools for | F7-104 |
| Dzus Fastener (Stud, Grommet, and Spring) | F7-96 |
| Dzus Fastener Head Styles | F7-97 |
| Dzus Fastener Installation Secondary Procedures | F7-103 |
| Dzus Fastener Installation, Wing-Type | F7-102 |
| Dzus Fastener Receptacle, Installation of | F7-105 |
| Dzus Fastener Stud and Grommet, Installation of | F7-106 |
| Dzus Fasteners | 7-15a |
| Dzus Fasteners, Installation of Type A-AJ | F7-100 |
| Dzus Fasteners, Installation of Type F-FA-FJ | F7-101 |
| Dzus Fasteners, Installation Tools for Type A-AJ and F-FA-FJ | F7-98 |

E

| | |
|---|--------------|
| Edge Attachment, Typical Sighting Dome | F10-20 |
| Edge Band Sealing, Typical | F9-29 |
| Edge Distance, Rivet | F7-4 |
| Edge Preparation, Edge Patch | F8-6 |
| Effect of Heat Treating on a Cemented Joint | F10-10 |
| Effects of Moments | 11-3a |
| Effects of Weight and Distance | 11-3b, F11-3 |
| Elasticity | 5-2d |
| Eliminating Gaps and Leveling Installations | 8-9aa, F8-59 |
| Empennage | 4-6 |
| Empennage Assembly | F4-14 |
| Enclosure, Laminated, Approved Edge Attachment for | F10-19 |
| Enclosure, Monolithic, Approved Edge Attachment for | F10-18 |
| Enclosures, Acrylic Plastic, Maintenance of on Army Aircraft | 10-15 |
| Engine Mount (Tubing) | 8-11a |
| Engine Mount | F4-6 |
| Engine Mounts | 4-3 |
| Maintenance | 4-3c |
| Piston-Engine Mounts | 4-3a |
| Turbine-Engine Mounts | 4-3b |
| Equipment, Shop (Sheet Metal) | 2-2, 3-1 |
| Establishing Neutral Position of a Control Surface | F11-7 |
| Example of Structural Tubing | F8-62 |
| Expansion and Contraction Allowances (for Transparent Plastics) | T10-5 |
| Expansion and Contraction Allowances (of Transparent Plastics) | 10-16b |
| External and Internal Repairs | 8-9 |
| External Repair, Circular | F8-11 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| F | |
| Face Plies, Replacing | F9-24 |
| Facing Materials..... | 9-3 |
| Aluminum Alloy Facing Material | 9-3a |
| Glass Fiber Mat Facing Material | 9-3f |
| Magnesium Alloy Facing Material | 9-3c |
| Plywood Facing Material..... | 9-3d |
| Resin-Impregnated Glass Cloth Facing Material | 9-3e |
| Steel Facing Material..... | 9-3b |
| Factors in Determining Rivet Length | F7-3 |
| Failure, Spotweld | 12-4 |
| Failure, Spotweld, with No Skin Breaks | 12-5 |
| Fastener, Camlock..... | F7-107 |
| Fastener, Cleco..... | F3-7 |
| Fastener, Dzus (Stud, Grommet, and Receptacle) | F7-95 |
| Fastener, Dzus (Stud, Grommet, and Spring)..... | F7-96 |
| Fastener, Dzus, Head Styles..... | F7-97 |
| Fasteners, Hi-Lock..... | 7-14 |
| Fasteners, Turn-Lock..... | 7-15 |
| Fiber Laminate Material Repair | 9-9 |
| Blanket and Seals..... | 9-9e |
| Class I Repair | 9-9i |
| Class II Repair..... | 9-9j |
| Class II or Class III Repair to Plastic with Foamed-In Core..... | 9-9l |
| Class II or Class III Repair to Plastic with Fluted Core..... | 9-9m |
| Class III Repair | 9-9k |
| Classes of Repair | 9-9c |
| General Principles of Materials and Repair Procedures | 9-9d |
| General Repair Consideration..... | 9-9g |
| General Repair Requirements..... | 9-9a |
| Inspection after Repair..... | 9-9r |
| Materials Used in Repair..... | 9-9b |
| Parting Films and Compounds..... | 9-9f |
| Procedure for Edge Band Sealing..... | 9-9q |
| Procedure for Obtaining Void-Free Laminate | 9-9p |
| Procedure for Preventing Moisture and Oil Contamination | 9-9o |
| Repair of Pre-Drilled Attachment Holes | 9-9n |
| Repair Procedures..... | 9-9h |
| Field-Expedient Balancing Jig | F11-6 |
| Finishing Procedures..... | 10-14 |
| Ashing | 10-14b |
| Machine Buffing..... | 10-14c |
| Polishing..... | 10-14d |
| Sanding | 10-14a |
| First Flange, Layout of | F6-7 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

F - Continued

| | |
|---|-------------|
| Fishmouth Splice, Steel Tube, Using Large Diameter Replacement Tube | F8-70 |
| Fitting (Cementing) | 10-9e |
| Flanged Member Repair, Bulkhead | F8-26 |
| Flanging Block, Chamfered | F6-32 |
| Flat Pattern Layout | 6-3e |
| Flexing (of Plastics) | 10-4d |
| Flight Control Surfaces | 4-7, F4-16 |
| Floor Channel Repair | 8-9o, F8-36 |
| Floor Repair, Metal-Covered Wooden | 9-7 |
| Flush Access Door | F8-8 |
| Flush Head Jo-Bolts, Grip Ranges, Sizes, and Diameters of | F7-83 |
| Flush Patch | F8-5 |
| Flush Patch Repair Procedure | F8-7 |
| Flush-Head Jo-Bolt | F7-78 |
| Foamed or Cellular Core Materials | 9-2b |
| Foamed-In-Place Core Materials | 9-2c |
| Folding | 6-4e |
| Forces, Stress and Strain | 5-3 |
| Forgings, Rockwell | T5-21 |
| Formation of Cushion on Acrylic Plastic by Immersion in Cement | F10-5 |
| Formed Angle, Stringer Repair with | F8-17 |
| Formed Patch, Rivet Spacing for Repair Using | F8-43 |
| Formed Sections (of Stored Plastics) | 10-5d |
| Former and Frame Installation | F4-17 |
| Former Repair | 8-9h, F8-25 |
| Former Repair, Bonded (Cap) | F9-13 |
| Former Repair, Bonded (Web) | F9-14 |
| Former, Slip Roll | F3-33 |
| Forming (General) | 6-1 |
| Forming (of Aircraft Metals) | 6-2a |
| Forming a Concave Flange | F6-24 |
| Forming a Convex Flange | F6-25 |
| Forming a Flanged Angle by Shrinking | F6-16 |
| Forming a Flanged Angle by Stretching | F6-18 |
| Forming Blocks | 3-4k, F3-23 |
| Forming Blocks, Metal and | F6-23 |
| Forming by Bumping | 6-5e |
| Forming Curved Flanged Parts | 6-5d |
| Forming Flanged Angles | 6-5c |
| Forming Methods (for Plastics) | 10-7d |
| Forming of Plastics | 10-7 |
| Cold Forming | 10-7a |
| Forming Methods | 10-7d |
| Forms | 10-7c |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

F - Continued

| | |
|--|--------|
| Heating for Forming..... | 10-7b |
| Forming Operations | 6-4 |
| Bumping | 6-4a |
| Crimping | 6-4b |
| Folding | 6-4e |
| Shrinking | 6-4d |
| Stretching | 6-4c |
| Forming Procedures, Hand | 6-5 |
| Forms (for Plastics) | 10-7c |
| Frame and Former Installation | F4-17 |
| Frame and Nonstressed Skin Repair..... | F8-38 |
| Frame and Skin Repair | F8-27 |
| Frame and Stringer Joint, Repair of | F8-35 |
| Friction Lock (Self-Plugging Rivets) | 7-7 |
| Further Treatment (of Heat-Treated Plastics) | 10-10b |
| Fuselage..... | 4-2 |
| Airplanes | 4-2b |
| Construction Materials | 4-2c |
| Helicopters | 4-2a |

G

| | |
|--|-------|
| Gauge, Radius..... | F3-6 |
| General Precautions (Cutting Plastics)..... | 10-8a |
| General Principles of Materials and Repair Procedures (with Fiber Laminate)..... | 9-9d |
| General Repair Consideration (for Radome Repair) | 9-9g |
| General Repair Practices | 8-6 |
| Chem-Milled Skin Repair | 8-6k |
| Corrosion Treatment..... | 8-6h |
| Damage Evaluation | 8-6b |
| Damage Removal..... | 8-6c |
| Repair Material Selection..... | 8-6d |
| Repair Parts Layout..... | 8-6e |
| Rivet Selection | 8-6f |
| Rivet Spacing and Edge Distance..... | 8-6g |
| Riveting | 8-6i |
| Structural Support During Repair | 8-6a |
| Tolerance | 8-6j |
| General Repair Requirements (Fiber Laminate) | 9-9a |
| General Shop Rules (Sheet Metal Shop)..... | 2-1 |
| Responsibility | 2-1a |
| Shop Housekeeping..... | 2-1b |
| Shop Safety..... | 2-1c |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

G - Continued

| | |
|--|--------|
| Shop Tools and Materials | 2-1d |
| General, Aircraft Plastics..... | 10-1 |
| General, Aircraft Structures..... | 4-1 |
| General, Airframe Sheet Metal Repair..... | 8-1 |
| General, Forming | 6-1 |
| General, Rebalancing Movable Surfaces | 11-1 |
| General, Rivets and Riveting Techniques..... | 7-1 |
| General, Sandwich Construction Repair..... | 9-1 |
| General, Shop Equipment..... | 3-1 |
| General, Spotwelds..... | 12-1 |
| General, Structural Metals..... | 5-1 |
| Glass Cloth Repair of Lack-of-Material Damage..... | F9-18 |
| Glass Cloth Repair of Large Crack or Perforation..... | F9-17 |
| Glass Cloth Repair of Small Crack | F9-16 |
| Glass Fiber Mat Facing Material..... | 9-3f |
| Glass Windshields..... | 10-17 |
| Cleaning | 10-17b |
| Inspection | 10-17a |
| Removal and Installation | 10-17c |
| Glue Method | 10-9c |
| Grinder, Bench..... | F3-30 |
| Grinding and Sanding Machines..... | 3-5f |
| Grip Lengths for Solid Shank Rivets..... | T7-1 |
| Grip Lengths, Hi-Lok | F7-90 |
| Grip Lengths, Jo-Bolts..... | F7-82 |
| Grip Range (CherryMAX Rivets) | T7-11 |
| Grip Range (Olympic Blind Rivets)..... | 7-11b |
| Grip Range for Blind-Type Lockbolts..... | T7-27 |
| Grip Range for Olympic Rivets | T7-20 |
| Grip Range for Pull- and Stump-Type Lockbolts..... | T7-26 |
| Grip Ranges, Sizes, and Diameters of Flush Head Jo-Bolts..... | F7-83 |
| Grip Ranges, Sizes, and Diameters of Hex Head Jo-Bolts..... | F7-84 |
| Grip Ranges, Sizes, and Diameters of Millable Hex Head Jo-Bolts..... | F7-85 |

H

| | |
|--|--------|
| Hammers, Peening with | F7-110 |
| Hand Forming Procedures | 6-5 |
| Curving Formed or Extruded Angles..... | 6-5b |
| Forming by Bumping | 6-5e |
| Forming Curved Flanged Parts..... | 6-5d |
| Forming Flanged Angles..... | 6-5c |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| H - Continued | |
| Joggling | 6-5f |
| Lightening Holes | 6-5h |
| Relief Holes | 6-59g |
| Straight Line Bends | 6-5a |
| Hand Router Template for Milling Plug Cavity | F10-15 |
| Hand Shears | 3-4d, F3-10 |
| Hand Tools (for Riveting) | 7-4a |
| Hand-Type Tester, Webster | F5-10 |
| Handling and Storage (of Plastics) | 10-5 |
| Hand Tools and Devices | 3-4 |
| Aviation Snips | 3-4f |
| Bench Shears | 3-4e |
| Circle Snips | 3-4h |
| Countersinks | 3-4i |
| Forming Blocks | 3-4k |
| Hand Shears | 3-4d |
| Micrometers | 3-4a |
| Punches | 3-4j |
| Radius Gauge | 3-4b |
| Sheet Metal Holders | 3-4c |
| Straight Snips | 3-4 |
| Hardness Conversion for Aluminum Alloy | F5-16 |
| Hardness Conversion for Brass and Mild Steel | 5-13e |
| Hardness Conversion for Brass and Mild Steel | F5-15 |
| Hardness Range (for Aluminum) | 5-13c |
| Hardness Range (for Copper) | 5-13d |
| Hardness Range, Aluminum, Model B | F5-13 |
| Hardness Range, Copper, Model BB-75 | F5-14 |
| Hardness Tester, Rockwell | F5-12 |
| Hardness Testing of Metals | 5-13 |
| Hardness Conversion for Brass and Mild Steel | 5-13e |
| Hardness Range for Aluminum | 5-13c |
| Hardness Range for Copper | 5-13d |
| Hardness Values for Clad Aluminum Sheet and Plate, and Bare Aluminum Sheet, Plate, Extrusions, and Forgings | 5-13f |
| Rockwell Hardness Test | 5-13b |
| Webster Hardness Tester | 5-13a |
| Hardness Values, Rockwell, for 0.050 Inch Minimum Thickness Class Aluminum Sheet and Plate | T5-20 |
| Hardness Values, Rockwell, for Bare Aluminum Sheet, Plate, Extrusions, and Forgings | T5-21 |
| Hardness Values for Clad Aluminum Sheet and Plate, and Bare Aluminum Sheet, Plate, Extrusions, and Forgings | 5-13f |
| Hardness | 5-2i |
| Hat and Longeron Sections | F4-21 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| H - Continued | |
| Hat Section, Splice Repair of | F8-37 |
| Hatch Seal, Typical | F8-60 |
| Head Radius, Hi-Lok | F7-92 |
| Head Types (Jo-Bolts) | 7-13a |
| Heat Treating (Soaking) Temperature | T5-10 |
| Heat Treatment | 5-5 |
| Cold-Working | 5-5c |
| Hot Working | 5-5b |
| Types | 5-5a |
| Heat Treatment, Curing and (of Plastics) | 10-10 |
| Heat-Treatable Rivet Identification | F5-9 |
| Heat-Treatment Methods | 5-7e |
| Heat-Treatment Procedures | 5-7g |
| Heating for Forming (Acrylic Plastics) | 10-7b |
| Heavily Stressed Area, Circular Damage Repair in | F8-51 |
| Heavily Stressed Area, Damage Repair Near Adjacent Member in | F8-52 |
| Heavily Stressed Area, Insertion Skin Repair Across Stiffeners in | F8-53 |
| Heavily Stressed Areas, Damage Repair Near Existing Structure in | F8-49 |
| Heavily Stressed Areas, Rectangular Damage Repair for | F8-48 |
| Helicopter Stabilizer | F4-15 |
| Helicopters (Fuselage) | 4-2a |
| Hex Head Jo-Bolt | F7-79 |
| Hex Head Jo-Bolts, Grip Ranges, Sizes, and Diameters of | F7-84 |
| Hi-Lok Fasteners | 7-14 |
| Hole Preparation | 7-14c |
| Identification | 7-14a |
| Inspection | 7-14f |
| Installation | 7-14e |
| Removal | 7-149 |
| Selection | 7-14b |
| Tooling | 7-14d |
| Hi-Lok Grip Lengths | F7-90 |
| Hi-Lok Head Radius | F7-92 |
| Hi-Lok Installation | F7-93 |
| Hi-Lok Numbering System | T7-32 |
| Hi-Lok Protrusion Limits | F7-94 |
| Hi-Shear Rivet Inspection | F7-64 |
| Hi-Shear Rivet Parts | F7-60 |
| Hi-Shear Rivet Sets | F7-61 |
| Hi-Shear Rivet, Driving | F7-63 |
| Hi-Shear Rivets | 7-10 |
| Identification | 7-10a |
| Inspection | 7-10e |
| Installation Procedures | 7-10d |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

H - Continued

| | |
|---|--------|
| Installation Tools | 7-10c |
| Removal Procedures | 7-10f |
| Selection | 7-10b |
| Hi-Shear Rivets, Removal of | F7-65 |
| High-Temperature Setting Adhesives..... | 9-4a |
| Hold-Down Plate | F6-28 |
| Hole and Drill Sizes for Self-Plugging (Friction Lock) Rivets | T7-8 |
| Hole Finder, Use of | F8-10 |
| Hole Preparation (for Hi-Lok Fasteners) | 7-14c |
| Hole Preparation (for Jo-Bolts) | 7-13e |
| Hole Size Limits (Olympic Blind Rivets) | 7-11c |
| Hole Size Limits for Olympic Rivets | T7-21 |
| Hole Sizes and Countersink Diameters, Jo-Bolt | T7-31 |
| Holes, Relief | F6-31 |
| Honeycomb Core Materials..... | 9-2d |
| Honeycomb Panel Edge, Repair of | F9-12 |
| Honeycomb Repair | F9-2 |
| Honeycomb Skin, Damaged..... | F9-1 |
| Hot Climate Precautions..... | 10-15d |
| Hot Working | 5-5b |
| Huck Lockbolts | 7-12 |
| Identification | 7-12d |
| Inspection | 7-12h |
| Installation Procedures | 7-12g |
| Installation Tools | 7-12f |
| Materials | 7-12b |
| Removal | 7-12i |
| Selection | 7-12e |
| Substitution..... | 7-12c |
| Types | 7-12a |

I

| | |
|---|--------------|
| Identification and Types (of Aircraft Plastics) | 10-4 |
| Identification Marking Code (Steel) | T5-2 |
| Identification of Aluminum Alloys | 5-7a |
| Identification of CherryMAX Rivets | 7-8a |
| Identification of Copper Alloys..... | 5-10a |
| Identification of Hi-Lok Fasteners | 7-14a |
| Identification of Hi-Shear Rivets | 7-10a |
| Identification of Huck Lockbolts | 7-12d |
| Identification of Inconel | 5-12a, T5-18 |
| Identification of Jo-Bolts | 7-13b |
| Identification of Magnesium Alloys | 5-8a |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

I - Continued

| | |
|--|---------------|
| Identification of Monel | 5-11 a, T5-17 |
| Identification of Olympic Blind Rivets | 7-11 a |
| Identification of Rivnuts | 7-9a |
| Identification of Self-Plugging Rivets | 7-7a |
| Identification of Steel | 5-6a |
| Identification of Terms and Symbols (Balancing) | F11-2 |
| Identification of Titanium Alloys | 5-9a |
| Identification, Penetrator | F5-11 |
| Inconel | 5-12 |
| Identification | 5-12a |
| Methods for Working | 5-12b |
| Inconel, Identification of | T5-18 |
| Incorrect Countersinking | F7-47 |
| Industrial Alloys | 5-4b |
| Inner Sleeve in Steel Tube, Centering | F8-68 |
| Inner Sleeve Splice, Steel Tube | F8-67 |
| Insertion Skin Repair Across Stiffeners in Heavily Stressed Area | F8-53 |
| Inspection after Repair (of Radomes) | 9-9r |
| Inspection of Glass Windshields | 10-17a |
| Inspection of Hi-Lok Fasteners | 7-14f |
| Inspection of Hi-Shear Rivets | 7-10e |
| Inspection of Huck Lockbolts | 7-12h |
| Inspection of Jo-Bolts | 7-13h |
| Inspection of Olympic Blind Rivets | 7-11f |
| Inspection of Rivets | 7-5 |
| Inspection of Self-Plugging Rivets | 7-7f |
| Inspection, Damage | 8-4 |
| Inspection, Structural | 8-3 |
| Installation Considerations (for Transparent Plastics) | 10-16a |
| Installation of Blind-Type Lockbolt | F7-77 |
| Installation of Dzus Fastener Receptacle..... | F7-105 |
| Installation of Dzus Fastener Stud and Grommet | F7-106 |
| Installation of Hi-Lok Fasteners | 7-14e |
| Installation of Huck Lockbolts | 7-12g |
| Installation of Jo-Bolts | 7-13g |
| Installation of Olympic Blind Rivets | 7-11e |
| Installation of Olympic Rivets | F7-70 |
| Installation of Pull-Type Lockbolt | F7-75 |
| Installation of Stump-Type Lockbolt | F7-76 |
| Installation of Type A-AJ Dzus Fasteners..... | F7-100 |
| Installation of Type F-FA-FJ Dzus Fasteners | F7-101 |
| Installation Procedure, Rivnut | F7-59 |
| Installation Procedures for Hi-Shear Rivets | 7-10d |
| Installation Procedures for Rivnuts | 7-9d |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| I - Continued | |
| Installation Procedures for Self-Plugging Rivets | 7-7e |
| Installation Tools for Dzus Fastener (Stud, Grommet, and Receptacle) | F7-104 |
| Installation Tools for Hi-Shear Rivets | 7-10c |
| Installation Tools for Huck Lockbolts | 7-12f |
| Installation Tools for Rivnuts | 7-9c |
| Installation Tools for Self-Plugging Rivets | 7-7d |
| Installation Tools for Type A-AJ and F-FA-FJ Dzus Fasteners | F7-98 |
| Installation Tools, Rivnut | F7-58 |
| Installation Tools, Self-Plugging Rivet | F7-28 |
| Installation, Bulkhead | F4-18 |
| Installation, Hi-Lok | F7-93 |
| Installation, Self-Plugging Rivet | F7-29 |
| Insulation of Dissimilar Materials | 5-7h |
| Internal and External Repairs | 8-9 |
| Bulkhead Repair | 8-9i |
| Eliminating Gaps and Leveling Installations | 8-9aa |
| Floor Channel Repair | 8-9o |
| Former Repair | 8-9h |
| Longeron Repair | 8-9b |
| Longitudinal Skin Joint | 8-9r |
| Nonstressed Skin and Frame Repair | 8-9q |
| Patch Repair to Damaged Swage in Aileron and Flap Skin | 8-9z |
| Patch Repairs to Beaded Skin | 8-9y |
| Repair for Damaged Skin Close to a Frame | 8-9x |
| Repair of C rack by Stop-Drilling | 8-9k |
| Repair of Damaged Channels | 8-9j |
| Repair of Damaged Frame or Beam | 8-9m |
| Repair of Dents and Creases | 8-9l |
| Repair of Heavily Stressed Support and Stiffener | 8-9v |
| Repair of Frame and Stringer Joint | 8-9n |
| Rib Repair by Insertion | 8-9g |
| Rib Repair by Patching | 8-9f |
| Rivet Spacing, Selection and Acceptability Limits for a Nonstressed Skin Patch | 8-9t |
| Skin and Web Repairs | 8-9u |
| Spar Angle Repair | 8-9d |
| Spar Repair by Insertion | 8-9c |
| Spar Web Repair | 8-9e |
| Splice Repair of Hat Section | 8-9p |
| Stressed Skin Repair | 8-9w |
| Stringer Repair | 8-9a |
| Transverse Skin Joint | 8-9s |
| Internal Construction, Wing | 4-5b, F4-11 |
| Introduction | 1-1 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

J

| | |
|--|-------|
| J-Section Stringer Splice Repair | F8-16 |
| Jigs (Cementing) | 10-9i |
| Jigs for Holding Cemented Assemblies | F10-9 |
| Jo-Bolt Basic Part Numbers | F7-81 |
| Jo-Bolt Grip Lengths | F7-82 |
| Jo-Bolt Hole Sizes and Countersink Diameters | T7-31 |
| Jo-Bolt Stem Break-Off Limits | F7-87 |
| Jo-Bolt Tooling | F7-86 |
| Jo-Bolt, Flush-Head | F7-78 |
| Jo-Bolt, Hex Head | F7-79 |
| Jo-Bolt, Millable Hex Head | F7-80 |
| Jo-Bolts | 7-13 |
| Head Type | 7-13a |
| Hole Preparation | 7-13e |
| Identification | 7-13b |
| Inspection | 7-13h |
| Installation | 7-13g |
| Removal | 7-13i |
| Sizes | 7-13c |
| Tooling | 7-13f |
| Uses | 7-13d |
| Joggling | 6-5f |
| Joggling Die | F6-30 |
| Joint Allowable Loads (Pounds) Per MIL-HDKB-5 (Rivet) Criteria | T7-13 |

K

| | |
|-----------------|-------------|
| Ketts Saw | 3-5b, F3-25 |
|-----------------|-------------|

L

| | |
|---|--------|
| Lacing Method | F10-12 |
| Lack-of-Material Damage, Glass Cloth Repair of | F9-18 |
| Lap or Scab Patch (Crack) | F8-3 |
| Lap or Scab (Hole) | F8-4 |
| Lap Patch Edge Distance | 8-7d |
| Lap Patch Edge Preparation | F8-6 |
| Large Crack or Perforation, Glass Cloth Repair of | F9-17 |
| Large Single e Skin Damage | 9-59 |
| Layout (for Cutting Plastics) | 10-8b |
| Layout of First Flange | F6-7 |
| Layout of Third Flange | F6-9 |
| Layout of Web | F6-8 |
| Layout, Repair | 7-3 |
| Leveling Installations, Eliminating Gaps and | F8-59 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

L - Continued

| | |
|---|-------------|
| Lightening Holes | 6-5h |
| Lightly Stressed Areas, Circular Damage Repair for | F8-46 |
| Lightly Stressed Areas, Crack Repair for..... | F8-47 |
| Linear Expansion | 5-2e |
| Loads, Joint Allowable, (Pounds) Per MIL-HDBK-5 (Rivet) Criteria..... | T7-13 |
| Locating Brake Line in the Brake | F6-11 |
| Locating Brake or Sight Line | 6-3f |
| Locating Brake or Sight Line of Flange | F6-10 |
| Location (of Stored Plastics)..... | 10-5a |
| Lockbolt Collar Numbering System | T7-25 |
| Lockbolt, Blind-Type, Numbering System..... | T7-24 |
| Lockbolt, Pull-Type, Numbering System..... | T7-22 |
| Lockbolt, Stump-Type, Numbering System | T7-23 |
| Lockbolts, Huck | 7-12 |
| Lockbolts, Types of | F7-72 |
| Longeron and Hat Sections..... | F4-21 |
| Longeron and Stringer Installation | F4-19 |
| Longeron Repair | 8-9b |
| Longitudinal Skin Joint | 8-9r, F8-39 |
| Loose Jo-Bolt, Removal of | F7-89 |

M

| | |
|--|--------|
| Machinability | 5-2j |
| Machine Buffing | 10-14c |
| Machine Screw Patch..... | F10-14 |
| Machine Screw Repair | F10-13 |
| Machine, Bar Folding | F3-31 |
| Magnesium Alloy Facing Material..... | 9-3c |
| Magnesium Alloys | 5-8 |
| Commonly Used Alloys..... | 5-8b |
| Identification | 5-8a |
| Methods of Working | 5-8c |
| Maintaining Original Contour (Airframe Sheet Metal Repair) | 8-2b |
| Maintaining Original Strength (Airframe Sheet Metal Repair) | 8-2a |
| Maintenance of Acrylic Plastic Enclosures on Army Aircraft | 10-15 |
| Cleaning | 10-15a |
| Cold Climate Precautions | 10-15e |
| Hot Climate Precautions | 10-15d |
| Polishing | 10-15b |
| Waxing | 10-15c |
| Maintenance of Engine Mounts | 4-3c |
| Maintenance of Shop Equipment..... | 3-2 |
| Major Repair | 3-2b |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| M - Continued | |
| Operator Maintenance | 3-2a |
| Storage of Tools, Equipment, and Materials | 3-2c |
| Major Alloying Elements (for Copper) | 5-10b |
| Major Alloying Elements | T5-5 |
| Major Repair (of Shop Equipment) | 3-2b |
| Malleability | 5-2g |
| Marking Code (Steel), Identification | T5-2 |
| Marking Example, Aluminum Identification | F5-7 |
| Marking Example, Steel Identification | F5-6 |
| Masking (Cementing) | 10-9f |
| Masking (Paper)..... | 10-6 |
| Removal | 10-6a |
| Replacement | 10-6b |
| Masking Paper | 10-5c |
| Material Substitution (of Metals) | 5-7j |
| Material Thickness Variation (and Hi-Lok Rivets) | F7-91 |
| Material, Drilling | F7-68 |
| Material, Patch, Selection | T8-5 |
| Materials (Huck Lockbolts) | 7-12b |
| Materials and Use (Solid Shank Rivets) | 7-2a |
| Materials Used In Repair (of Fiber Laminate) | 9-9b |
| Materials, Core (Sandwich Construction) | 9-2 |
| Materials, Facing | 9-3 |
| Materials, Substitute (Aluminum) | T5-15 |
| Mating Jig, Aircraft | F8-1 |
| Members, Structural | 4-8 |
| Metal and Forming Blocks | F6-23 |
| Metal Forming Machines | 3-6 |
| Bar Folding Machine | 3-6a |
| Cornice Brake..... | 3-6b |
| Shrinking and Stretching Machine | 3-6d |
| Slip Roll Former | 3-6c |
| Metal-Covered Wooden Floor Panels, Repair of | F9-15 |
| Metal-Covered Wooden Floor Repair..... | 9-7 |
| Negligible Damage | 9-7a |
| Patching | 9-7b |
| Metals and Alloys..... | 5-4 |
| Alloying | 5-4a |
| Industrial Alloys | 54b |
| Preparing Alloys | 5-4c |
| Metals, Hardness Testing of..... | 5-13 |
| Metals, Properties of | 5-2 |
| Method, Calculation (of Balancing) | F11-8 |
| Method, Lacing | F10-12 |

INDEX - CONT

VOLUME 10

Subject

Paragraph Figure, Table Number

M - Continued

| | |
|--|--------|
| Method, Scale (of Balancing) | F11-9 |
| Method, Soak | F10-6 |
| Methods (of Rebalancing) | 11-4b |
| Methods for Working (of Inconel) | 5-12b |
| Methods for Working and Uses (of Monel) | 5-11 b |
| Methods of Working (Magnesium Alloys) | 5-8c |
| Methods of Working (Titanium Alloys) | 5-9c |
| Micrometer | F3-5 |
| Micrometers | 3-4a |
| Microshaver | F7-14 |
| Military Specification Number (of Plastics) | 104a |
| Millable Hex Head Jo-Bolts, Grip Ranges, Sizes, and Diameters of | F7-85 |
| Millable Hex Head Jo-Bolt | F7-80 |
| Minimizing Weight (Airframe Sheet Metal Repair) | 8-2c |
| Minimum Annealing Time for Acrylic Plastic | T10-4 |
| Minimum Rivet Edge Distances | T8-1 |
| Minimum Rivet Shear and Tensile Strength (Pounds) in Steel Coupons | T7-12 |
| Missing Core | 9-5b |
| Modern Use (Sandwich Construction)..... | 9-1c |
| Moisture and Contamination, Preventing | F9-28 |
| Monel..... | 5-11 |
| Identification | 5-1 a |
| Methods for Working and Using | 5-11 b |
| Monel, Identification of | T5-17 |
| Monocoque Construction | F4-1 |
| Monospar Wing Construction | F4-8 |
| Mount, Engine..... | F4-6 |
| Mounts, Engine | 4-3 |
| MS 20600 Protruding-Head Rivet Identification | F7-26 |
| MS 20601 Countersunk-Head Rivet Identification | F7-27 |
| Multispar Wing Construction | F4-9 |

N

| | |
|---|--------|
| Nacelle Structure | F4-7 |
| Nacelles | 4-4 |
| Natural Core Materials | 9-2a |
| Nearest Corresponding Numbers, Specifications, Cross Reference of (Steel) | T5-4 |
| Negligible Damage (of Metal-Covered Wooden Floor) | 9-7a |
| Negligible Damage (to Airframe Sheet Metal) | 8-5a |
| Neutral Axis and Stresses Resulting from Bending..... | F6-2 |
| Nicks and Dents (in Plastics)..... | 10-12a |
| Nominal Diameter, Countersunk Head, CherryMAX Rivet | F7-32 |
| Nominal Diameter, Protruding Head, CherryMAX Rivet..... | F7-33 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

N - Continued

| | |
|--|-------------|
| Non-Destructive Inspection | 8-3f |
| Non-Powered Metal Cutting Machines | 3-3 |
| Rotary Punch..... | 3-3d |
| Scroll Shears | 3-3b |
| Squaring Shears | 3-3a |
| Throatless Shears..... | 3-3c |
| Nonstressed Frame Repair | F8-33 |
| Nonstressed Skin and Frame Repair | 8-9q, F8-38 |
| Nose Rib Repair | F8-22 |
| Nose Rib Using Beads, Crimps, Relief Holes, and Riveted Angles | F6-22 |
| Nose Rib with Crimps and Beads | F6-21 |
| Nose Rib with Relief Holes | F6-20 |
| Nose Rib, Plain | F6-19 |
| Numbering System, Hi-Lok | T7-32 |

O

| | |
|---|--------|
| Old and New Color Code (for Aluminum), Cross Reference of | T5-8 |
| Old Color Code (Steel) Cross Reference..... | T5-3 |
| Olympic Blind Rivets | 7-11 |
| Drilling | 7-11 d |
| Grip Range | 7-11 b |
| Hole Size Limits | 7-1 c |
| Identification | 7-11 a |
| Inspection | 7-11 f |
| Installation | 7-11e |
| Removal | 7-11 g |
| Olympic Rivet Grip Length | F7-67 |
| Olympic Rivet Material Codes | T7-18 |
| Olympic Rivet Part Number Cross Reference | T7-19 |
| Olympic Rivet Pulling Head Operation | F7-69 |
| Olympic Rivet Stem Styles | F7-66 |
| Olympic Rivet, Removing | F7-71 |
| Olympic Rivets, Grip Range for | T7-20 |
| Olympic Rivets, Hole Size Limits for | T7-21 |
| Olympic Rivets, Installation of | F7-70 |
| Open and Closed Skin Area Repair..... | 8-7b |
| Operations, Forming | 6-4 |
| Operator Maintenance, (Sheet Metal) Shop Equipment | 3-2a |
| Optical Quality (of Aircraft Plastics) | 10-3 |
| Outer Sleeve Splice, Steel Tube Using | F8-69 |
| Oven Temperature for Acrylic Plastics | T10-1 |
| Overlay Patch to Reinforce a Crack | F10-16 |
| Oversize Diameter, Countersunk Head, CherryMAX Rivet | F7-34 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

O - Continued

| | |
|---|-------|
| Oversize Diameter, Protruding Head, CherryMAX Rivet | F7-35 |
|---|-------|

P

| | |
|--|----------------|
| Pan Void, Repair of | F9-7 |
| Panel Repair, Bonded Magnesium | F9-3 |
| Part Number Breakdown, CherryMAX | T7-10 |
| Part Number Cross Reference, Olympic Rivet | T7-19 |
| Parting Films and Compounds | 9-9f |
| Parts Repair, Spotwelded | 12-6 |
| Patch Material Selection | T8-5 |
| Patch Repairs to Beaded Skin | 8-9y, F8-57 |
| Patch Repair to Damaged Swage In Aileron and Flap Skin | 8-9z, F8-58 |
| Plywood Facing Material | 9-3d |
| Patch, Flush | F8-5 |
| Patch, Flush, Repair Procedure | F8-7 |
| Patch, Machine Screw | F10-14 |
| Patch, Overlay, to Reinforce a Crack | F10-16 |
| Patches | 8-7a |
| Patching (of Metal-Covered Wooden Floor) | 9-7b |
| Patching Procedures (for Metal-Covered Wooden Floors) | 8-7c |
| Patching Procedures (for Acrylic Plastics) | 10-13 |
| Alternate Transparent Plastic Plug Repair | 10-13b |
| Transparent Overlay Plastic Patch | 10-13c |
| Transparent Plastic Plug Repair | 10-13a |
| Peening with Hammers | F7-110 |
| Penetrator Identification | F5-11 |
| Pin Punch | F3-20 |
| Piston-Engine Mounts | 4-3a |
| Plain Nose Rib | F6-19 |
| Plastic Joint, Cemented | F10-4 |
| Plastics, Forming of | 10-7 |
| Plate, Hold-Down | F6-28 |
| Pliers and Strip Extractor | F7-111 |
| Pliers, Clamp | F3-9 |
| Pliers, Cleco Fasteners | F3-8 |
| Plies and Core, Replaced | F9-23 |
| Pneumatic Rivet Gun Structure | F7-12 |
| Pneumatic Rivet Gun, Riveting Procedures Using a | F7-19 |
| Pneumatic Rivet Guns | F7-11 |
| Polishing (of Acrylic Plastics) | 10-14d, 10-15b |
| Portable Power Drills | F3-28 |
| Position (of Stored Plastics) | 10-5b |
| Power Drills, Portable | F3-28 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| P - Continued | |
| Power Tools (for Riveting)..... | 7-4b |
| Powered Metal Cutting Machines..... | 3-5 |
| Band Saw | 3-5d |
| Drills and Drill Presses..... | 3-5e |
| Grinding and Sanding Machines | 3-5f |
| Ketts Saw | 3-5b |
| Reciprocating Saw..... | 3-5c |
| Safety | 3-5a |
| Practices, Countersinking..... | F7-18 |
| Precipitation (Aging) Treating Temperatures, Times, and Condition | T5-9 |
| Preparing Alloys | 5-4c |
| Preparing Materials for Spotwelding | 12-6d |
| Press, Drill | F3-29 |
| Preventing Moisture and Contamination..... | F9-28 |
| Prick Punch..... | F3-16 |
| Primary Horizontal Member in Heavily Stressed Area, Damage Repair Near | F8-50 |
| Principles, Balancing | 11-3 |
| Procedure for Edge Band Sealing | 9-9q |
| Procedure for Obtaining Void-Free Laminate | 9-9p |
| Procedure for Preventing Moisture and Oil Contamination | 9-90 |
| Procedures, Bonding | 10-11 |
| Procedures, Cementing | 10-9 |
| Procedures, Finishing..... | 10-14 |
| Procedures, Patching | 10-13 |
| Properties of Metals | 5-2 |
| Abrasion Resistance..... | 5-21 |
| Compressive Strength | 5-2c |
| Conductivity | 5-2m |
| Corrosion Resistance | 5-2k |
| Ductility | 5-2f |
| Elasticity | 5-2d |
| Hardness | 5-2i |
| Linear Expansion | 5-2e |
| Machinability..... | 5-2j |
| Malleability | 5-2g |
| Shear Strength | 5-2b |
| Specific Gravity | 5-2n |
| Tensile Strength | 5-2a |
| Toughness | 5-2h |
| Protective Coatings | 8-3e |
| Protruding Head Nominal Diameter CherryMAX Rivet | F7-33 |
| Protruding Head Oversize Diameter CherryMAX Rivet | F7-35 |
| Protruding Head Rivets, Removal of | 7-6a, F7-23 |
| Protrusion Limits, Hi-Lok | F7-94 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

P - Continued

| | |
|---|-------|
| Pull- and Blind-Type Aluminum Lockbolt Rivet Gun | F7-73 |
| Pull- and Blind-Type Steel Lockbolt Rivet Gun | F7-74 |
| Pull- and Stump-Type Lockbolts, Drilling Procedures for | T7-29 |
| Pull- and Stump-Type Lockbolts, Grip Range for | T7-26 |
| Pull-Type Lockbolt Numbering System | T7-22 |
| Pull-Type Lockbolt, Installation of | F7-75 |
| Punch, Center | F3-17 |
| Punch, Drive | F3-19 |
| Punch, Pin | F3-20 |
| Punch, Prick | F3-16 |
| Punch, Rotary | F3-4 |
| Punch, Transfer | F3-21 |
| Punches | 3-4j |
| Purposes (of Manual) | 1-1 |

Q

| | |
|--|-------|
| Quality Assurance for Repair (of Sandwich Construction) | 9-6q |
| Quality, Optical (of Aircraft Plastics) | 10-3 |
| Quency Delay, Recommended Maximum, Wrought Alloys (for Immersion Type Quenching) | T5-13 |

R

| | |
|---|-------------|
| Radii of Cuts (of Plastic), Various, Bandsaw Widths for | T10-3 |
| Radius Gauge | 3-4b, F3-6 |
| Radius of Bend | 6-3a |
| Range, Grip (CherryMAX Rivets) | T7-11 |
| Reaming, Dimpling and | F7-48 |
| Rebalancing Movable Surfaces, General | 11-1 |
| Reciprocating Saw | 3-5c, F3-26 |
| Recommended Bucking Bar Weights | T7-6 |
| Recommended Countersinks for Shaving | T7-16 |
| Recommended Installation Procedures for Transparent Plastics | 10-16 |
| Bolt and Rivet Mounting | 10-16c |
| Expansion and Contraction Allowances | 10-16b |
| Installation Considerations | 10-16a |
| Recommended Maximum Quench Delay, Wrought Alloys (for Immersion Type Quenching) | T5-13 |
| Rectangular Damage Cutout Repair (Lightly Stressed) | F8-44 |
| Rectangular Damage Repair for Heavily Stressed Areas | F848 |
| Reheat Treatment of Alclad Alloys | T5-12 |
| Reinforced Shell Construction | F4-3 |
| Reinforcing a Dent at a Steel Tube Cluster Joint | F8-65 |
| Relief Holes | 6-59, F6-31 |
| Relief Holes, Nose Rib with | F6-20 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| R - Continued | |
| Removal (of Hi-Lok Fasteners) | 7-14g |
| Removal (of Huck Lockbolts) | 7-12i |
| Removal (of Jo-Bolts) | 7-13i |
| Removal (of Masking) | 10-6a |
| Removal (of Olympic Blind Rivets) | 7-11g |
| Removal and Installation (of Glass Windshields) | 10-17c |
| Removal of Countersunk Head Rivet | F7-24 |
| Removal of Damaged Face Plies by Scarf Method | F9-25 |
| Removal of Hi-Shear Rivets | F7-65 |
| Removal of Loose Jo-Bolt | F7-89 |
| Removal of Protruding Head Rivets | F7-23 |
| Removal of Rivets | 7-6 |
| Removal of Self-Plugging Rivets | F7-30 |
| Removal of Tightly Installed Jo-Bolt | F7-88 |
| Removal Procedures (Hi-Shear Rivets) | 7-10f |
| Removal Procedures (Rivnuts) | 7-9e |
| Removal Procedures (Self-Locking Rivets) | 7-7g |
| Removal, CherryMAX | F7-55 |
| Removing Damaged Face Plies Using Step Joint Method | F9-22 |
| Removing Olympic Rivet | F7-71 |
| Repair by Insertion, Stringer, When Damage Affects More than One Stringer | F8-15 |
| Repair by Insertion, Stringer, When Damage Affects Only One Stringer | F8-14 |
| Repair by insertion, Stringer, When Damage Exceeds Two Thirds of One Leg in Width | F8-13 |
| Repair by Patching, Stringer | F8-12 |
| Repair for Damaged Skin Close to a Frame | 8-9x, F8-56 |
| Repair for Heavily Stressed Support and Stiffener | F8-54 |
| Repair for Short Edge Distance and Broken Spotwelds | F12-7 |
| Repair Layout | 7-3 |
| Rivet Selection | 7-3a |
| Rivet Spacing | 7-3c |
| Rivet Strength | 7-3b |
| Rivet Substitutions | 7-3d |
| Repair Material Selection | 8-6d |
| Repair Methods for Specified Defects (of Plastics) | 10-12 |
| Cracks | 10-12d |
| Crazing | 10-12c |
| Delamination and Discoloration | 10-12e |
| Nicks and Dents | 10-12a |
| Scratches | 10-12b |
| Repair of Cracks by Stop-Drilling | 8-9k, F8-31 |
| Repair of Damage Near Existing Structure (Lightly Stressed) | F8-45 |
| Repair of Damaged Channels | 8-9j |
| Repair of Damaged Frame or Beam | 8-9m |
| Repair of Defective Spotwelds Exceeding Allowable Percentage | 12-6c |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

R - Continued

| | |
|---|-------------|
| Repair of Dents | 9-6i |
| Repair of Dents and Creases | 8-91, F8-32 |
| Repair of Double-Skin Damage | 9-6m |
| Repair of Frame and Stringer Joint | 8-9n, F8-35 |
| Repair of Heavily Stressed Support and Stiffener | 8-9v |
| Repair of Honeycomb Panel Edge | F9-12 |
| Repair of Honeycomb Panel Edges | 9-60 |
| Repair of Impregnated Glass Cloth Parts | 9-8 |
| Repair of Large, Single-Skin Damage | 9-61 |
| Repair of Metal-Covered Wooden Floor Panels | F9-15 |
| Classification of Damage | 9-8a |
| Damage Repair | 9-8b |
| Repair of Missing Core | 9-6f |
| Repair of Pan Void | F9-7 |
| Repair of Pre-Drilled Attachment Holes | 9-9n |
| Repair of Sandwich Construction | 9-6 |
| Bonded Former Assemblies | 9-6p |
| Bonded Magnesium Panels | 9-6d |
| Bonded Stiffeners | 9-6c |
| Cleanliness of Repair Area | 9-6a |
| Quality Assurance for Repair | 9-6q |
| Repair of Dents | 9-6i |
| Repair of Double-Skin Damage | 9-6m |
| Repair of Honeycomb Panel Edges | 9-60 |
| Repair of Large, Single-Skin Damage | 9-61 |
| Repair of Missing Core | 9-6f |
| Repair of Scotchply Edge Member and Corfil Edge Filler Damage | 9-6n |
| Repair of Skin Core Voids | 9-6g |
| Repair of Skin Doubler Voids | 9-6h |
| Repair of Skin Panels | 9-6e |
| Repair of Small, Single-Skin Damage | 9-6j |
| Repair of Small, Single-Skin Holes | 9-5f |
| Sample Honeycomb Repair | 9-6b |
| Repair of Scotchply Edge Member and Corfil Edge Filler Damage | 9-6n |
| Repair of Sharp Dent or Crack in Length of Steel Tubing | F8-66 |
| Repair of Skin Core Doubler Voids | 9-6h |
| Repair of Skin Core Voids | 9-6g, F9-6 |
| Repair of Skin Panels | 9-6e |
| Repair of Small, Single-Skin Damage | 9-6j |
| Repair of Small, Single-Skin Holes | 9-6k |
| Repair Parts Layout | 8-6e |
| Repair Practices, General | 8-6 |
| Repair Procedures (for Radome Repair) | 9-9h |
| Repair, Channel, by Insertion | F8-30 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

R - Continued

| | |
|---|-------------|
| Repair, Channel, by Patching | F8-29 |
| Repair, Floor Channel | F8-36 |
| Repair, Former | F8-25 |
| Repair, Honeycomb | F9-2 |
| Repair, Machine Screw | F10-13 |
| Repair, Nonstressed Frame | F8-33 |
| Repair, Nose Rib | F8-22 |
| Repair, Rib, by Insertion | F8-24 |
| Repair, Spar Angle | F8-20 |
| Repair, Spar, by Insertion | F8-19 |
| Repair, Stressed Beam | F8-34 |
| Repair, Trailing Edge | F9-4 |
| Repair, Tubing | 8-11 |
| Repair, Wing Rib | F8-23 |
| Repairing Aluminum Alloy Parts, Rivet Selection and Spacing When | T8-2 |
| Repairing Corrosion-Resistant Steel Parts, Rivet Selection and Spacing When | T8-3 |
| Repairing Magnesium Alloy Parts, Rivet Selection and Spacing When | T8-4 |
| Repairs for Cracks in Radius of Stringer End, Typical | F8-18 |
| Replaced Plies and Core | F9-23 |
| Replacement (of Masking) | 10-6b |
| Replacement and Repair, Skin | F8-8 |
| Replacing Face Plies | F9-24 |
| Requirements (for Rebalancing) | 11 -4a |
| Resin-Impregnated Glass Cloth Facing Material | 9-3e |
| Resins, Adhesives and | 9-4 |
| Responsibility for Shop Rules (Sheet Metal Shop) | 2-1a |
| Retainer, Seal | F8-61 |
| Rib Construction | F4-13 |
| Rib Repair by Insertion | 8-9g, F8-24 |
| Rib Repair by Patching | 8-9f |
| Right and Wrong Methods of Horizontal Stacking of Small (Plastic) Sheets | F10-1 |
| Rivet Acceptability Limits | F7-22 |
| Rivet Edge Distance | F7-4 |
| Rivet Edge Distances, Minimum | T8-1 |
| Rivet Failure | 7-5b |
| Rivet Grip Length, Olympic | F7-67 |
| Rivet Gun, Pneumatic, Structure | F7-12 |
| Rivet Guns, Pneumatic | F7-11 |
| Rivet Head Cracking | F7-21 |
| Rivet Head Markings, Solid Shank | F7-2 |
| Rivet Heat-Treating | 7-2c |
| Rivet Identification | 7-2b |
| Rivet Identification, MS 20600 Protruding-Head | F7-26 |
| Rivet Identification, MS 20601 Countersunk-Head | F7-27 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| R - Continued | |
| Rivet Inspection | 7-5 |
| Correctly and Incorrectly Driven Rivets | 7-5a |
| Rivet Failure | 7-5b |
| Rivet Inspection Procedures | 7-5c |
| Rivet Inspection Procedures..... | 7-5c |
| Rivet Inspection, Hi-Shear..... | F7-64 |
| Rivet Installation | 7-4 |
| Hand Tools | 7-4a |
| Power Tools | 7-4b |
| Riveting Procedure | 7-4c |
| Rivet Length, Factors in Determining | F7-3 |
| Rivet Material Codes, Olympic | T7-18 |
| Rivet Parts, Hi-Shear | F7-60 |
| Rivet Pulling Head Operation, Olympic | F7-69 |
| Rivet Removal | 7-6 |
| Countersunk-Head Rivet Removal..... | 7-6b |
| Protruding-Head Rivet Removal | 7-6a |
| Rivet Selection | 73a, 8-6f |
| Rivet Selection and Spacing When Repairing Aluminum Alloy Parts | T8-2 |
| Rivet Selection and Spacing When Repairing Corrosion-Resistant..... | T8-3 |
| Rivet Selection and Spacing When Repairing Magnesium Alloy Parts | T8-4 |
| Rivet Sets, Hi-Shear | F7-61 |
| Rivet Shaving, CherryMAX | F7-51 |
| Rivet Shear, Minimum, and Tensile Strength (Pounds) in Steel Coupons..... | T7-12 |
| Rivet Spacing..... | 7-3c, F7-5 |
| Rivet Spacing and Edge Distance | 8-6g |
| Rivet Spacing for Repair Using Formed Patch | F8-43 |
| Rivet Spacing for Repair with Double Row of Rivets | F8-42 |
| Rivet Spacing for Repair with Single Row of Rivets | F8-41 |
| Rivet Spacing, Selection and Acceptability Limits for a Nonstressed Skin Patch | 8-9t |
| Rivet Squeezers..... | F7-13 |
| Rivet Stem Styles, Olympic | F7-66 |
| Rivet Strength | 7-3b |
| Rivet Styles and Materials, Solid Shank | F7-1 |
| Rivet, CherryMAX | F7-31 |
| Rivet, Heat-Treatable, Identification of | F5-9 |
| Riveting | 8-6i |
| Riveting Procedure | 7-4c |
| Riveting Procedures Using a Pneumatic Rivet Gun..... | F7-19 |
| Rivets and Riveting Techniques, General..... | 7-1 |
| Rivets Substitutions..... | 7-3d |
| Rivets, CherryMAX | 7-8 |
| Rivets, Correctly and Incorrectly Driven | F7-20 |
| Rivets, Hi-Shear..... | 7-10 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

R - Continued

| | |
|---|------------|
| Rivets, Olympic Blind | 7-11 |
| Rivets, Solid Shank | 7-2 |
| Rivnut Grip Length, Determining | F7-57 |
| Rivnut Installation Procedure | F7-59 |
| Rivnut Installation Tools | F7-58 |
| Rivnuts | 7-9, F7-56 |
| Identification | 7-9a |
| Installation Procedures | 79d |
| Installation Tools | 79c |
| Removal Procedures | 7-9e |
| Selection | 7-9b |
| Rockwell Hardness Scales, Standard | T5-19 |
| Rockwell Hardness Test | 5-13b |
| Rockwell Hardness Tester | F5-12 |
| Rockwell Hardness Values for 0.050 Inch Minimum Thickness Clad Aluminum Sheet and Plate | T5-20 |
| Rockwell Hardness Values for Bare Aluminum Sheet, Plate, Extrusions, and Forgings | T5-21 |
| Room Temperature Setting Adhesives | 9-4c |
| Rotary Punch | 3-3d, F3-4 |
| Router Cutter, Typical | F10-2 |
| Routers | 10-8d |

S

| | |
|---|--------|
| SAE Numbers, Steel | T5-1 |
| Safety of Powered Metal Cutting Machines | 3-5 |
| Sample Channel | F6-6 |
| Sample Honeycomb Repair | 9-6b |
| Sandbag | F3-24 |
| Sandbag Bumping | F6-29 |
| Sanding (Plastics) | 10-14a |
| Sanding Deep Scratches | F10-11 |
| Sandwich Construction Repair, General | 9-1 |
| Construction | 9-1a |
| Design | 9-1 b |
| Modern Use | 9-1c |
| Sandwich Construction, Repair of | 9-6 |
| Saw, Ketts | F3-25 |
| Saw, Reciprocating | F3-26 |
| Saws (Used to Cut Plastics) | 10-8c |
| Scab or Lap Patch (Crack) | F8-3 |
| Scab or Lap Patch (Hole) | F8-4 |
| Scale Method (of Balancing) | F11-9 |
| Scope (of Manual) | 1-2 |
| Scotchply Edge Member and Corfil Edge Filler Damage | 9-5i |

INDEX - CONT

VOLUME 10

Subject

Paragraph Figure, Table Number

S - Continued

| | |
|--|------------|
| Scratch or Crack Repair | F9-5 |
| Scratches (in Plastics) | 10-12b |
| Scribing and Edge Sanding..... | 10-8e |
| Scroll Shears | 3-3b, F3-2 |
| Seal Retainer | 8-61 |
| Sealant Defects..... | 8-10c |
| Sealant Repair or Replacement | 8-10d |
| Sealing of Hardware | 8-10e |
| Sealing, Structural | 8-10 |
| Secondary Procedures, Dzus Fastener Installation | F7-103 |
| Selection of CherryMAX Rivets | 7-8b |
| Selection of Hi-Lok Fasteners | 7-14b |
| Selection of Hi-Shear Rivets | 7-10b |
| Selection of Huck Lockbolts | 7-12e |
| Selection of Rivnuts. | 7-9b |
| Self-Plugging Rivet Installation | F7-29 |
| Self-Plugging Rivet Installation Tools | F7-28 |
| Self-Plugging Rivet Selection | 7-7c |
| Self-Plugging Rivet Stem Features | F7-25 |
| Self-Plugging Rivets (Friction Lock) | 7-7 |
| Identification | 7-7a |
| Inspection..... | 7-7f |
| Installation Procedures | 7-7e |
| Installation Tools | 7-7d |
| Removal Procedures | 7-7g |
| Self-Plugging Rivet Selection | 7-7c |
| Substitution for Common Rivets | 7-7b |
| Self-Plugging Rivets, Removal of | F7-30 |
| Semi-Monocoque Construction | F4-2 |
| Setback | 6-3c, F64 |
| Setback - K - Chart..... | T6-2 |
| Shaping Aircraft Metals | 6-2 |
| Chem-Milling | 6-2b |
| Forming | 6-2a |
| Shear | 5-3d, F5-4 |
| Shear Strength..... | 5-2b |
| Shear, Hand..... | F3-10 |
| Shear, Scroll | F3-2 |
| Shearing Spotwelds | 12-3 |
| Shears, Bench | F3-11 |
| Shears, Squaring | F3-1 |
| Shears, Throatless | F3-3 |
| Sheet and Plate, Rockwell..... | T5-20 |
| Sheet Metal Holders | 3-4c |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

S - Continued

| | |
|--|-------------|
| Sheet Metal, Bending | 6-3 |
| Sheet Substitution, Aluminum Alloy | T5-14 |
| Shell, Reinforced, Construction | F4-3 |
| Shop Equipment (Sheet Metal Shop) | 2-2 |
| Shop Housekeeping (Sheet Metal Shop) | 2-1b |
| Shop Rules, General (Sheet Metal Shop) | 2-1 |
| Shop Safety (Sheet Metal Shop) | 2-1 e, 2-1c |
| Shop Tools and Materials (Sheet Metal Shop) | 2-1d |
| Shop Working Practice (Aluminum Alloys) | 5-7c |
| Shrinking | 6-4c, F6-14 |
| Shrinking and Stretching Machine | 3-6d, F3-34 |
| Shrinking by V-Block Method | F6-15 |
| Shrinking, Forming a Flanged Angle by | F6-16 |
| Sight Line, Brake or | F6-5 |
| Single Row of Rivets, Rivet Spacing for Repair with | F841 |
| Single Shear Strength of Aluminum Alloy Rivets | T7-2 |
| Sizes (of Jo-Bolts) | 7-13c |
| Sizes of Twist Drills with Decimal Equivalents | T7-5 |
| Skin and Bulkhead Repair | F8-28 |
| Skin and Frame Repair | F8-27 |
| Skin and Web Repairs | 8-9u |
| Skin Core Voids | 9-5c |
| Skin Core Voids, Repair of | F9-6 |
| Skin Cracks | 8-3d |
| Skin Cutout Patching Using Spotwelds | 12-6f |
| Skin Cutout Repair Near Stiffener Using Spotwelds | 12-6g |
| Skin Doubler Void Repair (0.255 Inch or Greater) | F9-8 |
| Skin Doubler Void Repair (Less Than 0.255 Inch) | F9-9 |
| Skin Doubler Voids | 9-5d |
| Skin Joint, Longitudinal | F8-39 |
| Skin Joint, Transverse | F8-40 |
| Skin Patch, Nonstressed, Rivet Spacing, and Acceptability Limits for | 8-9t |
| Skin Repair, Chem-Milled | F8-2 |
| Skin Repair, Double (Flush) | F9-10 |
| Skin Repair, Double (Nonflush) | F9-11 |
| Skin Repair, Stressed | 8-7 |
| Skin Replacement | 8-8a |
| Skin Replacement and Repair | 8-8 |
| Circular External Repair | 8-8b |
| Skin Replacement | 8-8a |
| Temporary Patch Repairs | 8-8c |
| Skin Wrinkles | 8-3c |
| Skin, Damaged, Close to a Frame, Repair for | F8-56 |
| Skin, Stressed, Repair | F8-55 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

S - Continued

| | |
|--|--------------|
| Sleeve Stretch Marks, CherryMAX | F7-54 |
| Slip Roll Former | 3-6c, F3-33 |
| Small Crack, Glass Cloth Repair of | F9-16 |
| Small Single Skin Damage | 9-5f |
| Snips, Aviation | F3-12 |
| Snips, Circle | F3-14 |
| Snips, Straight | F3-13 |
| Soak Method | 10-9b, F10-6 |
| Soaking | 10-9g |
| Soaking (Heat Treating) Temperature | T5-10 |
| Soaking Time for Solution Treatment of Cast Alloys | T5-11 |
| Solid Shank Rivet Head Markings | F7-2 |
| Solid Shank Rivet Styles and Materials | F7-1 |
| Solid Shank Rivets | 7-2 |
| Materials and Use | 7-2a |
| Rivet Heat-Treating | 7-2c |
| Rivet Identification | 7-2b |
| Solid Shank Rivets, Grip Lengths for | T7-1 |
| Solution Treatment of Cast Alloys, Soaking Time for | T5-11 |
| Spacing, and Rivet Selection, When Repairing Corrosion-Resistant Steel Parts | T8-3 |
| Spacing, Rivet | F7-5 |
| Spar Angle Repair | 8-9d, F8-20 |
| Spar Construction | F4-12 |
| Spar Repair by Insertion | 8-9c, F8-19 |
| Spar Web Repair | 8-9e, F8-21 |
| Specific Gravity | 5-2n |
| Specifications, Cross Reference of Nearest Corresponding Numbers (Steel) | T5-4 |
| Specified Defects (of Plastics), Repair Methods for | 10-12 |
| Splice Repair of Hat Section | 8-9p, F8-37 |
| Spotfacing | F7-62 |
| Spotweld Failure | 12-4 |
| Spotweld Failure with No Skin Breaks | 12-5 |
| Spotweld Repair to Crack in Stiffener | 12-6i |
| Spotweld Repair to Stiffener | 12-6h |
| Spotwelded Parts Repair | 12-6 |
| Acceptable Percentage of Defective Spotwelds | 12-6b |
| Acceptable Spotweld Spacing | 12-6a |
| Preparing Materials for Spotwelding | 12-6d |
| Repair for Short Edge Distance and Broken Spotwelds | 12-6e |
| Repair of Defective Spotwelds Exceeding Allowable Percentage | 12-6c |
| Skin Cutout Patching Using Spotwelds | 12-6f |
| Skin Cutout Repair Near Stiffener Using Spotwelds | 12-6g |
| Spotweld Repair to Crack in Stiffener | 12-6i |
| Spotweld Repair to Hole in Stiffener | 12-6h |

INDEX- CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---|--------------------------------------|
| S - Continued | |
| Spotwelds, Drilling | 12-2 |
| Spotwelds, General..... | 12-1 |
| Spotwelds, Shearing | 12-3 |
| Spring Installation, Standard | F7-99 |
| Squaring Shears | 3-3a, F3-1 |
| Squeezers, Rivet | F7-13 |
| Stabilizer, Helicopter | F4-15 |
| Stacking, Horizontal, of Small (Plastic) Sheets, Right and Wrong Methods of | F10-1 |
| Stainless Steel, Drill Angle for | F6-1 |
| Standard Countersink..... | F7-7 |
| Standard Rockwell Hardness Scales..... | T5-19 |
| Standard Spring Installation | F7-99 |
| Standard Tools for Stump-Type Lockbolts..... | T7-28 |
| Static Balance | 11-2a |
| Static Balance, Control Surface..... | F11-1 |
| Steel | 5-6 |
| Alloying Materials | 5-6b |
| Identification of Steels..... | 5-6a |
| Types of Steels and Their Uses | 5-6c |
| Steel Facing Material | 9-3b |
| Steel Identification Marking Example | F5-6 |
| Steel Lockbolt Rivet Gun, Pull- and Blind-Type | F7-74 |
| Steel SAE Numbers | T5-1 |
| Steel Tube Fishmouth Splice Using Large Diameter Replacement Tube | F8-70 |
| Steel Tube Inner Sleeve Splice | F8-67 |
| Steel Tube Using Outer Sleeve Splice | F8-69 |
| Steel Tubing Distortion, Correcting Oval Shaped | F8-63 |
| Stem and Collar Flushness, CherryMAX..... | F7-52 |
| Stem Break-Off Limits, Jo-Bolt | F7-87 |
| Stem Catcher Bag 670A20 | F7-44 |
| Stem Features, Self-Plugging Rivet | F7-25 |
| Step Joint Method, Removing Damaged Face Plies Using | F9-22 |
| Stop Countersink | F7-8 |
| Stop-Drilling, Repair of Cracks by | F8-31 |
| Storage (of Adhesives and Resins) | 9-4d |
| Storage and Handling (of Plastics) | 10-5 |
| Formed Sections..... | 10-5d |
| Location..... | 10-5a |
| Masking Paper | 10-5c |
| Position..... | 10-5b |
| Storage of Tools, Equipment, and Materials..... | 3-2c |
| Straight Line Bends..... | 6-5a |
| Straight Snips..... | 3-4g, F3-13 |
| Straightening Bowed Steel Tubes..... | F8-64 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|--|--------------------------------------|
| S - Continued | |
| Strength, Bearing (Pounds)..... | T7-3 |
| Stress and Strain Forces..... | 5-3 |
| Bending..... | 5-3e |
| Compression..... | 5-3b |
| Shear..... | 5-3d |
| Tension..... | 5-3a |
| Torsion..... | 5-3c |
| Stressed Beam Repair..... | F8-34 |
| Stressed Skin Repair..... | 8-7, 8-9w, F8-55 |
| Flush Access Door..... | 8-7d |
| Open and Closed Skin Area Repair..... | 8-7b |
| Patches..... | 8-7a |
| Patching Procedures..... | 8-7c |
| Stresses Resulting from Bending, Neutral Axis and..... | F6-2 |
| Stretching..... | 6-4d, F6-13 |
| Stretching Machine, Shrinking and..... | F3-34 |
| Stretching, Forming a Flanged Angle by..... | F6-18 |
| String Repair by Insertion When Damage Affects Only One Stringer..... | F8-14 |
| Stringer and Longeron Installation..... | F4-19 |
| Stringer Cross-Section, Typical..... | F4-20 |
| Stringer Repair..... | 8-9a |
| Stringer Repair by Insertion When Damage Affects More than One Stringer..... | F8-15 |
| Stringer Repair by Insertion When Damage Exceeds Two Thirds of One Leg in Width..... | F8-13 |
| Stringer Repair by Patching..... | F8-12 |
| Stringer Repair with Formed Angle..... | F8-17 |
| Stringer Splice Repair, J-Section..... | F8-16 |
| Stringers and Longerons..... | 4-8b |
| Strip Extractor, Pliers and..... | F7-111 |
| Structural Inspection..... | 8-3 |
| Corrosion..... | 8-3a |
| Non-Destructive Inspection..... | 8-3f |
| Protective Coatings..... | 8-3e |
| Skin Cracks..... | 8-3d |
| Skin Wrinkles..... | 8-3c |
| Surface Indications..... | 8-3b |
| Structural Members..... | 4-8 |
| Bulkheads, Frames, and Formers..... | 4-8a |
| Stringers and Longerons..... | 4-8b |
| Structural Metals, General..... | 5-1 |
| Structural Parts, Airplane..... | F4-5 |
| Structural Sealing..... | 8-10 |
| Sealant Defects..... | 8-10c |
| Sealant Repair or Replacement..... | 8-10d |
| Sealing of Hardware..... | 8-10e |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

S - Continued

| | |
|--|--------|
| Types of Seals..... | 8-10a |
| Wires and Tubes..... | 8-10b |
| Structural Support During Repair..... | 8-6a |
| Structural Tubing..... | 8-11 b |
| Structural Tubing, Example of | F8-62 |
| Structure, Nacelle | F4-7 |
| Stud, Camlock, Installation | F7-112 |
| Stump-Type Lockbolt Numbering System | T7-23 |
| Stump-Type Lockbolt, Installation of | F7-76 |
| Stump-Type Lockbolts, Standard Tools for..... | T7-28 |
| Substitute Materials (Aluminum)..... | T5-15 |
| Substitution (by Huck Lockbolts) | 7-12c |
| Substitution (of Self-Plugging Rivets) for Common Rivets | 7-7b |
| Support and Stiffener, Heavily Stressed, Repair for | F8-54 |
| Supporting Ring, Use of | F7-108 |
| Surface Balance Considerations..... | 11-2 |
| Addition of Weights..... | 11-4c |
| Methods..... | 11-4b |
| Requirements | 11-4a |
| Surface Indications | 8-3b |
| Surface Rebalancing Procedures | 11-4 |
| Dynamic Balance | 11-2b |
| Static Balance..... | 11-2a |
| Terms and Symbols..... | 11-2c |

T

| | |
|---|------------|
| Tail Cone and Cabin Sections..... | F4-4 |
| Techniques, Cutting (for Plastics)..... | 10-8 |
| Temperature (for Heat Treatment of Plastics) | 10-10a |
| Template, Hand Router, for Milling Plug Cavity | F10-15 |
| Temporary Patch Repairs..... | 8-& |
| Tensile Strength..... | 5-2a |
| Tension..... | 5-3a, F5-1 |
| Terms and Symbols (Balancing)..... | 11-2c |
| Terms and Symbols (Balancing), Identification of | F11-2 |
| Thickness Variation, Material (and Hi-Lok Rivets) | F7-91 |
| Thickness, Cushion..... | F10-8 |
| Throatless Shears..... | 3-3c, F3-5 |
| Tightly Installed Jo-Bolt, Removal of | F7-88 |
| Titanium and Titanium Alloys | 5-9 |
| Characteristics..... | 5-9b |
| Identification | 5-9a |
| Methods of Working..... | 5-9c |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

T - Continued

| | |
|---|------------|
| Tolerance (for Repairs) | 8-6j |
| Tool Capacity Chart (for Rivets) | T7-14 |
| Tooling (for Hi-Lok Fasteners) | 7-15 |
| Tooling (for Jo-Bolts) | 7-13f |
| Tooling, Jo-Bolt | F7-86 |
| Torsion..... | 5-3c, F5-3 |
| Toughness | 5-2h |
| Trailing Edge Repair | F9-4 |
| Transfer Punch | F3-21 |
| Transfer Punch, Use of | F8-9 |
| Transparent Overlay Plastic Patch | 10-13c |
| Transparent Plastic Plug Repair | 10-13a |
| Transparent Plastics, Recommended Installation Procedures for | 10-16 |
| Transverse Skin Joint..... | 8-9s, F840 |
| Treatment, Heat | 5-5 |
| Troubleshooting, CherryMAX | T7-17 |
| Tubing Repair | 8-11 |
| Engine Mount..... | 8-11 a |
| Structural Tubing | 8-11 b |
| Turbine-Engine Mounts..... | 4-3b |
| Turn-Lock Fasteners | 7-15 |
| Camlock Fasteners | 7-15b |
| Dzus Fasteners | 7-15a |
| Twist Drills with Decimal Equivalents, Sizes of | T7-5 |
| Type of Cement | 10-9a |
| Types and Identification (of Aircraft Plastics) | 1-4 |
| Burning | 10-4b |
| Chemical Reaction..... | 10-4e |
| Flexing..... | 10-4d |
| Military Specification Number | 10-4a |
| Visual Inspection..... | 10-4c |
| Types of Circular Saw Blades for Cutting Acrylic Plastic Sheets | T10-2 |
| Types of Design (Wing)..... | 4-5a |
| Types of Heat Treatment..... | 5-5a |
| Types of Lockbolts | F7-72 |
| Types of Seals | 8-10a |
| Types of Steel and Their Uses | 5-6c |
| Typical Bolt Installation (in Transparent Plastic) | F10-17 |
| Typical CherryMAX Blind Heads | F7-53 |
| Typical Edge Band Sealing | F9-29 |
| Typical Hatch Seal | F8-60 |
| Typical Repairs for Cracks in Radius of Stringer End | F8-18 |
| Typical Router Cutter | F10-2 |
| Typical Scarf Method for Class II Repair (of Radomes) | F9-26 |

INDEX - CONT

VOLUME 10

| Subject | Paragraph Figure, Table Number |
|---------|--------------------------------------|
|---------|--------------------------------------|

T - Continued

| | |
|---|--------|
| Typical Sighting Dome Edge Attachment | F10-20 |
| Typical Stringer Cross Sections..... | F4-20 |

U

| | |
|---|--------|
| Unbalanced and Balanced Conditions..... | FI11-4 |
| Unbonding and Ply Separation..... | 9-5j |
| Use of Camlock Punch..... | F7-109 |
| Use of Hole Finder | F8-10 |
| Use of Supporting Ring..... | F7-108 |
| Use of Transfer Punch | F8-9 |
| Use of 269C3 Cherry Grip Gauge..... | F7-36 |
| Uses (of Jo-Bolts)..... | 7-13d |

V

| | |
|--|-------|
| V-Block | F3-22 |
| Various Diameter Rivets, Drill Sizes for | T7-4 |
| Visual Inspection (of Plastics)..... | 10-4c |
| Void Repair, Skin Doubler (Less Than 0.255 Inch) | F9-9 |
| Void Repair, Skin Doubler (0.255 Inch or Greater)..... | F9-8 |

W


| | |
|--|--------|
| Waxing | 10-15c |
| Web Repair, Spar | F8-21 |
| Webster Hardness Tester..... | 5-13a |
| Weight and Distance, Effects of | F11-3 |
| Windshields, Glass..... | 10-17 |
| Wing Construction, Box Beam | F4-10 |
| Wing Construction, Monospar | F4-8 |
| Wing Construction, Multispar | F4-9 |
| Wing Internal Construction..... | F4-11 |
| Wing Rib Repair..... | F8-23 |
| Wing-Type Dzus Fastener Installation | F-102 |
| Wings | 4-5 |
| Internal Construction..... | 4-5b |
| Types of Design..... | 4-5a |
| Wires and Tubes..... | 8-10b |

TM 1-1500-204-23-1

By Order of the Secretary of the Army

Official:

 GORDON R. SULLIVAN
General, United States Army
Chief of Staff



MILTON H. HAMILTON
Administrative Assistant to the
Secretary of the Army
02510

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31-E, block no 3226, requirements for TM 1-1500-204-23-1.

* U.S. GOVERNMENT PRINTING OFFICE : 1995 0 - 388-421 (042214)

These are the instructions for sending an electronic 2028

The following format must be used if submitting an electronic 2028. The subject line must be exactly the same and all fields must be included; however only the following fields are mandatory: 1, 3, 4, 5, 6, 7, 8, 9, 10, 13, 15, 16, 17, and 27.

From: "Whoever" <whoever@wherever.army.mil>

To: 2028@redstone.army.mil

Subject: DA Form 2028

1. **From:** Joe Smith
2. **Unit:** home
3. **Address:** 4300 Park
4. **City:** Hometown
5. **St:** MO
6. **Zip:** 77777
7. **Date Sent:** 19-OCT-93
8. **Pub no:** 55-2840-229-23
9. **Pub Title:** TM
10. **Publication Date:** 04-JUL-85
11. **Change Number:** 7
12. **Submitter Rank:** MSG
13. **Submitter FName:** Joe
14. **Submitter MName:** T
15. **Submitter LName:** Smith
16. **Submitter Phone:** 123-123-1234
17. **Problem:** 1
18. **Page:** 2
19. **Paragraph:** 3
20. **Line:** 4
21. **NSN:** 5
22. **Reference:** 6
23. **Figure:** 7
24. **Table:** 8
25. **Item:** 9
26. **Total:** 123
27. **Text:**

This is the text for the problem below line 27.

| | | | | | | | |
|---|----------------|------------|------------|------------|-----------|--|---|
| RECOMMENDED CHANGES TO PUBLICATIONS AND BLANK FORMS For use of this form, see AR 25-30; the proponent agency is ODISC4. | | | | | | Use Part II (reverse) for Repair Parts and Special Tool Lists (RPSTL) and Supply Catalogs/Supply Manuals (SC/SM) | DATE 8/30/02 |
| TO: (Forward to proponent of publication or form)(Include ZIP Code) Commander, U.S. Army Aviation and Missile Command ATTN: AMSAM-MMC-MA-NP Redstone Arsenal, AL 35898 | | | | | | FROM: (Activity and location)(Include ZIP Code) MSG, Jane Q. Doe 1234 Any Street Nowhere Town, AL 34565 | |
| PART 1 - ALL PUBLICATIONS (EXCEPT RPSTL AND SC/SM) AND BLANK FORMS | | | | | | | |
| PUBLICATION/FORM NUMBER TM 9-1005-433-24 | | | | | | DATE 16 Sep 2002 | TITLE Organizational, Direct Support, And General Support Maintenance Manual for Machine Gun, .50 Caliber M3P and M3P Machine Gun Electrical Test Set Used On Avenger Air Defense Weapon System |
| ITEM NO. | PAGE NO. | PARA-GRAPH | LINE NO. * | FIGURE NO. | TABLE NO. | RECOMMENDED CHANGES AND REASON | |
| 1 | WP0005 PG 3 | | 2 | | | Test or Corrective Action column should identify a different WP number. | |
| <div style="transform: rotate(-45deg); font-size: 100px; opacity: 0.5;">EXAMPLE</div> | | | | | | | |
| * Reference to line numbers within the paragraph or subparagraph. | | | | | | | |
| TYPED NAME, GRADE OR TITLE MSG, Jane Q. Doe, SFC | | | | | | TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION 788-1234 | SIGNATURE |

| | | | | | | | | | |
|---|----------|----------|-----------------------|---|------------|----------|------------------------------------|------------------------|--|
| TO: <i>(Forward direct to addressee listed in publication)</i> Commander, U.S. Army Aviation and Missile Command ATTN: AMSAM-MMC-MA-NP Redstone Arsenal, AL 35898 | | | | FROM: <i>(Activity and location) (Include ZIP Code)</i> MSG, Jane Q. Doe 1234 Any Street Nowhere Town, AL 34565 | | | | DATE 8/30/02 | |
| PART II - REPAIR PARTS AND SPECIAL TOOL LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS | | | | | | | | | |
| PUBLICATION NUMBER | | | | DATE | | TITLE | | | |
| PAGE NO. | COLM NO. | LINE NO. | NATIONAL STOCK NUMBER | REFERENCE NO. | FIGURE NO. | ITEM NO. | TOTAL NO. OF MAJOR ITEMS SUPPORTED | RECOMMENDED ACTION | |
| <div style="font-size: 100px; opacity: 0.5; transform: rotate(-45deg); pointer-events: none;">EXAMPLE</div> | | | | | | | | | |
| PART III - REMARKS <i>(Any general remarks, questions, or suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.)</i> | | | | | | | | | |
| <div style="font-size: 150px; opacity: 0.5; transform: rotate(-45deg); pointer-events: none;">EXAMPLE</div> | | | | | | | | | |
| TYPED NAME, GRADE OR TITLE MSG, Jane Q. Doe, SFC | | | | TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION 788-1234 | | | SIGNATURE | | |

| | | | | | | | |
|---|----------|------------|------------|------------|--|--|-----------|
| RECOMMENDED CHANGES TO PUBLICATIONS AND BLANK FORMS For use of this form, see AR 25-30; the proponent agency is ODISC4. | | | | | | Use Part II (reverse) for Repair Parts and Special Tool Lists (RPSTL) and Supply Catalogs/Supply Manuals (SC/SM) | DATE |
| TO: (Forward to proponent of publication or form)(Include ZIP Code) Commander, U.S. Army Aviation and Missile Command ATTN: AMSAM-MMC-MA-NP Redstone Arsenal, AL 35898 | | | | | | FROM: (Activity and location)(Include ZIP Code) | |
| PART 1 - ALL PUBLICATIONS (EXCEPT RPSTL AND SC/SM) AND BLANK FORMS | | | | | | | |
| PUBLICATION/FORM NUMBER | | | | | | DATE | TITLE |
| ITEM NO. | PAGE NO. | PARA-GRAPH | LINE NO. * | FIGURE NO. | TABLE NO. | RECOMMENDED CHANGES AND REASON | |
| | | | | | | | |
| * Reference to line numbers within the paragraph or subparagraph. | | | | | | | |
| TYPED NAME, GRADE OR TITLE | | | | | TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION | | SIGNATURE |

| | | | | | | | | | |
|--|-------------|-------------|--------------------------|---|---------------|-------------|---|--------------------|--|
| TO: (Forward direct to addressee listed in publication) Commander, U.S. Army Aviation and Missile Command ATTN: AMSAM-MMC-MA-NP Redstone Arsenal, AL 35898 | | | | FROM: (Activity and location) (Include ZIP Code) | | | | DATE | |
| PART II - REPAIR PARTS AND SPECIAL TOOL LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS | | | | | | | | | |
| PUBLICATION NUMBER | | | | DATE | | TITLE | | | |
| PAGE NO. | COLM NO. | LINE NO. | NATIONAL STOCK NUMBER | REFERENCE NO. | FIGURE NO. | ITEM NO. | TOTAL NO. OF MAJOR ITEMS SUPPORTED | RECOMMENDED ACTION | |
| | | | | | | | | | |
| PART III - REMARKS (Any general remarks or recommendations, or suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.) | | | | | | | | | |
| | | | | | | | | | |
| TYPED NAME, GRADE OR TITLE | | | | TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION | | | SIGNATURE | | |

The Metric System and Equivalents

Linear Measure

1 centimeter = 10 millimeters = .39 inch
 1 decimeter = 10 centimeters = 3.94 inches
 1 meter = 10 decimeters = 39.37 inches
 1 dekameter = 10 meters = 32.8 feet
 1 hectometer = 10 dekameters = 328.08 feet
 1 kilometer = 10 hectometers = 3,280.8 feet

Weights

1 centigram = 10 milligrams = .15 grain
 1 decigram = 10 centigrams = 1.54 grains
 1 gram = 10 decigrams = .035 ounce
 1 decagram = 10 grams = .35 ounce
 1 hectogram = 10 decagrams = 3.52 ounces
 1 kilogram = 10 hectograms = 2.2 pounds
 1 quintal = 100 kilograms = 220.46 pounds
 1 metric ton = 10 quintals = 1.1 short tons

Liquid Measure

1 centiliter = 10 milliliters = .34 fl. ounce
 1 deciliter = 10 centiliters = 3.38 fl. ounces
 1 liter = 10 deciliters = 33.81 fl. ounces
 1 dekaliter = 10 liters = 2.64 gallons
 1 hectoliter = 10 dekaliters = 26.42 gallons
 1 kiloliter = 10 hectoliters = 264.18 gallons

Square Measure

1 sq. centimeter = 100 sq. millimeters = .155 sq. inch
 1 sq. decimeter = 100 sq. centimeters = 15.5 sq. inches
 1 sq. meter (centare) = 100 sq. decimeters = 10.76 sq. feet
 1 sq. dekameter (are) = 100 sq. meters = 1,076.4 sq. feet
 1 sq. hectometer (hectare) = 100 sq. dekameters = 2.47 acres
 1 sq. kilometer = 100 sq. hectometers = .386 sq. mile

Cubic Measure

1 cu. centimeter = 1000 cu. millimeters = .06 cu. inch
 1 cu. decimeter = 1000 cu. centimeters = 61.02 cu. inches
 1 cu. meter = 1000 cu. decimeters = 35.31 cu. feet

Approximate Conversion Factors

| <i>To change</i> | <i>To</i> | <i>Multiply by</i> | <i>To change</i> | <i>To</i> | <i>Multiply by</i> |
|------------------|--------------------|--------------------|--------------------|---------------|--------------------|
| inches | centimeters | 2.540 | ounce-inches | Newton-meters | .007062 |
| feet | meters | .305 | centimeters | inches | .394 |
| yards | meters | .914 | meters | feet | 3.280 |
| miles | kilometers | 1.609 | meters | yards | 1.094 |
| square inches | square centimeters | 6.451 | kilometers | miles | .621 |
| square feet | square meters | .093 | square centimeters | square inches | .155 |
| square yards | square meters | .836 | square meters | square feet | 10.764 |
| square miles | square kilometers | 2.590 | square meters | square yards | 1.196 |
| acres | square hectometers | .405 | square kilometers | square miles | .386 |
| cubic feet | cubic meters | .028 | square hectometers | acres | 2.471 |
| cubic yards | cubic meters | .765 | cubic meters | cubic feet | 35.315 |
| fluid ounces | milliliters | 29.573 | cubic meters | cubic yards | 1.308 |
| pints | liters | .473 | milliliters | fluid ounces | .034 |
| quarts | liters | .946 | liters | pints | 2.113 |
| gallons | liters | 3.785 | liters | quarts | 1.057 |
| ounces | grams | 28.349 | liters | gallons | .264 |
| pounds | kilograms | .454 | grams | ounces | .035 |
| short tons | metric tons | .907 | kilograms | pounds | 2.205 |
| pound-feet | Newton-meters | 1.356 | metric tons | short tons | 1.102 |
| pound-inches | Newton-meters | .11296 | | | |

Temperature (Exact)

| | | | | |
|----|---------------------------|-------------------------------|------------------------|----|
| °F | Fahrenheit temperature | 5/9 (after subtracting 32) | Celsius temperature | °C |
|----|---------------------------|-------------------------------|------------------------|----|

